

Change the VoIP Router's LAN IP Address

Document ID: 108634

Contents

Introduction How do I change the IP address of my Cisco Small Business VoIP router?
Related Information

Introduction

This article is one in a series to assist in the setup, troubleshooting, and maintenance of Cisco Small Business products.

Q. How do I change the IP address of my Cisco Small Business VoIP router?

A.

Sometimes it is necessary to change the router's LAN IP address in order to avoid an IP address conflict between the VoIP router and other networking devices. For instructions, complete the steps in this document.

Change the LAN IP Address of the Router

Complete these steps in order to change the LAN IP address of the router:

Step 1:

Access the router's web-based setup page. For instructions, click [here](#).

Step 2:

When the router's web-based setup page appears, look for ***Local IP Address***, and change it to "192.168.2.1" in order to avoid an IP address conflict.

Setup

Setup

Wireless

Security

Access
Restrictions

Applications
& Gaming

Administration

Basic Setup

DDNS

MAC Address Clone

Internet Setup

Internet Connection Type

Obtain an IP automatically

Optional Settings (required by some ISPs)

Host Name:

Domain Name:

MTU:

Auto Manual Size:

Network Setup

Router IP

Local IP Address:

 . . .

Subnet Mask:

 . . .

Change Local
IP Address to
"192.168.2.1"

Step 3:

Click **Save Settings**.

Step 4:

Renew the computer's IP address.

Note: The router will reboot after you apply the settings. Access the router's setup page using "192.168.2.1" (that is, the new IP address of the VoIP router).

Related Information

- [Technical Support & Documentation – Cisco Systems](#)