

# Change the Cisco Small Business VoIP Router Password

Document ID: 108635

## Contents

**Introduction** How do I change the password of my Cisco Small Business VoIP router?**Related Information**

## Introduction

This article is one in a series to assist in the setup, troubleshooting, and maintenance of Cisco Small Business products.

### Q. How do I change the password of my Cisco Small Business VoIP router?

A.

When you access the router's web-based setup page, a log-in screen will appear that asks for the router's username and password. The default username and password "admin" should be changed for security purposes.

The router's password must be changed to:

- Prevent unwanted users from accessing the router's web-based setup page.
- Enable Remote Management.

### *Changing the Router's Password*

#### *Step 1:*


Access the router's web-based setup page. For instructions, click [here](#).

#### *Step 2:*

When the router's web-based setup page appears, click **Administration**.

#### *Step 3:*

Enter the new password on the **Router Password** and **Re-enter to confirm** fields.

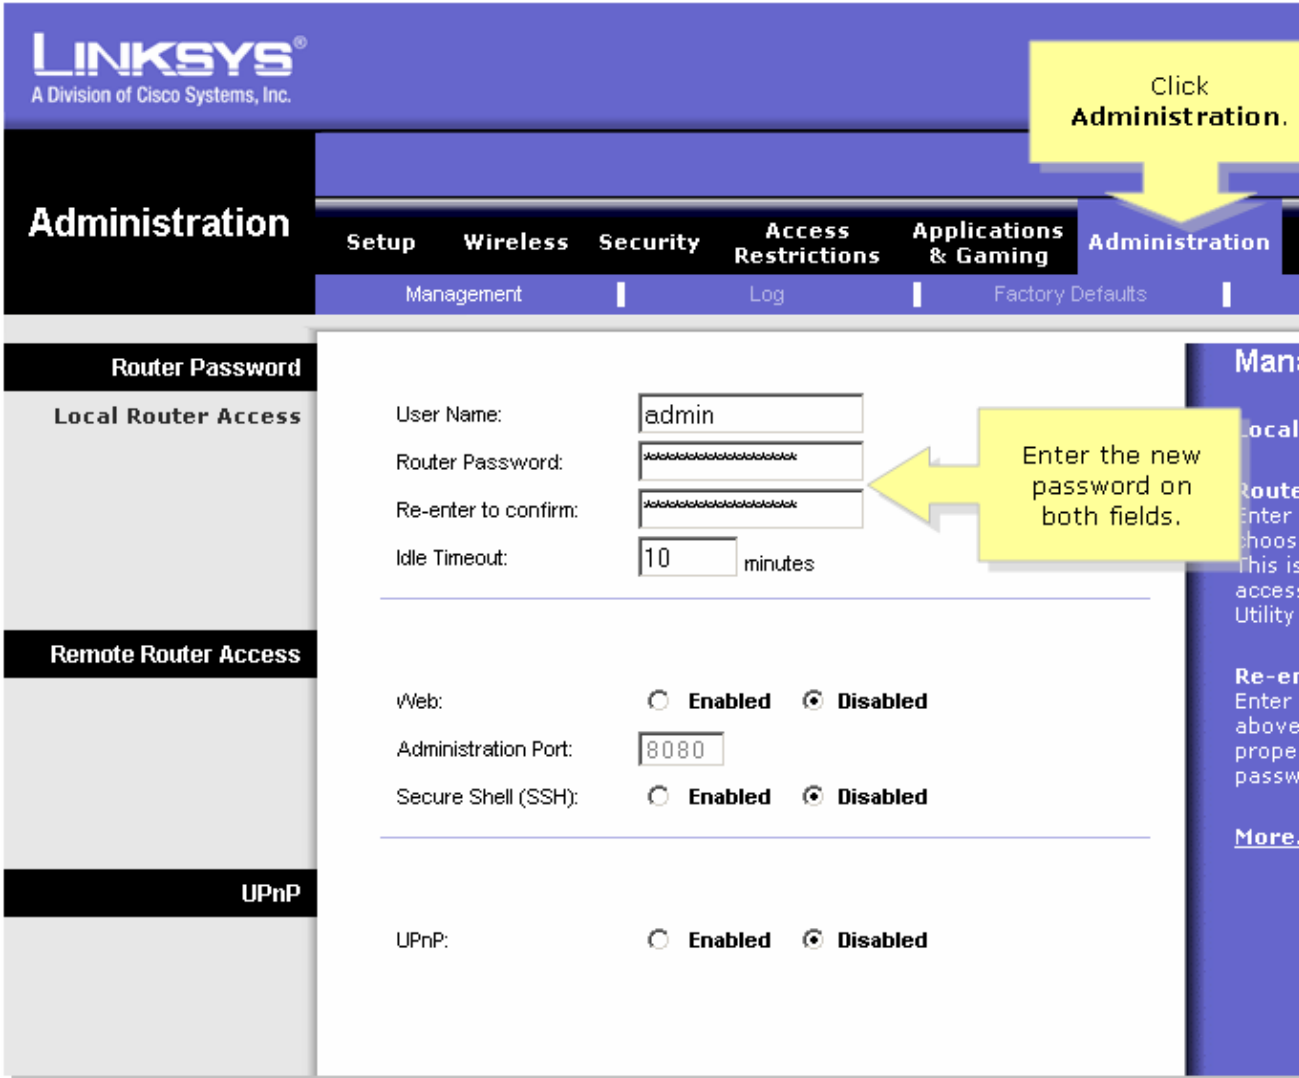

**Step 4:**

Click **Save Settings**.

**Note:** The next time you log on to the router's web-based setup page, use the new password.

## Related Information

- [Technical Support & Documentation – Cisco Systems](#)