

Connect a Wireless Adapter to a Cisco Small Business VoIP Router

Document ID: 108660

Contents

Introduction How do I connect a wireless adapter to a Cisco Small Business VoIP router?
Related Information

Introduction

This article is one in a series to assist in the setup, troubleshooting, and maintenance of Cisco Small Business products.

Q. How do I connect a wireless adapter to a Cisco Small Business VoIP router?


A.

 
This article assumes that your wireless adapter is already properly installed and/or enabled on the computer. Before you try to connect your wireless adapter to a Cisco Small Business wireless router, know the following: SSID, Wireless Security and/or Network Key. If you do not have these settings, click [here](#).

Configure your Wireless Adapter to Connect to a Cisco Small Business Wireless Router

Note: These steps are for Windows XP with Service Pack 2.


Step 1:

Right-click the **Wireless Network Connection** icon  at the bottom-right of the screen, and select **View Available Wireless Networks**.

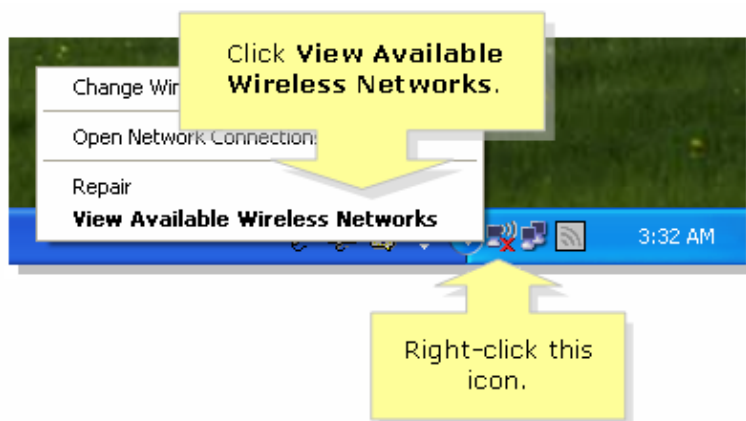


Step 2:

 
Select your wireless network's name or SSID, and click **Connect**.

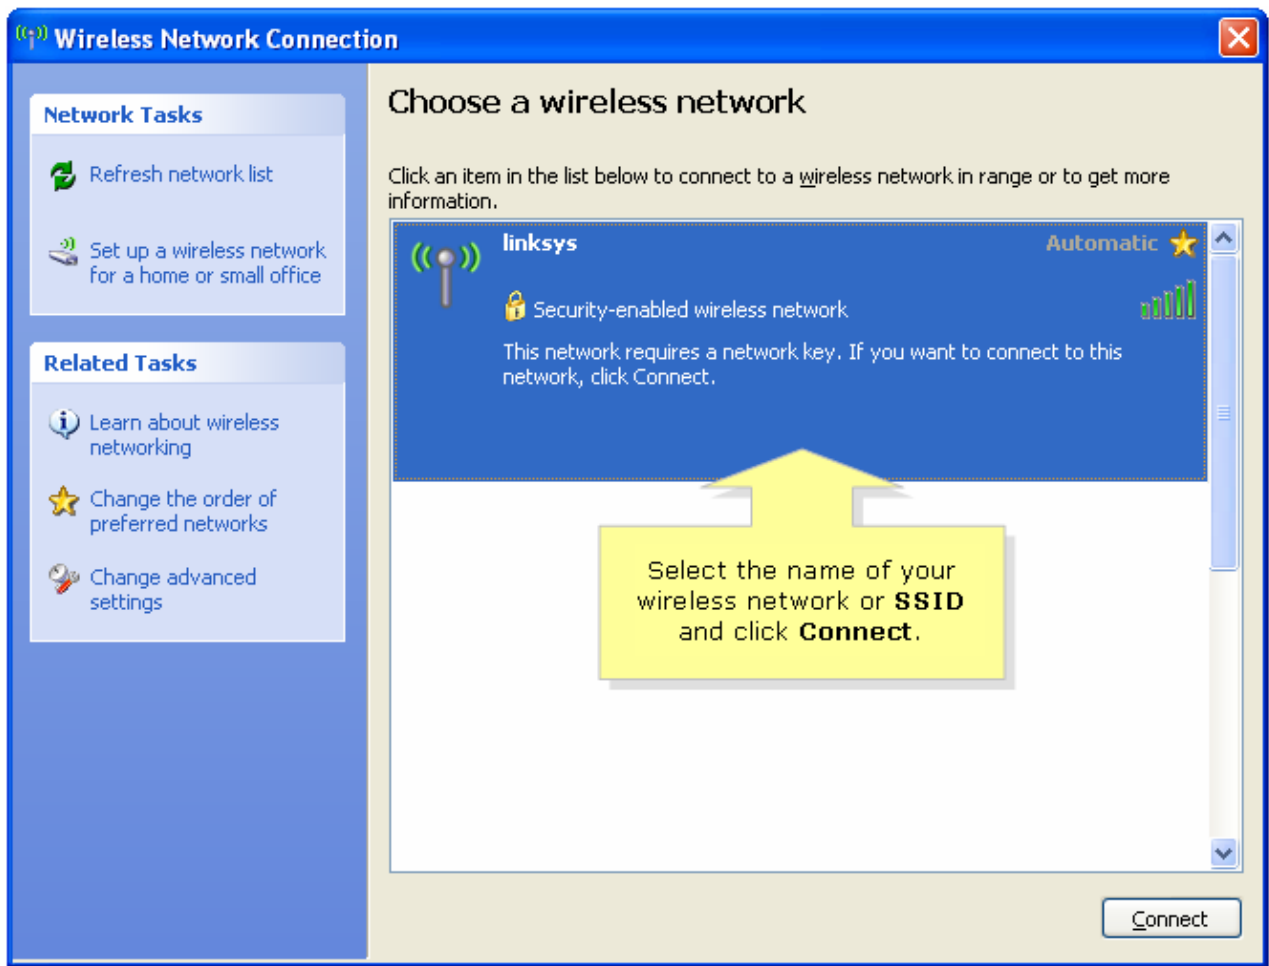

If **WEP** is enabled on the router:

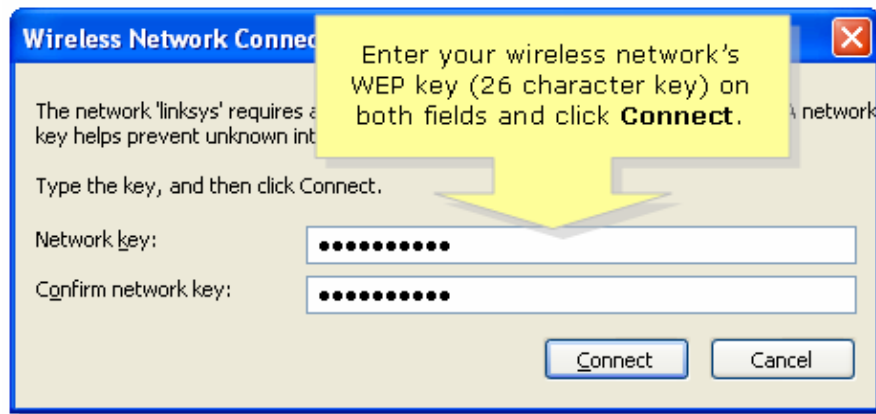 

If **WPA** is enabled on the router:

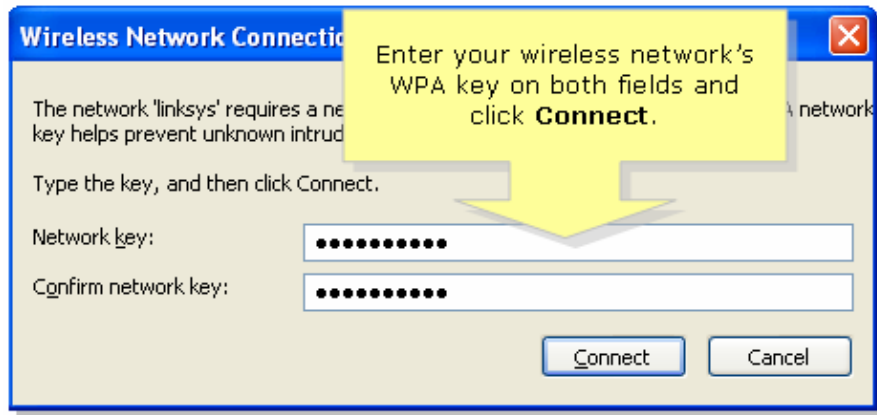 

Step 3:

Click .

Related Information

- [Technical Support & Documentation – Cisco Systems](#)