

Check the Wireless Settings on a Cisco Small Business VoIP Router

Document ID: 108664

Contents

[Introduction](#) [How do I get the wireless settings on my network?](#) [Related Information](#)

Introduction

This article is one in a series to assist in the setup, troubleshooting, and maintenance of Cisco Small Business products.

Q. How do I get the wireless settings on my network?

A.

The wireless settings that you need to note are:

- a.) SSID
- b.) SSID Broadcast
- c.) Wireless Security

In order to check the wireless settings on the Cisco Small Business router, complete these steps:


Checking the Wireless Settings on the Cisco Small Business Router

Step 1:

Access the router's web-based setup page. For instructions, click [here](#).

Step 2:

When the router's web-based setup page appears, click **Wireless**.

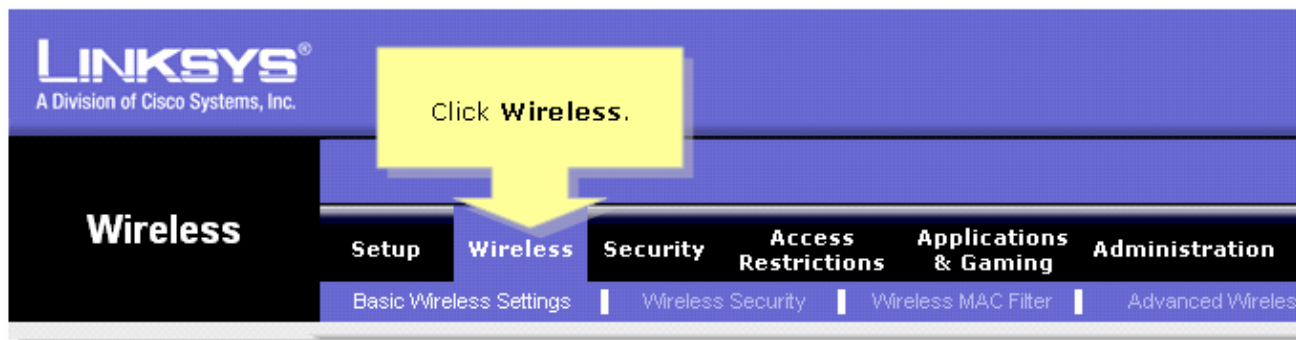

Step 3:

Look for **Wireless Network Name (SSID)**. If it is still set to "linksys", change it to something unique and note if Wireless SSID Broadcast is set to **Enable** or **Disable**.

LINKSYS
A Division of Cisco Systems, Inc.

Wireless

Setup | **Wireless** | Security | Access Restrictions | Applications & Gaming | Administration

Basic Wireless Settings | Wireless Security | Wireless MAC Filter | Advanced Wireless

Wireless Settings

Wireless Network Mode: Mixed

Wireless Network Name (SSID): linksys

Wireless Channel: 1


Wireless SSID Broadcast: Enable Disable

Save Settings | Cancel Changes


This is your SSID. If this is set to "linksys," change this to something unique.

Step 4:

Click *Wireless Security*, and note the current *Security Mode*.

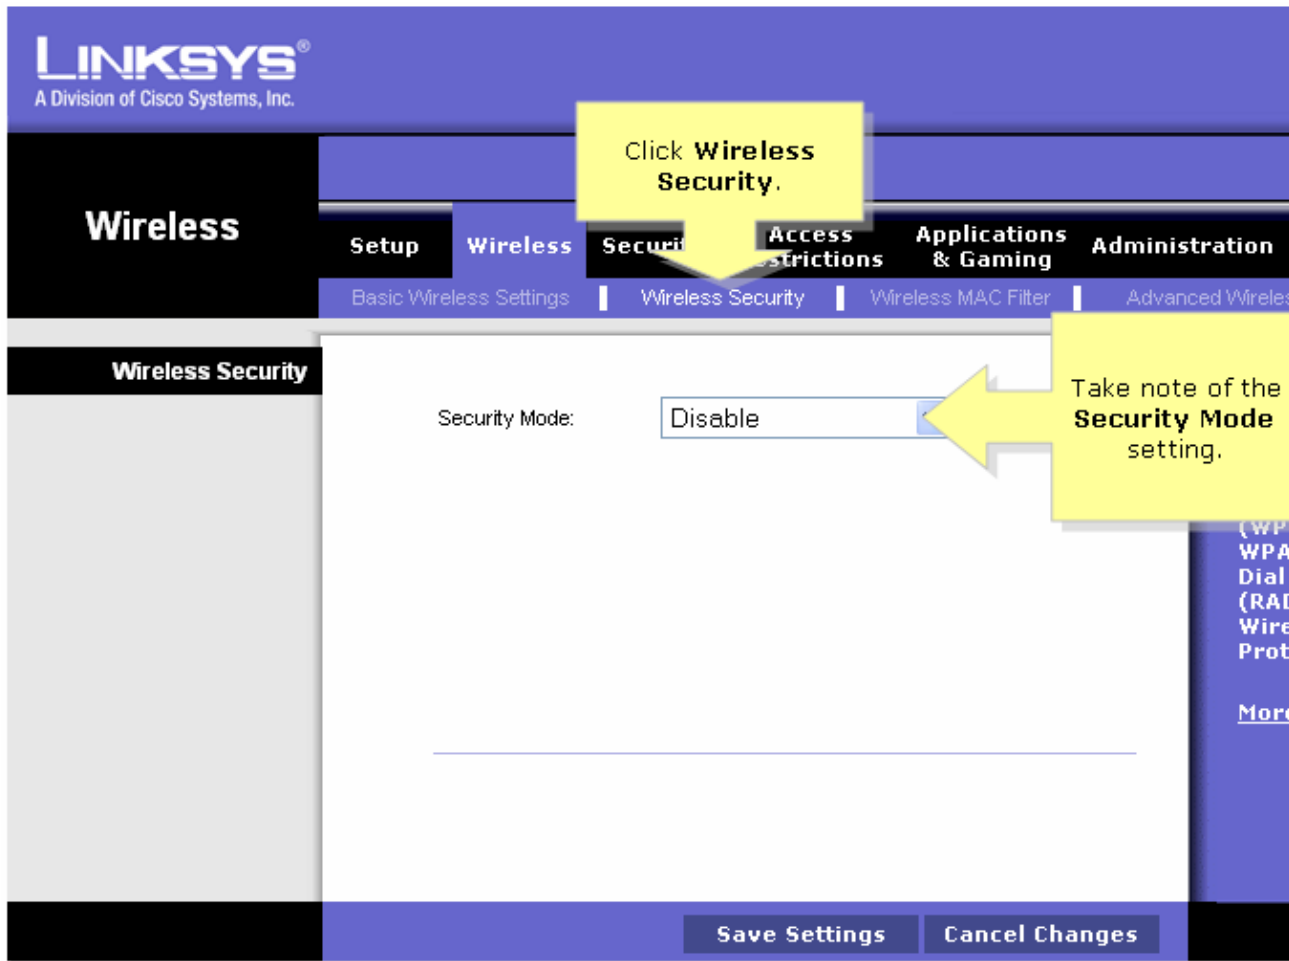


If Security Mode is set to **WEP**:

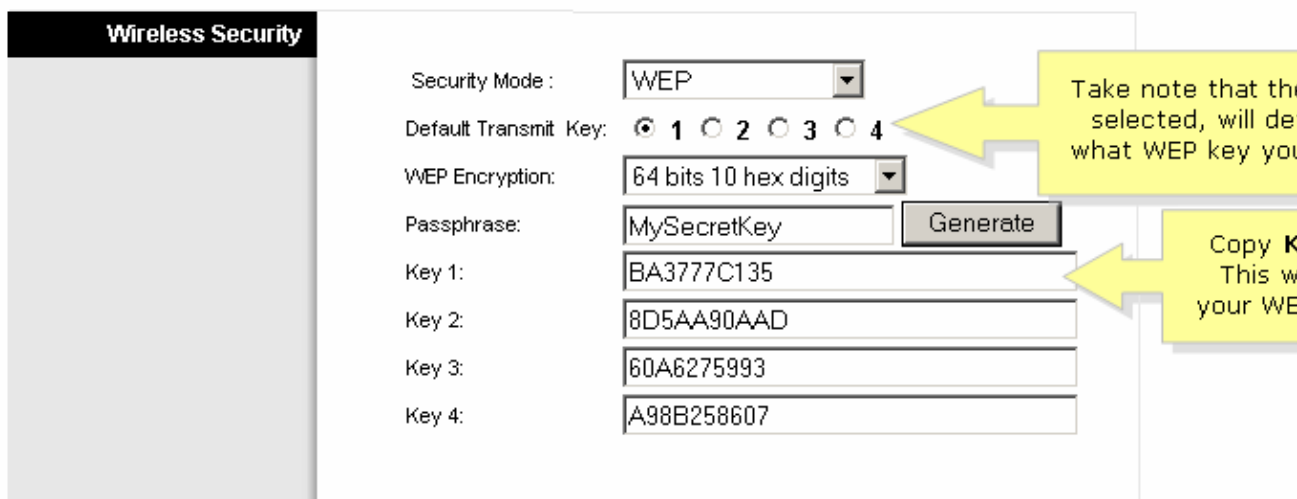

If Security Mode is set to **WPA**:

Wireless Security	
Security Mode :	WPA Personal ▾
WPA Algorithms:	TKIP ▾
WPA Shared Key:	MySecretKey
Group Key Renewal:	3600 seconds



Step 5:

Click .

Related Information

- [Technical Support & Documentation – Cisco Systems](#)

Updated: Dec 12, 2008

Document ID: 108664
