

# Setting–Up an NTP Server on SPA3102

Document ID: 108735

## Contents

[Introduction](#) [How to set the NTP server on SPA3102?](#) [Related Information](#)

## Introduction

This article is one in a series to assist in the setup, troubleshooting, and maintenance of Cisco Small Business products.

### Q. How to set the NTP server on SPA3102?

A.


*Set up an NTP Server on SPA3102*

**Step 1:**

Access the SPA3102's web–based setup page. For instructions, click [here](#).

**Step 2:**

When the web–based setup page appears, click *Admin Login*.

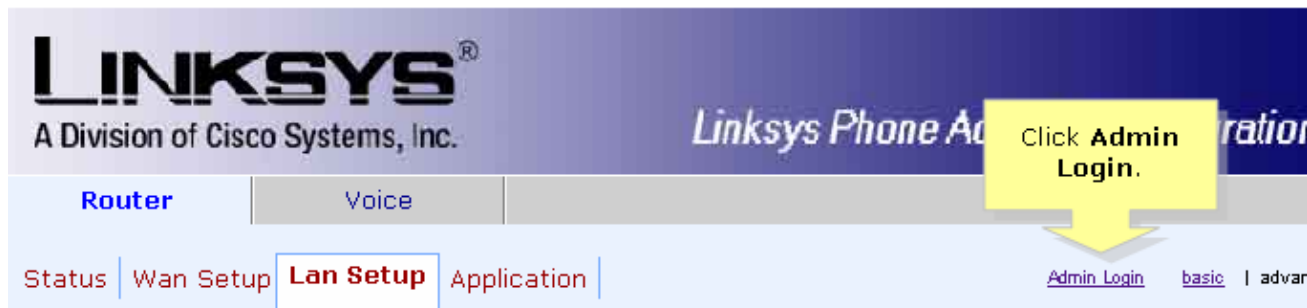


**Step 3:**

Click *Wan Setup*, then *advanced*.

**Step 4:**

Under *Primary NTP Server*, enter the NTP server address on the field provided.

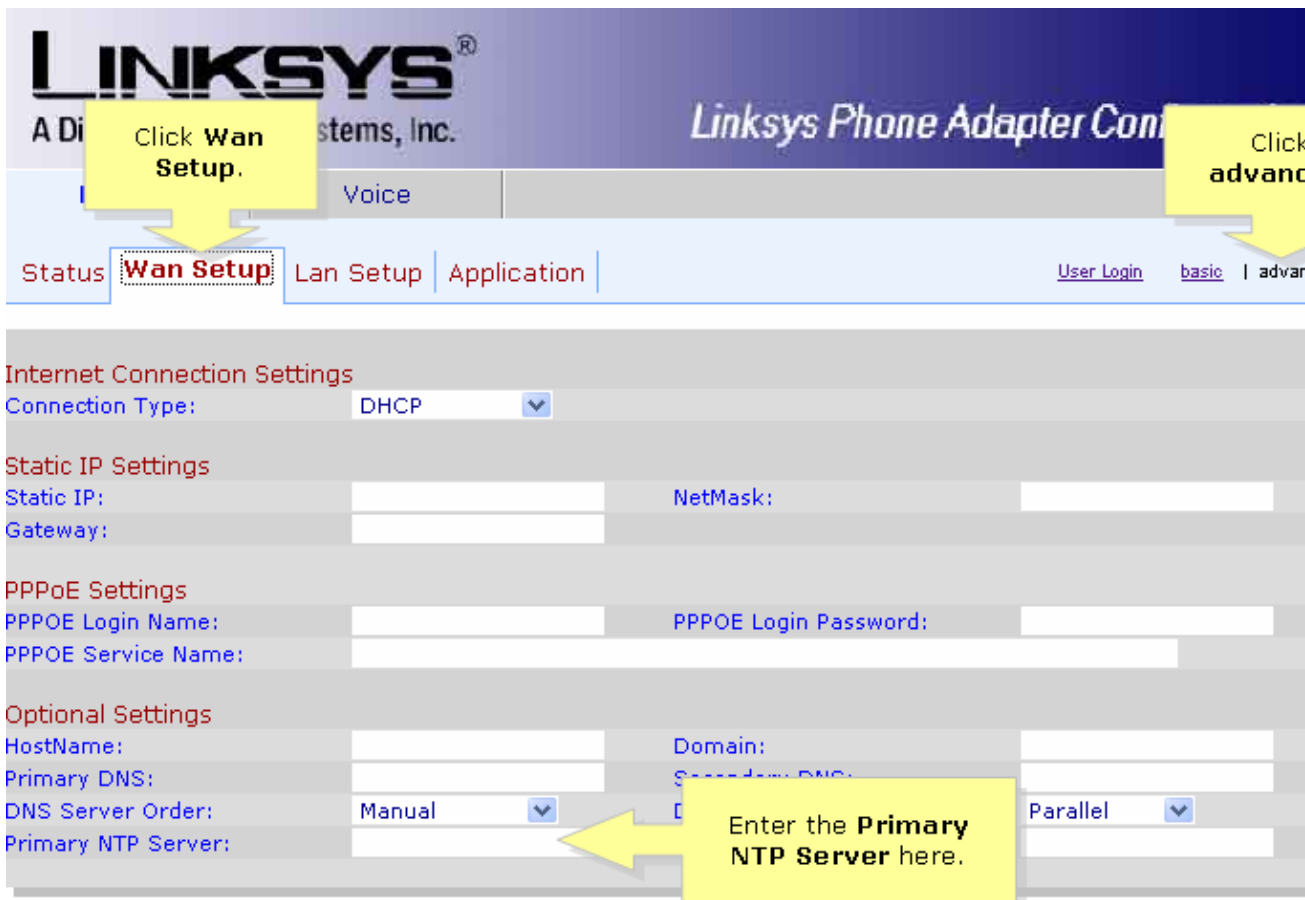

**Step 5:**

Click .

## Related Information

- [Technical Support & Documentation – Cisco Systems](#)