

Setting the SPA2100 to bridge mode

Document ID: 108806

Contents

[Introduction](#)[How do I set the SPA2100 to bridge mode?](#)[Related Information](#)

Introduction

This article is one in a series to assist in the setup, troubleshooting, and maintenance of Cisco Small Business products.

Q. How do I set the SPA2100 to bridge mode?

A.

Setting the SPA2100 to bridge mode

There are two ways to configure the unit in bridge mode.

- Setting the SPA3102 to bridge mode using the IVR
- Setting the SPA3102 to bridge mode using the setup page

Setting the SPA2100 to bridge mode using the IVR

In order to set-up SPA2100 to bridge mode using the IVR press **** 201, press 1 to enable and 0 to disable the router functionality of the unit.

Setting the SPA2100 to Bridge Mode Using the Setup Page

In order to set-up the SPA2100 to bridge mode using the web-based setup page, complete these steps:

Step 1:

Access the SPA2100's web-based interface. For instructions, click [here](#).

Step 2:

When the SPA2100's web-based setup page appears, click ***Admin Login*** then ***advanced*** on the upper right-hand corner.

Step 4:

Click .

Related Information

- **Technical Support & Documentation – Cisco Systems**

Updated: Dec 12, 2008

Document ID: 108806
