

M65 Keypad Overview



LED indicator (MWI, missed call, low battery)


Signal strength

Function key line for context-sensitive keys

Context-sensitive function keys

Speakerphone (on/off) with LED

- Accepting incoming calls
- Starting to dial numbers
- From idle screen: Call lists, redialing call from call lists
- In editing modes:
 - Letter mode: Press for one second to change input mode (lower case > upper case > v.v.)
 - Numeral mode: Press briefly to type *
- On idle screen: Press for 3 seconds to lock/unlock the keypad

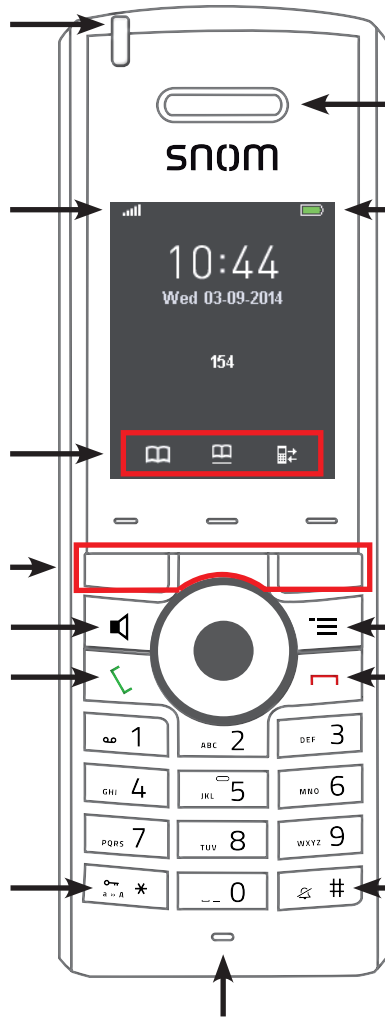

Loudspeaker

Battery charging status


Settings menu

- Ending calls
- Canceling actions & input, returning to previous screen
- Press for at least 3 seconds to turn handset off; press briefly to turn handset on

Pound/hash key

Microphone

Navigation keys: Press top, bottom, left, or right of outer rim to navigate in the respective direction on the display

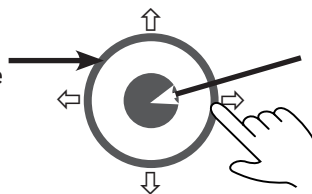

OK key (confirming actions and settings): Press center