Cisco Prime Collaboration Deployment Administration Guide, Release 10.5(1)

First Published: May 07, 2014

Last Modified: February 25, 2016

Americas Headquarters
Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
http://www.cisco.com
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

Text Part Number: OL-31941-01

© 2016 Cisco Systems, Inc. All rights reserved.

CONTENTS

CHAPTER 1 **Introduction** 1

Introduction to Cisco Prime Collaboration Deployment 1

CHAPTER 2 **Install Cisco Prime Collaboration Deployment** 3

System Requirements for Installation 3

Browser Requirements 4

IP Address Requirements 4

Virtualization Software License Types 5

Frequently Asked Questions About the Installation 5

Preinstallation Tasks 6

Begin Installation 13

Install Cisco Prime Collaboration Deployment 14

Extract the PCD_VAPP.OVA File 14

Install the Virtual Machine 15

Configure Cisco Prime Collaboration Deployment on the Virtual Machine 16

Postinstallation Tasks 17

Reset OS Administrator and Security Passwords 18

CHAPTER 3 **Upgrade Cisco Prime Collaboration Deployment** 19

Upgrade Cisco Prime Collaboration Deployment Using CLI 19

CHAPTER 4 **Cisco Prime Collaboration Deployment Features** 21

Cisco Prime Collaboration Deployment Considerations 21

Supported Releases 22

Supported ESXi Server Versions 24

Upgrade and Migration Paths 25

Cluster Inventory 27

Discover a Cluster 27

Add an ESXi Host Server 29
Create a Migration Cluster 30
Add a New Cluster for a Fresh Install 31
Task Management 33
Migration Task 33
Before You Begin 33
Create a Migration Task 34
Run a Migration Task 36
Postmigration Tasks for Cisco Unified Communication Manager Nodes in the Cluster 37
Post Migration Tasks for IM and Presence Service 38
Migration Procedure Flow Charts 39
Simple Migration 40
Pre Release 8.0.1 Unified CM Network Migration 41
Release 8.0.1 And Later Unified CM Network Migration 42
Recovery of Original Cluster 43
Check the Status of the Cluster Manager Service on All Source Nodes 43
Upgrade Task 44
Create an Upgrade Task 44
Reuse Sequence from Previous Task 47
Switch Versions Task 47
Create a Switch Versions Task 47
Server Restart Task 49
Create a Server Restart Task 49
Readdress Task 51
Create a Readdress Task 51
Run a Readdress Task 53
Post Readdress Task 53
Install Task 53
Create an Install Task 54
Add Install Task 54
Run an Install Task 56
Post-Install Task 57
Monitor Task Status 57
Action Buttons on the Monitoring Page 58

Automatic Refresh 58
Administration Tools 58
Email Notification 58
When Email Is Sent 59
SFTP Datastore 59
Migration or Fresh Install Tasks 60
Upgrade Task 60
Verify or View an ISO Filename 61
Delete ISO or COP Files 61

CHAPTER 5 Cisco Prime Collaboration Deployment Administrative Interface Elements 63
Common Administrative Interface Elements 63
Monitoring View Elements 63
Tasks View Elements 68
Upgrade View 68
Switch Versions View 72
Server Restart View 77
Readdress View 82
Install View 87
Migrate View 92

CHAPTER 6 Cisco Prime Collaboration Deployment Configuration and Administration 99
Services 99
Limitations and Restrictions 103

CHAPTER 7 CLI Commands and Disaster Recovery System 105
CLI Commands on Cisco Prime Collaboration Deployment 105
Create a DRS Backup of the Server 107
Important Notes on Backup and Restore 108
Restore a Backup to Cisco Prime Collaboration Deployment 108

CHAPTER 8 CTL Update 111
More Information 111
Bulk Certificate Management 111

CHAPTER 9 Best Practices 113

Cluster Discovery 113
Upgrades 114
ESXi Host 114
Migration and Installation Virtual Machines 114
Premigration 114
Check TFTP Directory Disk Usage 115
Delete TFTP Files 115
Postmigration 115
Task Validation 116
Cisco Prime Collaboration Deployment Shutdown 116
Monitoring Tasks 116
Managing Files in the SFTP Datastore 116
Using Cisco Prime Collaboration Deployment with Clustering Over WAN 117
Sequence During Migration 117
Server Readdress 117
Fresh Install Publishers and Subscribers 117
Fresh Install of a Unified CM and IM and Presence Cluster 117
Email Notification 118
Test Email 118

CHAPTER 10 Cisco Prime Collaboration Deployment Troubleshooting 119

Increase Disk Space for Migrations 119
General Troubleshooting Issues 120
Errors Seen in View Log 120
Lock Errors 124
NFS Datastores 124
Pause States on Monitor Page 124
Scheduling 125
Server Connectivity 125
Task Failure Due to Restart 125
Installation Task Failure 126
Upgrade Task Failure 127
Migration Task Failure 129

Switch Version Task Failure 130
Readdress Task Failure 131
Server Restart Task Failure 133
Task Scheduling 134
Task Timeouts 135
Upgrade Migration and Installation 135
Run a New Task When Current Task in Canceling State 136
Rerun Fresh Install Task 136
Rerun Migration Task 137
Version Validity 137

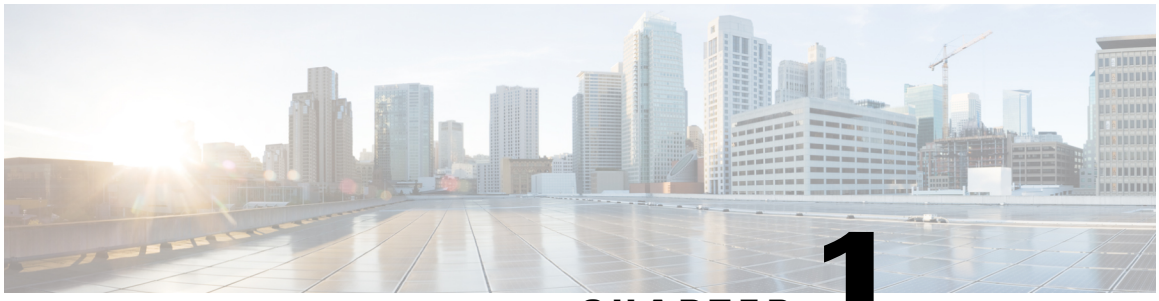

CHAPTER 1

Introduction

- Introduction to Cisco Prime Collaboration Deployment , page 1

Introduction to Cisco Prime Collaboration Deployment

Cisco Prime Collaboration Deployment is an application that is designed to assist in the management of Unified Communications (UC) applications. It allows you to perform tasks such as migration of older software versions of clusters to new virtual machines, fresh installs, and upgrades on existing clusters.

Cisco Prime Collaboration Deployment has four primary high-level functions:

- Migrate an existing cluster of UC servers to a new cluster (such as MCS to virtual or virtual to virtual)
- Perform operations on existing clusters (8.6(1) or later). Examples of these operations include:
  - Upgrade
  - Switch version
  - Restart
- Change IP addresses or hostnames in the cluster on existing Release 10.x clusters.

Important All the IP addresses that are mentioned in this document applies only for the IPv4 address format.

- Fresh install a new Release 10.x or 11.0 Unified Communications cluster

Note Cisco Prime Collaboration Deployment features are only supported by specific software versions. See “Supported Releases” for more information about software versions that are compatible with each Cisco Prime Collaboration Deployment feature.

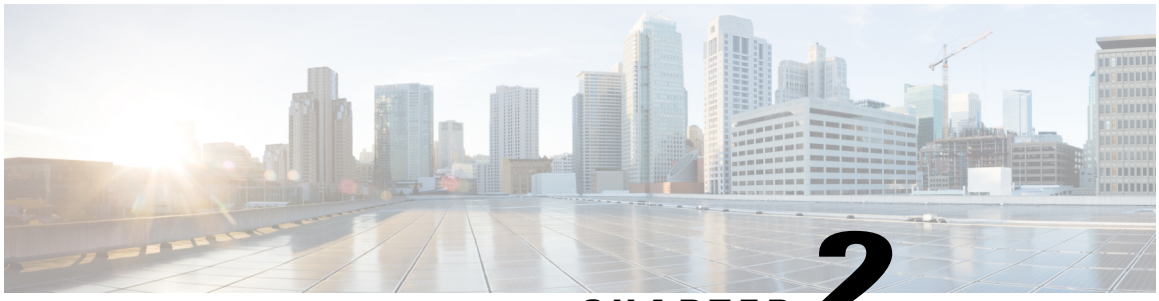

CHAPTER 2

Install Cisco Prime Collaboration Deployment

- System Requirements for Installation, page 3
- Browser Requirements, page 4
- IP Address Requirements, page 4
- Virtualization Software License Types, page 5
- Frequently Asked Questions About the Installation, page 5
- Preinstallation Tasks, page 6
- Begin Installation, page 13
- Install Cisco Prime Collaboration Deployment, page 14
- Postinstallation Tasks, page 17
- Reset OS Administrator and Security Passwords, page 18

System Requirements for Installation

As defined in the open virtualization format (OVA) that you must use to install Cisco Prime Collaboration Deployment, the following are the server requirements.

Table 1: Cisco Prime Collaboration Deployment Installation Server Requirements

Requirement	Notes
Product	Cisco Prime Collaboration Deployment
Version	10.x
CPU	2 vCPUs
Memory	4 GB
Hard Drive	80 GB (one)
Licensing	Cisco Prime Collaboration Deployment does not require a license

Browser Requirements

Cisco Prime Collaboration Deployment provides a GUI interface that you can use to configure and manage the system. You can access the interfaces by using the browsers and operating systems listed here.

Note Other browsers are not supported.

Cisco Unified Communications Manager Administration supports the following operating system browsers:

Microsoft Windows 7

- Microsoft Internet Explorer (IE) 9
- Mozilla Firefox 18 to 22, and Firefox ESR 17
- Google Chrome 23 to 29

Apple OS X.6 and Later

- Apple Safari 5.1
- Firefox 18 to 22, and Firefox ESR 17
- Google Chrome 23 to 29

From any user PC in your network, browse to a server that is running Cisco Prime Collaboration Deployment and log in with administrative privileges.

Note Simultaneous login to Cisco Prime Collaboration Deployment Administration GUI by more than five users can affect performance. Limit the number of users and administrators that are logged in simultaneously.

Note Cisco Prime Collaboration Deployment Administration does not support the buttons in your browser. Do not use the browser buttons (for example, the Back button) when you perform configuration tasks.

IP Address Requirements

You must configure the Cisco Prime Collaboration Deployment server to use static IP addressing to ensure that the server obtains a fixed IP address.

Virtualization Software License Types

The VMware vSphere ESXi license is required for the physical server with ESXi that hosts the Cisco Prime Collaboration Deployment virtual machine in addition to any additional physical servers with ESXI on which Cisco Prime Collaboration Deployment will operate. This includes virtual machines to which Cisco Prime Collaboration Deployment is migrating, installing, upgrading, or rebooting.

Cisco Prime Collaboration Deployment is not compatible with all license types of VMware vSphere ESXi, because some of these licenses do not enable required VMware APIs.

Note Cisco Business Edition 6000 and Cisco Business Edition 7000 servers are preinstalled with Cisco UC Virtualization Hypervisor. If you plan to use Cisco Prime Collaboration Deployment with application VMs on these servers, you must substitute a higher virtualization software feature level.

The following are compatible with Cisco Prime Collaboration Deployment:

- Cisco UC Virtualization Foundation (appears as “Foundation Edition” in vSphere Client)
- VMware vSphere Standard Edition, Enterprise Edition, or Enterprise Plus Edition
- Evaluation mode license

The following are not compatible with Cisco Prime Collaboration Deployment:

- Cisco UC Virtualization Hypervisor (appears as “Hypervisor Edition” in vSphere Client)
- VMware vSphere Hypervisor Edition

Frequently Asked Questions About the Installation

Review this section carefully before you begin the installation.

How much time does the installation require?

The entire Cisco Prime Collaboration Deployment installation process, excluding pre- and postinstallation tasks, takes approximately 30 minutes.

What usernames and passwords do I need to specify?

Note The system checks your passwords for strength. For guidelines on creating a strong passwords, see “What Is a Strong Password?” below.

During the installation, you must specify the following usernames and passwords:

- Administrator account username and password
- Security password

You use the Administrator account username and password to log in to the following areas:

- Cisco Prime Collaboration Deployment GUI interface
- Command line interface

When you choose an administrator account username and password, follow these guidelines:

- Administrator account username—Must start with an alphabetic character and can contain alphanumeric characters, hyphens, and underscores.
- Administrator account password—Must be at least six characters long and can contain alphanumeric characters, hyphens, and underscores.

You can change the administrator account password or add a new administrator account by using the command line interface. For more information, see the "Command line interface for Cisco Prime Collaboration Deployment" section.

For the security password, the password must be at least six characters long and can contain alphanumeric characters, hyphens, and underscores.

What is a strong password?

The Installation wizard checks to ensure that you enter a strong password. To create a strong password, follow these recommendations:

- Mix uppercase and lowercase letters.
- Mix letters and numbers.
- Include hyphens and underscores.
- Remember that longer passwords are stronger and more secure than shorter ones.

Avoid the following types of passwords:

- Do not use recognizable words, such as proper names and dictionary words, even when combined with numbers.
- Do not invert recognizable words.
- Do not use word or number patterns, such as aaabbb, qwerty, zyxwvuts, 123321, and so on.
- Do not use recognizable words from other languages.
- Do not use personal information of any kind, including birthdays, postal codes, or names of children or pets.

Can I install other software on the virtual machine?

You cannot install or use unapproved third-party software applications. The system can upload and process only software that is Cisco approved.

You can use the CLI to perform approved software installations and upgrades.

Preinstallation Tasks

The following table contains a list of preinstallation tasks that you must perform to install Cisco Prime Collaboration Deployment.

Table 2: Preinstallation Tasks

	Task
Step 1	Read this entire chapter to familiarize yourself with the installation procedure.
Step 2	Verify that the server on which you plan to install Cisco Prime Collaboration Deployment is properly configured in the DNS.
Step 3	Record the configuration settings for the server that you plan to install.

Allow Network Traffic

This section describes the minimum required ports that you must configure to support the Cisco Prime Collaboration Deployment server. The following table provides a summary of the ports that you must configure on a corporate firewall. The port configurations that are listed in this table are based on default settings. If you change the default settings, you must update these configurations.

If other servers or ports are required on your network, you must allow for that traffic.

Table 3: Corporate Firewall Configuration

Direction	Source	Destination	Protocol	Port	Description
Inbound	Cisco Prime Collaboration Deployment	IP address of the ftp server	TCP	21	FTP access to Cisco Prime Collaboration Deployment server for uploading licenses and software, upgrade, and CLI access
Inbound	Cisco Prime Collaboration Deployment	IP address of the sftp server	TCP	22	SFTP access to Cisco Prime Collaboration Deployment server for uploading licenses and software, upgrade, and CLI access
Inbound	Internal network or any management workstation	Cisco Prime Collaboration Deployment server IP address	HTTP	80	HTTP access to nonsecured GUI and web APIs (for example, login page)

Direction	Source	Destination	Protocol	Port	Description
Inbound	UC application servers	Cisco Prime Collaboration Deployment server IP address	TCP/UDP	111	Network File System
Inbound	Internal network or any management workstation	Cisco Prime Collaboration Deployment server IP address	HTTPS	443	HTTPS access to secured GUI and web APIs
Inbound	UC application servers	Cisco Prime Collaboration Deployment server IP address	TCP/UDP	662	Network File System
Inbound	UC application servers	Cisco Prime Collaboration Deployment server IP address	TCP/UDP	892	Network File System
Inbound	UC application servers	Cisco Prime Collaboration Deployment server IP address	TCP/UDP	2049	Network File System
Inbound	UC application servers	Cisco Prime Collaboration Deployment server IP address	HTTPS	6060	Asynchronous SOAP messages from application servers
Inbound	Internal network or any management workstation	Cisco Prime Collaboration Deployment server IP address	HTTPS	8443	HTTP alternate
Inbound	Internal network or any management workstation	Cisco Prime Collaboration Deployment server IP address	HTTP	8080	HTTP alternate

Direction	Source	Destination	Protocol	Port	Description
Inbound	UC application servers	Cisco Prime Collaboration Deployment server IP address	UDP	32769	Network File System
Inbound	UC application servers	Cisco Prime Collaboration Deployment server IP address	TCP	32803	Network File System

Table 4: Use of Command Line Interface (CLI)/Cisco Platform Administrative Web Services (PAWS) for tasks

Function/Requirements	Cluster Discovery	Migration	Upgrade Install COP Files	Restart	Switch Version	Fresh Install Edit/Expand	Readdress Task
VMware APIs	No	Yes	No	No	No	Yes	No
NFS mount on destination ESXi host of virtual machine	No	Yes (ISO install images)	No	No	No	Yes (ISO install images)	No
Local or remote SFTP	No	Yes (data export/import only)	Yes (ISO upgrade images)	No	No	No	No
PAWS	Yes when orchestrating UCM 10.0+ No when orchestrating UCM 6.1.5-9.1 (CLI used instead).		Yes	Yes	Yes	No	Yes
CLI via SSH	Yes	Yes	No	No	No	No	No

Gather Information for Installation

Use the following table to record information about Cisco Prime Collaboration Deployment. You may not need to obtain all the information; gather only the information that is relevant to your system and network configuration.

Note Because some of the fields are optional, they may not apply to your configuration.

Caution You cannot change some of the fields after installation without reinstalling the software, so be sure to enter the values that you want. The last column in the table shows whether you can change a field after installation; if so, the applicable CLI command is shown.

Table 5: Server Configuration Data

Parameter	Description	Can Entry Be Changed After Installation?
Administrator ID	This field specifies the Administrator account user ID that you use for secure shell access to the CLI on Cisco Prime Collaboration Deployment.	No, you cannot change the entry after installation. **Note** After installation, you can create additional Administrator accounts, but you cannot change the original Administrator account user ID.
Administrator Password	This field specifies the password for the Administrator account, which you use for secure shell access to the CLI. You also use this password with the adminsftp user. You use the adminsftp user to access local backup files, upload server licenses, and so on. Ensure the password is at least six characters long; the password can contain alphanumeric characters, hyphens, and underscores.	Yes, you can change the entry after installation by running the following CLI command: **set password user admin**
Country	From the list, choose the applicable country for your installation.	Yes, you can change the entry after installation by running the following CLI command: **set web-security**
DHCP	Cisco requires that you choose **No** to the DHCP option. After you choose **No**, enter a hostname, IP address, IP mask, and gateway.	No, do not change the entry after installation.

Parameter	Description	Can Entry Be Changed After Installation?
DNS Enable	A DNS server resolves a hostname into an IP address or an IP address into a hostname. Cisco Prime Collaboration Deployment requires that you use a DNS server. Choose **Yes** to enable DNS.	No, do not change the entry after installation.
DNS Primary	Enter the IP address of the DNS server that you want to specify as the primary DNS server. Enter the IP address in dotted decimal format as ddd.ddd.ddd.ddd.	Yes, you can change the entry after installation by running the following CLI command: **set network dns** To view DNS and network information, run the following CLI command: **show network eth0 detail**
DNS Secondary (optional)	Enter the IP address of the DNS server that you want to specify as the optional secondary DNS server.	Yes, you can change the entry after installation by running the following CLI command: **set network dns**
Gateway Address	Enter the IP address of the network gateway. If you do not have a gateway, you must still set this field to 255.255.255.255. Without a gateway, you may limited to communicating only with devices on your subnet.	Yes, you can change the entry after installation by running the following CLI command: **set network gateway**
Hostname	Enter a hostname that is unique to your server. The hostname can consist of up to 64 characters and can contain alphanumeric characters and hyphens. The first character cannot be a hyphen. **Important** Do not change your hostname while any tasks are running.	Yes, you can change the entry after installation. **set network hostname**
IP Address	Enter the IP address of your server.	Yes, you can change the entry after installation. **set network ip eth0**

Parameter	Description	Can Entry Be Changed After Installation?
IP Mask	Enter the IP subnet mask of this machine.	Yes, you can change the entry after installation by using the following CLI command: **set network ip eth0**
Location	Enter the location of the server. You can enter any location that is meaningful within your organization. Examples include the state or the city where the server is located.	Yes, you can change the entry after installation by using the following CLI command: **set web-security**
MTU Size	The maximum transmission unit (MTU) represents the largest packet, in bytes, that this host will transmit on the network. Enter the MTU size in bytes for your network. If you are unsure of the MTU setting for your network, use the default value. The default value is 1500 bytes.	Yes, you can change the entry after installation by running the following CLI command: **set network mtu**
NTP Server	Enter the hostname or IP address of one or more Network Time Protocol (NTP) servers with which you want to synchronize. You can enter up to five NTP servers. **Caution** To avoid potential compatibility, accuracy, and network jitter problems, the external NTP servers that you specify for the primary node can be NTP v4 (version 4). If you are using IPv6 addressing, external NTP servers must be NTP v4.	Yes, you can change the entry after installation by running the following CLI command: **utils ntp server**

Parameter	Description	Can Entry Be Changed After Installation?
Organization	Enter the name of your organization. **Tip** You can use this field to enter multiple organizational units. To enter more than one organizational unit name, separate the entries with a comma. For entries that already contain a comma, enter a backslash before the comma that is included as part of the entry.	Yes, you can change the entry after installation by running the following CLI command: **set web-security**
Security Password	Enter your security password. The password must contain at least six alphanumeric characters. The password can contain hyphens and underscores, but it must start with an alphanumeric character. **Note** Save this password.	Yes, you can change the entry after installation by running the following CLI command: **set password user security**
State	Enter the state in which the server is located.	Yes, you can change the entry after installation by running the following CLI command: **set web-security**
Time Zone	This field specifies the local time zone and offset from Greenwich Mean Time (GMT). Choose the time zone that most closely matches the location of your machine.	Yes, you can change the entry after installation by running the following CLI command: **set timezone** To view the current time zone configuration, run the following CLI command: **show timezone config**

Begin Installation

You install the operating system and Cisco Prime Collaboration Deployment by running one installation program.

For information about how to navigate within the Installation wizard, see the following table.

Table 6: Installation Wizard Navigation

To Do This	Press This
Move to the next field	**Tab**
Move to the previous field	**Alt-Tab**
Choose an option	Space bar or **Enter**
Scroll up or down in a list	**Up Arrow** or **Down Arrow** key
Go to the previous window	Space bar or **Enter** to choose Back (when available)
Get help information for a window	Space bar or **Enter** to choose Help (when available)

Install Cisco Prime Collaboration Deployment

Extract the PCD_VAPP.OVA File

Cisco Prime Collaboration Deployment is delivered with Unified Communications Manager, through a new purchase or an entitled upgrade that you access through the Product Upgrade Tool (PUT).

If you specify physical delivery in PUT, you will receive a DVD that contains an ISO file. You run this file to get an OVA file, which contains a preinstalled Cisco Prime Collaboration Deployment inside a virtual machine.

If you specify eDelivery in PUT, you will receive a Cisco Prime Collaboration Deployment download link in the email that contains media and license links. This link points to an OVA file that contains a preinstalled Cisco Prime Collaboration Deployment inside a virtual machine.

Procedure

Step 1 Extract the PCD_VAPP.OVA from the pcd_vApp_UCOS_10.xxxxx.iso file.
A new PCD_VAPP.OVA file is created. Verify the file size; ISO and OVA files do not have the same file size.

Step 2 Deploy the PCD_VAPP.OVA file in vCenter to install Cisco Prime Collaboration Deployment.
If you are using the vSphere client, the name of this file may be PCD_VAPP.OVA. If you are using the VMware vSphere web client to deploy the file, you must first change the name to PCD_VAPP.ova (lowercase) before you deploy the file.

Install the Virtual Machine

Before You Begin

- Download the OVA image.
- Read the “Preinstallation Tasks” section.
- Place a copy of the OVA on your local drive, depending on the installation type you are using.

Installation Type	Filename	Used with ESXi Host Software Version
OVA	PCD_VAPP.OVA or PCD_VAPP.ova **Note** The name of the OVA file depends on whether you are using vSphere client or VMware vSphere web client to deploy the file. For more information, see Extract the PCD_VAPP.OVA File, on page 14	4.1, 5.0, and 5.5

- Determine the following information for creating a virtual machine for Cisco Prime Collaboration Deployment and mapping the required port groups:
  - A name for the new Cisco Prime Collaboration Deployment that is unique within the inventory folder and up to 80 characters.
  - The name of the host where the Cisco Prime Collaboration Deployment will be installed in the inventory folder.
  - The name of the datastore in which the VM files will be stored.
  - The names of the network port groups used for the VM.

Procedure

Step 1 Log in to vCenter.

Step 2 From the vSphere Client, choose **File** > **Deploy OVF Template**.

Step 3 Specify the location of the OVA file and click **Next**.

The **OVF Template Details** window opens and the product information is displayed, including the size of the file and the size of the VM disk.

Step 4 Click **Next**.

Step 5 Enter the name of your VM and select the location where the OVA will be deployed. Click **Next**.

Step 6 Select the data center or cluster on which to install the OVA. Click **Next**.

Step 7 Select the VM Storage Profile. Click **Next**.

Step 8 Select the Disk Format. Click **Next**.

Step 9 If necessary, select the network that the OVA will use for deployment. Click **Next**.

Step 10 Review the options that you selected, and if no changes are required, click **Finish** to begin the OVA installation. After the installation is complete, the newly installed virtual machine appears in the selected location within vCenter.

Configure Cisco Prime Collaboration Deployment on the Virtual Machine

Cisco Prime Collaboration Deployment is installed as part of the OVA installation, but then you must configure it.

Procedure

Step 1 From the **vCenter** window, open the console of your newly installed virtual machine.

Step 2 Power on the virtual machine.
The installation begins automatically.

Step 3 When you are asked if you have preexisting configuration information, click **Continue** to proceed.
The **Platform Installation Wizard** screen appears.

Step 4 Click **Proceed** to continue with the wizard.

Step 5 Click **Continue** at the Basic Install screen.

Step 6 In the Timezone Configuration screen, select your time zone and click **OK**.

Step 7 Click **Continue** at the Auto Negotiation Configuration screen.

Step 8 When asked if you want to change the MTU size from the OS default, click **No** to proceed.

Step 9 For network configuration, you can choose to either set up a static network IP address for the node or to use Dynamic Host Configuration Protocol (DHCP). Static IP addresses are recommended. If you use DHCP, use static DHCP.

- If you have a DHCP server that is configured in your network and want to use DHCP, click **Yes**. The network restarts, and the Administrator Login Configuration window appears.
- If you want to configure a static IP address for the node, click **No**. The **Static Network Configuration** window appears.

Step 10 If you chose not to use DHCP, enter your static network configuration values and click **OK**.

The DNS Client Configuration window appears.

Step 11 To enable DNS, click**Yes**, enter your DNS client information, and click **OK**.
The network restarts by using the new configuration information, and the **Administrator Login Configuration** window appears.

Step 12 Enter your Administrator username and password.

Note The Administrator username must start with an alphabetic character, be at least six characters long, and can contain alphanumeric characters, hyphens, and underscores. You will need the Administrator username to log in to Cisco Unified Communications Operating System Administration, the command line interface, and the Disaster Recovery System.

Step 13 Enter the Certificate Information:

- Organization
- Unit
- Location
- State
- Country

Step 14 Click **OK** to proceed.

Step 15 Enter your Network Time Protocol (NTP) client configuration information. To test this configuration, click **Test**.

Step 16 Click **Proceed** to configure the NTP.

Step 17 When asked, enter your security password.

Step 18 When the platform configuration is complete, click **OK** to complete the installation. The installation take a few minutes to complete.

Postinstallation Tasks

Procedure

Step 1 Configure the backup settings. Remember to back up your Cisco Prime Collaboration Deployment data frequently. For details about how to set up a backup schedule, see CLI Commands and Disaster Recovery System, on page 105.

Step 2 Verify that you have a valid Network Time Protocol (NTP). To perform this check, log in to the Cisco Prime Collaboration Deployment CLI and run the command **utils ntp status**.

Reset OS Administrator and Security Passwords

To reset a system password, you must connect to the system through the system console. You cannot reset a password when you connect to the system through a secure shell session.

Note During this procedure, you must remove and then insert a valid CD or DVD in the disk drive to prove that you have physical access to the system.

Procedure

Step 1 Log in to the system with the following username and password:

- Username: pwrecovery
- Password: pwreset
  The **Welcome to platform password reset** window appears.

Step 2 Press any key to continue.

Step 3 If you have a CD or DVD in the disk drive, remove it now.

Step 4 Press any key to continue.
The system tests to ensure that you removed the CD or DVD from the disk drive.

Step 5 Insert a valid CD or DVD into the disk drive.

Note For this test, you must use a data CD, not a music CD. The system tests to ensure that you have inserted the disk.

Step 6 After the system verifies that you have inserted the disk, you are prompted to enter one of the following options to continue:

- Enter **a** to reset the Administrator password.
- Enter **s** to reset the security password.
- Enter **q** to quit.

Step 7 Enter a new password of the type that you chose.

Step 8 Reenter the new password.
The password must contain at least six characters. The system checks the new password for strength. If the password does not pass the strength check, you are prompted to enter a new password.

Step 9 After the system verifies the strength of the new password, the password is reset. You are prompted to press any key to exit the password reset utility.

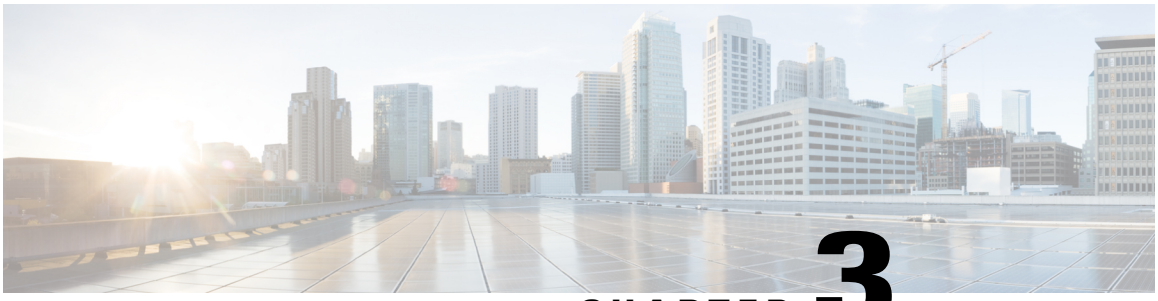

CHAPTER 3

Upgrade Cisco Prime Collaboration Deployment

- Upgrade Cisco Prime Collaboration Deployment Using CLI, page 19

Upgrade Cisco Prime Collaboration Deployment Using CLI

To upgrade the software version of Cisco Prime Collaboration Deployment, use the **utils system upgrade initiate** CLI command. There are four options, depending on where you have placed the new ISO file on an external filesystem or on Cisco Prime Collaboration Deployment itself.

Before You Begin

You must place the ISO file on a network location or remote drive that is accessible from Cisco Prime Collaboration Deployment.

Procedure

Step 1 If you want to place the ISO on Cisco Prime Collaboration Deployment, upload it to the Cisco Prime Collaboration Deployment server `/upgrade` folder by performing the following steps:

a) sftp adminsftp@<Cisco Prime Collaboration Deployment IP>
b) cd upgrade
c) put <name of iso file>

Note If you are using a remote file system, place the ISO file there. Be sure that it can be accessed through SFTP or FTP.

Step 2 Log on to the CLI interface of the Cisco Prime Collaboration Deployment server, and use the **utils system upgrade initiate** CLI command.
You will be asked to choose an option, based on where your ISO is located.

```
Warning: Do not close this window without first canceling the upgrade.

1) Remote Filesystem via SFTP
2) Remote Filesystem via FTP
3) Local DVD/CD
4) Local Upload Directory
q) quit
```

```
Please select an option (1-4 or "q" ):
```

Step 3 Perform one of the following steps:

- If the ISO file is in the `/upgrade` folder of Cisco Prime Collaboration Deployment, choose option **4**.
- If the ISO file is on a remote file system, choose option **1** or **2**, depending on whether you wish to use SFTP or FTP.

Step 4 The system searches the directory for files to upgrade to and displays those filenames. Select the file that you wish to upgrade the Cisco Prime Collaboration Deployment system to by choosing the number of that file.

Step 5 Indicate whether you want the system to automatically switch to the upgraded version if the upgrade is successful.

Example:

```
Automatically switch
    versions if the upgrade is successful (yes/no): yes
```

Step 6 Start the installation:

```
Start installation (yes/no): yes
The upgrade log is install_log_2013-10-07.20.57.17.log
Upgrading the system. Please wait...
10/07/2013 20:57:18 file_list.sh|Starting file_list.sh|<LVL::Info>
10/07/2013 20:57:18 file_list.sh|Parse argument
method=local_upload_dir|<LVL::Debug>
10/07/2013 20:57:18 file_list.sh|Parse argument source_dir=|<LVL::Debug>
10/07/2013 20:57:18 file_list.sh|Parse argument
dest_file=/var/log/install/downloaded_versions|<LVL::Debug>
```

The installation begins.

Step 7 After the installation is complete, use the **show version active** CLI command to see the current version of your Cisco Prime Collaboration Deployment software.

Example:

```
Active Master Version: 10.0.x.xxxxx-xxxx
Active Version Installed Software Options:
No Installed Software Options Found.
```

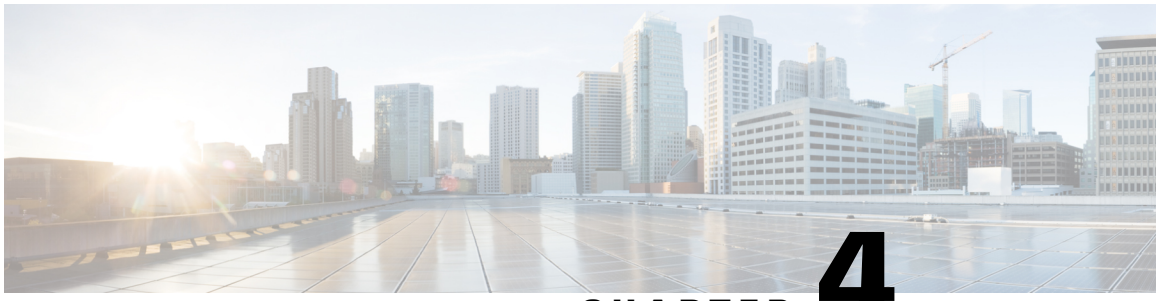

CHAPTER 4

Cisco Prime Collaboration Deployment Features

- Cisco Prime Collaboration Deployment Considerations, page 21
- Supported Releases, page 22
- Supported ESXi Server Versions, page 24
- Upgrade and Migration Paths, page 25
- Cluster Inventory, page 27
- Task Management, page 33
- Administration Tools, page 58

Cisco Prime Collaboration Deployment Considerations

Cisco Prime Collaboration Deployment allows a user to perform tasks (such as migration or upgrade) on servers that are in the inventory.

Step	Tasks
Step 1: Inventory Creation	To perform any tasks, you must first have clusters in your inventory. To add a UC cluster that is already running UC applications to your inventory, use the **Inventory** > **Clusters** > **Discovery Cluster** feature. To migrate an existing cluster to new virtual machines, go to **Inventory** > **Clusters** > **Define Migration Destination Cluster**. (See Migration Task, on page 33.) To install a new cluster, use the **Inventory** > **Clusters** > **Define New UC Cluster** feature. (See Install Task, on page 53.) If you are migrating an existing cluster to a new virtual machine cluster, or installing a new cluster, you must first add the ESXi Hosts that contain those virtual machines to your inventory by using **Inventory** > **ESXi Hosts**. (See Add an ESXi Host Server, on page 29.)

Step	Tasks
Step 2: Create a Task	You can create a task to perform an operation on a cluster in your inventory. During task creation, options allow you to: • Choose the cluster **Note** This task depends on the type of cluster you require. For example, you may choose a discovered cluster or a migration cluster. • Determine when to run the task • Determine if the task should run independently or pause between steps To perform one of the following actions, select from these procedures: • To migrate from an existing cluster to a new cluster of VM machines, see Migration Task, on page 33. • To upgrade the Unified Communications Manager version of an existing cluster, see Upgrade Task, on page 44. • To switch the version of an existing cluster, see Switch Versions Task, on page 47. • To restart an existing cluster, see Server Restart Task, on page 49. • To change the hostname or IP address of one or more servers in an existing cluster, see Readdress Task, on page 51. • To create a new UC cluster from VM machines, see Install Task, on page 53.
Step 3: Monitor Tasks	After a task is created, you can use the Monitoring window to view or track any task. You can also use this page to cancel, pause, or resume tasks. To view the tasks you created, see Monitor Task Status, on page 57.
Step 4: Administrative Tasks	You can set up email notification. See Email Notification, on page 118.

Supported Releases

The following list outlines the supported releases for each task:

Cluster Discovery

- Cisco Unified Communications Manager Releases Supported: 6.1(5), 7.1(3), 7.1(5), 8.0(1-3), 8.5(1), 8.6(1-2), 9.0.(1), 9.1(1), 9.1(2), 10.x
- Cisco Unified Presence Releases Supported: 8.5, 8.6
- Cisco Unified Communications Manager IM and Presence Service Releases Supported: 9.0(1), 9.1(1), 10.0(1), 10.5(1)

- Cisco Unified Contact Center Express Releases Supported: 8.5.1, 9.0, 9.0.2, and 10.0(1), 10.5(1)
- Cisco Unity Connection Releases Supported: 8.6.1, 8.6.2, 9.x and 10.0(1), 10.5(1)

Migration Cluster (Install Application and import data from old system)

- Cisco Unified Communications Manager Releases Supported: From 6.1(5), 7.1(3), 7.1(5), 8.0(1-3), 8.5(1), 8.6(1-2), 9.0.(1), 9.1(1), 9.1(2), 10.0(1), 10.5(1) to 10.0(1), 10.5(1)
- Cisco Unified Presence Releases Supported: From 8.5(4), 8.6(3), 8.6(4), 8.6(5) to 10.0(1), 10.5(1)
- Cisco Unified Communications Manager IM and Presence Service Releases Supported: From 9.0(1), 9.1(1), 10.0(1), 10.0(1) to 10.5(1), 10.5(1)
- Cisco Unified Contact Center Express Releases Supported: Migration Not Supported
- Cisco Unity Connection Releases Supported: Migration Not Supported

Upgrade Task (Upgrade Application Server or Install COP Files)

- Cisco Unified Communications Manager Releases Supported: From 8.6(1-2), 9.0.(1), 9.1(1), 9.1(2), 10.0(1), 10.5(1) to 10.0(1), 10.5(1)
- Cisco Unified Presence Releases Supported: From 8.6(3), 8.6(4), 8.6(5) to 10.0(1), 10.5(1)
- Cisco Unified Communications Manager IM and Presence Service Releases Supported: From 9.0(1), 9.1(1), 10.0(1), 10.5(1) to 10.0(1), 10.5(1)
- Cisco Unified Contact Center Express Releases Supported: From 9.0(2), 10.0(1), 10.5(1) to 10.0(1), 10.5(1)
- Cisco Unity Connection Releases Supported:
  - From 8.6(x) to 8.6(x)
  - From 8.6(x) to 9.x
  - From 9.x to 9.x
  - From 10.0(1) to 10.0(1)
  - From 10.5(1) to 10.5(1)

Restart Task

- Cisco Unified Communications Manager Releases Supported: 8.6(1-2), 9.0.(1), 9.1(1), 9.1(2), 10.0(1), 10.5(1)
- Cisco Unified Presence Releases Supported: 8.6(3), 8.6(4), 8.6(5)
- Cisco Unified Communications Manager IM and Presence Service Releases Supported: 9.0(1), 9.1(1), 10.0(1), 10.5(1)
- Cisco Unified Contact Center Express Releases Supported: 9.0(2), 10.0(1), 10.5(1)
- Cisco Unity Connection Releases Supported: 8.6(1-2), 9.x, 10.0(1), 10.5(1)

Switch Version Task

- Cisco Unified Communications Manager Releases Supported: 8.6(1-2), 9.0.(1), 9.1(1), 9.1(2), 10.0(1), 10.5(1)
- Cisco Unified Presence Releases Supported: 8.6(3), 8.6(4), 8.6(5)
- Cisco Unified Communications Manager IM and Presence Service Releases Supported: 9.0(1), 9.1(1), 10.0(1), 10.5(1)
- Cisco Unified Contact Center Express Releases Supported: 9.0(2), 10.0(1), 10.5(1)
- Cisco Unity Connection Releases Supported: 8.6(1-2), 9.x, 10.0(1), 10.5(1)

Fresh Install new Cluster or Edit/Expand an existing Cluster

- Cisco Unified Communications Manager Releases Supported: 10.0(1), 10.5(1)
- Cisco Unified Presence Releases Supported: Not applicable
- Cisco Unified Communications Manager IM and Presence Service Releases Supported: 10.0(1), 10.5(1)
- Cisco Unified Contact Center Express Releases Supported: 10.5(1)
- Cisco Unity Connection Releases Supported: 10.5(1)

Readdress Task (Change Hostname or IP Addresses for One or More Nodes in a Cluster)

- Cisco Unified Communications Manager Releases Supported: 10.5(1)
- Cisco Unified Presence Releases Supported: Not applicable
- Cisco Unified Communications Manager IM and Presence Service Releases Supported: Not Supported
- Cisco Unified Contact Center Express Releases Supported: 10.5(1)
- Cisco Unity Connection Releases Supported: 10.5(1)

Note The supported releases do not include the Engineering Special (ES)/ Service Update (SU) versions. To upgrade or migrate to ES/SU versions, see the release notes of the corresponding product, such as IM and Presence, Cisco Unified Communications Manager, and Unity.

Supported ESXi Server Versions

Following table lists the supported ESXi server versions for a Cisco Prime Collaboration Deployment virtual machine (VM). This VM integrates through the VMware APIs with a virtualization host that is running VMs for Cisco Unified Communications Manager or other applications. The table also lists the compatible versions of VMware vSphere ESXi server for a Cisco Prime Collaboration Deployment virtual machine that runs on a virtualization host.

Supported Version of VMware vSphere ESXi on Host having VM of Cisco Unified Communications Manager or Another Application	Cisco Prime Collaboration Deployment Version Compatibility for VMware APIs
5.1 and older	No
5.5	Yes
6.0	No

Upgrade and Migration Paths

You can upgrade or migrate Cisco Unified Communications Manager, IM and Presence Service, Cisco Unified Contact Center Express, and Cisco Unity Connection from earlier versions to virtual 10.5(2) version. Prime Collaboration Deployment (PCD) 10.5(2) is one of the ways to maintain or upgrade these products.

Following table lists the upgrade and migration paths with both old and new ways:

Table 7: Upgrade and Migration Paths

Upgrade Path	Migrate MCS to VM		Migrate VM to new VM		Upgrade in existing VM	
Release	**Old Way (Legacy Linux to Linux (L2)/Refresh Upgrade (RU)+ Disaster Recovery System (DRS)**	**New Way (PCD M1 Migration)**	**Old Way (Legacy L2/RU+(DRS)**	**New Way (PCD M1 Migration)**	**Old Way(Legacy L2/RU)**	**New Way(PCD Refresh Upgrade (RU)/Linux to Linux (L2)**

<table>
<tr><th>Upgrade Path</th><th colspan="2">Migrate MCS to VM</th><th colspan="2">Migrate VM to new VM</th><th colspan="2">Upgrade in existing VM</th></tr>
<tr><td>4.x
5.1(2)</td><td rowspan="8">Multi-step:
1 Migrate from MCS L2/RU to 8.0(3)+ virtual machine.
2 On MCS, back up DRS.
3 On MCS, restore DRS.
4 Reinstall 8.0(3)+ virtual machine.
5 Migrate the virtual machine from legacy RU to 10.5(2).</td><td>Multi hop:
1 Migrate the legacy W1/L2 to 6.1(5), 7.1(3), or 7.1(5).
2 Migrate PCD M1 to 10.5(2).</td><td colspan="2" rowspan="8">Not applicable, because these releases do not support virtualization.
VM-jump option is not available for these releases. This option is available only to 9.1(2) and not to 10.x.</td><td colspan="2" rowspan="8">Not applicable, because these releases do not support virtualization.
VM-jump option is not available for these releases. This option is available only to 9.1(2) and not to 10.x.</td></tr>
<tr><td>5.1(3)
6.0(x)
6.1(1)
6.1(2)
6.1(3)
6.1(4)</td><td>Two hop:
1 Migrate the legacy L2 to 6.1(5), 7.1(3), or 7.1(5).
2 Migrate PCD M1 to 10.5(2).</td></tr>
<tr><td>6.1(5)</td><td>Single Hop:
Migrate PCD M1 to 10.5(2)</td></tr>
<tr><td>7.0(1)
7.1(2)
7.1(4)</td><td>Two hop:
1 Migrate legacy L2 to 7.1(3) or 7.1(5).
2 Migrate PCD M1 to 10.5(2).</td></tr>
<tr><td>7.1(3)
7.1(5)
8.0(1)</td><td rowspan="3">Single Hop:
Migrate PCD M1 to 10.5(2).</td></tr>
<tr><td>8.0(2)</td></tr>
<tr><td>8.0(3)
8.5(1)</td></tr>
<tr><td>8.6(1)</td><td></td><td>Single hop:
Migrate PCD M1 to 10.5(2).</td><td>Single Hop:
Upgrade PCD RU to 10.5(2).</td><td>Two Hop:
1 Upgrade L2 to 8.6(2) and above.
2 Upgrade PCD RU to 10.5(2).</td></tr>
</table>

Upgrade Path	Migrate MCS to VM		Migrate VM to new VM		Upgrade in existing VM	
8.6(2) 9.0(1) 9.1(1) 9.1(2)	Multi-step: **1** MCS: DRS backup **2** VM: reinstall 8.0(3)+ **3** VM: DRS restore **4** VM: legacy RU to 10.5		Multi-step: **1** On old VM, back up DRS. **2** On new VM, reinstall 8.0(2+), 8.5, 8.6, 9.x, or 10.x. **3** On new VM, restore DRS. **4** On new VM, perform one of the following tasks: migrate L2 10.x to 10.5(2), or, migrate RU 8.x or 9.x to 10.5(2).			Single hop: Upgrade PCD RU to 10.5(2).
10.0(1) 10.5(1)	Not applicable, because Release 10.x supports only virtualization.				Single hop: Upgrade PCD L2 to 10.5(2)	Single Hop: Upgrade PCD L2 to 10.5(2)

Cluster Inventory

You must add a cluster to the Cisco Prime Collaboration Deployment inventory before you can use it in a task. The Discover Cluster feature is used to add existing clusters to the inventory. To create a new cluster by migrating an old cluster to new virtual machines, click **Define Migration Destination Cluster**. To install a new cluster, click **Define New UC Cluster**.

Discover a Cluster

The Discover Cluster feature allows Cisco Prime Collaboration Deployment to contact servers that are already running Unified Communications applications, and add that cluster information into the Cisco Prime Collaboration Deployment inventory.

When the Discover Cluster operation is performed, the Cisco Prime Collaboration Deployment server contacts the publisher of the cluster and retrieves the cluster information. It then contacts each server individually, installs a Cisco Options Package (COP) file on the server to retrieve configuration information, and collects information about the hostname, IP, product type, and both active and inactive versions for that server.

Note Discovering a cluster may take a few minutes. If you cancel the discovery before it is complete, you will have to restart the discovery procedure at another time. After the discovery is finished, you will see the information for each node in the cluster listed on the **Cluster Inventory** window.

Note To see which applications are supported, see Supported Releases, on page 22.

Note If a cluster includes Unified Communications Manager and Cisco Unified Presence (or Unified Communications Manager and IM and Presence Service) servers, the Cluster discovery will discover the Cisco Unified Presence or IM and Presence Service nodes as part of the Unified Communications Manager cluster. When a cluster is discovered, the product type and version of each node is displayed on the **Clusters** window.

Procedure

Step 1 Select **Inventory** > **Clusters** from the menu of the Cisco Prime Collaboration Deployment application.

Step 2 To discover existing clusters, click **Discover Cluster**.

Step 3 The Discover Cluster wizard appears. Under Step 1 of the wizard, enter the following required information:

a) Cluster Nickname (this is a name you create for this cluster)

b) Publisher Hostname/IP Address

Note For a cluster that has both Unified Communications Manager and IM and Presence Service nodes, enter the Unified Communications Manager publisher hostname or IP address.

c) OS Admin Username

d) OS Admin Password

Step 4 Click **Next**.

Important During discovery, a COP file (`ciscocm.ucmap_platformconfig.cop`) is installed automatically on the active partition of all nodes in the cluster. This COP file is used strictly for the cluster discovery process and does not otherwise affect the Unified Communications Manager.

Step 5 Under Step 2 of the wizard, Cisco Prime Collaboration Deployment generates a list of cluster nodes from the publisher's server inventory. This process may take several minutes to complete. After the list is generated, a message appears indicating that the cluster discovery process is complete.

Step 6 Click **Next**.

Step 7 (Optional) To assign functions to each of the cluster nodes, click **Assign Functions**.

Step 8 From the **Assign Functions** dialog box, select the node that you want to modify by clicking **Previous** or **Next**. The hostname field indicates which node you selected. For each node, you can assign a function or multiple functions, and add notes for the function assignment in the **Notes** field.

Note When you assign functions, you define the functions of each node, but this does not affect the services that will be activated. The assigned-functions information can, however, be used to determine the default sequencing of tasks.

Step 9 After you assign the functions that you want, click **OK**.

Step 10 Click **Finish**.
The cluster appears on the **Clusters** window, listing the cluster name, product and version, and a cluster type of "Discovered." Discovery Status should show "Successful."

Add an ESXi Host Server

Important When you add an ESXi host into Cisco Prime Collaboration Deployment, you mount the Cisco Prime Collaboration Deployment server as a network file system (NFS) mount on that host. In the future, if you are going to remove your Cisco Prime Collaboration Deployment machine, you should first delete the ESXi host from the Cisco Prime Collaboration Deployment so that it does not cause a stale NFS mount on that host.

Note When you shut down a Cisco Prime Collaboration Deployment server, we recommend that you use the **utils system shutdown** CLI command.

Note Make sure that the host with the Cisco Prime Collaboration Deployment VM and the host with the application VMs use the required Virtualization Software License. See Virtualization Software License Types, on page 5.

Procedure

Step 1 Select **Inventory** > **ESXi Hosts** from the menu of the Cisco Prime Collaboration Deployment application.

Step 2 Click **Add ESXi Host**.

Step 3 The **Add Host Server** dialog box appears. Enter the following information:

a) Hostname/IP Address
b) Root login
c) Root password

Step 4 Click **OK** to add the ESXi host.

Create a Migration Cluster

Before You Begin

You must create a migration cluster. To do so, first discover the existing cluster you wish to migrate from (see Discover a Cluster, on page 27). Then, use this procedure to define a migration cluster.

Note After the migration cluster has been defined, go to Migration Task, on page 33 to define when and how to perform the migration.

Procedure

Step 1 Select **Inventory** > **Cluster**.

Step 2 Click **Define Migration Destination Cluster** to start the Configure Destination Cluster wizard.

Step 3 In Step 1, Specify Clusters, of the Configure Destination Cluster wizard, select the source UC cluster from the drop-down list. Enter a name in the Destination Cluster Name field and select the appropriate Destination Network Settings option:

- To keep you network options, select the **Use the source node network settings for all destination nodes** radio button.
- If you do not wish to keep you network options, select the **Enter new network settings for one or more destination nodes** radio button.

Step 4 Click **Next**.

Step 5 Step 2 of the wizard opens. Click **Assign Destination Cluster Nodes** to open the Configure Destination Cluster window.

Step 6 On this page, configure the destination cluster by selecting a destination VM for each source node. Source Node information (hostname) appears at the top of the page and the available virtual machines are shown at the bottom of the page. Select a VM by clicking the radio button that is associated with the VM name.

If you wish to keep the network information the same as the source node information (this is the default), leave the Network entry choice as **Use Source Node Network Settings**

If you wish to enter new network information for this node, select **Enter New network settings** in the "Network" box entry.

To change the IP address, enter the following:

1. New IP address
2. New hostname
3. Mask
4. Gateway

After the information for this node is entered, click **Next Node** at the bottom of the screen to go to the next node in the cluster. If there is more than one node in the cluster, you must repeat these steps (assigning VM, and entering new IP/hostname settings, if needed) for each node in the source cluster.

Note Cisco Prime Collaboration Deployment allows you to change the network information for specific nodes on the cluster, or change all of them.

Note If DHCP is in use on your source node, the destination node will also be configured to use DHCP, and you will not have the option of changing your network settings in this wizard.

Step 7 When all nodes are assigned a destination VM, click **Done** to close the Configure Destination Cluster window. Click **Next** to move to Step 3 of the wizard.

Step 8 Step 3 of the wizard, Configure NTP/SMTP settings, opens. This window is auto-populated with the information from the source node. Enter the Network Time Protocol (NTP) server settings to be applied to the migration nodes when the migration task runs. Enter the SMTP server settings (optional). Click **Next**.

Important In a proxy TFTP setup, if a network migration is performed "off-cluster", you need to manually configure the new hostname and IP address of that off-cluster in the proxy TFTP. Off-cluster refers to situations where TFTP functionality is performed by a proxy that is not part of that specific Unified Communications Manager cluster. During a migration, that TFTP server (that is not part of the cluster) is not modified in any way. If you want to change the hostname/IP address of that server, it must be done as a separate process (and not with Cisco Prime Collaboration Deployment).

Step 9 Step 4 of the Define Migration Destination wizard, Configure DNS Settings, opens. You can configure DNS for the migration cluster nodes. To change the DNS setting for a node, select the node or nodes from the table and click **Assign DNS Settings**. Enter the primary and secondary DNS, and then click **OK** to apply the changes.

Important You cannot change the domain name during a migration.

Step 10 Click **Finish** to close the wizard and save your changes.
A row is added to the clusters table to reflect the new migration cluster that you created.

Add a New Cluster for a Fresh Install

Procedure

Step 1 Select **Inventory** > **Clusters** from the menu of the Cisco Prime Collaboration Deployment application.

Step 2 Click **Define New UC Cluster**.

Step 3 The Define Cluster wizard appears. Under Step 1 of the wizard, enter the Cluster name. Click **Next**.

Step 4 Step 2 of the Add Cluster wizard allows you to add nodes to your cluster. Begin by clicking **Add Node** at the top of the Cluster Name table.

Step 5 The Add Node dialog box appears. The dialog box contains a table that lists all available VMs, sorted by name and by host. At the top of the page, fill in the Network settings for this Node. In the middle of the page, choose the Functions for the node, and near the bottom, choose a VM for this node. Select the VM you wish to add and then enter the following information in the sections below the VM table:

a) Under Network, select either **Use DHCP with reservations** or **Static IP Address**. If you select the DHCP with reservations option, you must enter the IP address you have a reservation for on your DHCP server

(associated with the MAC address for that VM) in addition to the hostname. If you select Static IP Address, you must enter the IP Address and subnets.
If you are adding a UCCX server, do not use DHCP for network settings.

b) Under Functions, assign specific functions to your VM by checking the applicable check boxes. You must check the **Publisher** function for at least one node in the cluster being defined, for each application type. You can also add a note about the function or functions assigned in the Notes field below.

c) Under Virtual Machines, choose the VM for this node. VMs to be used for fresh install clusters should be new VMs that are in the powered off state. Do not install over an existing running Unified Communications Manager node, this must be a fresh VM created with the appropriate OVA for the application you will be installing.

Step 6 Click **OK**.

Step 7 The VM you added is now listed in the Cluster Name table. (To add more nodes to the cluster, repeat steps 4 through 6 until all nodes are added.) After all nodes are added to the Cluster Node table, click **Next**.

Step 8 The Configure Cluster Wide Settings page appears. Enter the OS Administration Credentials, Application Credentials, Security Password, SMTP Settings, and Certificate Information for this cluster. Click **Next**.

Note The certificate attributes consist of the following:

- Country
- Organization
- Organizational Unit
- State/Province
- Time Zone

Step 9 The Configure DNS Settings screen appears. DNS settings are optional. If you wish to add a DNS setting for a node, select the node and click **Assign DNS Settings**.
The Cisco Unified Contact Center Express application must use DNS.

Step 10 The Configure NTP Settings screen appears. You must enter at least one NTP server. If you are not using DNS, you must enter an IP address. If you are using DNS, you can enter an FQDN.

Note We recommend that you define at least two NTP servers.

Click **Next**.

Step 11 The Configure NIC Settings page appears. This step is optional. To use the default value of 1500, click **Next** to continue. Or, if you wish to change the settings, choose the server, and enter an MTU size between 552 and 1500, and click **Apply to Selected**. Click **Next** after you configure the NIC settings.

Step 12 Choose a time zone for each node in the cluster. To choose the time zone, select the node and choose the desired time zone settings in the boxes at the top, and click the **Apply to Selected**.
When you finish setting time zones for all the nodes, click **Finish**.

Step 13 The new install cluster is listed on the Clusters screen, with a cluster type of "New Install." The cluster is defined but not yet created. When you are ready to install the cluster, create an install task. The install task uses the install cluster that you defined, and creates the cluster.

Task Management

After you add your clusters and ESXi hosts to the Cisco Prime Collaboration Development inventory, you can create tasks to manage your clusters. Each task has the following common features:

- Each task is applied to a single cluster.
- The default sequence for each task (for example, what servers are affected and when) is applied based on the server functions you defined.
- The sequence of each task can be customized to fit your needs.
- Each task can be scheduled to start immediately or at a later date.
- Tasks can also be created without a specific start time. You can then manually start the task through the Monitoring page at the appropriate time.

Migration, install, and upgrade tasks require you to select one or more Cisco Option Packages (COP) or ISO files. You must download these files from Cisco.com and upload them to the Cisco Prime Collaboration Deployment server before you create the task. You can use any SFTP client to upload the files using the "adminsftp" account and the OS Administation password. Upload migration and .iso install files into the `/fresh_install` directory, and place upgrade .iso files or .cop files to be installed on an existing server in the `/upgrade` directory.

Note Migration and install .iso files must be bootable.

Migration Task

Before You Begin

To perform cluster migration, the destination virtual machine must be ready for installation before you create the migration task. Be sure that the following steps are completed:

1. **VMware—**Deploy the hardware for the new cluster and install ESXi.

Note Make sure that the host with the Cisco Prime Collaboration Deployment VM and the host with the application VMs use the required Virtualization Software License. See Virtualization Software License Types, on page 5.

2. **ISO file—**Download the recommended OVA and ISO images for the target release, and use SFTP to send the ISO file to the Cisco Prime Collaboration Deployment server, `/fresh_install` directory.
3. **VMware—**Deploy the Cisco-recommended OVA to create the VMs for the destination nodes. Create the appropriate number of target virtual machines on your ESXi hosts (one new virtual machine for each server in the existing cluster) using the Cisco OVAs that you downloaded in Step 2. Configure the network settings on new VMs.

4 **Cisco Prime Collaboration Deployment GUI—**Add the ESXi Hosts that contain your virtual machines to the Cisco Prime Collaboration Deployment inventory. For information about adding an ESXi host to Cisco Prime Collaboration Deployment, see Add an ESXi Host Server, on page 29.

5 **Cisco Prime Collaboration Deployment GUI—**Ensure that you performed a cluster discovery for the existing cluster (source cluster) so that it appears in the Cluster Inventory. For information about cluster discovery, see Discover a Cluster.

6 **Cisco Prime Collaboration Deployment GUI—**Create the migration cluster (**Inventory** > **Clusters**) to define the mapping between MCS source nodes and target virtual machines.

Important When the migration cluster is created, you must indiciate whether all destination nodes will maintain the same hostname or IP address, or whether some of these addresses will change.

- Using the source node settings for all destination nodes option is called a simple migration. See the migration flow chart for more information.
- Entering new network settings for one or more destination nodes is called a network migration. See the migration flow chart for more information.

7 **Cisco Prime Collaboration Deployment GUI—**Setup Email Notification (Optional)

- Navigate to **Administration** > **Email Notification**.
- When email notification is set up, the Cisco Prime Collaboration Deployment server emails the error conditions that may occur during the migration task.

8 **Cisco Prime Collaboration Deployment GUI—**Create the migration task.

9 Install the `ciscocm.migrate_export_10_0_1.sh_v1.1.cop.sgn` cop file on both IM and Presence publisher and subscriber nodes.

Special Considerations

- If you are migrating a cluster that is security enabled, see CTL Update, on page 111 for special instructions. If you are performing a migration with network migration (where one or more hostnames or IP addresses change between the source and destination nodes), update the IP addresses or hostnames of destination nodes in your DNS server before you begin the migration task.

Create a Migration Task

Follow these steps to create or edit a new migration task to simultaneously upgrade and migrate a cluster to new virtual machines.

Procedure

Step 1 Select **Task** > **Migrate** from the main menu.

Step 2 Click the **Add Migration Task**. The Add Migration Task wizard appears.

Step 3 From the **Source UC Cluster** drop-down list, select the cluster on which the nodes to be migrated from are located.

Step 4 From the **Destination Cluster** drop-down list, select the destination cluster or migration map. The migration maps are associated with the source cluster you have selected. Click **Next**.

Step 5 In the **Choose Migration Files** section, choose the ISO file you wish to install on the destination cluster by clicking **Browse**. The **Choose a Migration File** window opens. Select the ISO file from the list and click **OK**.

Important The ISO file is visible here only if it was placed in the directory under `/fresh_install`, uploaded through a standard SFTP client (Admin Name: adminsftp, Password: Administration password). For more information, see the task management information at the beginning of this section.

Step 6 Click **Next**.

Step 7 In the **Set Start Time** section, choose between scheduling a particular start time, starting the task immediately, or starting the task manually at some point in the future. Click **Next**.

Step 8 In the **Specify Migration Procedure** section, you will see the default sequence for the migration task. If you wish, you can change the sequence of steps in the migration procedure. (For example, the default is to install each subscriber individually. You might want to change this to install more than one subscriber in a step.) You have the following options:

Option	Description
Pencil icon	Edit a step.
Page icon	Add a new step after the current step.
X mark	Delete the current step. If you remove all the nodes from a step, the step is removed by default. You cannot remove a step that contains the Publisher node.
Up arrow	Move the step up to be performed earlier.
Down arrow	Move the step down to be performed later.

- The Pencil icon opens up an **Edit Step** window. Add nodes to be migrated in this step from the list of available nodes. The available nodes are the ones that you chose for migration.
- The step to which each node is assigned displays next to the node. If a node is not assigned to any step, it shows as unassigned.
- When you assign all the nodes to a step, a default sequencing is available.

  Important You cannot proceed to the next step until you assign all the nodes.

- The **Pause task after step completes** option pauses the task after completion of this step. You must manually start the next step to complete the task.

For more information about sequencing tasks, see the task management information at the beginning of this section.

Step 9 Click **Next**.

Step 10 In the **Review** section, you can review the selections that you made. You can also add notes to your new migration task.

Step 11 If there are no changes required, click **Finish** to add your new migration task.

Step 12 The new migration task appears in the table on the Migrate screen.

Important If you are performing a migration with network migration, the sequence automatically inserts a "Forced Pause" step into the sequence after all the servers are installed to allow the user to perform procedures. See the "Run a Migration Task" section for details on when manual procedures are needed. The "Forced Pause" step cannot be edited and moved, and it has no nodes assigned. This step is inserted before the source node shutdown step, because if CTL Updates or certificate management steps are required, these steps must be completed before the source node is shut down.

Run a Migration Task

If you scheduled the task to start at a later date, or if you chose Manual Start, then the task is listed in the task list, but has not started yet. In this case, a validation button will be associated with the task. Click **Validate** to check the task before it runs. If there are any problems with the task (such as a missing ISO file, or VMs not in Off state), the validation will alert you, so the issues can be fixed before the task starts.

For a task that was scheduled to start, you can click the Start button to begin the task.

While the migration task is running, depending on the type of migration task, some user operations might be needed. For example, if you are performing a "migration with network migration," the sequence automatically inserts a "Forced Pause" into the sequence after all the servers have been installed. This will cause the migration task to pause after all the new servers are installed but before any of the source machines are shut down.

Consult the table below and the applicable Migration Procedure flow chart (see the "Migration Procedure Flow Charts" section) to determine if any user interaction will be needed during the migration task.

Important When the migration cluster is created, you must indicate whether all destination nodes will keep the same hostname or IP address, or if some of these addresses will be changing.

- Using the source node settings for the all destination nodes option is referred to as a "simple migration" in the "Migration Procedure Flow Charts" section.
- Entering new network settings for one or more destination nodes option is referred as "network migration" in the "Migration Procedure Flow Charts" section.

Unified CM source cluster - from Release	Simple Migration or Network Migration	Unified CM source cluster - (secure or nonsecure)	User procedures to be performed during migration
6.1(5), 7.1(3), 7.1(5)	Simple migration	Secure	No steps are required during migration
6.1(5), 7.1(3), 7.1(5)	Simple migration	Nonsecure	No steps are required during migration
6.1(5), 7.1(3), 7.1(5)	Network migration	Secure	When migration task reaches the Forced Pause step, click the Resume button.
6.1(5), 7.1(3), 7.1(5)	Network migration	Nonsecure	When migration task reaches the Forced Pause step, click the Resume button.
8.x, 9.x, and 10.x	Simple migration	Secure	No steps required during migration
8.x, 9.x, and 10.x	Simple migration	Nonsecure	No steps required during migration
8.x, 9.x, and 10.x	Network migration	Secure	When the migration task reaches the Forced Paused step, perform the following steps: **1** CTL Update **2** Bulk Certificate Management **3** Resume the task on Cisco Prime Collaboration Deployment GUI.
8.x, 9.x, and 10.x	Network migration	Nonsecure	When the migration task reaches the Forced Paused step, perform the following steps: **1** Bulk Certificate Management **2** Resume the task on Cisco Prime Collaboration Deployment GUI.

Postmigration Tasks for Cisco Unified Communication Manager Nodes in the Cluster

“After the migration task runs successfully, if a migration task with network migration was performed, some additional steps are required. (No postmigration tasks are required if a simple migration was performed.) ” Consult the following table and the applicable migration Use Case flowchart to determine whether any user tasks must be performed after the migration task is successful.

Unified CM source cluster - from Release	Simple Migration or Network Migration	Unified CM source cluster (Secure or Non-secure)	User procedures to be performed after migration
6.1(5), 7.1(3), 7.1(5)	Network migration	Secure	**1** Perform CTL Update **2** Restart Services on Unified Communications Manager **3** Change TFTP Server IP Address **4** Verify Phone Registration
	Network migration	Nonsecure	**1** Change TFTP Server IP Address **2** Verify Phone Registration
8.x, 9.x, and 10.x	Network migration	Secure	**1** Change TFTP Server IP Address **2** Verify Phone Registration
	Network migration	Nonsecure	**1** Change TFTP Server IP Address **2** Verify Phone Registration

Post Migration Tasks for IM and Presence Service

If the migrated cluster contains IM and Presence Service nodes, and you are performing a network migration, these postinstallation tasks must be performed for any pre-Release 10.x IM and Presence Service cluster.

Procedure

	Command or Action	Purpose
Step 1	Configure certificates and certificate trust stores.	If the old cluster had CA-signed certificates in any of the component trust stores, be aware that the components contain self-signed certificates on the migrated Release 10.x cluster. Also, the root and intermediate certificates of the Certificate Authority are not preserved in their respective trust stores. You should sign the certificates with the old Certificate Authority, similar to how it would have been done initially. For more information, see the IM and Presence Service OS platform chapter from the *Cisco Unified Communications Operating System Administration Guide*.
Step 2	Configure intercluster peers.	If the old cluster had an intercluster peer relationship, you need to delete the configuration from all peer clusters. Once this is done, add the appropriate interclustering based on the network details of the new cluster. For example, Cluster A, Cluster B, and Cluster C are all intercluster peers. If Cluster A was migrated, then you should delete all interclustering configuration from the old Cluster A and likewise Cluster A from Cluster B and Cluster C and then add interclustering with the network details of the new Cluster A. You do not need to configure anything from the new Cluster A since the migration brings over

	Command or Action	Purpose
		the old data. For more information, see *Deployment Guide for IM and Presence Service on Cisco Unified Communications Manager.*
Step 3	Re-publish SIP Federation.	If the old cluster was front-ending SIP Interdomain with Microsoft OCS/Lync/AOL or SIP Intradomain federation with OCS/Lync, then your enterprise will need to re-publish the DNS-SRV of your federating domain to reflect the new network details. If the far side has SIP static routes configured instead of DNS-SRV based routing, then the SIP static routes need to be changed to reflect the new network address. Similarly, all intermediate network elements (including ASA or any other similar components that route or inspect traffic to the old cluster from the external federation entities) need to be re-configured for successful routing to the new cluster. For Interdomain configuration, see *Interdomain Federation for IM and Presence Service on Cisco Unified Communications Manager*. For Intradomain federation, see *Partitioned Intradomain Federation for IM and Presence Service on Cisco Unified Communications Manager*.
Step 4	Re-publish XMPP Federation.	If the old cluster was front-ending XMPP Interdomain federation to any external XMPP servers, then your enterprise will need to republish your federating domain's DNS-SRV records to reflect the new network details. Refer to *Interdomain Federation for IM and Presence Service on Cisco Unified Communications Manager*.
Step 5	Configure Cisco Jabber/Cisco Unified Personal Communicator connectivity.	Jabber or Unified Personal Communicator caches the hostname information from the old cluster and does not have new hostname information unless you are able to push the configuration to the desktop of the user, or that user manually enters one of the node names. A fail safe approach for users that are unassigned from the old cluster, and as a result are unable to log in, involves the user manually entering the hostname or IP address of one of the nodes in the new cluster (of which they were informed of prior to migration). In this scenario, the user's client finds the right home node by way of redirected login.

Migration Procedure Flow Charts

Use the following task flows as a guide to perform migration tasks.

Simple Migration

Figure 1: Flow Chart for Simple Migration

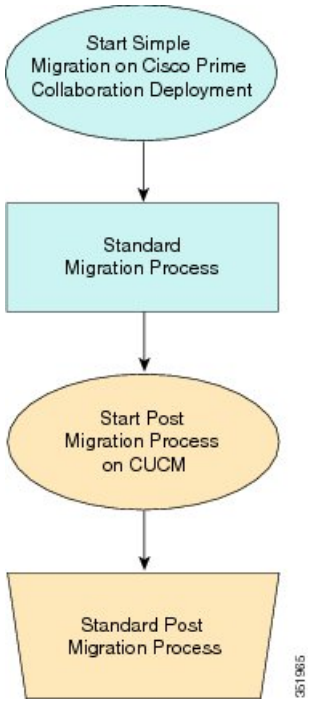

Note Cisco Prime Collaboration Deployment does not support migration of Business Edition 5000 Appliance running on MCS 7828H3.

Pre Release 8.0.1 Unified CM Network Migration

Figure 2: Flow Chart for Pre Release 8.0.1 Unified Network Migration

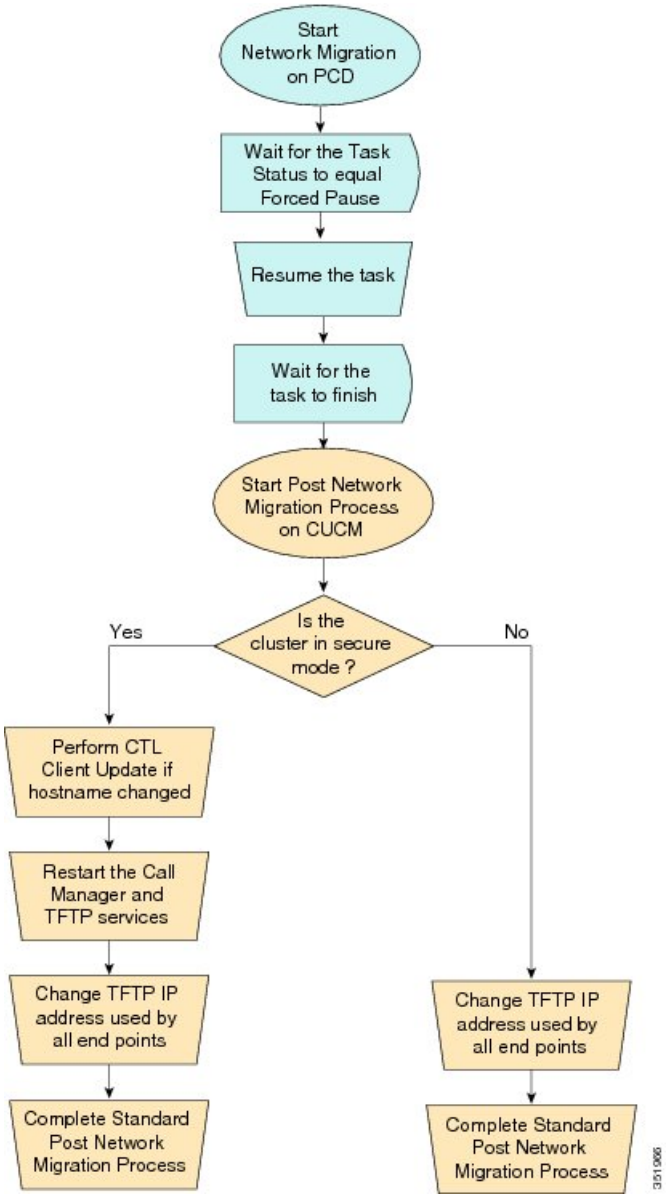

Release 8.0.1 And Later Unified CM Network Migration

Figure 3: Flow Chart for Release 8.0.1 and later Unified CM Network Migration

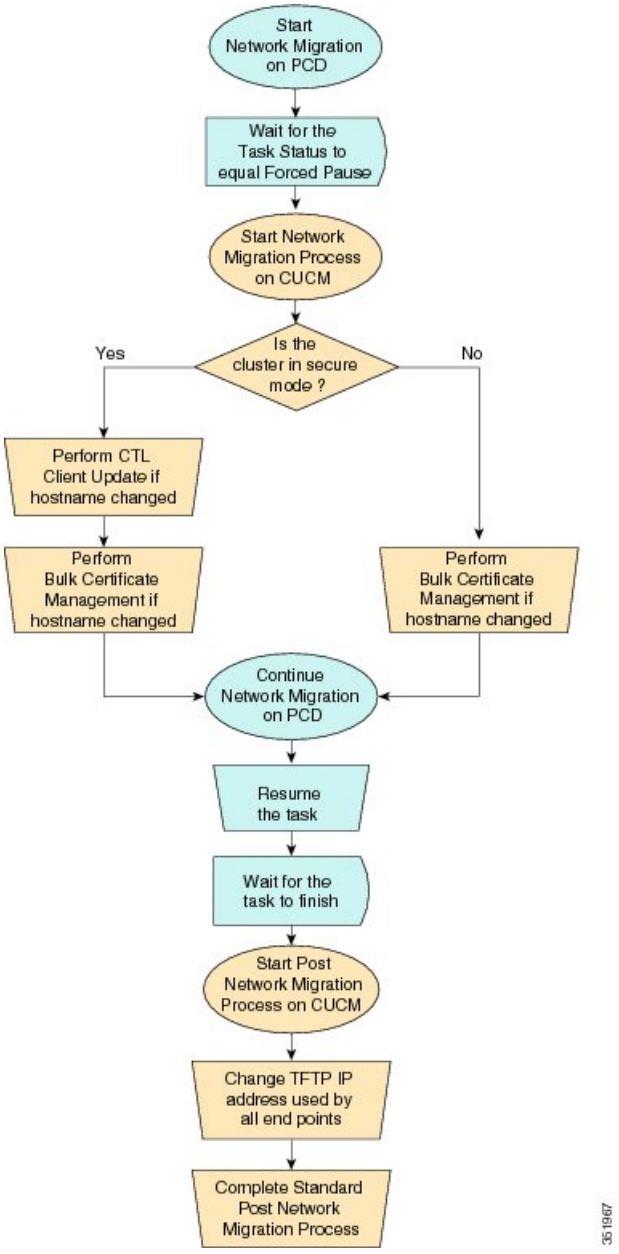

Recovery of Original Cluster

Use the following procedure when a cluster fails to migrate successfully, and some nodes are installed on the new cluster.

Figure 4: Flow Chart for Recovery of Original Cluster

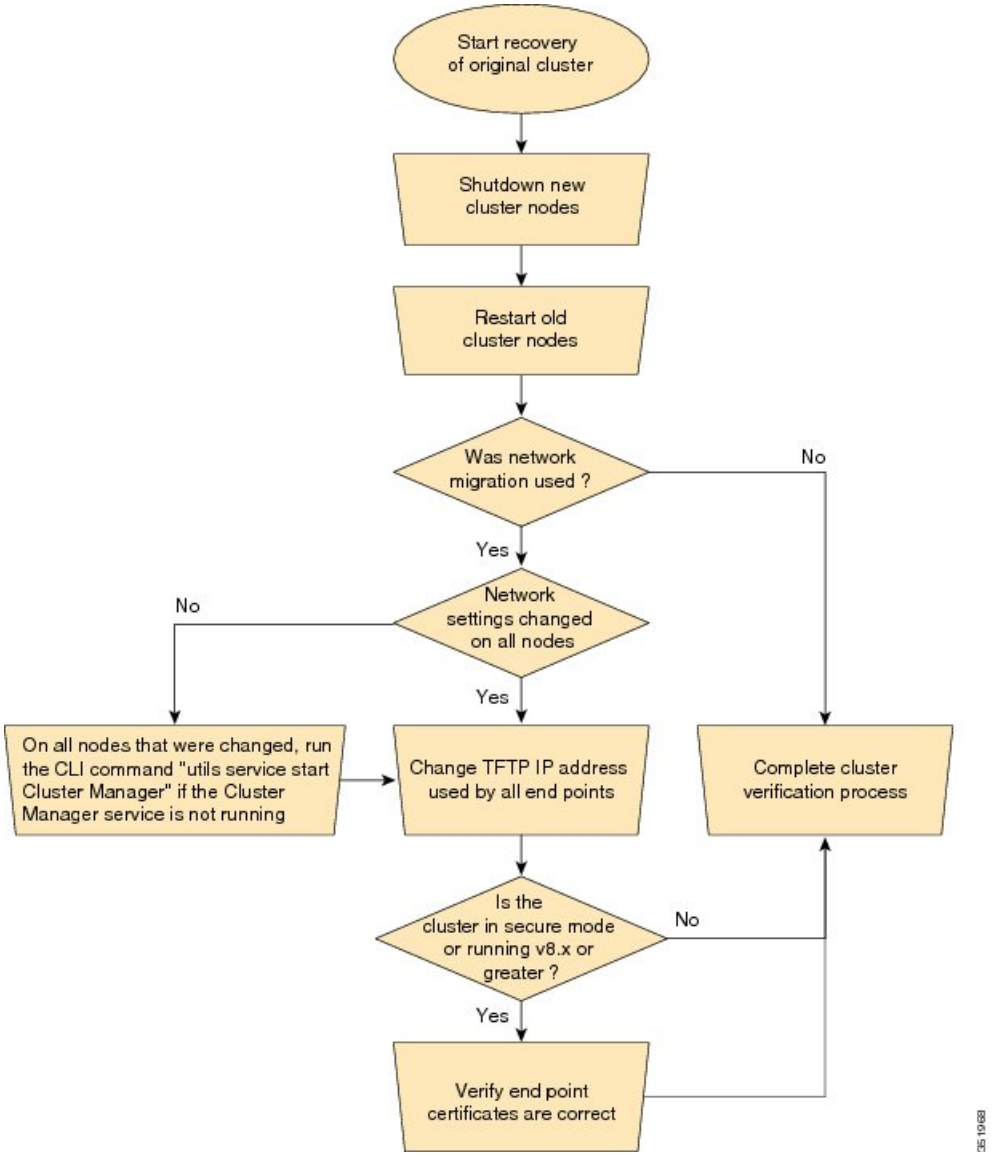

Check the Status of the Cluster Manager Service on All Source Nodes

The steps below are used if a migration task fails when there were network migration changes on one or more nodes. Following the failure, you may need to perform some steps to get the old cluster nodes running again.

See the flow chart above for all steps to be followed. Below are detailed steps for running the CLI command to restart cluster manager on old nodes.

Perform the following steps manually on all subscriber nodes that were supposed to have network changes (for example, hostname, IP address, or both) after all old cluster nodes are up and running.

Use cases that may require the restart of Cluster manager on source nodes are:

Use Case 1

No hostname and no IP address change on Publisher, host name change on Subscriber

The user is required to check Cluster Manager service on source Subscriber

Use Case 2

No hostname and no IP address change on Publisher, IP address change on Subscriber

The user is required to check Cluster Manager service on source Subscriber

Use Case 3

No hostname and no IP address change on Publisher, hostname and IP address change on Subscriber

The user is required to check Cluster Manager service on source Subscriber

Use Case 4

No hostname change on Publisher, IP address change on Publisher, no hostname and no IP Subscriber

The user is required to check Cluster Manager service on source Publisher

Procedure

Step 1 Enter the following CLI command at the command prompt: **utils service list**. The following output appears:

```
Requesting service status, please wait...
System SSH [STARTED]
Cluster Manager [STOPPED]
```

Step 2 If Cluster Manager Service status is STOPPED, type the following command to start the service on the old subscriber node:
utils service start Cluster Manager

Upgrade Task

Create an Upgrade Task

Use the upgrade task to perform software version upgrades on a cluster. You can also use an upgrade task to install .cop files on all or a subset of servers in a cluster.

To know which applications and releases are supported for upgrade tasks, see Supported Releases.

Note Cisco Prime Collaboration Deployment uses the standard upgrade process, and therefore the standard validation rules will be applied. For more information, see the application-specific documentation.

Use the Add Upgrade Task wizard to create and edit upgrade tasks.

To create or edit a new upgrade task to automatically run on one or more clusters at scheduled times, follow these steps.

Before You Begin

1. Perform a cluster discovery for the cluster that you wish to upgrade, so it appears in the Cluster Inventory. See Discover a Cluster.
2. Download the ISO files you wish to upgrade to, and use SFTP to send this file to Cisco Prime Collaboration Deployment in the upgrade folder. If you are using the upgrade task to install a .cop file, upload the .cop file to the /upgrade folder using an SFTP client.
3. For the application servers in the cluster to be upgraded, ensure that the Platform Administrative Web Service is active on that server.

Procedure

Step 1 Select **Tasks** > **Upgrade** from the main menu.

Step 2 Click **Add Upgrade Task**.

Step 3 From the **Cluster** drop-down list, select the cluster on which the nodes to be upgraded are located.

Step 4 From the **Products** drop-down list, select the products to be upgraded.

Step 5 Select the nodes that are part of the upgrade from the list of nodes.

Step 6 Click **Next**.

Note The **Next** button is dimmed if no nodes are selected.

Step 7 Click the respective **Browse** buttons to select the upgrade files from the file server.

Note The option to select upgrade files is available only for the selected product types and applications that are currently supported in the cluster.

Step 8 Select a valid upgrade file or files.

Note Click the **Show** drop-down list to see all the available upgrade files on the file server.

Note To create an upgrade task, while selecting ISO files, ensure that the ISO files are common across all the required SFTP servers which are associated to cluster nodes. If the ISO files are not common to all the required SFTP servers which are associated to cluster nodes, the valid files do not appear even though they are valid for upgrade. To view all the ISO files, from the **Show** drop-down list, choose **All**.

Step 9 Click **Choose File**.

Step 10 Click **Next**.

Note The **Next** button is dimmed if no valid upgrade files are selected.

Step 11 Select the date and time when you want the upgrade task to begin. You have the following options to schedule upgrades:

- Select **Schedule for a specific time** to enter the date and time when you want the upgrade task to start. Any start time that you set is based on the time zone of the Cisco Prime Collaboration Deployment server as denoted by the time zone that is displayed with this option.
  Note If you schedule a task for a few minutes in the future, but do not save it until that scheduled time passes, then the task will start automatically.

- Select **Start task manually** to keep the task in a manual start.
  Note If you choose to start the task manually, a task is created, but will not start until you click the **Start task** button on the Monitoring page, or the **Start task** link on the task page.

- Select **Start task immediately upon completion of this wizard** to start the task immediately after you click **Finish**.

- If you want the system to automatically switch to the new version, choose the option **Upgrade Option to Automatically Switch to New Version after Successful Upgrade**. Otherwise, the server, or servers, will be upgraded but remain on the current version of software. In that case, the user can schedule a switch version task to switch over to the upgraded version of software.

Step 12 Click **Next**.

Step 13 Specify the sequence of steps to complete the task. You have the following options:

Option	Description
Pencil icon	Edit a step.
Page icon	Add a new step after the current step.
X mark	Delete the current step. If you remove all the nodes from a step, the step is removed by default. You cannot remove a step that contains the Publisher node.
Up arrow	Move the step up to be performed earlier.
Down arrow	Move the step down to be performed later.

- The Pencil icon opens up an **Edit Step** window. Add nodes to be upgraded in this step from the list of available nodes. The available nodes are the ones that you chose for an upgrade.

- The step to which each node is assigned displays next to the node. If a node is not assigned to any step, it shows as unassigned.

- When you assign all the nodes to a step, a default sequencing is available.
  Important You cannot proceed to next step until you assign all the nodes.

- The **Pause task after step completes** option pauses the task after completion of this step. You must manually start the next step to complete the task.

Step 14 Click **OK**.

Step 15 Click **Next**.

Note The **Next** button remains enabled, which allows the user to click to be informed of any configuration errors.

Step 16 See the **Review** section to verify the details of the task you created. You can add notes for the task if required. The notes are saved with the task and are visible if the task is edited before completion.

Step 17 Click **Finish** to schedule the task.

Reuse Sequence from Previous Task

The Reuse Sequence from Previous Task feature uses a previously defined task sequence in the task you are currently creating. This feature is useful for upgrade, restart, switch version, migration, and readdress tasks. It allows you to reuse a previously configured task sequence as opposed to having to rescript the sequence from scratch.

During task creation, the task wizard progresses to the sequence pane where a user can configure the ordering and pause characteristics. If there is a task in the system of similar type, the sequence from that task is presented as the default sequence.

In this case, a check box labeled **Use Last Configured Run Sequence** is visible just above the sequence table. You can check the check box to use the sequence from the previous task or leave the check box unchecked to use the default sequence that the system generates.

To be considered a task of similar type, the selected cluster, task type, and nodes in the task must match exactly. If multiple tasks meet the similar type criteria, the most recently created task is used and its sequence is presented as the default to the user.

In the case of an upgrade task, there is an additional requirement. The type of installation must be either ISO based or COP based. The COP and ISO installations can be performed with different sequencing.

Switch Versions Task

Create a Switch Versions Task

Use the switch versions task to automatically switch one or more nodes in a cluster to the upgraded or inactive version.

Use the Switch Versions Task wizard to create and edit switch versions tasks.

To know which applications and releases are supported for upgrade tasks, see Supported Releases.

To create or edit a switch versions task to automatically switch one or more nodes in a cluster to the upgraded or inactive version at scheduled times, follow this procedure.

Note The Automatic Switch version option is not available on clusters which contain Unity Connection nodes. For clusters with Cisco Unity Connection, create an upgrade task and then create a switch version task to switch to the new version. You can create the switch version task after the upgrade task runs successfully.

Before You Begin

1 Perform a cluster discovery for the cluster on which you want to switch versions, so that the cluster appears in the Cluster inventory. See Discover a Cluster. If you previously used Cisco Prime Collaboration Deployment to upgrade or migrate a cluster, the cluster should already be in the inventory.

2 For each application server in the cluster, ensure that the Platform Administrative Web Service is active on that server.

Procedure

Step 1 Select **Tasks** > **Switch Versions** from the main menu.

Step 2 Click **Add Switch Versions Task**.

Step 3 From the **Cluster** drop-down list, select the cluster on which you want to switch the versions.

Step 4 Select the version to which you want all the nodes to be switched.

Note If there is more than one product, you can select the applicable versions of all the different products. You also can choose to switch the version for one product and to not switch the version for another product.

Step 5 Click **Next**.

Step 6 Select the date and time when you want the switch versions task to begin. You have the following options to schedule switch versions task:

- Select **Schedule for a specific time** to enter the date and time when you want the switch versions task to start. Any start time that you set is based on the time zone of the Cisco Prime Collaboration Deployment server as denoted by the time zone that is displayed with this option.

  Note If you schedule a task for a few minutes in the future, but do not save it until that scheduled time passes, then the task will start automatically.

- Select **Start task manually** to keep the task in a manual start.

- Select **Start task immediately upon completion of this wizard** to start the task immediately afer you click **Finish**.

  Note You can also start the task from the Monitoring page.

- If you want the server to automatically switch to the new version, check the check box next to **Automatically switch to new version after successful upgrade**.

Step 7 Click **Next**.

Step 8 Specify the sequence of steps to complete the task. You have the following options:

Option	Description
Pencil icon	Edit a step.
Page icon	Add a new step after the current step.
X mark	Delete the current step. If you remove all the nodes from a step, the step is removed by default. You cannot remove a step that contains the Publisher node.

Option	Description
Up arrow	Move the step up to be performed earlier.
Down arrow	Move the step down to be performed later.

- The Pencil icon opens up an **Edit Step** window. Add the nodes on which the versions must be switched in this step from the list of available nodes. The available nodes are the ones that you chose for the switch versions task.
- The step to which each node is assigned displays next to the node. If a node is not assigned to any step, it shows as unassigned.
- When you assign all the nodes to a step, a default sequencing is available.

  Important You cannot proceed to next step until you assign all the nodes.
- The **Pause task after step completes** option pauses the task after completion of this step. You must manually start the next step to complete the task.

Step 9 Click **OK**.

Step 10 Click **Next**.

Note The **Next** button remains enabled, which allows the user to click to be informed of any configuration errors.

Step 11 Use the **Review** section to verify the details of the task that you created. You can add notes for the task if required. The notes are saved with the task and are visible if the task is edited before completion.

Step 12 Click **Finish** to schedule the task.

Server Restart Task

To know the supported applications and releases for server restart tasks, see Supported Releases.

Create a Server Restart Task

Use the Restart Task wizard to create and edit restart tasks.

To create or edit a restart task to automatically restart one or more nodes in a cluster at scheduled times, follow this procedure.

Before You Begin

1. Perform a cluster discovery for the cluster you wish to restart, so that it appears in the Cluster inventory. See Discover a Cluster.
2. For each application server in the cluster, ensure that the Platform Administrative Web Service is active on that server.

Procedure

Step 1 Select **Tasks** > **Server Restart** from the main menu.

Step 2 Click **Add Server Restart Task**. The Add Restart Task wizard displays.

Step 3 From the **Clusters** drop-down list, select the cluster on which you want to restart the nodes.

Step 4 From the table, select the nodes to be restarted. If you do not select any nodes, you cannot continue.

Step 5 Click **Next**.

Step 6 Select the date and time when you want the server restart task to begin. You have the following options to schedule restart tasks:

- Select **Schedule for a specific time** to enter the date and time when you want the restart task to start. Any start time that you set is based on the time zone of the Cisco Prime Collaboration Deployment server.
  Note If you schedule a task for a few minutes in the future, but do not save it until that scheduled time passes, then the task will start automatically.
- Select **Start the task manually** to keep the task in a manual start.
- Select **Start task immediately upon completion of the wizard** to start the task immediately after you click **Finish**.
  Note You can also start the task from the Monitoring page.

Step 7 Click **Next**.

Step 8 Specify the sequence of steps to complete the task. You have the following options:

Option	Description
Pencil icon	Edit a step.
Page icon	Add a new step after the current step.
X mark	Delete the current step. If you remove all the nodes from a step, the step is removed by default. You cannot remove a step that contains the Publisher node.
Up arrow	Move the step up to be prepared earlier.
Down arrow	Move the step down to be prepared later.

- The Pencil icon opens up an **Edit Step** window. In this step, add nodes to be restarted from the list of available nodes. The available nodes are the ones that you chose for a restart.
- The step to which each node is assigned appears next to the node. If a node is not assigned to any step, that node shows as unassigned.
- When you assign all the nodes to a step, a default sequencing is available.
  Important You cannot proceed to the next step until you assign all the nodes.

- The **Pause task after step completes** option pauses the task after completion of this step. You must manually start the next step to complete the task.

Step 9 Click **OK**.

Step 10 Click **Next**.

Note The **Next** button remains enabled, which allows the user to click to be informed of any configuration errors.

Step 11 See the **Review** section to verify the details of the task you created. You can add notes for the task if required. The notes are saved with the task and are visible if the task is edited before completion.

Step 12 Click **Finish** to schedule the task.

Readdress Task

Create a Readdress Task

Use the readdress task change the hostname or IP address for one or more nodes in a cluster. To use the readdress feature, the servers must be Release 10.0 or later.

Note the difference between a hostname and a fully qualified domain name (FQDN) The network-level DNS default domain name of the node is combined with the hostname to form the FQDN for the node. For example, a node with hostname “cucm-server” and domain “example.com” has an FQDN of “imp-server.example.com.”

Note Cisco Prime Collaboration Deployment does not support changing the FQDN, only hostnames.

Use the Readdress Task wizard to create and edit readdress tasks.

Before You Begin

If you have not already done so, perform a cluster discovery for the cluster you wish to readdress, so that it appears in the Cluster inventory. See Discover a Cluster.

Procedure

Step 1 Select **Tasks** > **Readdress** from the main menu.

Step 2 Click **Add Readdress Task**.

Step 3 From the **Cluster** drop-down list, select the cluster on which you want to change the address of the nodes. Click **View Nodes** to view the Cluster nodes.

Step 4 Click **Next**.

Step 5 Click **Edit** next to a node to enter an alternate Hostname, IP Address, Subnet Mask or Gateway.

Note If DHCP is configured for a cluster, you cannot edit using the readdress task.

Step 6 Click **OK**.

Step 7 Click **Next**.

Important When you click **Next**, Cisco Prime Collaboration Deployment performs a validation test automatically. If the test on a cluster fails, the error message describes the failed test. You can continue to create the tasks, but you must resolve the errors described or the task will fail.

Step 8 Select the date and time when you want the readdress task to begin. You have the following options to schedule readdress tasks:

- Select **Schedule for a specific time** to enter the date and time when you want the readdress task to start. Any start time that you set is based on the time zone of the Cisco Prime Collaboration Deployment server as denoted by the time zone that is displayed with this option.
  Note If you schedule a task for a few minutes in the future, but do not save it until that scheduled time passes, then the task will start automatically.
- Select **Start task manually** to keep the task in a manual start.
- Select **Start task immediately upon completion of wizard** to start the task immediately afer you click **Finish**.
  Note You can also start the task from the Monitoring page.

Step 9 Click **Next**.

Step 10 Specify the sequence of steps to complete the task. You have the following options here:

Option	Description
Pencil icon	Edit a step.
Page icon	Add a new step after the current step.
Up arrow	Move the step up to be executed earlier.
Down arrow	Move the step down to be executed later.

- The Pencil icon opens up an **Edit Step** window. Add nodes to be readdressed in this step from the list of available nodes. The available nodes are the ones that you chose for a readdress.
  Note IM and Presence Service nodes do not have an **Edit** button, since readdress is not supported on Cisco Prime Collaboration Deployment for IM and Presence Service servers.
- The step to which each node is assigned displays next to the node. If a node is not assigned to any step, it shows as unassigned.
- When you assign all the nodes to a step, there will be a default sequencing available.
  Important You cannot proceed to next step until you assign all the nodes that were selected for this task.
- Cisco Prime Collaboration Deployment automatically inserts a Forced Pause after each sequence step in a Readdress task.
- For a readdress task, only one node can be assigned to each step. Multiple nodes cannot be combined and assigned in a single step.

Step 11 Click **OK**.

Step 12 Click **Next**.

Note The **Next** button remains enabled, which allows the user to click to be informed of any configuration errors.

Step 13 See the **Review** section to verify the details of the task you created. You can add notes for the task if required. The notes are saved with the task and are visible if the task is edited before completion.

Step 14 Click **Finish** to schedule the task.

Run a Readdress Task

If you scheduled the task to start at a later date, or if you chose Manual Start, then the task will be listed in the task list but will not start yet.

For a task that was scheduled for manual start, click the **Start** button that is associated with this task to begin the task.

While the readdress task is running, if there is more than one server to be readdressed in the task, some user operations are needed. The readdress task sequence automatically inserts a Forced Pause into the sequence after the address of a server is changed.

This allows the user to perform any manual steps (for example, changes in DNS) and to check that the phones associated with the server successfully registered, and the system is successfully replicating, before Resuming the readdress task.

For more information, see *Changing the IP Address and Hostname for Cisco Unified Communications Manager*.

Before You Begin

Important Before running a readdress task, you may need to perform certain steps (for example, updating entries on the DNS server).

It is very important that you read *Changing the IP Address and Hostname for Cisco Unified Communications Manager* before you run the readdress task.

Post Readdress Task

When you determine that the server successfully changed the address, go to the Cisco Prime Collaboration Deployment GUI and click **Resume** to resume the task.

The Cisco Prime Collaboration Deployment server proceeds to the next server in the sequence to be readdressed. Repeat the steps of waiting for the forced pause, checking the server state, and resuming the task, when the server readdress is verified.

Install Task

Use this task to fresh install a cluster containing Unified Communications Manager or IM and Presence Service servers. You cannot use this task to add a new server to an existing cluster.

Create an Install Task

Before You Begin

1 VMware—Deploy the hardware for the new cluster and install ESXi

Note Make sure that the host with the Cisco Prime Collaboration Deployment VM and the host with the application VMs use the required Virtualization Software License. See Virtualization Software License Types, on page 5.

2 ISO files—Download the necessary OVA and ISO images for target release, and use SFTP transfer the ISO files to the `/fresh_install` directory of Cisco Prime Collaboration Deployment.

Note The ISO file must be bootable.

Note Do not edit the file name of the bootable ISO that is being used for a PCD task.

3 VMware—Deploy Cisco-recommended OVA to create the VMs for the nodes to be installed. Create the appropriate number of target virtual machines on your ESXi hosts (one new virtual machine for each server to be installed in the cluster) using the Cisco OVAs that you downloaded in Step 2. Configure the network settings on new VMs.

4 Cisco Prime Collaboration Deployment GUI—Add the ESXi Hosts that contain your virtual machines to the Cisco Prime Collaboration Deployment inventory. For information about adding and ESXi host to Cisco Prime Collaboration Deployment, see Add an ESXi Host Server, on page 29.

5 Cisco Prime Collaboration Deployment GUI—Define the new installation cluster (**Inventory** > **Clusters**) to define the nodes to be installed, and their associated virtual machines. (See Add New Cluster for Fresh Install.)

6 Cisco Prime Collaboration Deployment GUI—Setup Email Notification (Optional)

- Navigate to **Administration** > **Email Notification**.
- When email notification is set up, the Cisco Prime Collaboration Deployment server emails the error conditions that may occur during the migration task.

7 Cisco Prime Collaboration Deployment GUI—Create the Install task.

8 Be sure to enter the IP addresses or hostnames of the cluster nodes to be installed into your DNS server before you create the install task.

Add Install Task

Follow this procedure to automatically install one or more nodes in a cluster at scheduled times.

Procedure

Step 1 Select **Tasks** > **Install** from the main menu.

Step 2 Click **Add Install Task**.

Note If you have no Install tasks, a **Cluster Installation** popup window appears with the prerequisites to run the wizard. Click **Close** to close the popup window.

Step 3 From the **Installation Cluster** drop-down list, select the cluster on which the nodes to be installation are located.

Step 4 Click **Next**.

Step 5 Click the respective **Browse** buttons to select the Unified Communications Manager Installation file and the Cisco Unified Presence Installation file from the server.

Note The ISO file is visible here only if it was placed in the directory under `/fresh_install`, uploaded through a standard SFTP client (Admin Name: adminsftp, Password: Administration password). For more information, see the task management information at the beginning of this section.

Note By default, only files that can be installed on the selected nodes are displayed. The option to select install files is available only for the selected product types and applications that are currently supported in the cluster.

Step 6 Click **Choose File**.

Step 7 Click **Next**.

Note The **Next** button is dimmed if no valid upgrade files are selected.

Step 8 Select the date and time when you want the upgrade task to begin. You have the following options to schedule upgrades:

- Select **Schedule for a specific time** to enter the date and time when you want the upgrade task to start. Any start time that you set is based on the time zone of the Cisco Prime Collaboration Deployment server as denoted by the time zone that is displayed with this option.

  Note If you schedule a task for a few minutes in the future, but do not save it until that scheduled time passes, then the task will start automatically.

- Select **Start task manually** to keep the task in a manual start.

- Select **Start task immediately upon completion of this wizard** to start the task immediately afer you click **Finish**.

  Note You can also start the task from the Monitoring page.

Step 9 Click **Next**.

Step 10 Specify the sequence of steps to complete the task. You have the following options:

Option	Description
Pencil icon	Edit a step.
Page icon	Add a new step after the current step.
X mark	Delete the current step. If you remove all the nodes from a step, the step is removed by default. You cannot remove a step that contains the Publisher node.

Option	Description
Up arrow	Move the step up to be performed earlier.
Down arrow	Move the step down to be performed later.

- The Pencil icon opens up an **Edit Step** window. Add nodes to be installed in this step from the list of available nodes. The available nodes are the ones that you chose to install in this cluster.
- The step to which each node is assigned displays next to the node. If a node is not assigned to any step, it shows as unassigned.
- When you assign all the nodes to a step, a default sequencing is available.
  Important You cannot proceed to next step until you assign all the nodes.
- The **Pause task after step completes** option pauses the task after completion of this step. You must manually start the next step to complete the task.

Step 11 Click **OK**.

Step 12 Click **Next**.

Note The Next button remains enabled, which allows the user to click to be informed of any Misconfiguration.

Step 13 See the **Review** section to verify the details of the task you created. You can add notes for the task if required. The notes are saved with the task and are visible if the task is edited before completion.

Step 14 Click**Finish** to schedule the install task.

Important When you create a fresh install cluster with both Unified Communications Manager and IM and Presence Service nodes, be sure to indicate which IM and Presence server is the publisher. Later, when the task is running, and it pauses after the Unified Communications Manager publisher installation to allow for entry of the subscriber nodes into the Unified Communications Manager publisher (**System** > **Server** GUI menu), it is important that the IM and Presence Service publisher be the first IM and Presence Service server added to this list. This ensures that IM and Presence Service is installed as the first node.

Note The Unified Communications Manager publisher requires that all subsequent servers in the cluster be added to the Cisco Unified Communications Manager Administration GUI, after the Publisher is installed. Because of this requirement, when you create an install task, Cisco Prime Collaboration Deployment automatically inserts a Forced Pause in the sequence steps after the Unified CM Publisher is installed.

When this forced pause occurs (following the successful publisher install), you must access the Unified Communications Manager GUI and define any subsequent servers (nodes) in the **Server Configuration** window using Cisco Unified Communications Manager Administration. This definition of subsequent nodes must be done before the task is resumed.

Run an Install Task

If you scheduled a task to start at a later date or if you chose Manual Start, the task is listed in the Task list, but has not started yet. In this case, a validation button is associated with the install task. Click **Validation** to

check the task before you run it. By running validation before you start the task, you are alerted to any potential problems with the task (such as a missing ISO file or VMs not in the Off state). You can then fix these issues before you start the task.

Note Clicking the **Validation** button will not start the task; this button only checks the resources to be used when the task starts.

For a task that was scheduled for manual start, click the **Start** button that is associated with this task to begin the task.

When a fresh install task includes more than just one server, some user interaction is required while the task is running. The installation task automatically installs the Unified Communications Manager publisher first, and then the task sequence will have a forced pause. This forced pause stops the install task to allow the user to go to the Unified Communications Manager GUI of the newly installed publisher, and add the other servers in the cluster into the **System** > **Servers** window. To define the subsequent nodes, click **Add New** and configure the server.

After all the subscribers to be installed in this cluster (Unified Communications Manager subscribers, IM and Presence Service publisher and IM and Presence Service subscribers) are added to the Unified Communications Manager publisher GUI, return to the Monitoring page in the Cisco Prime Collaboration Deployment GUI and click the **Resume** button for the install task to resume. The install task continues and installs the Unified Communications Manager or IM and Presence Service software on the subsequent server (or servers).

Post-Install Task

After the install task, no further actions are required. The new cluster is ready for use.

Monitor Task Status

Use the Monitoring page to view the status of tasks in Cisco Prime Collaboration Deployment.

Note For a description of the information that is available through the Monitoring page, see Monitoring View Elements, on page 63.

Procedure

Step 1 Click the **Monitoring** link on the main menu to view the Monitoring page.

Step 2 The column on the left side of the Monitoring page lists each task and an icon that shows its current status. Also shown is the type of task (Migrate, Upgrade, Install, and so on), and the cluster nickname for the task. The task start time is also shown. Click the task in this left column to view the detailed data for that task in the panel on the right.

Step 3 The upper right section of the page provides the following data:

- Status
- Start time

- Task data (for example: cluster nickname and ISO name)

Click **View Log** to see the detailed log messages for the task. If you see any errors or warnings in this log, refer to the Troubleshooting section more information.

In the upper right are buttons that you use to perform various operations on the task. For example, if the task is paused, click the **Resume** button to resume the task.

A button will appear if it is valid for the current state of the task. For example, after a task is finished, it will not have a **Cancel** button, but instead will have a Delete button (if you wish to remove the data for the task).

Step 4 The bottom right section of the page provides detailed steps for the task, along with the status for that step. Click on the triangle that corresponds to a step to expand the step description.
Each step also has a View Log link, to show the log messages for that step.

Note The Monitoring page refreshes automatically every 3 minutes. To deactivate automatic refresh, click the **Disable** button.

Action Buttons on the Monitoring Page

- **Start—**This button appears if a task is created with the "Start Task Manually" option. The task starts after you click the Start button.
- **Cancel—**Cancel the task. This button appears when a task is in the scheduled or running state. If the task has already started, this button does not undo any steps that are already complete, but it will stop the task as soon as possible.
- **Delete—**Delete the task from the system. This removes the task and all its history.
- **Resume—**This button appears when a task is in a paused state. It allows the user to resume the task at the next step.
- **Retry—**This button appears when the task is in a "Paused due to error" state. Clicking this button retries the last step of the task that failed because of an error.

Automatic Refresh

The Monitoring page refreshes automatically every 3 minutes. To deactivate automatic refresh, click the **Disable** button in the top left corner of the Monitoring page.

Administration Tools

Email Notification

The Email Notification feature sends email notifications to you that contain details about certain task events. You can choose whether the system sends emails for all standard task events (such as when task is scheduled, started, successful, paused, failed and canceled), or for only task errors. Emails are sent for all types of tasks: cluster discovery, upgrade, migration, switch version, restart, fresh install, and readdress.

When Email Is Sent

If you choose to receive email notifications in **Standard mode**, an email message is sent when a task enters any of the following states:

- Scheduled
- Failed to Schedule
- Started
- Successful
- Failed
- Canceled
- Canceling
- Failed to Cancel
- Paused on Error
- Paused
- Paused – Required

If you choose to receive email notifications in **Error only mode**, an email message is sent when the task enters the following states:

- Failed to Schedule
- Failed
- Failed to Cancel
- Paused on Error

SFTP Datastore

The Cisco Prime Collaboration Deployment server serves as a local SSH File Transfer Protocol or Secure File Transfer Protocol (SFTP) server that is used to store the ISO and COP files to be used by upgrade, fresh install, and migrate tasks.

In Release 10.x, Cisco Prime Collaboration Deployment does not support the use of external SFTP. ISO and COP files that are used for install and upgrade tasks must be uploaded to Cisco Prime Collaboration Deployment using the following procedures.

Note These procedures describe how to place files on the Cisco Prime Collaboration Deployment server using Linux. You can use an SFTP client instead of Linux.

Migration or Fresh Install Tasks

Follow this procedure to send the ISO file to the Cisco Prime Collaboration Deployment server using the adminsftp account and Cisco Prime Collaboration Deployment GUI (or CLI password with any SFTP client).

Procedure

Step 1 From a Linux shell, type `sftp adminsftp@<Cisco Prime Collaboration Deployment server>` and then provide the password (the same in both the CLI and GUI).

Step 2 Change the directory to the `fresh_install` directory.

Example:
From a Linux shell, type `cd fresh_install` and press Return.

Step 3 Upload the ISO file.

Example:
Type `put UCSInstall_UCOS_10.0.x.xxx.sgn.iso`.

Upgrade Task

Follow this procedure to use SFTP to upload ISO or COP files that will be used for upgrade tasks on the Cisco Prime Collaboration Deployment server.

Procedure

Step 1 From a Linux shell, type `sftp adminsftp@<Cisco Prime Collaboration Deployment server>` and then provide the password (the same in both the CLI and GUI).

Step 2 Change the directory to the `upgrade` directory.

Example:
From a Linux shell, type `cd upgrade` and press Return.

Step 3 Upload the ISO file or COP file.

Example:
Type `put UCSInstall_UCOS_10.0.x.xxx.sgn.iso`.

Verify or View an ISO Filename

Procedure

Step 1 From the main menu in Cisco Prime Collaboration Deployment, select **Administration** > **SFTP Datastore**.

Step 2 On this page, you can view and manage files that are stored on the SFTP datastore of this Cisco Prime Collaboration Deployment server.
It displays the filename of the ISO and COP files that are stored on the server, and where they are located in the directory (for example: fresh_install or upgrade).

Delete ISO or COP Files

Use the following procedure to delete ISO or COP files on a Cisco Prime Collaboration Deployment SFTP server using the Cisco Prime Collaboration Deployment GUI.

Procedure

Step 1 Log in to Cisco Prime Collaboration Deployment.

Step 2 From the main menu in Cisco Prime Collaboration Deployment, select **Administration** > **SFTP Datastore**.

Step 3 Check the check box next to the ISO or COP file.

Step 4 Click **Delete**.

Important We recommend that you periodically delete ISO or COP files that are no longer needed to save space, especially before upgrading the Cisco Prime Collaboration Deployment server software.

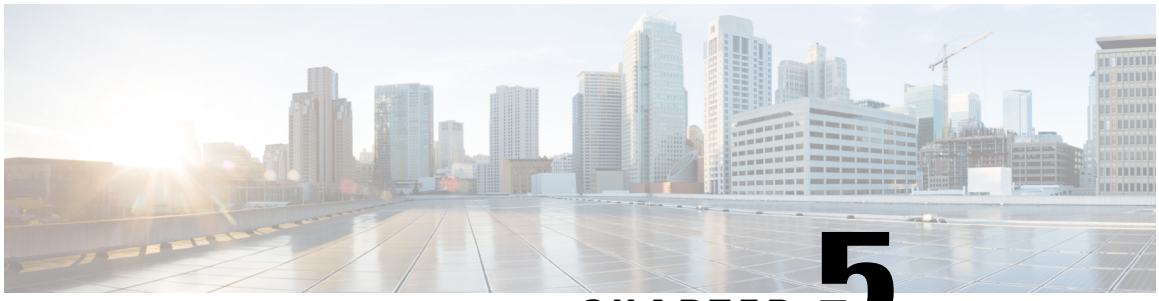

CHAPTER 5

Cisco Prime Collaboration Deployment Administrative Interface Elements

- Common Administrative Interface Elements, page 63
- Monitoring View Elements, page 63
- Tasks View Elements, page 68

Common Administrative Interface Elements

The following elements are common to all views in the Cisco Prime Collaboration Deployment administration interface.

Setting	Description
About	Provides the version of the Cisco Prime Collaboration Deployment. This setting also includes copyright and trademark information.
Logout	Exits from the server.
Help	Provides context-sensitive help information.
Information ("i" button)	Provides information about the current page that you are viewing.
Getting Started (flag button)	Provides information about getting started to perform system-level tasks on the server.

Monitoring View Elements

After a task is scheduled, you can monitor, and control the tasks by using the Monitoring page.

Setting	Description
Task Queue	A list of all the tasks contained in Cisco Prime Collaboration Deployment. This list can include any of the following tasks: • Scheduled • Canceled • Started • Paused • Paused due to Error • Successful • Failed • Upgrade Tasks • Switch Version Tasks • Server Restart Tasks • Readdress Tasks • Install Tasks • Migrate Tasks Click one of the tasks in the Task Queue to open the details for that task in the right top panel.

Setting	Description
Task status	

Setting	Description
	The top right portion of the Monitoring page shows the following information for a given task: • Status • Start time • Task data (for example: cluster data) To see details about the task, click on the View Log link. The following are the possible statuses for tasks: • Successful—Indicates that the task has finished without errors. • Started—Indicates that the task is currently running. • Scheduled—Indicates that the task has been scheduled, but has not yet started. • Manual Start—Indicates that the task is waiting to be started (user created the task with the "Start Task Manually" option). • Canceled—Indicates that the user chose not to run the task. • Paused—Indicates that the task is in a paused state waiting for feedback. • Paused due To Error—Indicates that the task is in a paused state due to an error in the system. • Failed—Indicates that the task has stopped because of an error. • Failed to Schedule—Indicates that the task was not scheduled, due to an error that occurred. • Failed to Cancel—Indicates that the user tried unsuccessfully to cancel the task. This typically happens when the task is in a final state (no actions are left to cancel). • Canceling—Indicates that the user canceled the task, but the task is in a state that will take a long time to cancel. The task may be in this state for an hour or more if the task being canceled is an installation or migration task (during the install-new-server phase). Possible messages and actions in a **Successful Status** state: • Task completed successfully • Delete—Deletes the task data permanently Possible actions in a **Started** state: • Cancel—Cancels the selected task • Delete—Deletes the selected task permanently Possible actions in a **Scheduled** state:

Setting	Description
	• Cancel—Cancels the selected task • Delete—Deletes the selected task permanently Possible actions in a **Waiting for Manual Start** state: • Start—Starts the task (You will see this button only if the Manual Start option was chosen when the task was created) • Delete—Deletes the selected task permanently Possible actions in a **Paused** state (a task enters this state if the user set up the task to pause at this step): • Resume—Task will continue at the next step • Cancel—Cancels the selected task • Delete—Deletes the selected task permanently Possible actions in a **Paused Due To Errors** state (a task will enter this state, because the system detected an error at this step): • Resume—Task will continue at the next step. (Before resuming, user should look at the error in the view log and correct the problem that caused the error, or else the task will fail.) If the error message says "Failed due to validation," the task will revalidate and start from the first step when you click Resume. Otherwise, the task will start from the next step. • Cancel—Cancels the selected task • Delete—Deletes the selected task permanently Possible action in a **Failed Status** state: • Delete—Deletes the selected task permanently
Start Task button	Starts task running for Scheduled tasks
Edit button	Opens Edit dialog for Scheduled tasks
Pause button	Pauses Running tasks (at next step)
Resume button	Resumes task at next step for Paused and Paused (Error) tasks
Cancel button	Cancels Scheduled, Running, Paused, and Paused (Error) tasks
Delete button	Deletes Scheduled, Canceled, Successful, and Failed tasks

Setting	Description
Task Summary	The Task Summary section contains the following information for a task: • Source Cluster • Destination Cluster • Unified Communications Manager Upgrade File • Unified Presence Upgrade File

Tasks View Elements

Upgrade View

Setting	Description
Scheduled Tasks and History table	
Status	Provides information about the upgrade task: • Successful—Indicates that the task has finished without errors • Running—Indicates that the task is currently running • Scheduled—Indicates that the task has not yet started • Canceled—Indicates that the user has chosen not to run task • Paused—Indicates that the task is in a paused state waiting for feedback • Paused due To Error—Indicates that the task is in a paused state due to an error in the system • Failed—Indicates that the task has stopped due to error
Start Time	Specifies the start time of the upgrade task
Last Status Report Time	Specifies the time at which the action was completed. The completed action may be a success or failure.
Cluster	Specifies the name of the upgraded cluster
Notes	Note added during the Review portion of the Add Upgrade Task wizard

Setting	Description
Actions	

Setting	Description
	Allows you to perform the following for a particular upgrade task **Note** Depending on the state of the task, only some of these actions may be allowed (for example, an upgrade task that is completed cannot be canceled). • Scheduled status: ◦ Run Validation Test—Runs a validation test to ensure that all nodes are available and the iso to be used for upgrade is present. ◦ Edit—Shows the Edit Upgrade Task window. Allows you to edit the selected task ◦ Cancel Task—Cancels the selected task ◦ Delete—Deletes the selected task permanently • Canceled status: ◦ Delete—Deletes the selected task permanently • Started status: ◦ Cancel Task—Cancels the selected task • Paused status: ◦ Resume—Use this button to restart task at the next step. ◦ View Details—Navigates to the monitoring page showing all the tasks available ◦ Start Task—Start task is present if the task is started manually. Time is not selected for this action. **Note** Start Task is applicable only if you select **Start task manually** option in the **Set Start Time** panel. When you select the task manually, the resume option is unavailable in the monitoring page. ◦ Cancel Task—Cancels the selected task • Paused due to Error: ◦ Retry—This causes the task to restart and retry the last failed task action. ◦ Resume—This causes the task to start at the next step (after the failed step). ◦ View Details—Navigates to the monitoring page showing all the tasks available ◦ Cancel Task—Cancels the selected task

Setting	Description
	• Successful status: ◦ View Details—Navigates to the monitoring page showing all the tasks available. ◦ Delete—Deletes the selected task permanently • Failed status: ◦ View Details—Navigates to the monitoring page showing all the tasks available ◦ Delete—Deletes the selected task permanently
Show	Allows you to filter upgrade tasks by status, by selecting one of the following options from the drop-down list: • Quick Filter—To filter the tasks based on the status • All—To show all the tasks available • Scheduled—To show the tasks that are scheduled • Canceled—To show the tasks that are canceled • Running—To show the tasks that are started • Paused—To show the tasks that are paused • Paused due To Error—To show the tasks that are paused due to an error in the system • Successful—To show the tasks that are successful • Failed—To show the tasks that failed
Filter	Select a status and click Filter to set a search rule at the bottom of the search window.
Delete	Click the checkbox next to the task and click the Delete button at the top of the table. This action is applicable to tasks in the Failed, Successful, Scheduled and, Paused state.
Add Upgrade Task button	Opens the Add Upgrade Task wizard. **Note** You can also open the Add Upgrade Task wizard selecting Edit in the Actions column for a particular upgrade task.
Add Upgrade Task wizard window For information about how to Add an Upgrade Task, see “Create an Upgrade Task”.	

Setting	Description
Choose Cluster page	From the Choose Cluster page, select the cluster and product from the drop-down lists (All products is the default option for Products). Once you have selected the cluster, the list of nodes appears in the Cluster Nodes table.
Choose Upgrade File page	From the Choose Upgrade File page, select the upgrade file for each product being upgraded. You will have the option of selecting files only for the product type you selected on the Choose Cluster page.
Set Start Time and Upgrade Options page	From the Set Start Time and Upgrade Options page, select a start time for the task. **Note** The time specified is based on the Cisco Prime Collaboration Deployment server time, not the time zone of the selected cluster. You have the option of setting the start time for a specific time, starting the task manually, or setting the task to begin immediately upon completion of the wizard. You also have the option of automatically switching to a new version following a successful upgrade.
Specify Run Sequence page	From the Specify Run Sequence, specify the sequence in which the upgrade will be processed on the servers. You change the sequence of steps by clicking the up and down arrows of a particular step. You can also add or delete a step, or edit an existing step. Select the **Use Last Configured Run Sequence** box if you want to reuse the previous sequence. By default, each node is sequenced into its own step.
Review page	The Review page provides a summary of the options you have selected in the previous steps. The nodes listed in the Nodes field are view-only—you cannot select them. You can add notes to the Notes field for future reference.

Switch Versions View

Setting	Description
Scheduled Tasks and History table	

Setting	Description
Status	Provides information about the switch version task: • Successful—Indicates that the task has finished without errors • Running—Indicates that the task is currently running • Scheduled—Indicates that the task has not yet started • Canceled—Indicates that the user has chosen not to run task • Paused—Indicates that the task is in a paused state waiting for feedback • Paused due To Error—Indicates that the task is in a paused state due to an error in the system • Failed—Indicates that the task has stopped due to error
Start Time	Specifies the start time of the switch version task
Last Status Report Time	Specifies the time at which the action was completed. The completed action may be a success or failure.
Cluster	Specifies the switch version cluster
Notes	Notes that were added during the Review portion of the Add Switch Version wizard

Setting	Description
Actions	

Setting	Description
	The following are the status and the corresponding actions: • Scheduled status: ◦ Run Validation Test—Runs a validation test to ensure that all nodes are available and that none of the specified new addresses are reachable ◦ Edit—Shows the Edit Switch Version Task window. Allows you to edit the selected task ◦ Cancel Task—Cancels the selected task ◦ Delete—Deletes the selected task permanently • Canceled status: ◦ Delete—Deletes the selected task permanently • Started status: ◦ Cancel Task—Cancels the selected task • Paused status: ◦ Resume—Restarts task at the next step. ◦ View Details—Navigates to the monitoring page showing all the tasks available ◦ Start Task—Start task is present if the task is started manually. Time is not selected for this action **Note** Start Task is applicable only if you select **Start task manually** option in the **Set Start Time** panel. When you select the task manually, the resume option is unavailable in the monitoring page. ◦ Cancel Task—Cancels the selected task • Paused due to Error: ◦ Retry—This causes the task to restart and retry the last failed task action ◦ Resume—This causes the task to start at the next step (after the failed step) ◦ View Details—Navigates to the monitoring page showing all the tasks available ◦ Cancel Task—Cancels the selected task • Successful status:

Setting	Description
	◦ View Details—Navigates to the monitoring page showing all the tasks available ◦ Delete—Deletes the selected task permanently • Failed status: ◦ View Details—Navigates to the monitoring page showing all the tasks available ◦ Delete—Deletes the selected task permanently
Show	Allows you to filter switch version tasks by status, by selecting one of the following options from the drop-down list: • Quick Filter—To filter the tasks based on the status • All—To show all the tasks available • Scheduled—To show the tasks that are scheduled • Canceled—To show the tasks that are canceled • Running—To show the tasks that are started • Paused—To show the tasks that are paused • Paused due To Error—To show the tasks that are paused due to an error in the system • Successful—To show the tasks that are successful • Failed—To show the tasks that failed
Filter	Select a status and click Filter to set a search rule at the bottom of the search window
Delete	Check the check box next to the task and click the Delete button at the top of the table. You can also click Delete under the Actions column for the task you wish to delete
Add Switch Versions Task button	Opens the Switch Versions Task wizard. **Note** You can also open the Switch Versions Task wizard by selecting Edit in the Actions column for a particular switch version task.
Add Switch Versions Task window For information about how to add a switch version task, see “Create a Switch Versions Task”.	

Setting	Description
Choose Cluster page	From the Choose Cluster page, select the cluster from the drop-down list. After you select the cluster, you must select the product versions (installed on the publisher) from the drop-down lists. If there is more than one product in the cluster, you have the option of not switching versions for one or more products. As long as one valid version is selected, you may proceed
Set Start Time page	From the Set Start Time page, select a start time for the task. **Note** The time specified is based on the Cisco Prime Collaboration Deployment server time, not the time zone of the selected cluster. You have the option of setting the start time for a specific time, starting the task manually, or setting it to begin immediately upon completion of the wizard.
Set Run Sequence page	From the Specify Run Sequence, specify the sequence in which the version switch is processed on the servers. The sequence of the steps is changed by clicking the up and down arrows of a particular step. You can also add or delete a step, or edit an existing step. Check the **Use Last Configured Run Sequence** check box if you want to reuse the previous sequence. By default, each node is sequenced into its own step. The Revert to Default button returns the steps to this original state.
Review page	The Review page provides a summary of the options you selected in the previous steps. The nodes listed in the Nodes field are view-only; you cannot select them. You can add notes to the Notes field for future reference.

Server Restart View

Setting	Description
Scheduled Tasks and History table	

Setting	Description
Status	Provides information about the server restart task: • Successful—Indicates that the task is complete without errors • Running—Indicates that the task is currently running • Scheduled—Indicates that the task is not yet started • Canceled—Indicates that the user has chosen not to run task • Paused—Indicates that the task is in a paused state waiting for feedback • Paused due To Error—Indicates that the task is in a paused state due to an error in the system • Failed—Indicates that the task has stopped due to error
Start Time	Specifies the start time of the server restart task
Last Status Report Time	Specifies the time at which the action was completed. The completed action may be a success or failure.
Cluster	Specifies the server restart cluster
Notes	Notes that were added during the Review portion of the Add Restart Task wizard

Setting	Description
Actions	

Setting	Description
	The following are the status and the corresponding actions: • Scheduled status: ◦ Run Validation Test—Runs a validation test to ensure that all nodes are available and that none of the specified new addresses are reachable. ◦ Edit—Shows the Edit Upgrade Task window. Allows you to edit the selected task ◦ Cancel Task—Cancels the selected task ◦ Delete—Deletes the selected task permanently • Canceled status: ◦ Edit—Shows the Edit Server Restart Task window. Allows you to edit the selected task ◦ Delete—Deletes the selected task permanently • Started status: ◦ Cancel Task—Cancels the selected task • Paused status: ◦ Resume—Restarts task at the next step. ◦ View Details—Navigates to the monitoring page showing all the tasks available ◦ Start Task—Start task is present if the task is started manually. Time is not selected for this action **Note** Start Task is applicable only if you select **Start task manually** option in the **Set Start Time** panel. When you select the task manually, the resume option is unavailable in the monitoring page. ◦ Cancel Task—Cancels the selected task • Paused due to Error: ◦ Retry—This causes the task to restart and retry the last failed task action. ◦ Resume—This causes the task to start at the next step (after the failed step). ◦ View Details—Navigates to the monitoring page showing all the tasks available ◦ Cancel Task—Cancels the selected task

Setting	Description
	• Successful status: ◦ View Details—Navigates to the monitoring page showing all the tasks available. ◦ Delete—Deletes the selected task permanently • Failed status: ◦ View Details—Navigates to the monitoring page showing all the tasks available ◦ Delete—Deletes the selected task permanently
Show	Allows you to filter restart tasks by status, by selecting one of the following options from the drop-down list: • Quick Filter—To filter the tasks based on the status • All—To show all the tasks available • Scheduled—To show the tasks that are scheduled • Canceled—To show the tasks that are canceled • Running—To show the tasks that are started • Paused—To show the tasks that are paused • Paused due To Error—Indicates that the task is in a paused state due to an error in the system • Successful—To show the tasks that are successful • Failed—To show the tasks that failed
Filter	Select a status and click Filter to set a search rule at the bottom of the search window.
Delete	Click the checkbox next to the task and click the Delete button at the top of the table. You can also click Delete under the Actions column for the task you wish to delete.
Add Server Restart Task button	Opens the Add Server Restart Task wizard. **Note** You can also open the Add Server Restart Task wizard by selecting Edit in the Actions column for a particular server restart task.
Add Server Restart Task window For information about how to add a server restart task, see “Create a Restart Task”.	

Setting	Description
Choose Cluster page	From the Choose Cluster page, select the cluster from the drop-down list. After you select the cluster, you will see that the nodes listed in the Cluster Nodes table change accordingly. Select the servers to be restarted.
Set Start Time page	From the Set Start Time page, select a start time for the task. **Note** The time specified is based on the Cisco Prime Collaboration Deployment server time, not the time zone of the selected cluster. You have the option of setting the start time for a specific time, starting the task manually, or setting the task to begin immediately upon completion of the wizard.
Set Run Sequence page	From the Set Run Sequence page, specify the sequence in which the restart is processed on the servers. You can change the sequence of steps by clicking the up and down arrows of a particular step. You can also add or delete a step, or edit an existing step. Check the **Use Last Configured Run Sequence** check box if you want to reuse the previous sequence. By default, each node is sequenced into its own step. The Revert to Default button returns the steps to this original state.
Review page	The Review page provides a summary of the options you have selected in the previous steps. The nodes listed in the Nodes field are view-only; you cannot select them. You can add notes to the Notes field for future reference.

Readdress View

Setting	Description
Scheduled Tasks and History table	
Status	Provides information about the readdress task: • Successful—Indicates that the task has finished without errors • Running—Indicates that the task is currently running • Scheduled—Indicates that the task has not yet started • Canceled—Indicates that the user has chosen not to run task • Paused—Indicates that the task is in a paused state waiting for feedback • Paused due To Error—Indicates that the task is in a paused state due to an error in the system • Failed—Indicates that the task has stopped due to error

Setting	Description
Start Time	Specifies the start time of the readdress task
Last Status Report Time	Specifies the time at which the action was completed. The completed action may be a success or failure.
Cluster	Specifies the readdress cluster
Notes	Note that were added during the Review portion of the Add Readdress Task wizard

Setting	Description
Actions	

Setting	Description
	The following are the status and the corresponding actions: • Scheduled status: ◦ Run Validation Test—Runs a validation test to ensure that all nodes are available and that none of the specified new addresses are reachable. ◦ Edit—Shows the Edit Readdress Task window. Allows you to edit the selected task ◦ Cancel Task—Cancels the selected task ◦ Delete—Deletes the selected task permanently • Canceled status: ◦ Edit—Shows the Edit Upgrade Task window. Allows you to edit the selected task ◦ Delete—Deletes the selected task permanently • Started status: ◦ Cancel Task—Cancels the selected task • Paused status: ◦ Resume—Restarts task at the next step. ◦ View Details—Navigates to the monitoring page showing all the tasks available ◦ Start Task—Start task is present if the task is started manually. Time is not selected for this action **Note** Start Task is applicable only if you select **Start task manually** option in the **Set Start Time** panel. When you select the task manually, the resume option is unavailable in the monitoring page. ◦ Cancel Task—Cancels the selected task • Paused due to Error: ◦ Retry—This causes the task to restart and retry the last failed task action. ◦ Resume—This causes the task to start at the next step (after the failed step). ◦ View Details—Navigates to the monitoring page showing all the tasks available ◦ Cancel Task—Cancels the selected task

Setting	Description
	• Successful status: ◦ View Details—Navigates to the monitoring page showing all the tasks available. ◦ Delete—Deletes the selected task permanently • Failed status: ◦ View Details—Navigates to the monitoring page showing all the tasks available ◦ Delete—Deletes the selected task permanently
Show	Allows you to filter readdress tasks by status, by selecting one of the following options from the drop-down list: • Quick Filter—To filter the tasks based on the status • All—To show all the tasks available • Scheduled—To show the tasks that are scheduled • Canceled—To show the tasks that are canceled • Running—To show the tasks that are started • Paused—To show the tasks that are paused • Paused due To Error—To show the tasks that are paused due to an error in the system • Successful—To show the tasks that are successful • Failed—To show the tasks that failed
Filter	Select a status and click Filter to set a search rule at the bottom of the search window.
Delete	Check the check box next to the task and click the Delete button at the top of the table. You can also click Delete under the Actions column for the task you wish to delete.
Add Readdress Task button	Opens the Add Readdress Task wizard. **Note** You can also open the Add Readdress Task wizard by selecting Edit in the Actions column for a particular readress task.
Add Readdress Task window For information about how to Add a Readdress Task, see “Create a Readdress Task”.	

Setting	Description
Choose Cluster page	From the Choose Cluster page, select the cluster from the drop-down list. Click View Nodes to the nodes associated with this cluster. The View UC Cluster Nodes dialog box opens, listing the nodes in a table that identifies the following: • Hostname • IP Address • Product • Role The View UC Cluster Nodes dialog box is not editable. Click Close to return to the Choose Cluster page.
Enter New Hostnames/IP Addresses page	From the Enter New Hostnames/IP Addresses page, click Edit under the Actions column to open the Edit Hostname/IP Address dialog box. This dialog box allows you to enter a new hostname or IP address for the cluster nodes to be readdressed. You have the option of using DHCP or a static IP address.
Set Start Time page	From the Set Start Time page, select a start time for the task. **Note** The time specified is based on the Cisco Prime Collaboration Deployment server time, not the time zone of the selected cluster. You have the option of setting the start time for a specific time, starting the task manually, or setting the task to begin immediately upon completion of the wizard.
Set Run Sequence page	From the Set Run Sequence page, specify the sequence in which the readdress is processed on the servers. The sequence of the steps is changed by clicking the up and down arrows of a particular step. You can also add or delete a step, or edit an existing step. Check the **Use Last Configured Run Sequence** check box if you want to reuse the previous sequence. By default, each node is sequenced into its own step. The Revert to Default button returns the steps to this original state.
Review page	The Review page provides a summary of the options you have selected in the previous steps. The nodes listed in the Nodes field are view-only; you cannot select them. You can add notes to the Notes field for future reference.

Install View

Setting	Description
Scheduled Tasks and History table	

Setting	Description
Status	Provides information about the install task: • Successful—Indicates that the task has finished without errors • Running—Indicates that the task is currently running • Scheduled—Indicates that the task has not yet started • Canceled—Indicates that the user has chosen not to run task • Paused—Indicates that the task is in a paused state waiting for feedback • Paused due To Error—Indicates that the task is in a paused state due to an error in the system • Failed—Indicates that the task has stopped due to error
Start Time	Specifies the start time of the install task
Last Status Report Time	Specifies the time at which the action was completed. The completed action may be a success or failure.
Cluster	Specifies the install cluster
Notes	Notes that were added during the Review portion of the Add Install Task wizard

Setting	Description
Actions	

Setting	Description
	The following are the status and the corresponding actions: • Scheduled status: ◦ Run Validation Test—Runs a validation test to ensure that all the ESXi host is present, the VMs are in the correct state, and the .iso file to be used in the install is present. ◦ Edit—Shows the Edit Upgrade Task window. Allows you to edit the selected task ◦ Cancel Task—Cancels the selected task ◦ Delete—Deletes the selected task permanently • Canceled status: ◦ Delete—Deletes the selected task permanently • Started status: ◦ Cancel Task—Cancels the selected task • Paused status: ◦ Resume—Restarts task at the next step. ◦ View Details—Navigates to the monitoring page showing all the tasks available ◦ Start Task—Start task is present if the task is started manually. Time is not selected for this action **Note** Start Task is applicable only if you select **Start task manually** option in the **Set Start Time** panel. When you select the task manually, the resume option is unavailable in the monitoring page. ◦ Cancel Task—Cancels the selected task • Paused due to Error: ◦ Retry—Retry the last failed step. This button causes the task to retry the last step that failed, and restart the task. ◦ Resume—Resumes the task at the next step. Use this option only if the failed step is non-essential, or if you have manually performed that step ◦ View Details—Navigates to the monitoring page showing all the tasks available ◦ Cancel Task—Cancels the selected task • Successful status:

Setting	Description
	◦ View Details—Navigates to the monitoring page showing all the tasks available. ◦ Delete—Deletes the selected task permanently • Failed status: ◦ View Details—Navigates to the monitoring page showing all the tasks available ◦ Delete—Deletes the selected task permanently
Show	Allows you to filter install tasks by status, by selecting one of the following options from the drop-down list: • Quick Filter—To filter the tasks based on the status • All—To show all the tasks available • Scheduled—To show the tasks that are scheduled • Canceled—To show the tasks that are canceled • Running—To show the tasks that are started • Paused—To show the tasks that are paused • Paused due To Error—To show the tasks that are paused due to an error in the system • Successful—To show the tasks that are successful • Failed—To show the tasks that failed
Filter	Select a status and click Filter to set a search rule at the bottom of the search window.
Delete	Click the checkbox next to the task and click the Delete button at the top of the table. You can also click Delete under the Actions column for the task you wish to delete.
Add Install Task button	Opens the Add Installation Task wizard. **Note** You can also open the Add Installation Task wizard by selecting Edit in the Actions column for a particular install task.
Add Installation Task window For information about how to add an installation task, see “Create an Install Task”.	
Choose Installation Cluster page	From the Choose Cluster page, select the cluster from the drop-down list. After you select the cluster, you will see that the nodes listed in the Installation Cluster Nodes table change accordingly.

Setting	Description
Choose Installation Files page	From the Choose Installation Files page, select the installation images to be installed on the staging cluster. The ISO images must be uploaded to the /install directory on the system sftp server for Cisco Prime Collaboration Deployment.
Set Start Time page	From the Set Start Time page, select a start time for the task. **Note** The time specified is based on the Cisco Prime Collaboration Deployment server time, not the time zone of the selected cluster. You have the option of setting the start time for a specific time, starting the task manually, or setting the task to begin immediately upon completion of the wizard.
Specify Installation Sequence page	From the Specify Installation Sequence page, specify the sequence in which the installation is processed on the servers. You can change the sequence of steps by clicking the up and down arrows of a particular step. You can also add or delete a step, or edit an existing step. By default, each node is sequenced into its own step.
Review page	The Review page provides a summary of the options you have selected in the previous steps. The nodes listed in the Nodes field are view-only; you cannot select them. You can add notes to the Notes field for future reference.

Migrate View

Setting	Description
Scheduled Tasks and History table	
Status	Provides information about the migrate task: • Successful—Indicates that the task has finished without errors • Running—Indicates that the task is currently running • Scheduled—Indicates that the task has not yet started • Canceled—Indicates that the user has chosen not to run task • Paused—Indicates that the task is in a paused state waiting for feedback • Paused due To Error—Indicates that the task is in a paused state due to an error in the system • Failed—Indicates that the task has stopped due to error
Start Time	Specifies the start time of the migrate task

Setting	Description
Last Status Report Time	Specifies the time at which the action was completed. The completed action may be a success or failure.
Cluster	Specifies the cluster being migrated.
Notes	Notes that were added during the Review portion of the Add Migration Task wizard

Setting	Description
Actions	

Setting	Description
	The following are the status and the corresponding actions: • Scheduled status: ◦ Run Validation Test—Runs a validation test to ensure that all nodes are available and that none of the specified new addresses are reachable. It also checks that the ESXi hosts that the VMs reside on are mounted. It also verifies that the iso file to be used is present. ◦ Edit—Shows the Edit Upgrade Task window. Allows you to edit the selected task ◦ Cancel Task—Cancels the selected task ◦ Delete—Deletes the selected task permanently • Canceled status: ◦ Delete—Deletes the selected task permanently • Started status: ◦ Cancel Task—Cancels the selected task • Paused status: ◦ Resume—Restarts task at the next step. ◦ View Details—Navigates to the monitoring page showing all the tasks available ◦ Start Task—Start task is present if the task is started manually. Time is not selected for this action **Note** Start Task is applicable only if you select **Start task manually** option in the **Set Start Time** panel. When you select the task manually, the resume option is unavailable in the monitoring page. ◦ Cancel Task—Cancels the selected task • Paused due to Error: ◦ Retry—Retry the last failed step. This button causes the task to retry the last step that failed, and restart the task. ◦ Resume—Resumes the task at the next step. Use this option only if the failed step is non-essential, or if you have manually performed that step. ◦ View Details—Navigates to the monitoring page showing all the tasks available ◦ Cancel Task—Cancels the selected task

Setting	Description
	• Successful status: ◦ View Details—Navigates to the monitoring page showing all the tasks available. ◦ Delete—Deletes the selected task permanently • Failed status: ◦ View Details—Navigates to the monitoring page showing all the tasks available ◦ Delete—Deletes the selected task permanently
Show	Allows you to filter migration tasks by status, by selecting one of the following options from the drop-down list: • Quick Filter—To filter the tasks based on the status • All—To show all the tasks available • Scheduled—To show the tasks that are scheduled • Canceled—To show the tasks that are canceled • Running—To show the tasks that are started • Paused—To show the tasks that are paused • Paused due To Error—To show the tasks that are paused due to an error in the system • Successful—To show the tasks that are successful • Failed—To show the tasks that failed
Filter	Select a status and click Filter to set a search rule at the bottom of the search window.
Delete	Check the check box next to the task and click the Delete button at the top of the table. You can also click Delete under the Actions column for the task you wish to delete.
Add Migration Task button	Opens the Add Migration Task wizard. **Note** You can also open the Add Migration Task wizard by selecting Edit in the Actions column for a particular migrate task.
Add Migration Task window For information about how to add a migration task, see “Add Migration Task”.	

Setting	Description
Choose Source and Destination Clusters page	From the Choose Source and Destination Clusters page, select the source UC cluster from the drop-down list. After you select the source cluster, you select the destination cluster from the drop-down list and the nodes from the Node Mapping from Source to Destination Cluster table.
Choose Upgrade Files page	From the Choose Upgrade File page, select the upgrade file for each product being upgraded. You will only have the option of selecting files for the product type you selected on the Choose Cluster page.
Set Start Time page	From the Set Start Time page, select a start time for the task. **Note** The time specified is based on the Cisco Prime Collaboration Deployment server time, not the time zone of the selected cluster. You have the option of setting the start time for a specific time, starting the task manually, or setting the task to begin immediately upon completion of the wizard.
Specify Migration Procedure page	From the Specify Migration Procedure page, specify the sequence in which the migration is processed on the servers. You can change the sequence of the stepsby clicking the up and down arrows of a particular step. You can also add or delete a step, or edit an existing step. By default, each node is sequenced into its own step. The Revert to Default button returns the steps to this original state.
Review page	The Review page provides a summary of the options you have selected in the previous steps. The nodes listed in the Nodes field are view-only; you cannot select them. You can add notes to the Notes field for future reference.

Related Tasks

- Migration Task, on page 33
- Install Task, on page 53
- Readdress Task, on page 51
- Server Restart Task, on page 49
- Switch Versions Task, on page 47
- Upgrade Task, on page 44

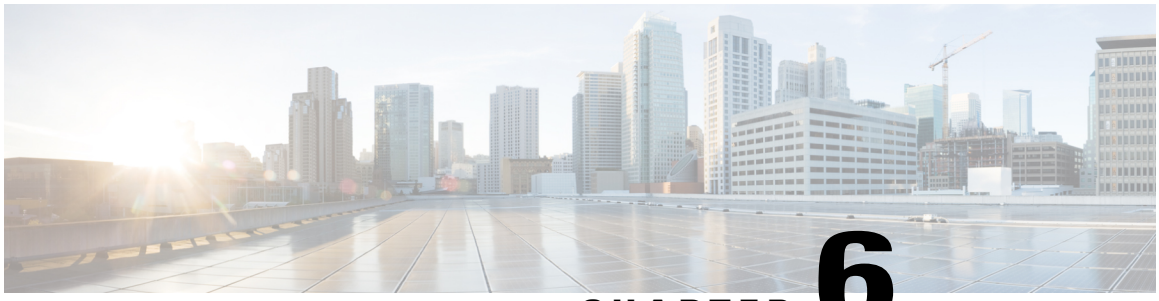

CHAPTER 6

Cisco Prime Collaboration Deployment Configuration and Administration

- Services, page 99
- Limitations and Restrictions, page 103

Services

After the installation of the Cisco Prime Collaboration Deployment platform, most services start automatically. You can configure services by setting service parameters for each service. If necessary, for example, for troubleshooting purposes, you may need to stop, start, or restart a service. You can perform these tasks by using the CLI on the Cisco Prime Collaboration Deployment platform.

Cisco Prime Collaboration Deployment Service

This service supports the Cisco Prime Collaboration Deployment application interface. This service must be active for the Cisco Prime Collaboration Deployment application to work correctly. It is active by default.

Performance and Monitoring Services

Cisco Log Partition Monitoring Tool

The Cisco Log Partition Monitoring Tool service supports the Log Partition Monitoring feature, which monitors the disk usage of the log partition on the Cisco Prime Collaboration Deployment platform by using configured thresholds and a polling interval.

Cisco RIS Data Collector

The Real-Time Information Server (RIS) maintains real-time information, such as critical alarms generated.

Cisco AMC Service

The Alert Manager and Collector (AMC) service allows you to retrieve real-time information that exists on the server.

Cisco Audit Event Service

The Cisco Audit Event Service monitors and logs any configuration change to the Cisco Prime Collaboration Deployment platform by a user or as a result of the user action.

SOAP-Log Collection APIs Service

The Cisco SOAP-Log Collection APIs service allows you to collect log files and to schedule collection of log files on a remote SFTP server. Examples of log files that you can collect include syslog, core dump files, Cisco application trace files.

SOAP-Performance Monitoring APIs Service

The Cisco SOAP-Performance Monitoring APIs service allows you to use performance monitoring counters for various applications through SOAP APIs; for example, you can monitor memory information per service and CPU usage.

Backup and Restore Services

Cisco DRF Master

The Cisco Disaster Recovery Framework (DRF) Master Agent service supports the DRF Master Agent, which works with the CLI to schedule backups, perform restorations, view dependencies, check status of jobs, and cancel jobs, if necessary. The Cisco DRF Master Agent also provides the storage medium for the backup and restoration process.

Cisco DRF Local

The Cisco DRF Local service supports the Cisco DRF Local Agent, which performs the work for the DRF Master Agent. Components register with the Cisco DRF Local Agent to use the disaster recovery framework. The Cisco DRF Local Agent runs commands that it receives from the Cisco DRF Master Agent. Cisco DRF Local Agent sends the status, logs, and command results to the Cisco DRF Master Agent.

SFTP

Cisco Prime Collaboration Deployment runs a Secure File Transfer Protocol (SFTP) server locally.

System Services

CDP

Cisco Delivery Protocol (CDP) advertises the voice application to other network management applications, so the network management application can perform network management tasks for the voice application.

Cisco Trace Collection Servlet

The Cisco Trace Collection Servlet, along with the Cisco Trace Collection Service, supports trace collection and allows users to view traces. If you stop this service, you cannot collect or view traces on the Cisco Prime Collaboration Deployment platform.

For SysLog Viewer and trace and log collection, the Cisco Trace Collection Servlet and the Cisco Trace Collection Service must run on the server.

Cisco Trace Collection Service

The Cisco Trace Collection Service, along with the Cisco Trace Collection Servlet, supports trace collection and allows users to view traces. If you stop this service, you cannot collect or view traces on the Cisco Prime Collaboration Deployment platform.

For SysLog Viewer and trace and log collection, the Cisco Trace Collection Servlet and the Cisco Trace Collection Service must run on the server.

Tip If necessary, to reduce the initialization time, we recommend that you restart the Cisco Trace Collection Service before restarting the Cisco Trace Collection Servlet.

Platform Services

Cisco Tomcat

The Cisco Tomcat service supports the web server.

Cisco Tomcat Stats Servlet

The Cisco Tomcat Stats servlet collects the Tomcat statistics.

Platform Administrative Web Service

The Platform Administrative Web service is a SOAP API that can be activated on Cisco Unified Communications Manager, Cisco Unified Presence, IM and Presence Service, Cisco Unified Contact Center Express, or Cisco Unity Connection systems, to allow the Cisco Prime Collaboration Deployment server to upgrade the system.

SNMP Master Agent

This service, which acts as the agent protocol engine, provides authentication, authorization, access control, and privacy functions that relate to Simple Network Management Protocol (SNMP) requests.

Tip After you complete SNMP configuration in the CLI, you must restart the SNMP Master Agent service.

MIB2 Agent

The Management Information Base (MIB2) Agent service provides SNMP access to variables, which are defined in RFC 1213, that read and write variables; for example, system and interfaces.

Host Resources Agent

This service provides SNMP access to host information, such as storage resources, process tables, and installed software base. This service implements the HOST-RESOURCES-MIB.

System Application Agent

This service provides SNMP access to the applications that are installed and running on the system. This service implements the SYSAPPL-MIB.

Cisco CDP Agent

This service uses the Cisco Discovery Protocol to provide SNMP access to network connectivity information on the Cisco Prime Collaboration Deployment platform. This service implements the CISCO-CDP-MIB.

Cisco Syslog Agent

This service supports gathering of syslog messages that various components generate. This service implements the CISCO-SYSLOG-MIB.

Cisco Certificate Expiry Monitor

This service periodically checks the expiration status of certificates that the system generates and sends notification when a certificate gets close to its expiration date.

Working with Services

To start, stop, activate, or restart services or to configure service parameters for services on the Cisco Prime Collaboration Deployment platform, you must use the CLI. You can start, stop, activate, or refresh only one service at a time.

Note When a service is stopping, you cannot start it until after the service is stopped. Also, when a service is starting, you cannot stop it until after the service is started.

The following services are activated by default after you install the Cisco Prime Collaboration Deployment platform.

- Cisco AMC Service
- Cisco Audit Event Service
- Cisco CDP
- Cisco CDP Agent
- Cisco Certificate Expiry Monitor
- Cisco DRF Local
- Cisco DRF Master
- Cisco Log Partition Monitoring Tool
- Cisco Platform Manager Service
- Cisco RIS Data Collector
- Cisco Syslog Agent
- Cisco Tomcat
- Cisco Tomcat Stats Servlet
- Cisco Trace Collection Servlet
- Host Resources Agent

- MIB2 Agent
- SNMP Master Agent
- System Application Agent

The following services are stopped by default after you install the Cisco Prime Collaboration Deployment platform.

- Cisco Trace Collection Service
- SOAP-Log Collection APIs
- SOAP-Performance Monitoring APIs

Caution Some changes to service parameters may cause system failure. We recommend that you do not make any changes to service parameters unless you fully understand the feature that you are changing or unless the Cisco Technical Assistance Center (TAC) specifies the changes.

The following table shows the commands that you need to work with services on the Cisco Prime Collaboration Deployment platform.

Table 8: Service CLI Commands

Task	Command
Display a list of services and service status	**utils service list**
Activate a service	**utils service activate**
Stop a service	**utils service stop** *servicename*
Start a service	**utils service start** *servicename*
Restart a service	**utils service restart** *servicename*

Limitations and Restrictions

- Cisco Prime Collaboration Deployment is not a diagnostic tool. An error message appears on the task list page if a task fails; however, you should use your usual set of tools and procedures to diagnose and correct the problem.
- The SOAP services do not replace the existing OS Administration and CLI upgrade processes. You can still upgrade your servers by using the application GUIs or CLI commands. Cisco Prime Collaboration Deployment is another way to upgrade, restart, or switch versions on the application servers.
- No localization is available for Cisco Prime Collaboration Deployment. The localization is available in English only (including time and date formats).

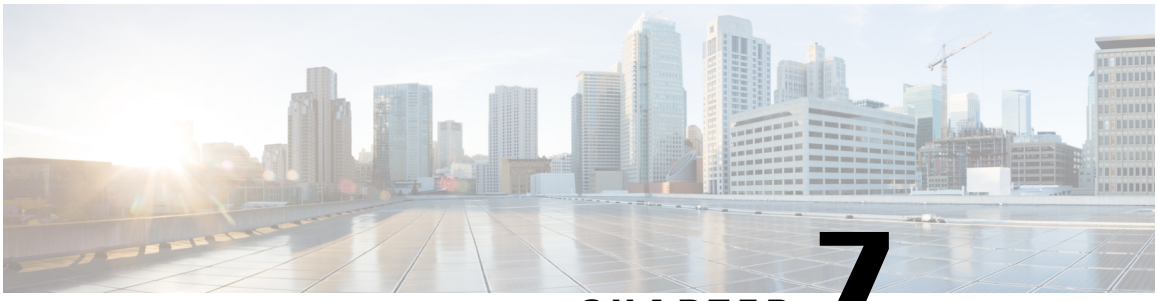

CHAPTER 7

CLI Commands and Disaster Recovery System

- CLI Commands on Cisco Prime Collaboration Deployment, page 105

CLI Commands on Cisco Prime Collaboration Deployment

The main functions of Cisco Prime Collaboration Deployment (such as creating migration, upgrade, and other tasks) are supported through the Cisco Prime Collaboration Deployment GUI interface. You can use the GUI interface to create a specific task and schedule the time to perform the task. The GUI interface also reports the status of tasks.

For other operations, such as upgrading the software on the Cisco Prime Collaboration Deployment server and performing a DRS backup, use the Cisco Prime Collaboration Deployment CLI, which is similar to the CLI on Cisco Unified Communications Manager Release 10.x.

Use the CLI on Cisco Prime Collaboration Deployment to perform the following tasks:

- View or get log files
- Administer a DRS backup device, and perform a data backup or restore
- Upgrade the Cisco Prime Collaboration Deployment software
- Change the hostname, IP address, or password on the Cisco Prime Collaboration Deployment
- Perform diagnostic commands on the Cisco Prime Collaboration Deployment system

The most common CLI operations and commands are for viewing logs and performing DRS backups.

Getting Cisco Prime Collaboration Deployment Logs

When you troubleshoot problems on the Cisco Prime Collaboration Deployment server, it is often necessary to view the main application log.

CLI command: **file get activelog tomcat/logs/ucmap/log4j/***

The Cisco Prime Collaboration Deployment main application log contains the following information:

- Representational state transfer (REST) requests from the browser
- Simple Object Access Protocol (SOAP) requests to UC servers
- Database requests

- Scheduler events (scheduled, started, failed, and so on)
- Specific job events (tasks, task actions, and nodes)
- Exceptions and errors

DRS on Cisco Prime Collaboration Deployment

The Disaster Recovery System (DRS) can be administered and invoked from the Cisco Prime Collaboration Deployment CLI. DRS allows you to perform user-invoked data backups of the data on your Cisco Prime Collaboration Deployment (the server clusters you have discovered, and scheduled and completed tasks). You can also choose to set up regularly scheduled automatic backups. The DRS feature has the following functions:

- CLI commands for performing backup and restore tasks
- The ability to schedule backups ahead of time, or run backups manually immediately
- The ability to archive backups to a remote SFTP server

DRS restores its own settings (backup device settings and schedule settings) as part of the platform backup and restore.

Important While you restore your data, the hostname, server IP address, and Cisco Prime Collaboration Deployment software version on the machine to which you are restoring the data must be the same as they were on the server on which you performed the backup.

DRS CLI Commands

Below is a list of the CLI commands that you can use to configure and perform backup and restore operations through DRS.

For more information, see the DRS documentation for Unified Communications Manager: http://www.cisco.com/c/en/us/support/unified-communications/unified-communications-manager-callmanager/products-maintenance-guides-list.html

- **utils disaster_recovery status <operation>** (An example of **operation** is Backup or Restore).
- **utils disaster_recovery device list**
- **utils disaster_recovery device add**
- **utils disaster_recovery device delete**
- **utils disaster_recovery schedule add**
- **utils disaster_recovery schedule delete**
- **utils disaster_recovery schedule enable**
- **utils disaster_recovery schedule disable**
- **utils disaster_recovery schedule list**
- **utils disaster_recovery backup —**Starts a manual backup by using the features that are configured in the DRS interface.

- **utils disaster_recovery restore —**Starts a restore, and requires parameters for backup location, filename, and features to restore.
- **utils disaster_recovery show_backupfiles—**Shows existing backup files.
- **utils disaster_recovery cancel_backup**
- **utils disaster_recovery show_registration**

Create a DRS Backup of the Server

Before You Begin

If you are using a location on your network to back up your Cisco Prime Collaboration Deployment, ensure the following points:

1. You must have access to an SFTP server to configure a network storage location. The Disaster Recovery system supports only SFTP servers that are configured with an IPv4 address or hostname/FQDN.
2. The account that you use to access the SFTP server must have write permission for the selected path.

You can also back up your Cisco Prime Collaboration Deployment to a local disk; however, this method is not recommended, because of the amount of space that is required on the Cisco Prime Collaboration Deployment disk to store the backup files.

Procedure

Step 1 Add the backup device.
Run the following command: **utils disaster_recovery device add network**

Example:
utils disaster_recovery device add network device1 /backupdir/pcdbk 10.94.155.76 adminname 2

Step 2 To verify that the device was set up correctly, run the following CLI command: **disaster_recovery device list**.

Step 3 Run a backup using the following command:
utils disaster_recovery backup network PCD device_name where device_name is the name of the backup device that was defined in Step 1.

Example:
utils disaster_recovery backup network PCD device1

Step 4 Check the status of the backup using the following CLI command:
utils disaster_recovery status backup.Use this command to see the status of your backup. The backup is complete when Percentage Complete is 100, and all components show “SUCCESS.”

Important Notes on Backup and Restore

Note When you restore your Cisco Prime Collaboration Deployment data, ensure that the Cisco Prime Collaboration Deployment software version that is installed on your server matches the version of the backup file that you want to restore.

Note When you perform a DRS restore operation to migrate data to a new server, you must assign the new server the identical IP address and hostname that the old server used. Additionally, if DNS was configured when the backup was taken, then the same DNS configuration must be present before you perform a restore operation.

Note We recommend that you perform a fresh installation of Cisco Prime Collaboration Deployment on your virtual machine before you restore the data.

Restore a Backup to Cisco Prime Collaboration Deployment

Note This procedure is optional.

Procedure

Step 1 Because a fresh install of the VM is recommended before the restore, you will need to add a backup device, so the system can retrieve the files from there. Configure the backup device by using the **utils disaster_recovery device add network** command.

Example:
utils disaster_recovery device add network device1 /backupdir/pcdbk 10.94.155.76 adminname 2
Specify the device from which you want to restore a backup file.

Step 2 List the backup files by using the following CLI command: **utils disaster_recovery show_backupfiles**

Example:
admin: utils disaster_recovery show_backupfiles device1
The **show_backupfiles command** shows which backups are available to be restored. Backups are named by date and the time the backup was performed.

Step 3 Start the restore operation by running the following CLI command: **utils disaster_recovery restore network**

Example:
admin:utils disaster_recovery restore network b7k-vmb031 2013-10-30-15-40-54 device1
When you are prompted to enter the features to restore, enter PCD.
Enter the comma separated features you wish to restore. Valid features for server B7K-VMB031 are PCD:PCD.

Step 4 Check the status of the restore by using the following CLI command: **utils disaster_recovery status restore**. While the restore process is running, you can check the status of the current restore job.

Do not administer any data on the Cisco Prime Collaboration Deployment server until the command shows as one hundred percent complete. This can take several minutes, depending on the amount of data that is being restored.

What to Do Next

After you restore your data, perform a system restart on the Cisco Prime Collaboration Deployment server to initialize the database.

The Cisco Prime Collaboration Deployment server will lose contact with ESXi hosts during the reinstallation. You may have to add ESXi hosts back into Cisco Prime Collaboration Deployment after a restore operation.

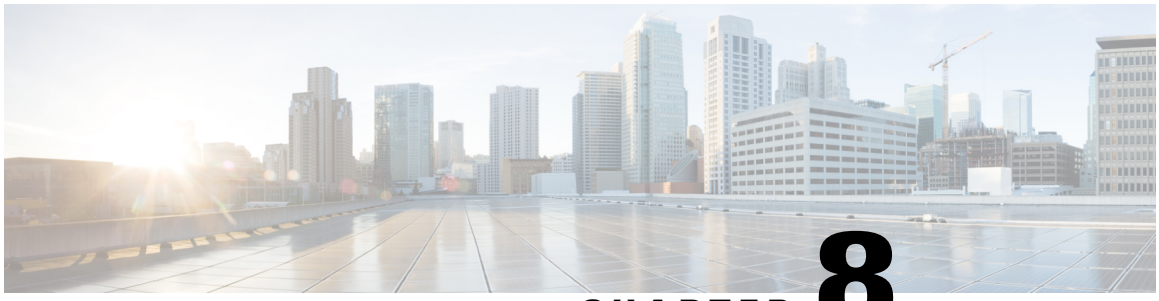

CHAPTER 8

CTL Update

- More Information, page 111
- Bulk Certificate Management, page 111

More Information

For information about performing a CTL update, see the "Security Basics" section in the *Cisco Unified Communications Manager Security Guide*: http://www.cisco.com/c/en/us/support/unified-communications/unified-communications-manager-callmanager/products-maintenance-guides-list.html

Bulk Certificate Management

Bulk certificate management must be performed manually on both source nodes and destination nodes. The source nodes and destination nodes must be up and running at this point. Phones are registered with the source nodes.

Procedure

Step 1 On the Destination Cluster Publisher, navigate to Cisco Unified Operating System Administration and choose **Security** > **Bulk Certificate Management**.

Step 2 Define the Central Secure File Transfer Protocol (SFTP) server IP address, port, user, password, and directory.

Step 3 Use the **Export** button to export all Trivial File Transfer Protocol (TFTP) certificates from the destination cluster to the central SFTP server.

Step 4 On the Source Cluster Publisher, navigate to Cisco Unified Operating System Administration. Select **Security** > **Bulk Certificate Management**.

Step 5 Define the Central SFTP server with same parameters that you used in Step 2.

Step 6 Click **Export** to export all TFTP certificates from source cluster to the central SFTP server.

Step 7 Click **Consolidate** to consolidate all the TFTP certificates on the central SFTP server. You can perform this step on either the source or destination cluster, using the Bulk Certificate Management interface.

Step 8 On the Source cluster, click **Bulk Certificate Import** to import the TFTP certificates from the central SFTP server.

Step 9 On the Destination cluster, click **Bulk Certificate Import** to import the TFTP certificates from the central SFTP server.

Step 10 Use Dynamic Host Configuration Protocol (DHCP) option **150** to point the phones to the new destination cluster TFTP server.
Upon reset or power cycle, the phones will download the new destination cluster ITL file and attempt to authenticate the new Initial Trust List (ITL) file signature with the certificates in the existing ITL file.

No certificate in the existing ITL file can be used to authenticate the signature, so the phone requests the signer's certificate from the old Trust Verification Service (TVS) server on the source cluster.

The phone sends this request to the source cluster TVS service on TCP port 2445.

The bulk certificate exchange in Steps 1 through 9 provides the TVS service in the source cluster with the TFTP certificate on the destination cluster that signed the new ITL file.

TVS returns the certificate to the phone, which allows the phone to authenticate the signature and replace the old ITL file with the newly downloaded ITL file.

The phone can now download and authenticate the signed configuration files from the new destination cluster.

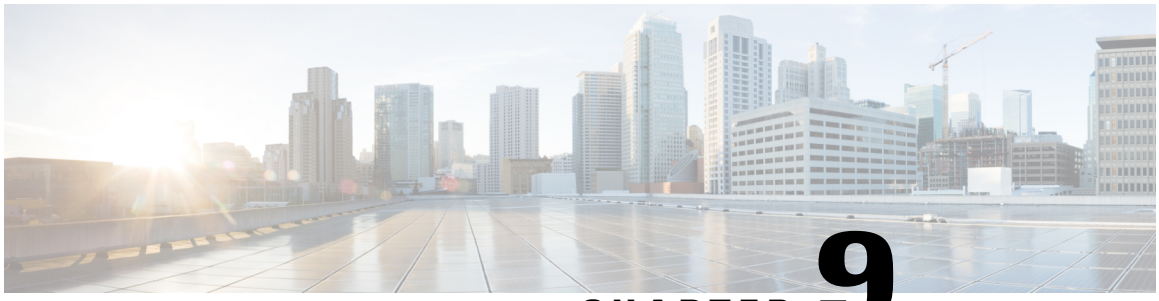

CHAPTER 9

Best Practices

- Cluster Discovery, page 113
- Upgrades, page 114
- ESXi Host, page 114
- Migration and Installation Virtual Machines, page 114
- Premigration, page 114
- Postmigration, page 115
- Task Validation, page 116
- Cisco Prime Collaboration Deployment Shutdown, page 116
- Monitoring Tasks, page 116
- Managing Files in the SFTP Datastore, page 116
- Using Cisco Prime Collaboration Deployment with Clustering Over WAN , page 117
- Sequence During Migration, page 117
- Server Readdress, page 117
- Fresh Install Publishers and Subscribers, page 117
- Fresh Install of a Unified CM and IM and Presence Cluster , page 117
- Email Notification, page 118
- Test Email, page 118

Cluster Discovery

During cluster discovery, a small Cisco Options Package (COP) file is installed on the servers that are being discovered. For this reason, ensure that before you initiate a discovery, no upgrades or COP file installations are in progress on the servers in the cluster that you want to discover.

Upgrades

When you initiate an upgrade of an application server (Cisco Unified Communications Manager, IM and Presence Service, Cisco Unified Contact Center Express, or Cisco Unity Connection) from the Cisco Prime Collaboration Deployment Upgrade task, the upgrade works in the same manner as upgrades that are initiated by the Unified Communications application GUI or CLI. As a result, we recommend that you follow the same preupgrade procedures and postupgrade verifications as you would directly from the application server GUI.

ESXi Host

Ensure that the virtual machines that you use for migrations or fresh installations reside on an ESXi host that was entered into the Cisco Prime Collaboration Deployment system. That ESXi host should not allow Disaster Recovery System (DRS) or vSphere vMotion.

Migration and Installation Virtual Machines

Always create virtual machines (VMs) for new clusters using the appropriate Open Virtualization Format (OVA) for the unified communications application that you will install. Do not use an existing VM as a destination VM for migration (use a newly-created VM). After a failed migration, if Cisco Prime Collaboration Deployment had started to install the new VM, you must delete this VM and create a new one using the proper OVA.

Premigration

Source Cluster

- We recommend that you run a full backup by using Disaster Recovery System (DRS) on the cluster.
- We recommend that you check the size of the TFTP folder on the TFTP server. If a number of firmware endpoint COP files was installed on the TFTP server, and if the size of the TFTP directory on the TFTP server is larger than 2.5 GB, we strongly recommend that you delete any large unused firmware files in the `/usr/local/cm/tftp` directory.

The following procedures describe how to check TFTP space usage, and if necessary, how to remove TFTP files on the TFTP server (source node) before you perform a migration using Cisco Prime Collaboration Deployment.

Check TFTP Directory Disk Usage

Procedure

Step 1 Log in using the CLI.

Step 2 Enter the following command: **admin:show diskusage tftp**

Step 3 Check the disk usage output for the following line: **/usr/local/cm/tftp/**. (Disk-usage information appears at the end of the output.)

Step 4 Check the size of the **/usr/local/cm/tftp directory**.

Note We recommend recommended that the size not exceed 2.5 GB. If it does, reduce the size by deleting some files (see procedure below). Before you delete those files, copy them to another server as a backup in case you need them in the future.

Delete TFTP Files

Procedure

Step 1 Log in to the Cisco Unified Operating System Administration GUI on the TFTP server.

Step 2 Navigate to **Software Upgrades** and select **TFTP File Management**.

Step 3 Click **Find** to see a list of TFTP files.

Step 4 Check the check box of the TFTP file that you want to delete.
To delete multiple files, check multiple check boxes.

Step 5 Click **Delete Selected**.

Step 6 After you delete the files, check the disk usage again using the above procedure.

What to Do Next

Note If the cluster has more than one TFTP server, perform these procedures on every TFTP server.

Postmigration

Follow these postmigration best practices:

- Check endpoints

- Check database replication, for example:

```
admin:show perf query class "Number of Replicates Created and State of
    Replication" ==>query class :

- Perf class (Number of Replicates Created and State of Replication)
    has instances and values:

ReplicateCount -> Number of Replicates Created = 676

ReplicateCount -> Replicate_State = 2
```

The following list shows the possible values for Replicate_State:

- 0—Replication Not Started. Either no subscribers exist, or the Database Layer Monitor service is not running and has not been running since the subscriber was installed.
- 1—Replicates were created, but their count is incorrect.
- 2—Replication is good.
- 3—Replication is bad in the cluster.
- 4—Replication setup did not succeed.

Task Validation

If a task is scheduled to start manually or start at a later time, the Validate button appears and you can run validation on the task manually. We recommend that you run the validation on a task before the start (you can run the validation anytime before the start), to identify problems such as missing virtual machines, communication issues, or missing ISO files. When the validation is run, a popup window opens with a list of validation problems. If no problems are found, the following message appears: “All validation tests passed.”

Cisco Prime Collaboration Deployment Shutdown

For best results, to shut down the Cisco Prime Collaboration Deployment server, use the command **utils server shutdown**. Failure to do so can result in Network File System (NFS) mount issues on the ESXi hosts.

Monitoring Tasks

Use the Monitoring GUI page to view the status of your tasks. Click the task in the left column, and the task details appear on the right. Each step in the task (export, install, and so on) appears in the Task Status table below the details section. Click the arrow next to any step to see additional details for that step. Some steps may have several task actions within them. Scroll down to see all the actions and their status.

Managing Files in the SFTP Datastore

The SFTP datastore page shows the ISO and COP files that were transferred to the Cisco Prime Collaboration Deployment server through SFTP. To place a file on the Cisco Prime Collaboration Deployment server, for

use in a migration, install or upgrade task, use an SFTP client and log in as adminsftp (use the administrator password as your password).

When you connect to the Cisco Prime Collaboration Deployment server, upload ISO files to be used by a migration or install task into the `/fresh_install` folder. Upload COP files to the `/upgrade folder`.

After a task is complete, if the ISO is not needed for another task, we recommend that you delete the ISO file from the SFTP datastore to conserve space on your Cisco Prime Collaboration Deployment server. If there are too many ISO files in the SFTP datastore when the Cisco Prime Collaboration Deployment is upgraded or a DRS backup is restored, the Cisco Prime Collaboration Deployment server may run out of space.

Using Cisco Prime Collaboration Deployment with Clustering Over WAN

A minimum bandwidth of 100 Mbps is recommended if the Cisco Prime Collaboration Deployment server and other Unified Communications application nodes are communicating over a WAN.

Sequence During Migration

When you create a migration task, the default sequence is presented, which has one server in each install step. You can use the editing tools in the sequence screen to place more than one server in a step. For best results, include no more than six servers in any one step.

Server Readdress

With the Server Readdress feature, the system inserts a forced pause after each server readdress. Verify that the server was successfully changed and that the phones reregistered before you continue to the next readdress step.

Fresh Install Publishers and Subscribers

When a fresh install task (new UC cluster) includes more than one server, the Cisco Prime Collaboration Deployment system automatically installs the Unified Communications Manager publisher first, and then inserts a forced pause following the publisher installation. During the pause, you can go to the Unified Communications Manager GUI of the newly installed publisher and add the other cluster servers into the **System** > **Servers** GUI. After all the subscribers to be installed in this cluster (Unified Communications Manager subscribers, IM and Presence publishers and subscribers) are added to the Unified Communications Manager publisher GUI, the user can click the **Resume** button on the Cisco Prime Collaboration Deployment Monitoring page to resume the fresh install task.

Fresh Install of a Unified CM and IM and Presence Cluster

When you create a fresh install with both Unified Communications Manager and IM and Presence Service nodes, you must indicate which IM and Presence Service server is the publisher. After the Unified Communications Manager publisher install, the task pauses. This pause allows the subscriber install nodes to

enter into the Unified Communications Manager Publisher (**System** > **Server** GUI page). The IM and Presence Service publisher must be the first IM and Presence server that is added to this list. This step ensures that the IM and Presence Service publisher is installed as the first node.

Email Notification

If a task encounters an error, the task is paused to wait for user intervention. Also, some tasks pause automatically in the task sequence to allow for manual interaction. We recommend that you set up email notification (Standard option) before you run any tasks in order to be notified of pauses or errors that may require your attention when the task runs.

Test Email

When setting up email notification, click the **Send Test email** button to verify that the Cisco Prime Collaboration Deployment mail system can send email to your mail server. Check that the test email was received. Perform this test before you run tasks.

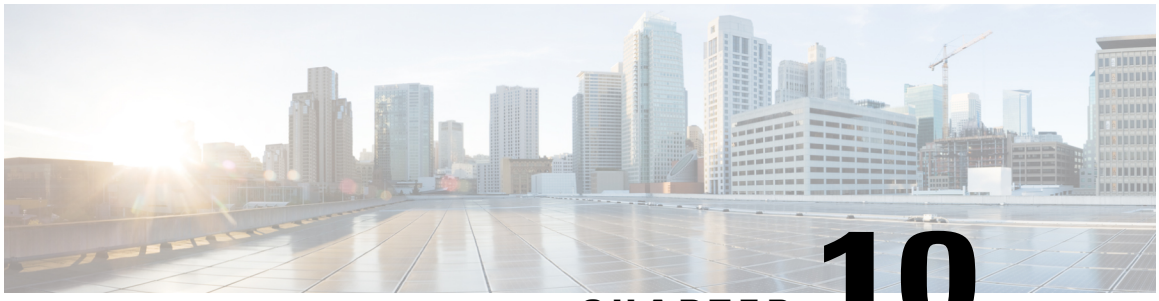

CHAPTER 10

Cisco Prime Collaboration Deployment Troubleshooting

- Increase Disk Space for Migrations, page 119
- General Troubleshooting Issues, page 120
- Errors Seen in View Log, page 120
- Lock Errors, page 124
- NFS Datastores, page 124
- Pause States on Monitor Page, page 124
- Scheduling, page 125
- Server Connectivity, page 125
- Task Failure Due to Restart, page 125
- Task Scheduling, page 134
- Task Timeouts, page 135
- Upgrade Migration and Installation, page 135
- Run a New Task When Current Task in Canceling State, page 136
- Version Validity, page 137

Increase Disk Space for Migrations

If one Cisco Prime Collaboration Deployment server is used to migrate a large number of Unified Communications Manager servers concurrently, the Cisco Prime Collaboration Deployment disk can run low on space, and this can cause migration tasks to fail. If you plan to use a Cisco Prime Collaboration Deployment system to migrate several servers concurrently, you can use this procedure to increase the disk size.

Procedure

Step 1 Shut down the Cisco Prime Collaboration Deployment server by logging in to the Cisco Prime Collaboration Deployment CLI and entering the **utils system shutdown** command.

Step 2 After the Cisco Prime Collaboration Deployment server shuts down, go to **ESXi host** and increase the disk size for the virtual machine on which the Cisco Prime Collaboration Deployment server resides.

Step 3 Restart the Cisco Prime Collaboration Deployment server.

Step 4 To view how much disk space is available on the Cisco Prime Collaboration Deployment server, run the CLI command **show status** on the Cisco Prime Collaboration Deployment server.

General Troubleshooting Issues

View Step-By-Step Log of Events

Use the **View Log** buttons on the Monitoring dashboard to see a step-by-step log of Cisco Prime Collaboration Deployment events.

Access Cisco Prime Collaboration Deployment Logs

Obtain additional details by accessing Cisco Prime Collaboration Deployment logs using CLI commands. For example:

file get activelog tomcat/logs/ucmap/log4j/*

Check For Problems Before You Start a Task

Use the **Validate** button to check for problems before starting a task. When the validation process identifies problems, click the **View Log** button to see more detail.

Node Information Mismatches

Some mismatches between node information that is stored in Cisco Prime Collaboration Deployment and the actual node can be fixed automatically (for example, active versions). Other information will require a rediscovery to correct the problem.

Verify Communication Between Servers

Use the **network capture** CLI command to verify communication between servers (for example, to confirm that packets are being sent to and received by the correct ports).

Errors Seen in View Log

The View Log button on the Monitoring dashboard can be used to see a step by step log of Cisco Prime Collaboration Deployment events during the task. When viewing the log, there may be events or errors that are shown. Some of the more common errors, and possible actions to correct those errors, are shown below:

Node Connection and Contact Issues

Error messages:

- "The network diagnostic service indicates node {0} has a network issue. The network settings cannot be changed until the network issue is resolved."
- "The node could not be located."
- "The node could not be contacted. "

Possible actions to correct node connection and contact issues:

- Check the network settings and firewall settings for the indicated node and ensure that the Cisco Prime Collaboration Deployment server can communicate with the node.
- Check to see if the node is powered off, if the node name is misspelled, or if the node is inaccessible.

Other Connection Issues

Error message:

- "The switch version status could not be determined. Please manually verify that the switch version completed."

Possible actions to correct issues:

During a switch version task, if the server does not respond in a fixed amount of time, this message may appear even if the task is successful. you see this error, log in to the CLI for the server that is not responding and run the **show version active** command to see if the switch version was successful. For example, a switch version on a Cisco Unified Contact Center Express server can take more than 60 minutes.

Node Response

Error messages:

- "The node did not respond within the expected time frame."
- "The upgrade service for node {0} did not send back the expected response. This is assumed to be a failure. However, this can also happen when network connectivity is temporarily lost. Please manually verify the upgrade status on node {0} before proceeding."

Possible actions to correct issues:

These messages are usually seen during a task (install, upgrade, and so on), when the new node does not contact the Cisco Prime Collaboration Deployment server within a specified amount of time. For an upgrade, this time is 8 hours, so when one of these error messages appear, it may indicate that the task failed. However, these error messages can also indicate that there were network issues during the upgrade (or install) that prevented the server from contacting Cisco Prime Collaboration Deployment. For this reason, you see one of these messages, log in to the server that is not responding (using the CLI) and run the **show version active** command to see if the upgrade was successful.

Unable to Mount Datastore

Error message:

- "Unable to mount datastore xxx_NFS on ESXi host <hostname>. "

Possible actions to correct the issue:

This error occurs when your Network File System (NFS) Datastore has an issue. Datastore issues can occur when Cisco Prime Collaboration Deployment is shut down unexpectedly. When this error occurs, check the ESXi host and unmount the old NFS mount. Then delete and add back the ESXi host to Cisco Prime Collaboration Deployment.

Unable to Add ESXi Host to Inventory

Possible cause:

This error may be caused by a networking issue with the vSwitch on the ESXi host.

Possible actions to correct the issue:

- Ping the host and verify connectivity by entering the following CLI command: **utils network ping hostname**.
- Verify that the license for the ESXi host is valid. A demo license is not supported.
- Be aware that you need root access to the ESXi host. Use the root username and password when adding ESXi host credentials.
- Be aware that if you are using network address translation (NAT), Cisco Prime Collaboration Deployment and all nodes in the clusters must be behind the same NAT to ensure successful communication between Cisco Prime Collaboration and the nodes.

Unable to Power On Virtual Machine

Error message:

- "Unable to power on the VM named xxx on ESXi host xxxxxxx. "

Possible actions to correct issue:

Check the ESXi host that the VM resides on. From the **Tasks and Events** tab, check the time stamp for when Cisco Prime Collaboration Deployment tried to power on the VM. Determine whether too many VMs are already on that host. If that is the case, you may need to power off a VM that is not being used for this cluster.

The Power State of a Virtual Machine

Error message:

- "The power state of VM xxxxx in ESXi host XX.XX.X.XX needs to be OFF. The task is now paused."

Possible actions to correct issue:

VMs that are to be used in a destination cluster for a migration task, or for a new cluster installation, must be in the OFF state. If you receive this error message, check the named VM. If it is not off, power it off. Then, retry or resume the task.

Username and/or Password Not Valid

Error message:

- " The username and/or password is not valid."

Possible actions to correct the issue:

Correct the administrator name and password for this server in the cluster page. You can then rediscover this node.

Platform Administrative Web Services (PAWS)

Error messages:

- "The Platform Administrative Web Services (PAWS) is not available."
- " Unable to access node {0} via the Platform Administrative Web Services (PAWS) interface."

Possible actions to correct issues:

Ensure that the server is reachable, and that the PAWS service is active on the node. When you use Cisco Prime Collaboration Deployment to perform an upgrade, switch version, or restart task on an application server (for example, to upgrade a Unified Communications Manager server), the Platform Administrative Web Service on the application must be active. Otherwise, the Cisco Prime Collaboration Deployment server cannot communicate with the Unified Communications Manager application server.

{0} VMs Named {1} Were Located on ESXi Host {2}

Error message:

- " {0} VMs named {1} were located on ESXi host {2}."

Possible actions to correct issue:

Check that the virtual machine named still exists on the ESXi host. Sometimes VMs are moved to another ESXi host, and if this is the case, the ESXi host that holds the VM must be added into the Cisco Prime Collaboration Deployment server.

Power State of VM {0} in ESXi Host {1} Needs to Be OFF

Error message:

- "The power state of VM {0} in ESXi host {1} needs to be OFF."

Possible actions to correct the issue:

In order for Cisco Prime Collaboration Deployment to be installed on or migrate to a VM, the power state of the target VMs must be OFF.

CLI Command Timed Out

Error message:

- "CLI command timed out for node {0}."

Possible actions to correct issue:

Check for networking, connection, or password issues with the node. Also check to see if another operation was in progress (for example, a COP file install) during the time that the command timed out.

Task Paused Due to Validation Issues

Error message:

- " Task paused due to validation issues"

Possible actions to correct the issue:

Before it runs a task, the Cisco Prime Collaboration Deployment server will run validation checks to ensure that VMs to be used are available, that the ISO file can be found, and so on. This message indicates that one or more of the validation checks failed. See the log file for more information about which validations failed.

Lock Errors

Most products allow only one change at a time (for example, you cannot modify Network Time Protocol settings while an upgrade is in progress). If a request is made while the node is locked, then a lock message with the following information is displayed:

- The name of the resource that was locked
- The ID of the process that locked the resource
- The hostname of the node

You can typically wait a few minutes and try again. For more details, use the node CLI to identify the exact process based on the provided process ID and hostname.

NFS Datastores

Exceptions and Other NFS-Related Issues

Review the Cisco Prime Collaboration Deployment logs for any exceptions or other NFS-related issues.

Use VMware vSphere

Use VMware vSphere to verify that NFS datastores are available.

Unmount and Remount All Current Datastores

When you restart it, Cisco Tomcat unmounts all current datastores and attempts to remount them.

Pause States on Monitor Page

Task Is Waiting for Manual Intervention

Certain tasks, such as migration or readdress, pause at a point that human intervention may be required. In those tasks, the Cisco Prime Collaboration Deployment system inserts a Forced Pause. When the task reaches this point, the task is paused and a message appears on the Monitoring page. Perform manual steps as needed, and then click the **Resume** button when you are ready to resume the task.

Task Paused Due to Validation Issues

When this message is displayed, click the **View log** link to view more detail on which validations failed.

Task Paused Due to Task Action Failures

When this message is displayed, click the **View log** link to view more detail on which tasks failed.

Scheduling

Verify Scheduled Date

If a task was scheduled but did not start, verify the scheduled date.

Validation Tests

When a task starts, Prime Collaboration Deployment runs a series of validation tests. A validation failure pauses the task.

Determine Why a Task Has Been Paused

Use the **View Log** button to see why a task is paused (for example, validation failure, a requested or required pause, one or more nodes failed on a partiular step, and so on).

Canceled Tasks

Some steps cannot be canceled after they are started (for example, restarting a server).If you cancel the task, it remains in the Canceling state until the step is finished.

Server Connectivity

Verify Connectivity

Use the **utils network ping** and **traceroute** CLI commands to verify connectivity.

Verify Forward and Reverse DNS Lookups

Use the **utils network host** CLI command to verify forward and reverse DNS lookups.

Platform Administrative Web Services

Ensure that Platform Administrative Web Services are activated on nodes that are being upgraded, restarted, and switch versioned.

Verify That Ports Are Open

Verify that the ports listed in the **Port Usage** guide are open (for example, verify that the NFS and SOAP call-back ports are not being blocked by other network devices).

Task Failure Due to Restart

The success or failure of each of the following tasks depends on the Prime Collaboration Deployment server being able to get a response from every server in the cluster during the task. If connectivity to the servers is

lost, or if the Prime Collaboration server reboots during a task, the task might show a failure even though it may have completed successfully.

Installation Task Failure

Problem

The success or failure of each step in the install task depends on the Prime Collaboration Deployment server being able to get a response from every server in the cluster during the installation.

Possible Cause

If the Prime Collaboration server reboots during the install task, the installation might show a failure, even though it may have completed successfully.

The following table describes the steps to identify if the task completed successfully on the application server, and, if it did not, how to recover from this type of failure.

Solution

Table 9: Example Deployment: Multinode Cluster Deployment

If	Then
The failure occurs during installation on the first node	**1** You must create a new fresh-install task with the same cluster nodes. **Note** In the case of Unified Communications products such as Cisco Unified Communications Manager and IM and Presence Service, Cisco Prime Collaboration Deployment does not support an install task that installs a subsequent node separately from the cluster. **2** Check the status of the VM on the ESXi host that is associated with the destination cluster. If any VMs were powered on and installed, delete those VMs and redeploy the OVA. **Note** For more information, see topics relating to install tasks.

If	Then
The installation is successful on the first node but fails on any of the subsequent nodes after Prime Collaboration Deployment loses connectivity	1 Log in to the failed Unified Communications VM node, such as Cisco Unified Communications Manager, and manually verify the installation status. For more information, see Unified Communications product documentation. 2 Create a new install task with all new cluster nodes. You must restart the installation process by deleting all installed VMs, redeploying the recommended OVA to create new VMs, and creating a new install task. **Note** If VM names are changed from previous configuration, you must add a new fresh install cluster, create a new fresh install task, and then run the task. 3 Check the status of the VM on the ESXi host that is associated with the destination cluster. If any VMs were powered on and installed, delete those VMs and redeploy the OVA. **Note** For more information, see topics relating to install tasks.

Upgrade Task Failure

Problem

The success or failure of each step in the upgrade task depends on the Prime Collaboration Deployment server being able to get a response from every server in the cluster during the upgrade.

Possible Cause

If the Prime Collaboration server reboots during an upgrade task, the upgrade might show a failure even though the upgrade may have completed successfully.

The following table describes the steps to determine whether the task completed successfully on the application server and, if it did not, how to recover from this type of failure.

Solution

Table 10: Example Deployment: Multinode Cluster Deployment

If	Then
The failure occurs during upgrade on the first node	**1** Check task status on the **Monitoring** page to see which steps were successful and which steps failed. **2** Log in to the first Unified Communications VM node, such as Cisco Unified Communications Manager. Check the software version and upgrade status to verify whether this node was upgraded to a new version. For more information, see Unified Communications product documentation. **3** If the upgrade on the first node is successful, you can create a new upgrade task with the subsequent node. **4** If the upgrade on the first node is unsuccessful, you can create a new upgrade task with all nodes. **5** If the upgrade task was configured with automatic switch version, check the status of the active and inactive partitions on the Unified Communications product node. If the automatic switch version was unsuccessful on the Unified Communications product node, perform a switch version. For more information, see Unified Communications product documentation. **Note** If the switch version is required, this must be done before you a new upgrade task with subsequent nodes with a new upgrade task that is configure with auto-switch version. **Note** If you create an upgrade task to install a COP file, verify COP-file installation status directly on the Unified Communications node.

If	Then
The upgrade is successful on the first node but fails on any of the subsequent nodes after Prime Collaboration Deployment loses connectivity	1 Log in to the failed Unified Communications VM node, such as Cisco Unified Communications Manager. Check the software version and upgrade status to verify whether this node was upgraded to a new version. For more information, see Unified Communications product documentation. **Note** If the subsequent node shows the correct new version, you do not need to recreate an upgrade task on Prime Collaboration Deployment. 2 If the subsequent node shows the new version in the inactive partition, the old version in active partition, and the upgrade task was configured to switch version automatically, you must either perform the automatic switch version manually on the Cisco Unified Communications Manager node or use Prime Collaboration Deployment to create a switch version task. 3 If the upgrade task was configured with automatic switch version and the subsequent node does not show the version correctly, perform a switch version. See Unified Communications product documentation more detail. **Note** If you created an upgrade task to install a COP file, verify COP-file installation status directly on the Unified Communications node.

Migration Task Failure

Problem

The success or failure of each step in the migration task depends on the Prime Collaboration Deployment server being able to get a response from every server in the cluster during the migration.

Possible Cause

If the Prime Collaboration server reboots during the migration task, the migration might show a failure even though it may have completed successfully.

Solution

If the migration task fails after Prime Collaboration Deployment loses connectivity, we recommend that you restart the entire migration process. To restart the migration task, you must create a new task. If your deployment is a multinode cluster, follow this procedure:

1. Check the task status on the **Monitoring** page to find out which steps were successful and which steps failed.
2. If the source node was shut down, you must power on the node manually.

Note Repeat this step for all source nodes that were shut down.

3. Delete the failed migration task.
4. Delete the destination migration cluster that is associated with the failed migration task.

Note You do not need to delete the source cluster.

5. Check the status of the VM on the ESXi host that is associated with the destination cluster. If any VMs were powered on and installed, delete those VMs and redeploy the OVA.

Note For more information, see topics relating to migration tasks.

Switch Version Task Failure

Problem

The success or failure of each step in the switch version task depends on the Prime Collaboration Deployment server being able to get a response from every server in the cluster during the switch version.

Possible Cause

If the Prime Collaboration server reboots during the switch version task, the switch version might show a failure even though the switch version may have completed successfully.

The following table describes the steps to determine whether the task completed successfully on the application server, and, if it did not, how to recover from this type of failure.

Solution

Table 11: Example Deployment: Multinode Cluster Deployment

If	Then
The failure occurs during switch version on the first node	1 Log in to the first Unified Communications VM node (for example, Cisco Unified Communications Manager) and manually check the sofware version in both the active and inactive partitions. For more information, see Unified Communications product documentation. 2 If the first node still shows the old version in the active partition but the new version in the inactive partition, create a new switch version task with the same nodes on Prime Collaboration and run the task again.
The switch version is successful on the first node but fails on any of the subsequent nodes after Prime Collaboration Deployment loses connectivity	1 Log in to the subsequent Unified Communications VM node (for example, Cisco Unified Communications Manager). Check the software and switch version status to verify that the subsequent node is up and running with the correct version. 2 If the subsequent node shows the correct new version in the active partition, you do not need to recreate a switch version task on Prime Collaboration Deployment. 3 If the subsequent node shows the new version in the inactive partition and the old version in active partition, the switch version was not successful on the subsequent node. You can either perform a switch version manually on the subsequent node or create a new switch version task on the subsequent node on Prime Collaboration Deployment.

Readdress Task Failure

Problem

The success or failure of each step in the readdress task depends on the Prime Collaboration Deployment server being able to get a response from every server in the cluster.

Possible Cause

If the Prime Collaboration server reboots during the readdress task, you may be notified of a failure even though the readdress may have completed successfully.

The following table describes the steps to determine whether the task completed successfully on the application server, and, if it did not, how to recover from this type of failure.

Solution

Table 12: Example Deployment: Multinode Cluster Deployment

If	Then
The failure occurs during readdress on the first node	**1** Log in to the first Unified Communications VM node (for example, Cisco Unified Communications Manager) and verify that network settings were successfully changed. For more information, see Unified Communications product documentation. **2** After you verify that network settings were successfully changed on the first node, create a new readdress task on the subsequent node on Prime Collaboration Deployment and run this task. If network settings were not successfully changed on the first node, create a new readdress task with both nodes on Prime Collaboration Deployment and run the task again.

If	Then
The readdress task is successful on the first node but fails on any of the subsequent nodes after Prime Collaboration Deployment loses connectivity	**1** Log in to the first Unified Communications VM node (for example, Cisco Unified Communications Manager) and verify that network settings were successfully changed. For more information, see Unified Communications product documentation.. **2** After verifying that network settings were successfully changed on the first node, you do not need to create a new readdress task on the first node on Prime Collaboration Deployment. However, you do need to create a new readdress task on the subsequent nodes. If network settings were not successfully changed on the first node, create a new readdress task with the first node and subsequent nodes on Prime Collaboration Deployment and run the new task. **3** If network settings were successfully changed, update cluster discovery for this cluster to make sure that Prime Collaboration Deployment has the correct network settings. **1** Go to the **Clusters** screen and click the triangle to show the nodes in the cluster. **2** Check the network settings to ensure that the Cluster Nodes table shows the new network settings (for example, hostname). **3** If the correct network settings are not displayed, click the **Refresh Node** link for each node in the cluster.

Server Restart Task Failure

Problem

The success or failure of each step in the server restart task depends on the Prime Collaboration Deployment server being able to get a response from every server in the cluster during the server restart.

Possible Cause

If the Prime Collaboration server reboots during server restart, the server restart might show a failure, even though the server restart may have completed successfully.

The following table describes the steps to determine whether the task completed successfully on the application server, and, if it did not, how to recover from this type of failure.

Solution

Table 13: Example deployment: Multi-node cluster deployment

If	Then
The failure occurs during server restart on the first node	1 Log in to the first Unified Communications VM node (for example, Cisco Unified Communications Manager) and manually check the status of the restart. 2 If the first node did not get restarted, recreate a new server restart task with all nodes and run the task again.
The server restart is successful on the first node but fails on any of the subsequent nodes after Prime Collaboration Deployment loses connectivity	1 Log in to the second Unified Communications VM node (for example, Cisco Unified Communications Manager) and manually check the status of restart. 2 If the subsequent node restarted successfully, there is no need to recreate a new server restart task. If the subsequent node did not restart, create a new server restart task on the subsequent node only.

Task Scheduling

Task Scheduled but Not Started

If a task was scheduled but did not start, verify the scheduled date.

Validation Failure

When a task starts, a series of validation tests are run. A validation failure pauses the task.

Reasons for a Task Pause

Click the **View Log** button to see why a task was paused (for example, validation failure, a pause was requested or required,, one or more nodes failed on a particular step, and so on).

Tasks That Cannot Be Canceled

Some tasks cannot be canceled once started (for example, restart of a server or installation of a server node). If the task is canceled, it remains in the Canceling state until the step is finished.

Task Timeouts

Manually Verify Results

All Cisco Prime Collaboration Deployment tasks have built-in timeouts ranging from 30 minutes to 10 hours, depending on the type of task and product. If Cisco Prime Collaboration Deployment does not receive the expected results within that time frame, Cisco Prime Collaboration Deployment signals an error, even if the actual process succeeded. Users must manually verify the results and ignore any false negatives.

Readdress Times Out

During readdress, if a VLAN change is required, Cisco Prime Collaboration Deployment does not receive updates for the nodes. As a result, the readdress eventually times out even though the actual readdress process succeeded.

Resource Issues Slowing Down the Nodes

Use VMware vSphere to verify that no resource issues are slowing down the nodes. Disk, CPU, and memory issues can cause slower than normal logins, which can cause connectivity timeout issues during cluster discovery.

Network Congestion

Because large files are sent across the network during upgrades, installations, and migrations, network congestion can cause tasks to take longer than usual.

Upgrade Migration and Installation

Virtual Machine Does Not Boot

If a VM does not boot using the mounted install ISO during migration or installation, verify the VM boot order in the Basic Input/Output System (BIOS). We recommend that only freshly created VMs that use the official Cisco Open Virtualization Format (OVF) files.

VM Cannot Be Located

If a VM cannot be located, make sure vMotion is turned off.

Upgrade File List Is Blank

If the list of ISO files for upgrade is blank, the reason might be that one or more servers in the cluster you are upgrading have an existing upgrade that is stuck. The file list shows as blank because the Unified Communications Manager-side upgrade process was stuck. Therefore, no files are valid, because no upgrades can be done. If you attempt an upgrade from the application server CLI, you may see the message “The resource lock platform.api.network.address is currently locked.”

To resolve this problem, reboot your Unified Communications Manager server.

Upgrade ISO or COP File Is Not Displayed in the Task Wizard

If an upgrade ISO or COP file is not displayed in the task wizard, verify that the file was uploaded into the correct directory on the Prime Collaboration Deployment Server through the **Administration** > **SFTP Datastore** menu option. The directory that is in use is usually listed at the top of the task wizard.

Upgrade ISO File Must Be Valid for All Nodes

An upgrade ISO file must be valid for all nodes in the task in order to be listed in the wizard. If the upgrade ISO file is not listed, verify that the task contains the publisher or that the publisher was already upgraded.

Release 10.x and Older Products

Most Release 10.x and older products report only generic upgrade and installation failure messages. Users must access the failed node directly and diagnose the problem by using traditional tools and processes that are specific to that product (for example, use the Unified Real-Time Monitoring Tool or the CLI to view upgrade logs).

Run a New Task When Current Task in Canceling State

Rerun Fresh Install Task

The following procedure provides the high-level steps for rerunning a new task when the current task is in the process of being canceled. For more detailed information, see topics relating to task management.

Procedure

Step 1 View the task log to verify the status of the most recent task.

a) If the VM is powered on and the fresh install task is still in progress, power off the VM, delete it, and redeploy the OVA to create a new VM. You can use the same name for the new VM.

b) If the VM is powered off and the fresh install was not started on the VM, leave the VM powered off.

Step 2 Check the cluster to verify if any nodes in the cluster were updated with the active version and discovery status.

- If any nodes were updated with the new version or discovery status, create a new cluster with a new name, including the same VMs and installation settings.
- If any nodes in the cluster were not updated, reuse the cluster when recreating a fresh install task.

Step 3 Create and run a new install task.

Rerun Migration Task

The following procedure provides the high-level steps for rerunning a migration task for the same source and destination clusters when the current migration task is in the process of being canceled. For more detailed information, see topics relating to task management.

Procedure

Step 1 View the task log to verify the status of the most recent task.

a) If the VM is powered on and the migration task is still in progress on the destination VM, power off the destination VM, delete it, and redeploy the OVA to create a new destination VM. You can use the same name for the new VM.

b) If the VM is powered off and the migration was not started on the VM, leave the VM powered off.

Step 2 Check the node status on the source cluster before running a new task.

- If the source node is powered off, power on the source node and make sure it is in a running state before rerunning a migration task.
- In the case of network migration, the source node can remain powered on.

Step 3 You do not need to rerun cluster discovery on the source node.

Step 4 Check the destination cluster to ensure that no nodes were updated with active version or discovery status.

- If any nodes in the destination cluster were updated with the new version of application or discovery status, create a new migration destination cluster by giving it a new name with the same source cluster and select the same destination VMIf any nodes in the destination cluster have been updated with the new version of application or discovery status, create a new migration destination cluster by giving it a new name with the same source cluster and select the same destination VMs.
- If any nodes in the destination cluster were not updated with the new version of application or discovery status,you may be able to reuse the migration destination cluster later when creating a new migration task. If this is not possible, recreate a migration destination cluster with a new name.

Step 5 Create a new migration task with the same source cluster and new destination cluster.

Step 6 Start running the new task.

Version Validity

Install or migrate Cisco Prime Collaboration Deployment if the version validity is True for the Restricted or Unrestricted version of Cisco Prime Collaboration Deployment.

Table 14: Supported Tasks based on Version Validity

From	To	Version Validity
Export Restricted (K9)	Export Restricted (K9)	True

From	To	Version Validity
Export Restricted (K9)	Export Unrestricted (XU)	False
Export Unrestricted (XU)	Export Restricted (K9)	True
Export Unrestricted (XU)	Export Unrestricted (XU)	False