Security Guide for Cisco Unified Communications Manager, Release 11.5(1)SU1

First Published: August 22, 2016

Americas Headquarters
Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
http://www.cisco.com
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: http://www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

© 2016 Cisco Systems, Inc. All rights reserved.

CONTENTS

Preface

Preface xvii

Purpose xvii

Audience xviii

Organization xviii

Related Documentation xx

Conventions xx

Obtain Documentation, Support, and Security Guidelines xxi

Cisco Product Security Overview xxi

PART I

Security Basics 1

CHAPTER 1

Security Overview 3

Terms and Acronyms 3

System Requirements 7

Features List 8

Security Icons 9

Interactions and Restrictions 10

Interactions 10

Restrictions 11

Authentication and Encryption 12

Barge and Encryption 12

Wideband Codecs and Encryption 13

Media Resources and Encryption 13

Phone Support and Encryption 13

Phone Support and Encrypted Setup Files 14

Security Icons and Encryption 14

Cluster and Device Security Modes 14

Digest Authentication and Encryption 15
Packet Capturing and Encryption 15
Best Practices 15
Device Resets, Server and Cluster Reboots, and Service Restarts 16
Reset Devices, Reboot Servers and Clusters, and Restart Services 16
Media Encryption with Barge Setup 17
CTL Client, SSL, CAPF, and Security Token Installation 18
TLS and IPSec 18
Certificates 18
Phone Certificate Types 19
Server Certificate Types 20
Support for Certificates From External CAs 21
Authentication, Integrity, and Authorization 22
Image Authentication 22
Device Authentication 22
File Authentication 23
Signaling Authentication 23
Digest Authentication 24
Authorization 26
Encryption 27
Signaling Encryption 27
Media Encryption 27
Configuration File Encryption 29
NMAP Scan Operation 29
Set Up Authentication and Encryption 30
Where to Find More Information 32

CHAPTER 2 **Hypertext Transfer Protocol Over Secure Sockets Layer (HTTPS) 35**
HTTPS 35
HTTPS for Cisco Unified IP Phone Services 37
Cisco Unified IP Phones Supporting HTTPS 37
Features That Support HTTPS 37
Cisco Unified IP Phone Services Settings 38
Enterprise Parameter Settings for HTTPS Support 40
Save Certificate to Trusted Folder Using Internet Explorer 8 40

Copy Internet Explorer 8 Certificate to File 41
First-Time Authentication for Firefox with HTTPS 42
Save Certificate to Trusted Folder Using Firefox 3.x 43
Copy Firefox 3.x Certificate to File 43
First-Time Authentication for Safari with HTTPS 44
Save Certificate to Trusted Folder Using Safari 4.x 45
Copy Safari 4.x Certificate to File 46
Where to Find More Information About HTTPS Setup 46

CHAPTER 3 **Default Security Setup 47**
Default Security Features 47
Trust Verification Service 48
TVS Description 48
Initial Trust List 48
ITL Files 49
ITL File Contents 49
ITL and CTL File Interaction 49
Certificate Management Changes for ITLRecovery Certificate 50
Update ITL File for IP Phones 50
Autoregistration 50
Obtain Cisco Unified IP Phone Support List 50
ECDSA Support for Common Criteria for Certified Solutions 51
Certificate Manager ECDSA Support 51
SIP ECDSA Support 51
CAPF ECDSA Support 52
Entropy 53
HTTPS Support for Configuration Download 53
CTI Manager Support 54
Certificate Regeneration 54
Regenerate CAPF Certificate 54
Regenerate TVS Certificate 55
Regenerate TFTP Certificate 55
Tomcat Certificate Regeneration 55
System Back-Up Procedure After TFTP Certificate Regeneration 56

Refresh Upgrade From Cisco Unified Communications Manager Release 7.x to Release 8.6 Or Later 56
Roll Back Cluster to a Pre-8.0 Release 57
Switch Back to Release 8.6 or Later After Revert 58
Migrate IP Phones Between Clusters with Cisco Unified Communications Manager and ITL Files 59
Bulk Certificate Export 60
Generate Self-Signed Certificate 60
Self-signed Certificate Fields 61
Generate Certificate Signing Request 62
Certificate Signing Request Fields 63
Interactions and Restrictions 64
Perform Bulk Reset of ITL File 64
View the Validity of ITLRecovery Certificate 65
Enable Contact Search Authentication 66
Confirm Phone Support for Contact Search Authentication 66
Configure Contact Search Authentication 67
Configure Secure Directory Server for Contact Search 67

CHAPTER 4 Cisco CTL Client Setup 69
About Cisco CTL Client Setup 70
Addition of Second SAST Role in the CTL File for Recovery 70
Cluster Encryption Configuration Through CLI 71
Return to CTL Client for Cluster Encryption 72
Remove eToken Run Time Environment 3.00 for CTL Client 5.0 Plug-In 72
Cisco CTL Client Setup Tips 73
Set Up Cisco CTL Client 74
Activate Cisco CTL Provider Service 75
Cisco CAPF Service Activation 76
Set Up Ports for TLS Connection 76
Cisco CTL Client Installation 77
Install Cisco CTL Client for Windows 78
Upgrade Cisco CTL Client and Migrate Cisco CTL File 79
Set Up Cisco CTL Client 79
Update CTL File 83

Delete CTL File Entry 85
Update Cisco Unified Communications Manager Security Mode 85
Cisco CTL Client Settings 86
Verify Cisco Unified Communications Manager Security Mode 88
Set Up Smart Card Service to Started or Automatic 89
Security Token Password (eToken) Modification 89
Change eToken Password for Windows 90
Delete CTL File on Cisco Unified IP Phone 90
Determine Cisco CTL Client Version 91
Verify or Uninstall Cisco CTL Client 91

CHAPTER 5 Certificate Setup 93
About Certificate Setup 93
Find Certificate 93
Upload Certificate or Certificate Chain 94
Certificate Settings 94

PART II Security for Cisco Unified IP Phone and Cisco Voice-Messaging Ports 97

CHAPTER 6 Phone Security 99
Phone Security 99
Trusted Devices 100
Cisco Unified Communications Manager Administration 100
Device Called Trust Determination Criteria 101
Phone Model Support 101
Preferred Vendor SIP Phone Security Set Up 102
Set Up Preferred Vendor SIP Phone Security Profile Per-Device Certificates 102
Set Up Preferred Vendor SIP Phone Security Profile Shared Certificates 102
View Phone Security Settings 103
Set Up Phone Security 103
Where to Find More Information About Phone Security 104

CHAPTER 7 Phone Security Profile Setup 105
About Phone Security Profile Setup 105
Phone Security Profile Setup Tips 106

Find Phone Security Profile 106
Set Up Phone Security Profile 107
Phone Security Profile Settings 108
Apply Phone Security Profile 114
Synchronize Phone Security Profile with Phones 115
Delete Phone Security Profile 116
Find Phones with Phone Security Profiles 116
Where to Find More Information About Security Profiles 117

CHAPTER 8 Secure and Nonsecure Indication Tone Setup 119
Secure and Nonsecure Indication Tones 119
Protected Devices 119
Supported Devices 120
Secure and Nonsecure Indication Tones Important Information 120
Secure Tone Setup Requirements 121

CHAPTER 9 Encryption to Analog Endpoint Setup 123
Analog Phone Security Profile 123
Certificate Management for Secure Analog Phones 123

CHAPTER 10 Certificate Authority Proxy Function 125
About Certificate Authority Proxy Function 125
Cisco Unified IP Phone and CAPF Interaction 126
CAPF Interaction with IPv6 Addressing 127
CAPF System Interactions and Requirements 128
CAPF in Cisco Unified Serviceability Setup 129
Set Up CAPF 129
Activate Certificate Authority Proxy Function Service 130
Update CAPF Service Parameters 130
Generate and Import Third Party CA-Signed LSCs 131
Install, Upgrade, Troubleshoot, or Delete Certificates From Phone Using CAPF 132
CAPF Settings 132
Find Phones by LSC Status or Authentication String 134
Generate CAPF Report 135
Enter Phone Authentication String 136

Verify Phone Authentication String 137
Where to Find More Information About CAPF Setup 137

CHAPTER 11 Encrypted Phone Configuration File Setup 139
About Phone Configuration File Encryption 139
Manual Key Distribution 140
Symmetric Key Encryption with Phone Public Key 141
AES 256 Encryption Support for TLS and SIP SRTP 142
AES 256 and SHA-2 Support in TLS 142
AES 256 Support in SRTP SIP Call Signaling 143
Cisco Unified Communications Manager Requirements 144
Interactions and Restrictions 144
Phone Models Supporting Encrypted Configuration File 144
Encrypted Configuration File Setup Tips 145
Set up TFTP Encryption 146
Enable TFTP Encryption 147
Configure SHA-512 Encryption 147
Set Up Manual Key Distribution 148
Manual Key Distribution Settings 148
Enter Phone Symmetric Key 149
Verify LSC or MIC Certificate Installation 150
Update CTL File 150
Restart Services 151
Reset Phones 151
Disable Phone Configuration File Encryption 151
Exclude Digest Credentials From Phone Configuration File Download 152
Where to Find More Information About Encrypted Phone File Setup 152

CHAPTER 12 Digest Authentication for SIP Phones Setup 153
Set Up SIP Phone Digest Authentication 153
Set Up Digest Authentication Service Parameters 154
Set Up End User Digest Credentials 155
End User Digest Credential Settings 155
Set Up Digest User Using Phone 156
Where to Find More Information About Digest Authentication 156

CHAPTER 13 Phone Hardening 157

Gratuitous ARP Disable 157

Web Access Disable 157

PC Voice VLAN Access Disable 158

Setting Access Disable 158

PC Port Disable 158

Set Up Phone Hardening 158

Where to Find More Information About Phone Hardening 159

CHAPTER 14 Secure Conference Resources Setup 161

Secure Conference 161

Conference Bridge Requirements 162

Secure Conference Icons 163

Secure Conference Status 164

Ad Hoc Conference Lists 164

Meet-Me Conference with Minimum Security Level 165

Cisco Unified IP Phone Secure Conference and Icon Support 166

Secure Conference CTI Support 167

Secure Conference Over Trunks and Gateways 167

CDR Data 167

Interactions and Restrictions 167

Cisco Unified Communications Manager Interactions with Secure Conference 167

Cisco Unified Communications Manager Restrictions with Secure Conference 168

Securing Conference Resources Tips 169

Set Up Secure Conference Bridge 170

Set Up Secure Conference Bridge in Cisco Unified Communications Manager Administration 171

Set Up Minimum Security Level for Meet-Me Conferences 171

Set Up Packet Capturing for Secure Conference Bridge 172

Where to Find More Information About Secure Conferences Resources 172

CHAPTER 15 Voice-Messaging Ports Security Setup 175

Voice-Messaging Security 175

Voice-Messaging Security Setup Tips 176

Set Up Secure Voice-Messaging Port 177
Apply Security Profile to Single Voice-Messaging Port 177
Apply Security Profile Using Voice Mail Port Wizard 178
Where to Find More Information About Voice-messaging Security 179

CHAPTER 16 Call Secure Status Policy 181
About Call Secure Status Policy 181
Setup Call Secure Status Policy 182

CHAPTER 17 Secure Call Monitoring and Recording Setup 183
About Secure Call Monitoring and Recording Setup 183
Set Up Secure Call Monitoring and Recording 183

PART III Virtual Private Networks for Cisco Unified IP Phones 185

CHAPTER 18 VPN Client 187
VPN Client Overview 187
VPN Client Prerequisites 187
VPN Client Configuration Task Flow 187
Complete Cisco IOS Prerequisites 188
Configure Cisco IOS SSL VPN to Support IP Phones 189
Complete ASA Prerequisites for AnyConnect 191
Configure ASA for VPN Client on IP Phone 192
Upload VPN Concentrator Certificates 194
Configure VPN Gateway 195
VPN Gateway Fields for VPN Client 195
Configure VPN Group 196
VPN Group Fields for VPN Client 197
Configure VPN Profile 197
VPN Profile Fields for VPN Client 198
Configure VPN Feature Parameters 199
VPN Feature Parameters 199
Add VPN Details to Common Phone Profile 200

PART IV Cisco CTI, JTAPI, and TAPI Application Security 203

CHAPTER 19 Authentication and Encryption Setup for CTI, JTAPI, and TAPI 205

Authentication for CTI, JTAPI, and TAPI Applications 206

Encryption for CTI, JTAPI, and TAPI Applications 207

CAPF Functions for CTI, JTAPI, and TAPI Applications 208

CAPF System Interactions and Requirements for CTI, JTAPI, and TAPI Applications 209

Securing CTI, JTAPI, and TAPI 209

Add Application and End Users to Security-Related Users Groups 210

Certificate Authority Proxy Function Service Activation 212

Update CAPF Service Parameters 212

Find Application User or End User CAPF Profile 213

Set Up Application User or End User CAPF Profile 213

CAPF Settings 214

Delete Application User CAPF or End User CAPF Profile 216

Set Up JTAPI/TAPI Security-Related Service Parameters 217

View Certificate Operation Status for Application or End User 218

Where to Find More Information About CTI, JTAPI, and TAPI Authentication 218

CHAPTER 20 Certificate Revocation/Expiry Status Verification 219

Certificate Revocation/Expiry Status Verification 219

Verify Certificate Status 220

Support for Delegated Trust Model in OCSP Response 220

PART V Security for SRST References, Trunks, and Gateways 223

CHAPTER 21 Secure Survivable Remote Site Telephony (SRST) Reference 225

Securing SRST 225

Securing SRST Tips 226

Set Up Secure SRST 227

Set Up Secure SRST References 227

SRST Reference Security Settings 229

Delete Security From SRST Reference 230

SRST Certificate Deletion From Gateway 230

Where to Find More Information About Securing SRST 230

CHAPTER 22 **Encryption Setup for Gateways and Trunks** 231

Cisco IOS MGCP Gateway Encryption 231

H.323 Gateway and H.323/H.225/H.245 Trunk Encryption 232

SIP Trunk Encryption 233

Set Up Secure Gateways and Trunks 234

IPSec Setup Within Network Infrastructures 235

IPSec Setup Between Cisco Unified Communications Manager and Gateway or Trunks 235

Allow SRTP Using Cisco Unified Communications Manager Administration 236

Where to Find More Information About Gateway and Trunk Encryption 236

CHAPTER 23 **SIP Trunk Security Profile Setup** 239

About SIP Trunk Security Profile Setup 239

SIP Trunk Security Profile Setup Tips 239

Find SIP Trunk Security Profile 240

Set Up SIP Trunk Security Profile 241

SIP Trunk Security Profile Settings 241

Apply SIP Trunk Security Profile 246

Synchronize SIP Trunk Security Profile with SIP Trunks 247

Delete SIP Trunk Security Profile 248

Where to Find More Information About SIP Trunk Security Profiles 249

CHAPTER 24 **Digest Authentication Setup for SIP Trunks** 251

Set Up SIP Trunk Digest Authentication 251

Set Up Digest Authentication Enterprise Parameters 252

Set Up Digest Credentials 252

Application User Digest Credential Settings 253

Find SIP Realm 253

Configure SIP Realm 254

SIP Realm Settings 255

Delete SIP Realm 255

Where to Find More Information About SIP Trunk Digest Authentication 256

CHAPTER 25 **Cisco Unified Mobility Advantage Server Security Profile Setup** 257

About Cisco Unified Mobility Advantage Server Security Profile Setup 257

Find Cisco Unified Mobility Advantage Server Security Profile 258
Set Up Cisco Unified Mobility Advantage Server Security Profile 259
Cisco Unified Mobility Advantage Server Security Profile Settings 259
Cisco Unified Mobility Advantage Server Security Profile Client Application 260
Delete Cisco Unified Mobility Advantage Server Security Profile 261
Where to Find More Information About Cisco Unified Mobility Advantage Server Security Profile 261

CHAPTER 26 FIPS 140-2 Mode Setup 263
FIPS 140-2 Setup 263
Enable FIPS 140-2 Mode 264
Disable FIPS 140-2 Mode 265
Check FIPS 140-2 Mode Status 266
FIPS 140-2 Mode Server Reboot 266
Enhanced Security Mode 267
Configure Enhanced Security Mode 267
FIPS Mode Restrictions 268

CHAPTER 27 Cisco V.150 Minimum Essential Requirements (MER) 269
V.150 Overview 269
Prerequisites for Cisco V.150.1 MER 269
Configure V.150 Task Flow 270
Configure Media Resource Group Task Flow 271
Configure Media Resource Group for Non-V.150 Endpoints 271
Configure a Media Resource Group List for Non-V.150 Endpoints 272
Configure Media Resource Group for V.150 Endpoints 272
Configure a Media Resource Group List for V.150 Endpoints 272
Configure the Gateway for Cisco V.150 (MER) 273
Configure V.150 MGCP Gateway Port Interface 274
Configure V.150 SCCP Gateway Port Interface 274
Configure V.150 Support for Phone 275
Configure SIP Trunk Task Flow 276
Configure SIP Profile for V.150 276
Set the Clusterwide V.150 Filter 277
Add V.150 Filter to SIP Trunk Security Profile 278

Configure SIP Trunk for V.150 278

Preface

- Purpose, page xvii
- Audience, page xviii
- Organization, page xviii
- Related Documentation, page xx
- Conventions, page xx
- Obtain Documentation, Support, and Security Guidelines, page xxi
- Cisco Product Security Overview, page xxi

Purpose

Cisco Unified Communications Manager Security Guide helps system and phone administrators perform the following tasks:

- Configure authentication.
- Configure encryption.
- Configure digest authentication.
- Install server authentication certificate that is associated with HTTPS
- Configure the Cisco CTL Client.
- Configure security profiles.
- Configure Certificate Authority Proxy Function (CAPF) to install, upgrade, or delete locally significant certificates on supported Cisco Unified IP Phone models.
- Configure phone hardening.
- Configure Survivable Remote Site Telephony (SRST) references for security.
- Configure gateways and trunks for security.
- Configure FIPS (Federal Information Processing Standard) 140-2 mode.

Audience

This guide provides a reference and procedural guide for system and phone administrators who plan to configure call security features for Cisco Unified Communications Manager.

Organization

The following table lists the major sections of this guide:

Table 1: Guide Overview

Chapter	Description
Security Basics	
Security Overview, on page 3	Provides an overview of security terminology, system requirements, interactions and restrictions, installation requirements, and a configuration checklist; describes the different types of authentication and encryption.
Hypertext Transfer Protocol Over Secure Sockets Layer (HTTPS), on page 35	Provides an overview of HTTPS and describes how to install the server authentication certificate in the trusted folder.
Default Security Setup, on page 47	Provides information about the Security by Default feature, which provides automatic security features for Cisco Unified IP Phones.
Cisco CTL Client Setup, on page 69	Describes how to configure authentication by installing and configuring the Cisco CTL Client.
Certificate Setup, on page 93	Describes how to manage certificates in the Certificate Configuration window.
Security for Phones and Voice Mail Ports	
Phone Security, on page 99	Describes how Cisco Unified Communications Manager and the phone use security; provides a list of tasks that you perform to configure security for the phone.
Phone Security Profile Setup, on page 105	Describes how to configure the security profile and apply it to the phones in Cisco Unified Communications Manager Administration.
Secure and Nonsecure Indication Tone Setup, on page 119	Describes how to configure a phone to play a secure-indication tone.

Chapter	Description
Encryption to Analog Endpoint Setup, on page 123	Describes how to configure a secure SCCP connection to analog endpoints.
Certificate Authority Proxy Function, on page 125	Provides an overview of Certificate Authority Proxy Function and describes how to install, upgrade, delete, or troubleshoot locally significant certificates on supported phones.
Encrypted Phone Configuration File Setup, on page 139	Describes how to configure encrypted phone configuration files in Cisco Unified Communications Manager Administration.
Digest Authentication for SIP Phones Setup, on page 153	Describes how to configure digest authentication on the phone that is running SIP in Cisco Unified Communications Manager Administration.
Phone Hardening, on page 157	Describes how to tighten the security on the phone by using Cisco Unified Communications Manager Administration.
Secure Conference Resources Setup, on page 161	Describes how to configure media encryption for secure conferences.
Voice-Messaging Ports Security Setup, on page 175	Describes how to configure security for voice mail ports in Cisco Unified Communications Manager Administration.
Secure Call Monitoring and Recording Setup, on page 183	Describes how to configure secure call monitoring and recording.
Virtual Private Networks for Cisco IP Phones	
Security for CTI, JTAPI, and TAPI	
Authentication and Encryption Setup for CTI, JTAPI, and TAPI, on page 205	Describes how to configure the Application User CAPF Profile and End User CAPF Profiles in Cisco Unified Communications Manager Administration.
Security for SRST References, Gateways, Trunks, and Cisco Unified Mobility Advantage Servers	
Secure Survivable Remote Site Telephony (SRST) Reference, on page 225	Describes how to configure the SRST reference for security in Cisco Unified Communications Manager Administration.
Encryption Setup for Gateways and Trunks, on page 231	Describes how Cisco Unified Communications Manager communicates with a secure gateway or trunk; describes IPSec recommendations and considerations.

Chapter	Description
SIP Trunk Security Profile Setup, on page 239	Describes how to configure and apply the SIP trunk security profile in Cisco Unified Communications Manager Administration.
Digest Authentication Setup for SIP Trunks, on page 251	Describes how to configure digest authentication for the SIP trunk in Cisco Unified Communications Manager Administration.
Cisco Unified Mobility Advantage Server Security Profile Setup, on page 257	Describes how to configure a Cisco Unified Mobility Advantage server security profile in Cisco Unified Communications Manager Administration.
FIPS 140-2 Mode Setup, on page 263	Describes how to configure FIPS (Federal Information Processing Standard) 140-2 mode in Cisco Unified Communications Manager Administration.

Related Documentation

Each chapter contains a list of related documentation for the chapter topic.

Refer to the following documents for further information about related Cisco IP telephony applications and products:

- *Cisco Unified IP Phone Administration Guide for Cisco Unified Communications Manager*
- *Media and Signaling Authentication and Encryption Feature for Cisco IOS MGCP Gateways*
- *Cisco Unified Communications Manager Integration Guide for Cisco Unity*
- *Cisco Unified Communications Manager Integration Guide for Cisco Unity Connection*
- Cisco Unified Survivable Remote Site Telephony (SRST) administration documentation that supports the SRST-enabled gateway
- The firmware release notes that support your phone model

Conventions

Notes use the following conventions:

Note Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the publication.

Tips use the following conventions:

Tip Means *the following are useful tips*.

Cautions use the following conventions:

Caution Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

Obtain Documentation, Support, and Security Guidelines

For information on obtaining documentation, obtaining support, providing documentation feedback, security guidelines, and also recommended aliases and general Cisco documents, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html

Cisco Product Security Overview

This product contains cryptographic features and is subject to United States and local country laws governing import, export, transfer and use. Delivery of Cisco cryptographic products does not imply third-party authority to import, export, distribute or use encryption. Importers, exporters, distributors and users are responsible for compliance with U.S. and local country laws. By using this product you agree to comply with applicable laws and regulations. If you are unable to comply with U.S. and local laws, return this product immediately.

Further information regarding U.S. export regulations may be found at http://www.access.gpo.gov/bis/ear/ear_data.html.

PART I

Security Basics

- Security Overview, page 3
- Hypertext Transfer Protocol Over Secure Sockets Layer (HTTPS), page 35
- Default Security Setup, page 47
- Cisco CTL Client Setup, page 69
- Certificate Setup, page 93

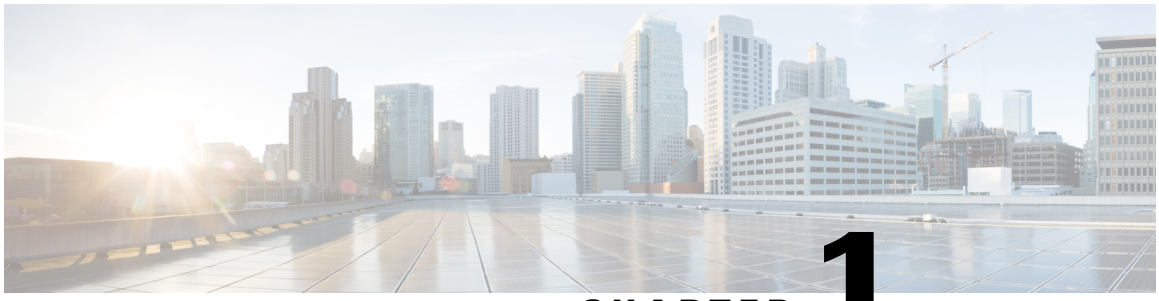

CHAPTER 1

Security Overview

Implementing security mechanisms in the Cisco Unified Communications Manager system prevents identity theft of the phones and the Cisco Unified Communications Manager server, data tampering, and call-signaling/media-stream tampering.

The Cisco IP telephony network establishes and maintains authenticated communication streams, digitally signs files before transferring the file to the phone, and encrypts media streams and call signaling between Cisco Unified IP Phones.

- Terms and Acronyms, page 3
- System Requirements, page 7
- Features List, page 8
- Security Icons, page 9
- Interactions and Restrictions, page 10
- Best Practices, page 15
- CTL Client, SSL, CAPF, and Security Token Installation, page 18
- TLS and IPSec, page 18
- Certificates, page 18
- Authentication, Integrity, and Authorization, page 22
- Encryption, page 27
- NMAP Scan Operation, page 29
- Set Up Authentication and Encryption, page 30
- Where to Find More Information, page 32

Terms and Acronyms

The definitions in the following table apply when you configure authentication, encryption, and other security features for your Cisco IP telephony network:

Table 2: Terminology

Term	Definition
Access Control List (ACL)	List that defines rights and permissions to access system functions and resources. See Method List.
Authentication	Process that verifies the identity of the communicating entity.
Authorization	Process that specifies whether an authenticated user, service, or application has the necessary permissions to perform a requested action; in Cisco Unified Communications Manager, the security process that restricts certain trunk-side SIP requests to authorized users.
Authorization Header	A SIP user agent response to a challenge.
Certificate	A message that contains the certificate holder name, the public key, and the digital signature of the certificate authority that is issuing the certificate.
Certificate Authority (CA)	Trusted entity that issues certificates: Cisco or a third-party entity.
Certificate Authority Proxy Function (CAPF)	Process by which supported devices can request locally significant certificates by using Cisco Unified Communications Manager Administration.
Certificate Trust List (CTL)	A file, which is created either with the CLI command set **utils cli** or with the CTL Client and signed by the Cisco Site Administrator Security Token (security token), that contains a list of certificates for servers that the phone is to trust.
Challenge	In digest authentication, a request to a SIP user agent to authenticate its identity.
Cisco Site Administrator Security Token (security token; etoken)	A portable hardware security module that contains a private key and an X.509v3 certificate that the Cisco Certificate Authority signs; used for file authentication, it may be used to sign the CTL file. Hardware security tokens are required for only the CTL Client. The CLI command set **utils ctl** does not require hardware security tokens.
Device Authentication	Process that validates the identity of the device and ensures that the entity is what it claims to be before a connection is made.
Digest Authentication	A form of device authentication where an MD5 hash of a shared password (among other things) gets used to establish the identity of a SIP user agent.
Digest User	User name that is included in an authorization request that phones that are running SIP or SIP trunks send.

Term	Definition
Digital Signature	Value that is generated by hashing the message and then encrypting the message with the private key of the signer; the recipient decrypts the message and the hash with the signer public key, produces another hash with the same hash function, then compares the two hashes to ensure that the messages match and the content is intact.
DSP	Digital signaling processor.
DSP Farm	A network resource for IP telephony conferencing that is provided by DSPs on a H.323 or MGCP gateway.
Encryption	Process of translating data into ciphertext, which ensures the confidentiality of the information and that only the intended recipient can read the data. Requires an encryption algorithm and encryption key.
File Authentication	Process that validates digitally signed files that the phone downloads. The phone validates the signature to make sure that file tampering did not occur after the file creation.
H.323	An internet standard that defines a common set of codecs, call setup and negotiating procedures, and basic data transport methods.
hash	A number, usually in hexadecimal, that is generated from a string of text by using a hash function, which creates a small digital “fingerprint” for the data.
Hypertext Transfer Protocol over Secure Sockets Layer (HTTPS)	An IETF-defined protocol that ensures (at a minimum) the identity of the HTTPS server; by using encryption, ensures the confidentiality of the information that is exchanged between the Tomcat server and the browser client.
Image Authentication	Process whereby a phone validates the integrity and source of a binary image prior to loading it on the phone.
Integrity	Process that ensures that data tampering did not occur between entities.
IPSec	Transport that provides secure H.225, H.245, and RAS signaling channels for end-to-end security.
Locally Significant Certificate (LSC)	A digital X.509v3 certificate that CAPF issues; installed on the phone or JTAPI/TAPI/CTI application.
Manufacture Installed Certificate (MIC)	A digital X.509v3 certificate that is signed by the Cisco Certificate Authority and installed in supported phones by Cisco Manufacturing; used as the authentication mechanism to CAPF when LSCs are installed in phones.
Man-in-the-Middle Attacks	Process that allows an attacker to observe and modify the information flow between Cisco Unified Communications Manager and the phone.

Term	Definition
Multipoint Control Unit (MCU)	A flexible system to connect multiple H.323 endpoints and allow multiple users to participate in IP-based video conferences.
MD5	A hash function that is used with encryption.
Media Encryption	Process whereby the confidentiality of the media is protected with cryptographic procedures. Media encryption uses Secure Real-Time Protocol (SRTP) as defined in IETF RFC 3711.
Message/Data Tampering	Event when an attacker attempts to alter messages in transit, including ending a call prematurely.
Method List	Tool to restrict certain categories of messages that can come in on a SIP trunk during the authorization process; defines which SIP nonINVITE methods are allowed for a trunk-side application or device. Also method ACL.
Mixed Mode	Cisco Unified Communications Manager security mode that you configure to allow devices with secure/nonsecure profiles and RTP/ SRTP media to connect to Cisco Unified Communications Manager.
Nonce	A unique, random number that the server generates for each digest authentication request; used to generate an MD5 hash.
Nonsecure Mode	Cisco Unified Communications Manager security mode that you configure to allow devices with nonsecure profiles and RTP media to connect to Cisco Unified Communications Manager.
Nonsecure Call	Call in which at least one device is not authenticated or encrypted.
Nonsecure Device	Device that uses UDP or TCP signaling and nonsecure media.
PKI	Public key infrastructure, which comprises the set of elements that is needed for public key encryption, including secure public key distribution, certificates, and certificate authorities.
Public / Private key	Keys that are used in encryption. Public keys are widely available, but private keys are held by their respective owners. Asymmetrical encryption combines both types.
Replay Attack	Event when an attacker captures information that identifies a phone or proxy server and replays information while pretending to be the actual device; for example, by impersonating the proxy server private key.
RTP	Real-Time Transport Protocol
Simple Certificate Enrollment Protocol (SCEP)	A protocol that is used to communicate with a certificate authority that issues X.509 certificates.

Term	Definition
Secure Call	Call in which all devices are authenticated, signaling is encrypted, and the media (voice stream) is encrypted.
Signaling Authentication	TLS process that validates that no tampering occurred to signaling packets during transmission.
Signaling Encryption	Process that uses cryptographic methods to protect the confidentiality of all signaling messages that are sent between the device and the Cisco Unified Communications Manager server.
SIP Realm	A string (name) that Cisco Unified Communications Manager uses to respond to a challenge.
SRTP	Secure Real-Time Transport Protocol that secures voice conversation in the network and provides protection against replay attacks.
SSL	A cryptographic protocol that secures data communications such as e-mail on the Internet; equivalent to TLS, its successor.
Transport Layer Security (TLS)	A cryptographic protocol that secures data communications such as e-mail on the Internet; functionally equivalent to SSL.
Trust List	Certificate list without digital signatures.
Trust Store	A repository of X.509 certificates that an application, such as Cisco Unified Communications Manager, explicitly trusts.
X.509	An ITU-T cryptographic standard for importing PKI certificates, which includes certificate formats.

System Requirements

The following system requirements exist for authentication or encryption:

- The Administrator password can differ on every server in a cluster.
- The username and password that are used at the Cisco CTL client (to log in to the Cisco Unified Communications Manager server) must match the Cisco Unified Communications Manager Administration username and password (the username and password that are used to log in to Cisco Unified Communications Manager Administration).
- Before you configure voice mail ports for security, verify that you installed a version of Cisco Unity or Cisco Unity Connection system that supports this Cisco Unified Communications Manager release.

Related Topics

CAPF System Interactions and Requirements, on page 128

Features List

Cisco Unified Communications Manager system uses a multilayered approach to call security, from the transport layer to the application layer.

Transport layer security includes TLS and IPSec for signaling authentication and encryption to control and prevent access to the voice domain. SRTP adds media authentication and encryption to secure privacy and confidentiality for voice conversation and other media.

The following table provides a summary of the authentication and encryption features that Cisco Unified Communications Manager can implement during an SCCP call session, depending on the features that are supported and configured.

Table 3: SCCP Call Security Features

Security Feature	Line Side	Trunk Side
Transport/Connection/Integrity	Secure TLS port	IPSec associations
Device Authentication	TLS certificate exchange w/Cisco Unified Communications Manager and/or CAPF	IPSec certificate exchange or preshared key
Signaling Authentication/Encryption	TLS Mode: authenticated or encrypted	IPSec [authentication header, encryption (ESP), or both]
Media Encryption	SRTP	SRTP
Authorization	Presence requests	Presence requests
Note Supported features on a device vary by device type.		

The following table provides a summary of the authentication and encryption features that Cisco Unified Communications Manager can implement during a SIP call session, depending on the features that are supported and configured.

Table 4: SIP Call Security Features

Security Feature	Line Side	Trunk Side
Transport/Connection/Integrity	Secure TLS port	Secure TLS port
Device Authentication	TLS certificate exchange w/Cisco Unified Communications Manager and/or CAPF	IPSec certificate exchange or preshared key
Digest Authentication	Each SIP device uses unique digest user credentials.	SIP trunk user agents use unique digest credentials.

Security Feature	Line Side	Trunk Side
Signaling Authentication/Encryption	TLS Mode: authenticated or encrypted (except Cisco Unified IP Phones 7940G/7960G).	TLS Mode: authenticated or encrypted mode
Media Encryption	SRTP	SRTP
Authorization	Presence requests	Presence requests Method list
Note Supported features on a device vary by device type.		

Security Icons

Cisco Unified Communications Manager provides security status for a call, according to security levels that are configured for the Cisco Unified Communications Manager server(s) and devices that are participating in the call.

Phones that support security icons display the call security level.

- The phone displays a shield icon for calls with a signaling security level of authenticated. A shield identifies a secured connection between Cisco IP devices, which means that the devices have authenticated or encrypted signaling.
- The phone displays a lock icon for calls with encrypted media, which means that the devices are using encrypted signaling and encrypted media.

Note Some phone models display only the lock icon.

The security status of a call can change for point-to-point, intracluster, intercluster, and multihop calls. SCCP line, SIP line, and H.323 signaling support notification of call security status changes to participating endpoints. Refer to topics related to security icons and encryption for restrictions that are associated with security icons.

The audio and video portions of the call provide basis for the call security status. Consider the call secure only if both the audio and video portions are secure. The following table describes the rules that determine whether a security icon displays, and which icon appears.

Table 5: Security Icon Display Rules

Media and Device Types In the Call	Phones That Display Both Shield and Lock Icons	Phones That Display Only the Lock Icon
Secure audio only	Lock	Lock
Secure audio with unsecure video	Shield	None

Media and Device Types In the Call	Phones That Display Both Shield and Lock Icons	Phones That Display Only the Lock Icon
Secure audio with secure video	Lock	Lock
Authenticated device with nonsecure audio only	Shield	None
Authenticated device with nonsecure audio and video	Shield	None
Unauthenticated device with nonsecure audio only	None	None
Unauthenticated device with nonsecure audio and video	None	None

Note The “Override BFCP Application Encryption Status When Designating Call Security Status” service parameter displays the lock icon when parameter value is True and audio is secure. This condition ignores the security statuses of all other media channels. The default parameter value is False.

For conference and barge calls, the security icon displays the security status for the conference.

Related Topics

Secure Conference Icons, on page 163

Interactions and Restrictions

This section contains interaction and restriction information.

See the related topics for information about interactions and restrictions that are associated with the secure conference feature.

Related Topics

Interactions, on page 10
Restrictions, on page 11

Interactions

This section describes how Cisco security features interact with Cisco Unified Communications Manager applications.

Presence

To add presence group authorization for phones and trunks that are running SIP, configure presence groups to restrict presence requests to authorized users.

Note

Refer to the *Feature Configuration Guide for Cisco Unified Communications Manager* for more information about configuring presence groups.

To allow presence requests on SIP trunks, configure Cisco Unified Communications Manager to accept presence requests on the SIP trunk and, if required, configure Cisco Unified Communications Manager to accept and authenticate incoming presence requests from the remote device or application.

SIP Trunk

To use SIP-initiated transfer features and other advanced transfer-related features on SIP trunks, such as Web Transfer and Click to Dial, configure the SIP Trunk Security Profile to accept incoming Out of Dialog REFER requests.

To provide support for event reporting (such as MWI support) and to reduce per-call MTP allocations (from a voice-messaging server, for example), configure the SIP Trunk Security Profile to accept Unsolicited Notification SIP requests.

To allow Cisco Unified Communications Manager to transfer an external call on a SIP trunk to an external device or party (in attended transfer, for example), configure the SIP Trunk Security Profile to accept SIP requests with replaces header in REFERS and INVITES.

Extension Mobility

For extension mobility, the SIP digest credentials change when a user logs in and out because different credentials are configured for different end users.

CTI

Cisco Unified Communications Manager Assistant supports a secure connection to CTI (transport layer security connection) when you configure a CAPF profile (one for each Cisco Unified Communications Manager Assistant node).

When multiple instances of a CTI/JTAPI/TAPI application are running, CTI TLS support requires you to configure a unique instanceID (IID) for every application instance to secure signaling and media communication streams between CTI Manager and JTAPI/TSP/CTI applications.

When the device security mode equals authenticated or encrypted, the Cisco Unity-CM TSP connects to Cisco Unified Communications Manager through the Cisco Unified Communications Manager TLS port. When the security mode equals nonsecure, the Cisco Unity TSP connects to Cisco Unified Communications Manager through the CTI Manager port.

Restrictions

This section describes restrictions that apply to Cisco security features.

Related Topics

Authentication and Encryption, on page 12
Barge and Encryption, on page 12
Cluster and Device Security Modes, on page 14
Digest Authentication and Encryption, on page 15

Media Resources and Encryption, on page 13
Packet Capturing and Encryption, on page 15
Phone Support and Encryption, on page 13
Phone Support and Encrypted Setup Files, on page 14
Security Icons, on page 9
Wideband Codecs and Encryption, on page 13

Authentication and Encryption

Consider the following restrictions before you install and configure authentication and encryption features:

- Auto-registration does not work when you configure mixed mode.
- You cannot implement signaling or media encryption without device authentication. To install device authentication, enable the Cisco CTL Provider service and install and configure the Cisco CTL client.
- Cisco does not support Network Address Translation (NAT) with Cisco Unified Communications Manager if you configure mixed mode.

  You can enable UDP in the firewall to allow media stream firewall traversal. Enabling UDP allows the media source on the trusted side of the firewall to open a bidirectional media flow through the firewall by sending the media packet through the firewall.

Tip Hardware DSP resources cannot initiate this type of connection and, therefore, must exist outside the firewall.

Signaling encryption does not support NAT traversal. Instead of using NAT, consider using LAN extension VPNs.

Barge and Encryption

The following restrictions apply to barge and encryption:

- Due to bandwidth requirements, Cisco Unified IP Phones 7940G and 7960G do not support barge from an encrypted device on an active encrypted call. The barge attempt will fail. A tone plays on the initiator phone to indicate that the barge failed.
- Encrypted Cisco Unified IP Phones that are running release 8.2 or earlier can only barge an active call as authenticated or nonsecure participants.
- If a caller barges a secure SCCP call, the system uses an internal tone-playing mechanism at the target device, and the status remains secure.
- If a caller barges a secure SIP call, the system provides tone-on-hold, and Cisco Unified Communications Manager classifies the call as nonsecure during the tone.

Note Nonsecure or authenticated Cisco Unified IP Phones that are running release 8.3 or later can barge encrypted calls. The security icon indicates the security status for the conference.

Related Topics

Secure Conference Icons, on page 163

Wideband Codecs and Encryption

The following information applies for Cisco Unified IP Phones 7960G or 7940G that are configured for encryption and associated with a wideband codec region. This only applies to Cisco Unified IP Phones 7960G or 7940G that are configured for TLS/SRTP.

To establish an encrypted call, Cisco Unified Communications Manager ignores the wideband codec and chooses another supported codec from the codec list that the phone presents. If the other devices in the call are not configured for encryption, Cisco Unified Communications Manager may establish the authenticated/nonsecure call by using the wideband codec.

Media Resources and Encryption

Cisco Unified Communications Manager supports authenticated and encrypted calls between secure Cisco Unified IP Phones (SCCP or SIP), secure CTI devices/route points, secure Cisco MGCP IOS gateways, secure SIP trunks, secure H.323 gateways, secure conference bridges, and secure H.323/H.245/H.225 trunks where no media resources are used. Cisco Unified Communications Manager does not provide media encryption in the following cases:

- Calls that involve transcoders
- Call that involve media termination points
- Calls that involve music on hold (except for secure conference bridge calls)

Phone Support and Encryption

The following Cisco Unified IP Phones that are running SCCP support encryption: 6901, 6911, 6921, 6941, 6945, 6961, 7906G, 7911G, 7921G, 7925G, 7925G-EX, 7926G, 7931G, 7940G, 7941G, 7941G-GE, 7942G, 7945G, 7960G, 7961G, 7961G-GE, 7962G, 7965G, 7970G, 7971G, 7971G-GE, 7975G, 8941, and 8945. The following Cisco Unified IP Phones that are running SIP support encryption: 6901, 6911, 6921, 6941, 6945, 6961, 7906G, 7911G, 7941G, 7941G-GE, 7942G, 7961G, 7961G-GE,7962G, 7965G, 7970G, 7971G, 7971G-GE, 7975G, 8941, 8945, 8961, 9971, and 9971.
For more information, see the *System Configuration Guide for Cisco Unified Communications Manager* that support encryption and this version of Cisco Unified Communications Manager.

Warning To obtain the full benefit of security features, Cisco recommends that you upgrade Cisco Unified IP Phones to release 8.3, which supports the encryption features in this Cisco Unified Communications Manager release. Encrypted phones that run earlier releases do not fully support these new features. These phones can participate in secure conference and barge calls only as authenticated or nonsecure participants.

Cisco Unified IP Phones that are running release 8.3 with an earlier release of Cisco Unified Communications Manager will display their connection security status, not the conference security status, during a conference or barge call, and do not support secure conference features like conference list.

Phone Support and Encrypted Setup Files

Not all phones support encrypted configuration files. Some phones support encrypted configuration files but do not validate file signatures. Except for Cisco Unified IP Phones 7905G and 7912G, all phones that support encrypted configuration files require firmware that is compatible with Cisco Unified Communications Manager Release 5.0 or later to receive full encrypted configuration files. Cisco Unified IP Phones 7905G and 7912G use existing security mechanisms and do not require new firmware for this feature.

Related Topics

Phone Model Support, on page 101

Security Icons and Encryption

The following restrictions apply to security icons and encryption:

- The encryption lock icon may not display on the phone when you perform tasks such as transferring or putting a call on hold; the status changes from encrypted to nonsecure if the media streams that are associated with these tasks, such as MOH, are not encrypted.
- Cisco Unified Communications Manager does not display the shield icon for calls that are transiting H.323 trunks.
- For calls that involve the PSTN, the security icon shows the security status for only the IP domain portion of the call.
- A SIP trunk will report encrypted or not-authenticated security status when using the TLS transport type. When SRTP is negotiated, the security status will get encrypted; otherwise it will remain not-authenticated. This will allow Cisco Unified Communications Manager call control to determine the overall security level of a call that involves a SIP trunk.

  A SIP trunk will report authenticated status over the trunk if a party is authenticated during events such as a meet-me conference or a cbarge. (The SIP trunk will still be using TLS/SRTP.)
- For Secure Monitoring and Recording, a SIP trunk will utilize the existing Call Info header mechanism for transmitting the security icon status over the SIP trunk, as currently used by the SIP line. This enables the SIP trunk peer to monitor the overall security status of a call.
- Some phone models display only the lock icon, not the shield icon.

Related Topics

Secure Conference Icons, on page 163

Cluster and Device Security Modes

Note Device security mode configures the security capability for a Cisco Unified IP Phone or SIP trunk. Cluster security mode configures the security capability for your standalone server or a cluster.

When the cluster security mode equals nonsecure, the device security mode equals nonsecure in the phone configuration file. In these circumstances, the phone makes nonsecure connections with the SRST-enabled gateway and Cisco Unified Communications Manager, even if the device security mode specifies authenticated or encrypted. Security-related settings other than device security mode, such as the SRST Allowed check box,

also get ignored. The security configuration does not get deleted in Cisco Unified Communications Manager Administration, but security does not get provided.

The phone attempts a secure connection to the SRST-enabled gateway only when the cluster security mode equals mixed, the device security mode in the phone configuration file is set to authenticated or encrypted, the SRST Allowed? check box is checked in the Trunk Configuration window, and a valid SRST certificate exists in the phone configuration file.

Digest Authentication and Encryption

Cisco Unified Communications Manager defines a SIP call as having two or more separate call legs. For a standard, two-party call between two SIP devices, two separate call legs exist: one leg between the originating SIP user agent and Cisco Unified Communications Manager (the originating call leg) and the other leg between Cisco Unified Communications Manager and destination SIP user agent (the terminating call leg). Each call leg represents a separate dialog. Because digest authentication is a point-to-point process, digest authentication on each call leg stays independent of the other call legs. SRTP capabilities can change for each call leg, depending on the capabilities that are negotiated between the user agents.

Packet Capturing and Encryption

When SRTP encryption is implemented, third-party sniffing tools do not work. Authorized administrators with appropriate authentication can initiate packet capturing with a configuration change in Cisco Unified Communications Manager Administration (for devices that support packet capturing). See the *Troubleshooting Guide for Cisco Unified Communications Manager* that supports this release for information about configuring packet capturing in Cisco Unified Communications Manager.

Best Practices

Cisco strongly recommends the following best practices:

- Always perform installation and configuration tasks in a secure lab environment before you deploy to a wide-scale network.
- Use IPSec for gateways and other application servers at remote locations.

Warning Failure to use IPSec in these instances results in session encryption keys getting transmitted in the clear.

- To prevent toll fraud, configure conference enhancements that are described in the *System Configuration Guide for Cisco Unified Communications Manager* . Likewise, you can perform configuration tasks to restrict external transferring of calls. For information on how to perform this task, refer to the *Feature Configuration Guide for Cisco Unified Communications Manager* .

Related Topics

Media Encryption with Barge Setup, on page 17
Reset Devices, Reboot Servers and Clusters, and Restart Services, on page 16

Device Resets, Server and Cluster Reboots, and Service Restarts

This section describes when you need to reset the devices, to reboot the server/cluster, or to restart services in Cisco Unified Serviceability.

Consider the following guidelines:

- Reset a single device after you apply a different security profile in Cisco Unified Communications Manager Administration.
- Reset the devices if you perform phone-hardening tasks.
- Reset the devices after you change the cluster security mode from mixed to nonsecure mode (or vice versa).
- Restart all devices after you configure the Cisco CTL client or update the CTL file.
- Reset the devices after you update CAPF enterprise parameters.
- Restart the Cisco CTL Provider service after you update ports for the TLS connection.
- Restart the Cisco CallManager service after you change the cluster security mode from mixed to nonsecure mode (or vice versa).
- Restart the Cisco Certificate Authority Proxy Function service after you update associated CAPF service parameters.
- Restart all Cisco CallManager and Cisco TFTP services in Cisco Unified Serviceability after you configure the Cisco CTL Client or update the CTL file. Perform this task on all servers that run these services in the cluster.
- Restart all Cisco CallManager and Cisco TFTP services after you start or stop the CTL Provider service.
- Reset dependent devices after you configure secure SRST references.
- If you set the Smart Card service to Started and Automatic, reboot the PC where you installed the Cisco CTL client.
- Restart the Cisco IP Manager Assistant service, Cisco Web Dialer Web Service, and the Cisco Extended Functions service after you configure the security-related service parameters that are associated with the Application User CAPF Profile.

To restart the Cisco CallManager service, refer to the Cisco Unified Serviceability Administration Guide.

To reset a single device after you update the phone configuration, see topics related to applying the phone security profile.

Related Topics

Apply Phone Security Profile, on page 114

Reset Devices, Reboot Servers and Clusters, and Restart Services

This section describes when you need to reset the devices, to restart services in Cisco Unified Serviceability, or to reboot the server/cluster.

To reset all devices in a cluster, perform the following procedure:

Before You Begin

Refer to the guidelines for device resets, server and cluster reboots, and service restarts before proceeding.

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **System** > **Cisco Unified CM**.
The Find/List window displays.

Step 2 Click **Find**.
A list of configured Cisco Unified Communications Manager servers displays.

Step 3 Choose the Cisco Unified Communications Manager on which you want to reset devices.

Step 4 Click **Reset**.

Step 5 Perform Step 2, on page 17 and Step 4, on page 17 for each server in the cluster.

Related Topics

Device Resets, Server and Cluster Reboots, and Service Restarts, on page 16

Media Encryption with Barge Setup

When you attempt to configure barge for Cisco Unified IP Phones 7960G and 7940G that are configured for encryption, the following message displays:

Attention If you configure encryption for Cisco Unified IP Phone models 7960 and 7940, those encrypted devices cannot accept a barge request when they are participating in an encrypted call. When the call is encrypted, the barge attempt fails.

The message displays when you perform the following tasks in Cisco Unified Communications Manager Administration:

- You update the Cluster Security Mode parameter in the CTL client.
- You update the Builtin Bridge Enable parameter in the Service Parameter window.

This message does not display in the Phone Configuration window when an encrypted security profile is configured for Cisco Unified IP Phones 7960G and 7940G and you choose **Default**for the Built In Bridge setting (or the default setting equals Default); however, the same restriction applies.

Tip For changes to take effect, you must reset the dependent Cisco IP devices.

For more information, see topics related to Barge and encryption.

Related Topics

Barge and Encryption, on page 12

CTL Client, SSL, CAPF, and Security Token Installation

To obtain authentication support, you can use one of the following options:

1. Install the Cisco CTL client, from Cisco Unified Communications Manager Administration. For the Cisco CTL client option, you must obtain at least two security tokens.
2. Use the CLI command set **utils ctl**, which does not require security tokens. For more information about this option, see the *Command Line Interface Guide for Cisco Unified Communications Solutions*.

Media and signaling encryption capabilities automatically install when you install Cisco Unified Communications Manager.

Cisco Unified Communications Manager automatically installs Secure Sockets Layer (SSL) for Cisco Unified Communications Manager virtual directories.

Cisco Certificate Authority Proxy Function (CAPF) installs automatically as a part of Cisco Unified Communications Manager Administration.

TLS and IPSec

Transport security handles the coding, packing, and sending of data. Cisco Unified Communications Manager provides the following secure transport protocols:

- Transport Layer Security (TLS) provides secure and reliable data transfer between two systems or devices, by using secure ports and certificate exchange. TLS secures and controls connections among Cisco Unified Communications Manager-controlled systems, devices, and processes to prevent access to the voice domain. Cisco Unified Communications Manager uses TLS to secure SCCP calls to phones that are running SCCP and SIP calls to phones or trunks that are running SIP.
- IP Security (IPSec) provides secure and reliable data transfer between Cisco Unified Communications Manager and gateways. IPSec implements signaling authentication and encryption to Cisco IOS MGCP and H.323 gateways.

You can add secure RTP (SRTP) to TLS and IPSec transport services for the next level of security on devices that support SRTP. SRTP authenticates and encrypts the media stream (voice packets) to ensure that voice conversations that originate at or terminate to Cisco Unified IP Phones and either TDM or analog voice gateway ports are protected from eavesdroppers who may have gained access to the voice domain. SRTP adds protection against replay attacks.

Cisco Unified Communications Manager 9.0 provides TLS/SRTP support for dual-mode smart phones. TLS establishes the same secure and reliable data transfer mode for mobile phones as for IP phones, and SRTP encrypts voice conversations.

Certificates

Certificates secure client and server identities. After root certificates are installed, certificates get added to the root trust stores to secure connections between users and hosts, including devices and application users.

Administrators can view the fingerprint of server certificates, regenerate self-signed certificates, and delete trust certificates at the Cisco Unified Communications Operating System GUI.

Administrators can also regenerate and view self-signed certificates at the command line interface (CLI).

For information on updating the CallManager trust store and managing certificates, refer to the *Administration Guide for Cisco Unified Communications Manager* that supports this Cisco Unified Communications Manager release.

Note Cisco Unified Communications Manager supports only PEM (.pem) and DER (.der) formatted certificates.

Related Topics

Phone Certificate Types, on page 19
Server Certificate Types, on page 20
Support for Certificates From External CAs, on page 21

Phone Certificate Types

Cisco uses the following certificate types in phones:

- Manufacture-installed certificate (MIC)—Cisco Manufacturing automatically installs this certificate in supported phone models. Manufacturer-installed certificates authenticate to Cisco Certificate Authority Proxy Function (CAPF) for LSC installation. You cannot overwrite or delete the manufacture-installed certificate.
- Locally significant certificate (LSC)—This certificate type installs on supported phones after you perform the necessary tasks that are associated with the Cisco Certificate Authority Proxy Function (CAPF). The LSC secures the connection between Cisco Unified Communications Manager and the phone after you configure the device security mode for authentication or encryption.

Tip Cisco recommends that you use manufacturer-installed certificates (MICs) for LSC installation only. Cisco supports LSCs to authenticate the TLS connection with Cisco Unified Communications Manager. Because MIC root certificates can be compromised, customers who configure phones to use MICs for TLS authentication or for any other purpose do so at their own risk. Cisco assumes no liability if MICs are compromised.

Cisco recommends upgrading Cisco Unified IP Phones 6900 series, 7900 series, 8900 series, and 9900 series to use LSCs for TLS connection to Cisco Unified Communications Manager and removing MIC root certificates from the CallManager trust store to avoid possible future compatibility issues. Be aware that some phone models that use MICs for TLS connection to Cisco Unified Communications Manager may not be able to register.

Administrators should remove the following MIC root certificates from the CallManager trust store:

CAP-RTP-001

CAP-RTP-002

Cisco_Manufacturing_CA

Cisco_Root_CA_2048

MIC root certificates that stay in the CAPF trust store get used for certificate upgrades. For information on updating the CallManager trust store and managing certificates, refer to the *Administration Guide for Cisco Unified Communications Manager* that supports this release.

Related Topics

Set Up Authentication and Encryption, on page 30

Server Certificate Types

Cisco uses the following self-signed (own) certificate types in Cisco Unified Communications Manager servers:

- HTTPS certificate (Tomcat)—A self-signed root certificate gets generated during the Cisco Unified Communications Manager installation for the HTTPS server. Cisco Unity Connection uses this certificate for SMTP and IMAP services.
- CallManager certificate—A self-signed root certificate automatically installs when you install Cisco Unified Communications Manager on the Cisco Unified Communications Manager server.
- CAPF certificate—The system copies this root certificate, which gets generated during Cisco Unified Communications Manager installation, to your server or to all servers in the cluster after you complete the Cisco CTL client configuration.
- IPSec certificate (ipsec_cert)—A self-signed root certificate gets generated during Cisco Unified Communications Manager installation for IPSec connections with MGCP and H.323 gateways.
- SRST-enabled gateway certificate—When you configure a secure SRST reference in Cisco Unified Communications Manager Administration, Cisco Unified Communications Manager retrieves the SRST-enabled gateway certificate from the gateway and stores it in the Cisco Unified Communications Manager database. After you reset the devices, the certificate gets added to the phone configuration file. Because the certificate is stored in the database, you cannot manage this certificate with the certificate management tool.
- TVS certificate—These are self-signed certificates that support the Trust Verification Service (TVS).
- Phone-VPN-trust certificate—This category allows the system to import Cisco Unified IP Phone VPN certificates. These certificates get stored in the Midlet trust store.
- Phone Certificates trust store (Phone-trust)—Cisco Unified Communications Manager uses this certificate type to support HTTPs access on phones. You can upload certificates to the Phone-trust store by using the Cisco Unified Communications Operating System GUI. Certificates in the Phone-CTL-trust are downloaded to the phone though the CTL file mechanism to support secure web access (HTTPS) from Cisco Unified IP Phones. Phone-trust certificates stay on the server and phones can request them through TVS.

Cisco Unified Communications Manager imports the following certificate types to the CallManager trust store:

- Cisco Unity server or Cisco Unity Connection certificate—Cisco Unity and Cisco Unity Connection use this self-signed root certificate to sign the Cisco Unity SCCP and Cisco Unity Connection SCCP device certificates. For Cisco Unity, the Cisco Unity Telephony Integration Manager (UTIM) manages this certificate. For Cisco Unity Connection, Cisco Unity Connection Administration manages this certificate.
- Cisco Unity and Cisco Unity Connection SCCP device certificates—Cisco Unity and Cisco Unity Connection SCCP devices use this signed certificate to establish a TLS connection with Cisco Unified Communications Manager.

- The certificate name represents a hash of the certificate subject name, which is based on the voice-mail server name. Every device (or port) gets issued a certificate that is rooted at the root certificate.
- SIP Proxy server certificate—A SIP user agent that connects via a SIP trunk authenticates to Cisco Unified Communications Manager if the CallManager trust store contains the SIP user agent certificate and if the SIP user agent contains the Cisco Unified Communications Manager certificate in its trust store.

The following additional trust store exists:

- Common trust store for Tomcat and web applications
- IPSec-trust
- CAPF-trust
- Userlicensing-trust
- TVS-trust
- Phone-SAST-trust
- Phone-CTL-trust

Support for Certificates From External CAs

Cisco Unified Communications Manager supports integration with third-party certificate authorities (CAs) by using a PKCS#10 certificate signing request (CSR) mechanism, which is accessible at the Cisco Unified Communications Operating System Certificate Manager GUI. Customers who currently use third-party CAs should use the CSR mechanism to issue certificates for Cisco CallManager, CAPF, IPSec, and Tomcat.

If you run your system in mixed mode, some endpoints may not accept CA certificates with a key size of 4096 or longer. To use CA certificates in mixed mode, choose one of the following options:

- use certificates with a certificate key size less than 4096
- use self-signed certificates

Note This release of Cisco Unified Communications Manager does not provide SCEP interface support.

Be sure to run the CTL client after you upload a third-party, CA-signed certificate to the platform to update the CTL file. After running the CTL client, restart the appropriate service(s) for the update; for example, restart Cisco CallManager and Cisco TFTP services when you update the Cisco Unified Communications Manager certificate, restart CAPF when you update the CAPF certificate, and so on.

Note After uploading the Cisco CallManager or CAPF certificates, you might observe the phones reset automatically to update their ITL File.

For information on generating Certificate Signing Requests (CSRs) at the platform, refer to the Administration Guide for Cisco Unified Communications Manager that supports this Cisco Unified Communications Manager release.

Related Topics

Authentication, Integrity, and Authorization

Integrity and authentication protect against the following threats:

- TFTP file manipulation (integrity)
- Modification of call-processing signaling between the phone and Cisco Unified Communications Manager (authentication)
- Man-in-the-middle attacks (authentication), as defined in Table 2: Terminology, on page 4
- Phone and server identity theft (authentication)
- Replay attack (digest authentication)

Authorization specifies what an authenticated user, service, or application can do. You can implement multiple authentication and authorization methods in a single session.

Related Topics

Authorization, on page 26
Device Authentication, on page 22
Digest Authentication, on page 24
File Authentication, on page 23
Image Authentication, on page 22
Signaling Authentication, on page 23

Image Authentication

This process prevents tampering with the binary image, the firmware load, prior to loading it on the phone. Tampering with the image causes the phone to fail the authentication process and reject the image. Image authentication occurs through signed binary files that automatically install when you install Cisco Unified Communications Manager. Likewise, firmware updates that you download from the web also provide signed binary images.

Device Authentication

This process validates the identity of the communicating device and ensures that the entity is who it claims to be.

Device authentication occurs between the Cisco Unified Communications Manager server and supported Cisco Unified IP Phones, SIP trunks, or JTAPI/TAPI/CTI applications (when supported). An authenticated connection occurs between these entities only when each entity accepts the certificate of the other entity. Mutual authentication describes this process of mutual certificate exchange.

Device authentication relies on the creation of the Cisco CTL file (for authenticating Cisco Unified Communications Manager server node and applications), and the Certificate Authority Proxy Function (for authenticating phones and JTAPI/TAPI/CTI applications).

Tip A SIP user agent that connects via a SIP trunk authenticates to Cisco Unified Communications Manager if the CallManager trust store contains the SIP user agent certificate and if the SIP user agent contains the Cisco Unified Communications Manager certificate in its trust store. For information on updating the CallManager trust store, refer to the *Administration Guide for Cisco Unified Communications Manager* that supports this Cisco Unified Communications Manager release.

Related Topics

Phone Model Support, on page 101

File Authentication

This process validates digitally signed files that the phone downloads; for example, the configuration, ring list, locale, and CTL files. The phone validates the signature to verify that file tampering did not occur after the file creation. For a list of devices that are supported, see “Phone Model Support”.

If you configure the cluster for mixed mode, the TFTP server signs static files, such as ring list, localized, default.cnf.xml, and ring list wav files, in .sgn format. The TFTP server signs files in <device name>.cnf.xml format every time that the TFTP server verifies that a data change occurred for the file.

The TFTP server writes the signed files to disk if caching is disabled. If the TFTP server verifies that a saved file has changed, the TFTP server re-signs the file. The new file on the disk overwrites the saved file that gets deleted. Before the phone can download the new file, the administrator must restart affected devices in Cisco Unified Communications Manager Administration.

After the phone receives the files from the TFTP server, the phone verifies the integrity of the files by validating the signature on the file. For the phone to establish an authenticated connection, ensure that the following criteria are met:

- A certificate must exist in the phone.
- The CTL file must exist on the phone, and the Cisco Unified Communications Manager entry and certificate must exist in the file.
- You configured the device for authentication or encryption.

Related Topics

Phone Model Support, on page 101

Signaling Authentication

This process, also known as signaling integrity, uses the TLS protocol to validate that no tampering occurred to signaling packets during transmission.

Signaling authentication relies on the creation of the Certificate Trust List (CTL) file.

Related Topics

Digest Authentication

This process for SIP trunks and phones allows Cisco Unified Communications Manager to challenge the identity of a device that is connecting to Cisco Unified Communications Manager. When challenged, the device presents its digest credentials, similar to a username and password, to Cisco Unified Communications Manager for verification. If the credentials that are presented match those that are configured in the database for that device, digest authentication succeeds, and Cisco Unified Communications Manager processes the SIP request.

Note Be aware that the cluster security mode has no effect on digest authentication.

Note If you enable digest authentication for a device, the device requires a unique digest user ID and password to register.

You configure SIP digest credentials in the Cisco Unified Communications Manager database for a phone user or application user.

- For applications, you specify digest credentials in the Application User Configuration window.
- For phones that are running SIP, you specify the digest authentication credentials in the End User window. To associate the credentials with the phone after you configure the user, you choose a Digest User, the end user, in the Phone Configuration window. After you reset the phone, the credentials exist in the phone configuration file that the TFTP server offers to the phone. See topics related to encrypted phone configuration file setup to ensure digest credentials do not get sent in the clear in TFTP downloads.
- For challenges received on SIP trunks, you configure a SIP realm, which specifies the realm username (device or application user) and digest credentials.

When you enable digest authentication for an external phone or trunk that is running SIP and configure digest credentials, Cisco Unified Communications Manager calculates a credentials checksum that includes a hash of the username, password, and the realm. The system uses a nonce value, which is a random number, to calculate the MD5 hash. Cisco Unified Communications Manager encrypts the values and stores the username and the checksum in the database.

To initiate a challenge, Cisco Unified Communications Manager uses a SIP 401 (Unauthorized) message, which includes the nonce and the realm in the header. You configure the nonce validity time in the SIP device security profile for the phone or trunk. The nonce validity time specifies the number of minutes that a nonce value stays valid. When the time interval expires, Cisco Unified Communications Manager rejects the external device and generates a new number.

Note Cisco Unified Communications Manager acts as a user agent server (UAS) for SIP calls that are originated by line-side phones or devices that are reached through the SIP trunk, as a user agent client (UAC) for SIP calls that it originates to the SIP trunk, or a back-to-back user agent (B2BUA) for line-to-line or trunk-to-trunk connections. In most environments, Cisco Unified Communications Manager acts primarily as B2BUA connecting SCCP and SIP endpoints. (A SIP user agent represents a device or application that originates a SIP message.)

Tip Digest authentication does not provide integrity or confidentiality. To ensure integrity and confidentiality for the device, configure the TLS protocol for the device, if the device supports TLS. If the device supports encryption, configure the device security mode as encrypted. If the device supports encrypted phone configuration files, configure encryption for the files.

Digest Authentication for Phones

When you enable digest authentication for a phone, Cisco Unified Communications Manager challenges all requests for phones that are running SIP except keepalive messages. Cisco Unified Communications Manager does not respond to challenges from line-side phones.

After receiving a response, Cisco Unified Communications Manager validates the checksum for the username that is stored in the database against the credentials in the response header.

Phones that are running SIP exist in the Cisco Unified Communications Manager realm, which is defined in Cisco Unified Communications Manager Administration at installation. You configure the SIP Realm for challenges to phones with the service parameter SIP Station Realm. Each digest user can have one set of digest credentials per realm.

Tip If you enable digest authentication for an end user but do not configure the digest credentials, the phone will fail registration. If the cluster mode is nonsecure and you enable digest authentication and configure digest credentials, the digest credentials get sent to the phone, and Cisco Unified Communications Manager still initiates challenges.

Digest Authentication for Trunks

When you enable digest authentication for a trunk, Cisco Unified Communications Manager challenges SIP trunk requests from SIP devices and applications that connect through a SIP trunk. The system uses the Cluster ID enterprise parameter in the challenge message. SIP user agents that connect through the SIP trunk respond with the unique digest credentials that you configured for the device or application in Cisco Unified Communications Manager Administration.

When Cisco Unified Communications Manager initiates a SIP trunk request, a SIP user agent that connects through the SIP trunk can challenge the identity of Cisco Unified Communications Manager. For these incoming challenges, you configure a SIP Realm to provide the requested credentials for the user. When Cisco Unified Communications Manager receives a SIP 401(Unauthorized) or SIP 407 (Proxy Authentication Required) message, Cisco Unified Communications Manager looks up the encrypted password for the realm that connects though the trunk and for the username that the challenge message specifies. Cisco Unified Communications Manager decrypts the password, calculates the digest, and presents it in the response message.

Tip The realm represents the domain that connects through the SIP trunk, such as xyz.com, which helps to identify the source of the request.

To configure the SIP Realm, see topics related to digest authentication for SIP trunks. You must configure a SIP Realm and username and password in Cisco Unified Communications Manager for each SIP trunk user agent that can challenge Cisco Unified Communications Manager. Each user agent can have one set of digest credentials per realm.

Related Topics

Authorization

Cisco Unified Communications Manager uses the authorization process to restrict certain categories of messages from phones that are running SIP, from SIP trunks, and from SIP application requests on SIP trunks.

- For SIP INVITE messages and in-dialog messages, and for phones that are running SIP, Cisco Unified Communications Manager provides authorization through calling search spaces and partitions.
- For SIP SUBSCRIBE requests from phones, Cisco Unified Communications Manager provides authorization for user access to presence groups.
- For SIP trunks, Cisco Unified Communications Manager provides authorization of presence subscriptions and certain non-INVITE SIP messages; for example, out-of-dial REFER, unsolicited notification, and any SIP request with the replaces header. You specify authorization in the SIP Trunk Security Profile Configuration window when you check the allowed SIP requests in the window.

To enable authorization for SIP trunk applications, check the Enable Application Level Authorization and the Digest Authentication check box in the SIP Trunk Security Profile window; then, check the allowed SIP request check boxes in the Application User Configuration window.

If you enable both SIP trunk authorization and application level authorization, authorization occurs for the SIP trunk first and then for the SIP application user. For the trunk, Cisco Unified Communications Manager downloads the trunk Access Control List (ACL) information and caches it. The ACL information gets applied to the incoming SIP request. If the ACL does not allow the SIP request, the call fails with a 403 Forbidden message.

If the ACL allows the SIP request, Cisco Unified Communications Manager checks whether digest authentication is enabled in the SIP Trunk Security Profile. If digest authentication is not enabled and application-level authorization is not enabled, Cisco Unified Communications Manager processes the request. If digest authentication is enabled, Cisco Unified Communications Manager verifies that the authentication header exists in the incoming request and then uses digest authentication to identify the source application. If the header does not exist, Cisco Unified Communications Manager challenges the device with a 401 message.

Before an application-level ACL gets applied, Cisco Unified Communications Manager authenticates the SIP trunk user agent through digest authentication. Therefore, you must enable digest authentication in the SIP Trunk Security Profile before application-level authorization can occur.

Encryption

Tip Encryption capability installs automatically when you install Cisco Unified Communications Manager on a server.

This section describes the types of encryption that Cisco Unified Communications Manager supports:

Related Topics

Configuration File Encryption, on page 29
Media Encryption, on page 27
Signaling Encryption, on page 27

Signaling Encryption

Signaling encryption ensures that all SIP and SCCP signaling messages that are sent between the device and the Cisco Unified Communications Manager server are encrypted.

Signaling encryption ensures that the information that pertains to the parties, DTMF digits that are entered by the parties, call status, media encryption keys, and so on, are protected against unintended or unauthorized access.

Cisco does not support Network Address Translation (NAT) with Cisco Unified Communications Manager if you configure the cluster for mixed mode; NAT does not work with signaling encryption.

You can enable UDP ALG in the firewall to allow media stream firewall traversal. Enabling the UDP ALG allows the media source on the trusted side of the firewall to open a bidirectional media flow through the firewall by sending the media packet through the firewall.

Tip Hardware DSP resources cannot initiate this type of connection and, therefore, must exist outside the firewall.

Signaling encryption does not support NAT traversal. Instead of using NAT, consider using LAN extension VPNs.

Media Encryption

Media encryption, which uses Secure Real-Time Protocol (SRTP), ensures that only the intended recipient can interpret the media streams between supported devices. Media encryption includes creating a media master key pair for the devices, delivering the keys to the devices, and securing the delivery of the keys while the keys are in transport. Cisco Unified Communications Manager supports SRTP primarily for IOS gateways and Cisco Unified Communications Manager H.323 trunks on gatekeeper-controlled and non-gatekeeper-controlled trunks as well as on SIP trunks.

Note Cisco Unified Communications Manager handles media encryption keys differently for different devices and protocols. All phones that are running SCCP get their media encryption keys from Cisco Unified Communications Manager, which secures the media encryption key downloads to phones with TLS encrypted signaling channels. Phones that are running SIP generate and store their own media encryption keys. Media encryption keys that are derived by Cisco Unified Communications Manager system securely get sent via encrypted signaling paths to gateways over IPSec-protected links for H.323 and MGCP or encrypted TLS links for SCCP and SIP.

If the devices support SRTP, the system uses a SRTP connection. If at least one device does not support SRTP, the system uses an RTP connection. SRTP-to-RTP fallback may occur for transfers from a secure device to a non-secure device, transcoding, music on hold, and so on.

For most security-supported devices, authentication and signaling encryption serve as the minimum requirements for media encryption; that is, if the devices do not support signaling encryption and authentication, media encryption cannot occur. Cisco IOS gateways and trunks support media encryption without authentication. For Cisco IOS gateways and trunks, you must configure IPSec when you enable the SRTP capability (media encryption).

Warning Before you configure SRTP or signaling encryption for gateways and trunks, Cisco strongly recommends that you configure IPSec because Cisco IOS MGCP gateways, H.323 gateways, and H.323/H.245/H.225 trunks rely on IPSec configuration to ensure that security-related information does not get sent in the clear. Cisco Unified Communications Manager does not verify that you configured IPSec correctly. If you do not configure IPSec correctly, security-related information may get exposed.

SIP trunks rely on TLS to ensure that security-related information does not get sent in the clear.

The following example demonstrates media encryption for SCCP and MGCP calls.

1. Device A and Device B, which support media encryption and authentication, register with Cisco Unified Communications Manager.
2. When Device A places a call to Device B, Cisco Unified Communications Manager requests two sets of media session master values from the key manager function.
3. Both devices receive the two sets: one set for the media stream, Device A—Device B, and the other set for the media stream, Device B—Device A.
4. Using the first set of master values, Device A derives the keys that encrypt and authenticate the media stream, Device A—Device B.
5. Using the second set of master values, Device A derives the keys that authenticate and decrypt the media stream, Device B—Device A.
6. Device B uses these sets in the inverse operational sequence.
7. After the devices receive the keys, the devices perform the required key derivation, and SRTP packet processing occurs.

Note Phones that are running SIP and H.323 trunks/gateways generate their own cryptographic parameters and send them to Cisco Unified Communications Manager.

For media encryption with conference calls, refer to topics related to secure conference resources.

Related Topics

Configuration File Encryption

Cisco Unified Communications Manager pushes confidential data such as digest credentials and administrator passwords to phones in configuration file downloads from the TFTP server.

Cisco Unified Communications Manager uses reversible encryption to secure these credentials in the database. To secure this data during the download process, Cisco recommends that you configure encrypted configuration files for all Cisco Unified IP Phones that support this option. When this option is enabled, only the device configuration file gets encrypted for download.

Note In some circumstances, you may choose to download confidential data to phones in the clear; for example, to troubleshoot the phone or during auto-registration.

Cisco Unified Communications Manager encodes and stores encryption keys in the database. The TFTP server encrypts and decrypts configuration files by using symmetric encryption keys:

- If the phone has PKI capabilities, Cisco Unified Communications Manager can use the phone public key to encrypt the phone configuration file.
- If the phone does not have PKI capabilities, you must configure a unique symmetric key in Cisco Unified Communications Manager and in the phone.

You enable encrypted configuration file settings in the Phone Security Profile window in Cisco Unified Communications Manager Administration, which you then apply to a phone in the Phone Configuration window.

Related Topics

About Phone Configuration File Encryption, on page 139
Phone Model Support, on page 101

NMAP Scan Operation

You can run a Network Mapper (NMAP) scan program on any Windows or Linux platform to perform vulnerability scans. NMAP represents a free and open source utility for network exploration or security auditing.

Note NMAP DP scan can take up to 18 hours to complete.

Syntax

nmap -n -vv -sU -p *<port_range> <ccm_ip_address>*

where:

-n: No DNS resolution. Tells NMAP to never do reverse DNS resolution on the active IP addresses that it finds. Because DNS can be slow even with the NMAP built-in parallel stub resolver, this option can slash scanning times.

-v: Increases the verbosity level, which causes NMAP to print more information about the scan in progress. The system shows open ports as they are found and provides completion time estimates when NMAP estimates that a scan will take more than a few minutes. Use this option twice or more for even greater verbosity.

-sU: Specifies a UDP port scan.

-p: Specifies which ports to scan and overrides the default. Be aware that individual port numbers are acceptable, as are ranges that are separated by a hyphen (for example 1-1023).

ccm_ip_address: IP address of Cisco Unified Communications Manager

Set Up Authentication and Encryption

Important This procedure applies to the CTL Client encryption option. You may also set up encryption by using the **utils ctl** CLI command set. For more information about this option, see the *Command Line Interface Guide for Cisco Unified Communications Solutions.*

The following procedure provides all the tasks that you must perform to implement authentication and encryption. See the related topics for chapter references which contain tasks that you must perform for the specified security feature.

- To implement authentication and encryption for a new install, refer to the following table.
- To add a node to a secure cluster, see *Installing Cisco Unified Communications Manager*, which describes how to add a node and how to configure security for the new node.

Procedure

Step 1 Activate the Cisco CTL Provider service in Cisco Unified Serviceability
Be sure to activate the Cisco CTL Provider service on each Cisco Unified Communications Manager server in the cluster.

Tip If you activated this service prior to a Cisco Unified Communications Manager upgrade, you do not need to activate the service again. The service automatically activates after the upgrade.

Step 2 Activate the Cisco Certificate Authority Proxy service in Cisco Unified Serviceability to install, upgrade, troubleshoot, or delete locally significant certificates.
Activate the Cisco Certificate Authority Proxy service on the first node only.

Timesaver Performing this task before you install and configure the Cisco CTL client ensures that you do not have to update the CTL file to use CAPF.

Step 3 If you do not want to use the default port settings, configure ports for the TLS connection.

Tip If you configured these settings prior to a Cisco Unified Communications Manager upgrade, the settings migrate automatically during the upgrade.

Step 4 If using the Cisco CTL client for encryption, obtain at least two security tokens and the passwords, hostnames/IP addresses, and port numbers for the servers that you will configure for the Cisco CTL client.

Note You do not need hardware security tokens for the **utils ctl** CLI option.

Step 5 Install the Cisco CTL client.

Tip To update the Cisco CTL file after an upgrade to this Cisco Unified Communications Manager release, you must install the plug-in that is available in this Cisco Unified Communications Manager Administration release.

Step 6 Configure the Cisco CTL client.

Tip If you created the Cisco CTL file prior to a Cisco Unified Communications Manager upgrade, the Cisco CTL file migrates automatically during the upgrade. To update the Cisco CTL file after an upgrade to this Cisco Unified Communications Manager release, you must install and configure the latest version of the Cisco CTL client.

Step 7 Configure the phone security profiles.

Perform the following tasks when you configure the profiles:

a) Configure the device security mode.

Tip The device security mode migrates automatically during the Cisco Unified Communications Manager upgrade. If you want to configure encryption for devices that only supported authentication in a prior release, you must choose a security profile for encryption in the Phone Configuration window.

b) Configure CAPF settings (for some phones that are running SCCP and SIP).
Additional CAPF settings display in the Phone Configuration window.

c) If you plan to use digest authentication for phones that are running SIP, check the Enable Digest Authentication check box.

d) To enable encrypted configuration files (for some phones that are running SCCP and SIP), check the Encrypted Confide check box.

e) To exclude digest credentials in configuration file downloads, check the Exclude Digest Credential in Configuration File check box.

Step 8 Apply the phone security profiles to the phones.

Step 9 Configure CAPF to issue certificates to the phones.

Tip If you performed certificate operations before the upgrade to this Cisco Unified Communications Manager release and CAPF ran on a subscriber server, you must copy the CAPF data to the publisher database server before you upgrade a cluster to this Cisco Unified Communications Manager release.

Caution The CAPF data on the Cisco Unified Communications Manager subscriber server does not migrate to the Cisco Unified Communications Manager database, and a loss of data occurs, if you do not copy the data to the database. If a loss of data occurs, the locally significant certificates that you issued with the CAPF utility remain in the phones, but the CAPF utility for this release must reissue the certificates, which are no longer valid.

The following steps are optional:

Step 10 Verify that the locally significant certificates are installed on supported Cisco Unified IP Phones.

Step 11 Configure digest authentication for phones that are running SIP.

Step 12 Perform phone-hardening tasks.

Tip If you configured phone-hardening settings prior to a Cisco Unified Communications Manager upgrade, the device configuration settings migrate automatically during the upgrade.

Step 13 Configure conference bridge resources for security.

Step 14 Configure voice mail ports for security.

For more information, see the applicable Cisco Unity or Cisco Unity Connection integration guide for this Cisco Unified Communications Manager release.

Step 15 Configure security settings for SRST references.

Tip If you configured secure SRST references in a previous Cisco Unified Communications Manager release, the configuration automatically migrates during the Cisco Unified Communications Manager upgrade.

Step 16 Configure IPSec.

For more information, see the *Administration Guide for Cisco Unified Communications Manager* .

Step 17 Configure the SIP trunk security profile.
If you plan to use digest authentication, check the Enable Digest Authentication check box in the profile.

For trunk-level authorization, check the authorization check boxes for the allowed SIP requests.

If you want application-level authorization to occur after trunk-level authorization, check the Enable Application Level Authorization check box.

You cannot check application-level authorization unless digest authentication is checked.

Step 18 Apply the SIP trunk security profile to the trunk.

Step 19 Configure digest authentication for the trunk.

Step 20 If you checked the Enable Application Level Authorization check box in the SIP trunk security profile, configure the allowed SIP requests by checking the authorization check boxes in the Application User Configuration window.

Step 21 Reset all phones.

Step 22 Reboot all servers.

Related Topics

Activate Certificate Authority Proxy Function Service, on page 130
Activate Cisco CTL Provider Service, on page 75
Apply Phone Security Profile, on page 114
Apply SIP Trunk Security Profile, on page 246
Authorization, on page 26
Cisco CTL Client Installation, on page 77
CTL Client, SSL, CAPF, and Security Token Installation, on page 18
Encrypted Configuration File Setup Tips, on page 145
Enter Phone Authentication String, on page 136
IPSec Setup Within Network Infrastructures, on page 235
Phone Security Profile Setup Tips, on page 106
Reset Devices, Reboot Servers and Clusters, and Restart Services, on page 16
Set Up CAPF, on page 129
Upgrade Cisco CTL Client and Migrate Cisco CTL File, on page 79
Set Up Digest Authentication Enterprise Parameters, on page 252
Set Up Ports for TLS Connection, on page 76
System Requirements, on page 7

Where to Find More Information

Related Cisco Documentation

Refer to the following documents for further information about related Cisco IP telephony applications and products:

- *System Configuration Guide for Cisco Unified Communications Manager*

- *Administration Guide for Cisco Unified Communications Manager*
- *Media and Signaling Authentication and Encryption Feature for Cisco IOS MGCP Gateways*
- *Cisco Unified Communications Manager Integration Guide for Cisco Unity*
- *Cisco Unified Communications Manager Integration Guide for Cisco Unity Connection*
- *Cisco Unified Survivable Remote Site Telephony (SRST) administration documentation that supports the SRST-enabled gateway*
- *Administration Guide for Cisco Unified Communications Manager*
- *Cisco Unified Communications Manager Bulk Administration Guide*
- *Troubleshooting Guide for Cisco Unified Communications Manager*
- The firmware release notes that support your phone model

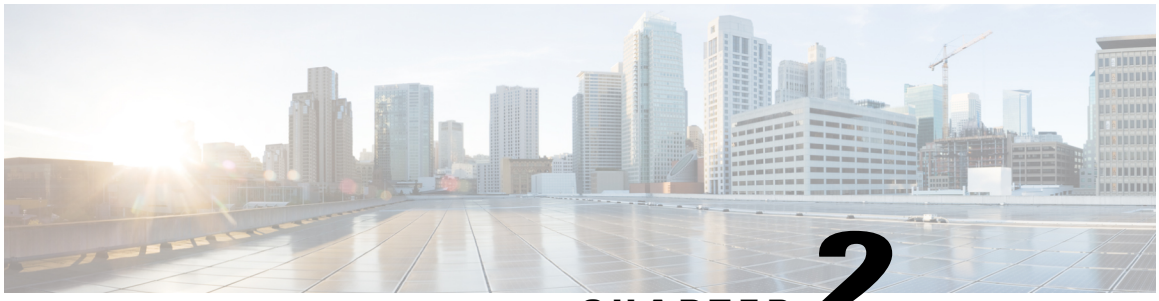

CHAPTER 2

Hypertext Transfer Protocol Over Secure Sockets Layer (HTTPS)

This chapter provides information about Hypertext Transfer Protocol over Secure Sockets Layer.

- HTTPS, page 35
- HTTPS for Cisco Unified IP Phone Services, page 37
- Save Certificate to Trusted Folder Using Internet Explorer 8, page 40
- First-Time Authentication for Firefox with HTTPS, page 42
- First-Time Authentication for Safari with HTTPS, page 44
- Where to Find More Information About HTTPS Setup, page 46

HTTPS

HTTPS, or Hypertext Transfer Protocol over Secure Sockets Layer (SSL), secures communication between a browser and a web server for Microsoft Windows users. HTTPS uses certificates to ensure server identities and to secure the browser connection. HTTPS uses a public key to encrypt the data, including the user login and password, during transport over the Internet.

Cisco Unified Communications Manager supports SSL and Transport Layer Security (TLS) for HTTPS connections. Cisco recommends using TLS for improved security if your web browser version supports TLS. Disable SSL on your web browser to use TLS for secure HTTPS communications.

To enable HTTPS, you must download a certificate that identifies the server during the connection process. You can accept the server certificate for the current session only, or you can download the certificate to a trust folder (file) to secure the current session and future sessions with that server. The trust folder stores the certificates for all your trusted sites.

Cisco supports these browsers for connection to the Cisco Tomcat web server application in Cisco Unified Communications Manager:

- Microsoft Internet Explorer (IE) 7 when running on Microsoft Windows XP SP3
- Microsoft Internet Explorer (IE) 8 when running on Microsoft Windows XP SP3 or Microsoft Vista SP2

- Firefox 3.x when running on Microsoft Windows XP SP3, Microsoft Vista SP2 or Apple MAC OS X
- Safari 4.x when running on Apple MAC OS X

Note When you install/upgrade Cisco Unified Communications Manager, an HTTPS self-signed certificate (Tomcat) is generated. The self-signed certificate migrates automatically during upgrades to Cisco Unified Communications Manager. A copy of this certificate is created in .DER and .PEM formats.

You can regenerate the self-signed certificate by using the Cisco Unified Communications Operating System GUI. Refer to the *Administration Guide for Cisco Unified Communications Manager* for more information.

The following table shows the applications that use HTTPS with Cisco Tomcat in Cisco Unified Communications Manager.

Table 6: Cisco Unified Communications Manager HTTPS Applications

Cisco Unified Communications Manager HTTPS Application	Web Application
ccmadmin	Cisco Unified Communications Manager Administration
ccmservice	Cisco Unified Serviceability
cmplatform	Operating System administration pages
cmuser	Cisco Personal Assistant
ast	Real Time Monitoring Tool
RTMTReports	Real Time Monitoring Tool reports archive
PktCap	TAC troubleshooting tools that are used for packet capturing
art	Cisco Unified Communications Manager CDR Analysis and Reporting
taps	Cisco Unified Communications Manager Auto-Register Phone Tool
dna	Dialed Number Analyzer
drf	Disaster Recovery System

Cisco Unified Communications Manager HTTPS Application	Web Application
SOAP	Simple Object Access Protocol API for reading from and writing to the Cisco Unified Communications Manager database **Note** For security, all Web applications that are using SOAP require HTTPS. Cisco does not support HTTP for SOAP applications. Existing applications that use HTTP will fail; they cannot be converted to HTTPS by changing directories.

HTTPS for Cisco Unified IP Phone Services

For Cisco Unified Communications Manager, Cisco Unified IP Phones and Cisco Unified IP Phone Services support HTTPS, encryption, and secure identification of the server using port 8443.

TVS (Trust verification service) does not verify certificate chains. For TVS to verify the certificate, the same certificate that is presented to TVS by the phone must be in the Tomcat-trust certificate store.

TVS does verify root or intermediate certificates. Only the identity certificate is verified if it is not in the database. Even if the root and intermediate certificates are present,. verification fails.

Cisco Unified IP Phones Supporting HTTPS

The following Cisco Unified IP Phones support HTTPS:

- 6921, 6941, 6945, and 6961
- 7906, 7911, 7921, 7931, 7925, 7925-EX, 7926, 7941, 7941G-GE, 7942, 7945, 7961, 7962, 7961G-GE, 7965, 7970, and 7975
- 8941, 8945, and 8961
- 9951 and 9971

Features That Support HTTPS

The following features support HTTPS:

- Cisco Extension Mobility (EM)
- Cisco Extension Mobility Cross Cluster (EMCC)
- Cisco Unified Communications Manager Manager Assistant (IPMA)
- Cisco Unified IP Phone Services
- Personal Directory
- Change Credentials

Cisco Unified IP Phone Services Settings

To support HTTPS in Cisco Unified Communications Manager Release 8.0(1) and later, the Phone Configuration Settings include the secure URL parameters shown in the following table.

To configure the secure URL parameters, choose **Device** > **Device Settings** > **Phone Services** from Cisco Unified Communications Manager Administration. For more information, see the *System Configuration Guide for Cisco Unified Communications Manager*

Note When you delete the Secured Phone URL Parameters in the Enterprise Parameter section of Cisco Unified Communications Manager Administration and then reboot, the URL Parameters are re-populated by default. After you reboot go to the Secured Phone URL Parameters section and make the correct modifications to the URL and reboot the phones.

Table 7: Phone Configuration Settings for Secure URLs

Field	Description
Secure Authentication URL	Enter the secure URL that the phone uses to validate requests that are made to the phone web server. **Note** If you do not provide a Secure Authentication URL, the device uses the nonsecure URL. If you provide both a secure URL and a nonsecure URL, the device chooses the appropriate URL, based on its capabilities. By default, this URL accesses a Cisco Unified Communications Self Care Portal window that was configured during installation. Leave this field blank to accept the default setting. Maximum length: 255
Secure Directory URL	Enter the secure URL for the server from which the phone obtains directory information. This parameter specifies the URL that secured Cisco Unified IP Phones use when you press the Directory button. **Note** If you do not provide a Secure Directory URL, the device uses the nonsecure URL. If you provide both a secure URL and a nonsecure URL, the device chooses the appropriate URL, based on its capabilities. Leave this field blank to accept the default setting. Maximum length: 255

Field	Description
Secure Idle URL	Enter the secure URL for the information that displays on the Cisco Unified IP Phone display when the phone is idle, as specified in Idle Timer field. For example, you can display a logo on the LCD when the phone has not been used for 5 minutes. **Note** If you do not provide a Secure Idle URL, the device uses the nonsecure URL. If you provide both a secure URL and a nonsecure URL, the device chooses the appropriate URL, based on its capabilities. To accept the default setting, leave this field blank. Maximum length: 255
Secure Information URL	Enter the secure URL for the server location where the Cisco Unified IP Phone can find help text information. This information displays when the user presses the information (i) button or the question mark (?) button. **Note** If you do not provide a Secure Information URL, the device uses the nonsecure URL. If you provide both a secure URL and a nonsecure URL, the device chooses the appropriate URL, based on its capabilities. To accept the default setting, leave this field blank. Maximum length: 255
Secure Messages URL	Enter the secure URL for the messages server. The Cisco Unified IP Phone contacts this URL when the user presses the Messages button. **Note** If you do not provide a Secure Messages URL, the device uses the nonsecure URL. If you provide both a secure URL and a nonsecure URL, the device chooses the appropriate URL, based on its capabilities. To accept the default setting, leave this field blank. Maximum length: 255

Field	Description
Secure Services URL	Enter the secure URL for Cisco Unified IP Phone services. The is the location that the secure Cisco Unified IP Phone contacts when the user presses the Services button. **Note** If you do not provide a Secure Services URL, the device uses the nonsecure URL. If you provide both a secure URL and a nonsecure URL, the device chooses the appropriate URL, based on its capabilities. To accept the default setting, leave this field blank. Maximum length: 255

Enterprise Parameter Settings for HTTPS Support

To support HTTPS, Cisco Unified Communications Manager Release 8.0(1) and later supports the following new Enterprise Parameters:

- Secured Authentication URL
- Secured Directory URL
- Secured Idle URL
- Secured Information URL
- Secured Messaged URL
- Secured Services URL

Save Certificate to Trusted Folder Using Internet Explorer 8

Be sure to import the Cisco Unified Communications Manager certificate to Internet Explorer 8 to secure access without having to reload the certificate every time that you restart the browser. If you continue to a website that has a certificate warning and the certificate is not in the trust store, Internet Explorer 8 remembers the certificate for the current session only.

After you download the server certificate, Internet Explorer 8 continues to display certificate errors for the website. You can ignore the security warnings when the Trusted Root Certificate Authority trust store for the browser contains the imported certificate.

The following procedure describes how to import the Cisco Unified Communications Manager certificate to the root certificate trust store for Internet Explorer 8.

Procedure

Step 1 Browse to application on the Tomcat server (for example, enter the hostname, localhost, or IP address for Cisco Unified Communications Manager Administration in the browser).
The browser displays a Certificate Error: Navigation Blocked message to indicate that this website is untrusted.

Step 2 To access the server, click **Continue to this website (not recommended)**.
The Cisco Unified Communications Manager Administration window displays, and the browser displays the address bar and Certificate Error status in red.

Step 3 To import the server certificate, click the Certificate Error status box to display the status report. Click the **View Certificates** link in the report.

Step 4 Verify the certificate details.

Step 5 Select the **General** tab in the Certificate window and click **Install Certificate**.
The Certificate Import Wizard launches.

Step 6 To start the Wizard, click **Next**.
The Certificate Store window displays.

Step 7 Verify that the Automatic option, which allows the wizard to select the certificate store for this certificate type, is selected and click **Next**.

Step 8 Verify the setting and click **Finish**.
A security warning displays for the import operation.

Step 9 To install the certificate, click **Yes**.
The Import Wizard displays "The import was successful."

Step 10 Click **OK**. The next time that you click the **View certificates** link, the **Certification Path** tab in the Certificate window displays "This certificate is OK."

Step 11 To verify that the trust store contains the imported certificate, click **Tools** > **Internet Options** in the Internet Explorer toolbar and select the **Content** tab. Click **Certificates** and select the **Trusted Root Certifications Authorities** tab. Scroll to find the imported certificate in the list.
After importing the certificate, the browser continues to display the address bar and a Certificate Error status in red. The status persists even if you reenter the hostname, localhost, or IP address or refresh or relaunch the browser.

Related Topics

Where to Find More Information About HTTPS Setup, on page 46

Copy Internet Explorer 8 Certificate to File

Copying the certificate to a file and storing it locally allows you to restore the certificate whenever necessary.

Performing the following procedure copies the certificate by using a standard certificate storage format. To copy the certificate contents to file, perform the following procedure:

Procedure

Step 1 Click the Certificate Error status box.

Step 2 Click **View Certificates**.

Step 3 Click the **Details** tab.

Step 4 Click the **Copy to File** button.

Step 5 The Certificate Export Wizard displays. Click **Next**.

Step 6 The following list defines the file formats from which you can choose. Choose the file format that you want to use for the exported file; click **Next**.

a) DER encoded binary X.509 (.CER)—Uses DER to transfer information between entities.

b) Base-64 encoded X.509 (.CER)—Sends secure binary attachments over the internet; uses ASCII text format to prevent corruption of file.

c) Cryptographic Message Syntax Standard-PKCS #7 Certificates (.P7B)—Exports the certificate and all certificates in the certification path to the chosen PC.

Step 7 Browse to the location to which you want to export the file copy and name the file. Click **Save**.

Step 8 The file name and path display in the Certificate Export Wizard pane. Click **Next**.

Step 9 Your file and settings display. Click **Finish**.

Step 10 When the successful export dialog box displays, click **OK**.

Related Topics

Where to Find More Information About HTTPS Setup, on page 46

First-Time Authentication for Firefox with HTTPS

The first time that you (or a user) accesses Cisco Unified Communications Manager Administration or other Cisco Unified Communications Manager SSL-enabled virtual directories (after the Cisco Unified Communications Manager installation/upgrade) from a browser client, a Security Alert dialog box asks whether you trust the server.

When the dialog box displays, you must perform one of the following tasks:

- By clicking **I Understand The Risks**, you choose to trust the certificate for the current web session only. If you trust the certificate for the current session only, the Security Alert dialog box displays each time that you access the application; that is, until you install the certificate in the trusted folder.
- By clicking **Get Me Out Of Here**, you cancel the action. No authentication occurs, and you cannot access the web application. To access the web application, you must click **I Understand The Risks**.

Related Topics

Copy Internet Explorer 8 Certificate to File, on page 41
Save Certificate to Trusted Folder Using Safari 4.x, on page 45

Save Certificate to Trusted Folder Using Firefox 3.x

Perform the following procedure to save the HTTPS certificate in the trusted folder in the browser client.

Procedure

Step 1 Access the Tomcat server (for example, enter the hostname, localhost, or IP address for Cisco Unified Communications Manager Administration in the browser).

Step 2 When the Security Alert dialog box displays, click **I Understand The Risks**.

Step 3 Click **Add Exception**.
The Add Exception dialog box displays.

Step 4 Click **Get Certificate**.

Step 5 Check the **Permanently store this exception** check box.

Step 6 Click **Confirm Security Exception**.

Step 7 To view the details of the certificate by performing the following steps:

a) From the Firefox browser, click **Tools** > **Options**.
The Options dialog box displays

b) Click **Advanced**.

c) Click **View Certificates**.
The Certificate Manager dialog box displays.

d) Highlight the certificate that you want to view and click **View**.
The Certificate Viewer dialog box displays.

e) Click the **Details** tab.

f) In the Certificate Fields field, highlight the field that you want to view.
Details display in the Field Values field.

g) From the Certificate Viewer dialog box, click **Close**.

h) From the Certificate Manager dialog box, click **OK**.

Copy Firefox 3.x Certificate to File

Copying the certificate to a file and storing it locally allows you to restore the certificate whenever necessary.

Performing the following procedure copies the certificate by using a standard certificate storage format. To copy the certificate contents to file, perform the following procedure:

Procedure

Step 1 From the Firefox browser, click **Tools** > **Options**.
The Options dialog box displays.

Step 2 If it is not already selected, click **Advanced**.

Step 3 Click the **Encryption** tab and click **View Certificates**.

The Certificate Manager dialog box displays.

Step 4 Click the **Servers** tab.

Step 5 Highlight the certificate you want to copy and click **Export**.
The Save Certificate to File dialog box displays.

Step 6 Browse to the location to which you want to copy the file.

Step 7 From the **Save as type** drop-down list, choose the file type from the following options:

a) X.509 Certificate (PEM)—Uses **PEM** to transfer information between entities.

b) X.509 Certificate with chain (PEM)—Uses Privacy Enhanced Mail to verify the certificate chain and transfer information between entities.

- X.509 Certificate (DER)—Uses **DER** to transfer information between entities.
- X.509 Certificate (PKCS#7)—PKCS#7 is a standard for signing or encrypting data. Since the certificate is needed to verify signed data, it is possible to include it in the SignedData structure. A .P7C-file is just a degenerated SignedData structure, without any data to sign.
- X.509 Certificate with chain (PKCS#7)—Uses PKCS#7 to verify the certificate chain and transfer information between entities.

Step 8 Click **Save**.

Step 9 Click **OK**.

Related Topics

Where to Find More Information About HTTPS Setup, on page 46

First-Time Authentication for Safari with HTTPS

The first time that you (or a user) accesses Cisco Unified Communications Manager Administration or other Cisco Unified Communications Manager SSL-enabled virtual directories (after the Cisco Unified Communications Manager installation/upgrade) from a browser client, a Security Alert dialog box asks whether you trust the server.

When the dialog box displays, you must perform one of the following tasks:

- By clicking **Yes**, you choose to trust the certificate for the current web session only. If you trust the certificate for the current session only, the Security Alert dialog box displays each time that you access the application; that is, until you install the certificate in the trusted folder.
- By clicking **Show Certificate** > **Install Certificate**, you intend to perform certificate installation tasks, so you always trust the certificate. If you install the certificate in the trusted folder, the Security Alert dialog box does not display each time that you access the web application.
- By clicking **No**, you cancel the action. No authentication occurs, and you cannot access the web application. To access the web application, you must click **Yes** or install the certificate via the **Show Certificate** > **Install Certificate** options.

Note The address that you use to access Cisco Unified Communications Manager must match the name on the certificate, or a message will display by default. If you access the web application by using the localhost or IP address after you install the certificate in the trusted folder, a security alert indicates that the name of the security certificate does not match the name of the site that you are accessing.

Related Topics

Copy Internet Explorer 8 Certificate to File, on page 41
Save Certificate to Trusted Folder Using Firefox 3.x, on page 43

Save Certificate to Trusted Folder Using Safari 4.x

Perform the following procedure to save the HTTPS certificate in the trusted folder in the browser client.

Procedure

Step 1 Access the Tomcat server (for example, enter the hostname, localhost, or IP address for Cisco Unified Communications Manager Administration in the browser).

Step 2 When the Security Alert dialog box displays, click **Show Certificate**.
You can click the **Details** tab to view the details of the certificate if you choose to verify the certificate data. To display a subset of settings, if available, choose one of the following options:

a) All—All options display in the Details pane.
b) Version 1 Fields Only—Version, Serial Number, Signature Algorithm, Issuer, Valid From, Valid To, Subject, and the Public Key options display.
c) Extensions Only—Subject Key Identifier, Key Usage, and the Enhanced Key Usage options display.
d) Critical Extensions Only—Critical Extensions, if any, display
e) Properties Only—Thumbprint algorithm and the thumbprint options display.

Step 3 In the Certificate pane, click **Install Certificate**.

Step 4 When the Certificate Import Wizard displays, click **Next**.

Step 5 Click the **Place all certificates in the following store** radio button; click **Browse**.

Step 6 Browse to **Trusted Root Certification Authorities**; select it and click **OK**.

Step 7 Click **Next**.

Step 8 Click **Finish**.
A Security Warning Box displays the certificate thumbprint for you.

Step 9 To install the certificate, click **Yes**.
A message states that the import was successful. Click **OK**.

Step 10 In the lower, right corner of the dialog box, click **OK**.

Step 11 To trust the certificate, so you do not receive the dialog box again, click **Yes**.

Tip You can verify the certificate was installed successfully by clicking the **Certification Path** tab in the Certificate pane.

Copy Safari 4.x Certificate to File

Copying the certificate to a file and storing it locally allows you to restore the certificate whenever necessary.

Performing the following procedure copies the certificate by using a standard certificate storage format. To copy the certificate contents to file, perform the following procedure:

Procedure

Step 1 In the Security Alert dialog box, click **Show Certificate**.

Tip In Safari, click the Certificate Error status box to display the Show Certificate option.

Step 2 Click the **Details** tab.

Step 3 Click the **Copy to File** button.

Step 4 The Certificate Export Wizard displays. Click **Next**.

Step 5 The following list defines the file formats from which you can choose. Choose the file format that you want to use for the exported file; click **Next**.

a) DER encoded binary X.509 (.CER)—Uses DER to transfer information between entities.

b) Base-64 encoded X.509 (.CER)—Sends secure binary attachments over the internet; uses ASCII text format to prevent corruption of file.

c) Cryptographic Message Syntax Standard-PKCS #7 Certificates (.P7B)—Exports the certificate and all certificates in the certification path to the chosen PC.

Step 6 Browse to the location to which you want to export the file copy and name the file. Click **Save**.

Step 7 The file name and path display in the Certificate Export Wizard pane. Click **Next.**

Step 8 Your file and settings display. Click **Finish**.

Step 9 When the successful export dialog box displays, click **OK**.

Related Topics

Where to Find More Information About HTTPS Setup, on page 46

Where to Find More Information About HTTPS Setup

Related Cisco Documentation

- *Cisco Unified Serviceability Administration Guide*
- *Administration Guide for Cisco Unified Communications Manager*
- Microsoft documentation that is available on HTTPS

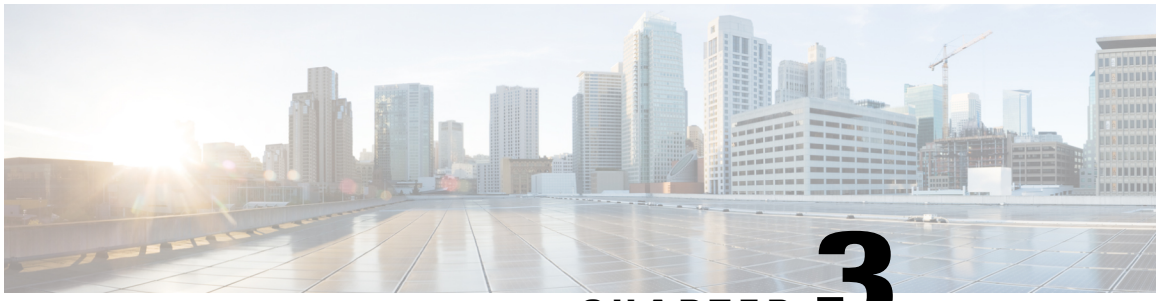

CHAPTER 3

Default Security Setup

This section provides information about the default security setup.

- Default Security Features, page 47
- Trust Verification Service, page 48
- Initial Trust List, page 48
- Update ITL File for IP Phones, page 50
- Autoregistration, page 50
- Obtain Cisco Unified IP Phone Support List, page 50
- ECDSA Support for Common Criteria for Certified Solutions, page 51
- Certificate Regeneration, page 54
- Tomcat Certificate Regeneration, page 55
- System Back-Up Procedure After TFTP Certificate Regeneration, page 56
- Refresh Upgrade From Cisco Unified Communications Manager Release 7.x to Release 8.6 Or Later, page 56
- Roll Back Cluster to a Pre-8.0 Release, page 57
- Migrate IP Phones Between Clusters with Cisco Unified Communications Manager and ITL Files, page 59
- Perform Bulk Reset of ITL File, page 64
- View the Validity of ITLRecovery Certificate, page 65
- Enable Contact Search Authentication, page 66

Default Security Features

Security by Default provides the following automatic security features for Cisco Unified IP Phones:

- Signing of the phone configuration files.
- Support for phone configuration file encryption.

- https with Tomcat and other Web services (Midlets)

For Cisco Unified Communications Manager Release 8.0 later, these security features are provided by default without running the CTL Client.

Trust Verification Service

Trust Verification Service (TVS) is the main component of Security by Default. TVS enables Cisco Unified IP Phones to authenticate application servers, such as EM services, directory, and MIDlet, during HTTPS establishment.

TVS provides the following features:

- Scalability—Cisco Unified IP Phone resources are not impacted by the number of certificates to trust.
- Flexibility—Addition or removal of trust certificates are automatically reflected in the system.
- Security by Default—Non-media and signaling security features are part of the default installation and do not require user intervention.

Note When you enable secure signaling and media, you must create a CTL file and set the cluster to mixed mode. You can use the CTL client to make these changes, or you can use the CLI command **utils ctl set-cluster mixed-mode** to create the CTL file and change the security mode in one step.

TVS Description

The following basic concepts describe the Trust Verification Service:

- TVS runs on the Cisco Unified Communications Manager server and authenticates certificates on behalf of the Cisco Unified IP Phone.
- Instead of downloading all the trusted certificates, Cisco Unified IP Phone only need to trust TVS.
- The TVS certificates and a few key certificates are bundled in a new file: the Initial Trust List file (ITL).
- The ITL file gets generated automatically without user intervention.
- The ITL file gets downloaded by Cisco Unified IP Phones and trust flows from there.

Initial Trust List

Cisco Unified IP Phones need an Initial Trust List (ITL) to perform the following tasks:

- Authenticate their configuration file signature.
- Talk securely to CAPF, a pre-requisite to support configuration files encryption.
- Trust TVS (which authenticates https certificates among other functions).

If the Cisco Unified IP Phone does not have an existing CTL file, it trusts the first ITL File automatically, like it does the CTL File. Subsequent ITL files must be either signed by the same private key associated with

TFTP server's CallManager certificate or TVS must be able to return the certificate corresponding to the signer.

If the Cisco Unified IP Phone has an existing CTL file, it uses the CTL file to authenticate the ITL file signature.

ITL Files

The ITL file contains the initial trust list. The ITL file has the same format as the CTL file and is basically a smaller, leaner version of the CTL file. The following attributes apply to the ITL file:

- Unlike the CTL File, the system builds the ITL file automatically when you install the cluster, and the ITL file gets updated automatically if the contents need to be changed.
- The ITL File does not require eTokens. It uses a soft eToken (the private key associated with TFTP server's CallManager certificate).
- The ITL File is downloaded by Cisco Unified IP Phones at boot up time or during reset, right after downloading the CTL File (if present).

ITL File Contents

The ITL File contains the following certificates:

- The CallManager certificate of the TFTP server. This certificate allows to authenticate the ITL File signature and the phone configuration file signature.
- All the TVS certificates in the cluster. These certificates allow phone to talk to TVS securely to request certificates authentication.
- The CAPF certificate. This allows to support configuration file encryption. The CAPF certificate is not really required in the ITL File (TVS can authenticate it) but it simplifies the connection to CAPF.

Like the CTL File, the ITL File contains a record for each certificate. Each record contains:

- A certificate.
- Pre-extracted certificate fields for easy look up by the Cisco Unified IP Phone.
- Certificate role (TFTP, CUCM, TFTP+CCM, CAPF, TVS, SAST)

The TFTP server's CallManager certificate is present in 2 ITL records with 2 different roles:

- TFTP or TFTP+CCM role: to authenticate configuration file signature.
- SAST role: to authenticate ITL file signature.

ITL and CTL File Interaction

The Cisco Unified IP Phone still relies on the CTL file to know the cluster security mode (nonsecure or mixed mode). The CTL File tracks the cluster security mode by including the Cisco Unified Communications Manager certificate in the Cisco Unified Communications Manager record.

The ITL File also contains the cluster security mode indication.

Certificate Management Changes for ITLRecovery Certificate

In Cisco Unified Communications Manager Release 11.0, following changes have been made for the ITLRecovery certificate:

- The validity of ITLRecovery has been extended from 5 years to 20 years to ensure that the ITLRecovery certificate remains same for a longer period.

Note The validity of ITLRecovery certificates continues to be 5 years if you upgrade Cisco Unified Communications Manager. While upgrading Cisco Unified Communications Manager, the certificates get copied to the later release. However, when you regenerate an ITLRecovery certificate or when you do a fresh install of Cisco Unified Communications Manager, the validity of ITLRecovery gets extended to 20 years.

- Before you regenerate an ITLRecovery certificate, a warning message appears on both the CLI and the GUI. This warning message displays that if you use a tokenless CTL and if you regenerate the CallManager certificate, ensure that the CTL file has the updated CallManager certificate and that certificate is updated to endpoints.

Update ITL File for IP Phones

A Centralized TFTP with Cisco Unified CM Release 8.0 and later using Security By Default with ITL files installed on the phones does not validate TFTP configuration files. The following procedure must be completed before any phones from the remote clusters are added to the Centralized TFTP deployment.

Procedure

Step 1 On the Central TFTP server enable the Enterprise Parameter **Prepare cluster for pre CM-8.0 rollback**.

Step 2 Restart TVS and TFTP.

Step 3 Reset all phones to verify they download the new ITL file that will disable ITL signature verification.

Step 4 Configure Enterprise Parameter Secure https URLs to use http instead of https.

Autoregistration

The system supports autoregistration in both secure and nonsecure mode. The default configuration file will also be signed. Cisco Unified IP Phones that do not support Security by Default will be served a nonsigned default configuration file.

Obtain Cisco Unified IP Phone Support List

You can obtain a list of the Cisco Unified IP Phones that support security by default by using Cisco Unified Reporting. To use Cisco Unified Reporting, follow this procedure:

Procedure

Step 1 From the Cisco Unified Reporting main window, click **System Reports**.

Step 2 From the System Reports list, click **Unified CM Phone Feature List**.

Step 3 Choose the appropriate feature from the **Feature** pull-down menu.

Step 4 Click **Submit.**

What to Do Next

For more information about using Cisco Unified Reporting, see the *Cisco Unified Reporting Administration Guide*.

ECDSA Support for Common Criteria for Certified Solutions

Cisco Unified Communications Manager Release 11.0 supports Elliptic Curve Digital Signature Algorithm (ECDSA) certificates. These certificates are stronger than the RSA-based certificates and are required for products that have Common Criteria (CC) certifications. The US government Commercial Solutions for Classified Systems (CSfC) program requires the CC certification and so, it is included in Cisco Unified Communications Manager Release 11.0.

The ECDSA certificates are available along with the existing RSA certificates in the following areas—Certificate Manager, SIP, Certificate Authority Proxy Function (CAPF), Transport Layer Security (TLS) Tracing, Entropy, HTTP, and computer telephony integration (CTI) Manager.

Certificate Manager ECDSA Support

In Cisco Unified Communications Manager Release 11.0, the certificate manager supports both generation of self-signed ECDSA certificates and the ECDSA certificate signing request (CSR). Earlier releases of Cisco Unified Communications Manager supported **RSA** certificate only. However, Cisco Unified Communications Manager Release 11.0 onwards, **CallManager-ECDSA** certificate has been added along with the existing **RSA** certificate.

Both the **CallManager** and **CallManager-ECDSA** certificates share the common certificate trust store—CallManager-Trust. Cisco Unified Communications Manager uploads these certificates to this trust store.

The certificate manager supports generation of ECDSA certificates having different values of key length.

When you update or install Cisco Unified Communications Manager, the self-signed certificate is generated. Cisco Unified Communications Manager Release 11.0 always has an ECDSA certificate and uses that certificate in its SIP interface. The secure Computer Telephony Integration (CTI) Manager interface also supports ECDSA certificates. As both the CTI Manager and SIP server use the same server certificate, both the interfaces work in synchronization.

SIP ECDSA Support

Cisco Unified Communications Manager Release 11.0 includes ECDSA support for SIP lines and SIP trunk interfaces. The connection between Cisco Unified Communications Manager and an endpoint phone or video

device is a SIP line connection whereas the connection between two Cisco Unified Communications Managers is a SIP trunk connection. All SIP connections support the ECDSA ciphers and use ECDSA certificates.

Following are the scenarios when SIP makes (Transport Layer Security) TLS connections:

- When SIP acts as a TLS server—When the SIP trunk interface of Cisco Unified Communications Manager acts as a TLS server for incoming secure SIP connection, the SIP trunk interface determines if the CallManager-ECDSA certificate exists on disk. If the certificate exists on the disk, the SIP trunk interface uses the CallManager-ECDSA certificate if the selected cipher suite is **TLS_ECDHE_ECDSA_WITH_AES_128_GCM_SHA256** or **TLS_ECDHE_ECDSA_WITH_AES_256_GCM_SHA384**. The SIP trunk interface continues to support RSA TLS cipher suites for connections from clients that do not support ECDSA cipher suites. The **TLS Ciphers** drop-down list contains options that permit configuration of the supported cipher suites when Cisco Unified Communications Manager acts as a TLS server.
- When SIP acts as a TLS client—When the SIP trunk interface acts as a TLS client, the SIP trunk interface sends a list of requested cipher suites to the server based on the **TLS Ciphers** field (which also includes the **ECDSA ciphers** option) in the **Enterprise Parameters** window of Cisco Unified Communications Manager. The **TLS Ciphers**. This configuration determines the TLS client cipher suite list and the supported cipher suites in order of preference.

Note If you establish a TLS connection with an earlier release of the Cisco Unified Communications Manager that does not support ECDSA client certificate, the connection uses an RSA cipher suite. The client certificate sent in the TLS connection is not bound to the TLS Cipher you that you choose. Earlier releases of Cisco Unified Communications Manager also support that TLS servers receive and handle ECDSA client certificates.

Devices that use an ECDSA cipher to make a connection to Cisco Unified Communications Manager must have the CallManager-ECDSA certificate in their Identity Trust List (ITL) file. Then, the devices must incorporate the CallManager-ECDSA certificate into their local certificate store to trust the connection that is secured by the CallManager-ECDSA certificate.

CAPF ECDSA Support

Certificate Authority Proxy Function (CAPF) is a Cisco proprietary method for exchanging certificates between Cisco endpoints and Cisco Unified Communications Manager. Only Cisco endpoints use CAPF. To accomplish common criteria requirements, CAPF is updated to CAPF version 3 so that a client can be provided with ECDSA Locally Significant Certificate (LSC). A customer creates LSC locally. An LSC is an alternative to manufacturer installed certificate (MIC) that the manufacturer creates.

Use CAPF version 3 to allow Cisco Unified Communications Manager server to direct phone, CTI applications, and Jabber clients to generate EC keys to be used in their LSCs. After the EC Keys are generated, Cisco Unified Communications Manager either generates an ECDSA LSC and sends it to the Cisco endpoint or generates an ECDSA CSR.

In case the endpoint does not have CAPF version 3 support, you can configure the required EC key size and RSA key size and choose **EC Key Preferred, RSA Backup** option in **Phone Configuration** window from Cisco Unified CM Administration as a backup. This backup option is useful when CAPF server tries to send a request to EC key pair and the phone communicates to the server that it does not support EC key, the server sends the request to generate an RSA key pair instead of the EC key pair.

Note Currently, no Cisco endpoint supports CAPF version 3. So, avoid selecting the **EC Only** option. However, the administrators who want to support ECDSA LSCs later can configure their devices with **EC Preferred RSA Backup** option. When the endpoints begin to support CAPF version 3 for ECDSA LSCs, the administrators need to reinstall their LSC.

Entropy

To have strong encryption, a robust source of entropy is required. Entropy is a measure of randomness of data and helps in determining the minimum threshold for common criteria requirements. Data conversion techniques, such as cryptography and encryption, rely on a good source of entropy for their effectiveness. If a strong encryption algorithm, such as ECDSA, uses a weak source of entropy, the encryption can be easily broken.

In Cisco Unified Communications Manager Release 11.0, the entropy source for Cisco Unified Communications Manager is improved. Entropy Monitoring Daemon is a built-in feature that does not require configuration. However, you can turn it off through the Cisco Unified Communications Manager CLI.

Use the following CLI commands to control the `Entropy Monitoring Daemon` service:

CLI Command	Description
utils service start Entropy Monitoring Daemon	Starts the `Entropy Monitoring Daemon` service.
utils service stop Entropy Monitoring Daemon	Stops the `Entropy Monitoring Daemon` service.
utils service active Entropy Monitoring Daemon	Activates the `Entropy Monitoring Daemon` service, which further loads the kernel module.
utils service deactive Entropy Monitoring Daemon	Deactivates the `Entropy Monitoring Daemon` service, which further unloads the kernel module.

HTTPS Support for Configuration Download

For secure configuration download, Cisco Unified Communications Manager Release 11.0 is enhanced to support HTTPS in addition to the HTTP and TFTP interfaces that were used in the earlier releases. Both client and server use mutual authentication, if required. Clients that are enrolled with ECDSA LSCs and Encrypted TFTP configurations are required to present their LSC.

The HTTPS interface uses both the CallManager and the CallManager-ECDSA certificates as the server certificates.

Note When you update CallManager, CallManager ECDSA, or Tomcat certificates, you must deactivate and reactivate the TFTP service. Port 6971 is used for authentication of the CallManager and CallManager-ECDSA certificates whereas port 6972 is used for the authentication of the Tomcat certificates.

CTI Manager Support

The computer telephony integration (CTI) interface is enhanced to support four new ciphers. The ciphers suites are **TLS_ECDHE_RSA_WITH_AES_128_GCM_SHA256**, **TLS_ECDHE_RSA_WITH_AES_256_GCM_SHA384**, **TLS_ECDHE_ECDSA_WITH_AES_128_GCM_SHA256** and **TLS_ECDHE_ECDSA_WITH_AES_256_GCM_SHA384**. By supporting these cipher suites, the CTI Manager interface needs to have the **CallManager-ECDSA** certificate, if it exists in Cisco Unified Communications Manager. Similar to the SIP interface, the Enterprise Parameter **TLS Ciphers** option in Cisco Unified Communications Manager is used to configure the TLS ciphers that are supported on the CTI Manager secure interface.

Certificate Regeneration

If you regenerate one of the Cisco Unified Communications Manager certificates, you must perform the steps in this section.

Caution Regenerating a certificate can affect your system operations. Regenerating a certificate overwrites the existing certificate including a third party signed certificate if one was uploaded. For more information, see the *Administration Guide for Cisco Unified Communications Manager* .

Regenerate CAPF Certificate

To regenerate the CAPF certificate, perform the following steps:

Note If the CAPF certificate is on the publisher, you might observe the phones restarting automatically to update their ITL file.

Procedure

Step 1 Regenerate the CAPF certificate.
For more information see *Administration Guide for Cisco Unified Communications Manager* .

Step 2 If you have a CTL file then you must rerun the CTL client.
For more information see *Administration Guide for Cisco Unified Communications Manager* .

Step 3 Restart the CAPF service.
See the "Activating the Certificate Authority Proxy Function Service" section, in the *Cisco Unified Communications Manager Security Guide*.

Regenerate TVS Certificate

No manual steps are required to regenerate a TVS certificate.

Note If you plan to regenerate both TVS and TFTP certificates, regenerate the TVS certificate, wait for the possible phone restarts to complete, and then regenerate the TFTP certificate.

Regenerate TFTP Certificate

To regenerate a TFTP certificate, follow these steps:

Note If you plan to regenerate multiples certificates you must regenerate the TFTP certificate last. Wait for the possible phone restarts to complete before you regenerate the TFTP certificate. You might need to manually delete the ITL File from all Cisco Unified IP Phones, if you do not follow this procedure.

Procedure

Step 1 Regenerate the TFTP certificate.
For more information see *Administration Guide for Cisco Unified Communications Manager* .

Step 2 If the TFTP service was activated, wait until all the phones have automatically restarted.

Step 3 If your cluster is in mixed mode, run the CTL client.
See Chapter 4, “Configuring the CTL Client,”.

Step 4 If the cluster is part of an EMCC deployment, repeat the steps for bulk certificate provisioning.
For more information see *Administration Guide for Cisco Unified Communications Manager* .

Tomcat Certificate Regeneration

To regenerate the CAPF certificate, perform the following steps:

Procedure

Step 1 Regenerate the Tomcat certificate.
For more information see *Administration Guide for Cisco Unified Communications Manager* .

Step 2 Restart the Tomcat and TFTP services.
For more information see *Administration Guide for Cisco Unified Communications Manager* .

Step 3 If the cluster is part of an EMCC deployment, repeat the steps for bulk certificate provisioning.
For more information see *Administration Guide for Cisco Unified Communications Manager* .

System Back-Up Procedure After TFTP Certificate Regeneration

The trust anchor for the ITL File is a software entity: the TFTP private key. If the server crashes, the key gets lost, and phones will not be able to validate new ITL File.

In Cisco Unified Communications Manager Release 8.0, the TFTP certificate and private key both get backed up by the Disaster Recovery System. The system encrypts the backup package to keep the private key secret. If the server crashes, the previous certificates and keys will be restored.

Whenever the TFTP certificate gets regenerated, you must create a new system backup. For backup procedures, see the *Administration Guide for Cisco Unified Communications Manager* .

Refresh Upgrade From Cisco Unified Communications Manager Release 7.x to Release 8.6 Or Later

To upgrade your cluster from Release 7.x to Release 8.6 or later, follow this procedure:

Procedure

Procedure

Step 1 Follow the normal procedure for upgrading a cluster. For more information, see *Administration Guide for Cisco Unified Communications Manager* .

Tip After you finish upgrading all nodes in the cluster to Cisco Unified Communications Manager Release 8.6 or later, you must also follow all the steps in this procedure to ensure that your Cisco Unified IP Phones register with the system.

Step 2 If you are running one of the following releases in mixed mode, you must run the CTL client:

- Cisco Unified Communications Manager Release 7.1(2)
  - All regular releases of 7.1(2)
  - All ES releases of 712 prior to 007.001(002.32016.001)
- Cisco Unified Communications Manager Release 7.1(3)
  - All regular releases of 713 prior to 007.001(003.21900.003) = 7.1(3a)su1a
  - All ES releases of 713 prior to 007.001(003.21005.001)

Note For more information about running the CTL client, see Chapter 4, “Configuring the CTL Client,”.

Step 3 Wait ten minutes for the Cisco Unified IP Phones to automatically restart and register with Cisco Unified Communications Manager.

Caution You must back up your cluster using the Disaster Recovery System (DRS) to be able to recover the cluster.

Step 4 Back Up Your Cluster.

To backup your cluster using DRS, see the *Administration Guide for Cisco Unified Communications Manager* .

What to Do Next

Once the publisher is up after the upgrade, do not reboot until the CAR migration completes. You are not allowed to switch to old version or perform a DRS backup in this phase. You can monitor the CAR migration status by navigating to **Cisco Unified Serviceability** > **Tools** > **CDR Analysis and Reporting**.

Roll Back Cluster to a Pre-8.0 Release

Before you roll back a cluster to a pre-8.0 release of Cisco Unified Communications Manager, you must prepare the cluster for rollback using the Prepare Cluster for Rollback to pre-8.0 enterprise parameter.

To prepare the cluster for rollback, follow this procedure on each server in the cluster.

Procedure

Step 1 From Cisco Unified Communications Manager Administration, choose **System** > **Enterprise Parameters Configuration**.
The **Enterprise Parameters Configuration** window displays.

Set the Prepare Cluster for Rollback to pre-8.0 enterprise parameter to **True**.

Note Enable this parameter only if you are preparing to rollback your cluster to a pre-8.0 release of Cisco Unified Communications Manager. Phone services that use https (for example, extension mobility) will not work while this parameter is enabled. However, users will be able to continue making and receiving basic phone calls while this parameter is enabled.

Step 2 Wait ten minutes for the Cisco Unified IP Phones to automatically restart and register with Cisco Unified Communications Manager.

Step 3 Revert each server in the cluster to the previous release.
For more information about reverting a cluster to a previous version, see *Administration Guide for Cisco Unified Communications Manager* .

Step 4 Wait until the cluster finishes switching to the previous version.

Step 5 If you are running one of the following releases in mixed mode, you must run the CTL client:

- Cisco Unified Communications Manager Release 7.1(2)
  - All regular releases of 7.1(2)
  - All ES releases of 712 prior to 007.001(002.32016.001)
- Cisco Unified Communications Manager Release 7.1(3)
  - All regular releases of 713 prior to 007.001(003.21900.003) = 7.1(3a)su1a
  - All ES releases of 713 prior to 007.001(003.21005.001)

Note For more information about running the CTL client, see the “Configuring the CTL Client” chapter.

Step 6 If "Prepare Cluster for Rollback to pre 8.0" is set to True in Enterprise Parameters then the following change must be made for Corporate Directories to work:
Under **Device > Device Settings > Phone Services > Corporate Directory** you must change the Service URL from Application:Cisco/CorporateDirectory to http://<ipaddr>:8080/ccmcip/xmldirectoryinput.jsp.

Step 7 If "Prepare Cluster for Rollback to pre 8.0" is set to True in Enterprise Parameters then the following change must be made for Personal Directories to work:
Under **Device > Device Settings > Phone Services > Personal Directory** you must change the Service URL from Application:Cisco/PersonalDirectory to 'http://<ipaddr>>:8080/ccmpd/pdCheckLogin.do?name=undefined.

Switch Back to Release 8.6 or Later After Revert

If you decide to switch back to the release 8.6 or later partition after you revert the cluster to Release 7.x, follow this procedure.

Procedure

Step 1 Follow the procedure for switching the cluster back to the inactive partition. For more information, see the *Administration Guide for Cisco Unified Communications Manager* .

Step 2 If you were running one of the following releases in mixed mode, you must run the CTL client:
Cisco Unified Communications Manager Release 7.1(2)

- All regular releases of 7.1(2)
- All ES releases of 712 prior to 007.001(002.32016.001)
- Cisco Unified Communications Manager Release 7.1(3)
  - All regular releases of 713 prior to 007.001(003.21900.003) = 7.1(3a)su1a
  - All ES releases of 713 prior to 007.001(003.21005.001)

Note For more information about running the CTL client, see the “Configuring the CTL Client” chapter.

Step 3 From Cisco Unified Communications Manager Administration, choose **System** > **Enterprise Parameters Configuration**.
The **Enterprise Parameters Configuration** window displays.

Set the Prepare Cluster for Rollback to pre-8.6 enterprise parameter to **False**.

Step 4 Wait ten minutes for the Cisco Unified IP Phones to automatically restart and register with Cisco Unified Communications Manager.

Migrate IP Phones Between Clusters with Cisco Unified Communications Manager and ITL Files

Cisco Unified Communications Manager 8.0(1) and later introduced the new Security By Default feature and the use of Initial Trust List (ITL) files. With this new feature, you must be careful when moving phones between different Unified CM clusters and ensure that you follow the proper steps for migration.

Caution Failure to follow the proper steps may lead to a situation where thousands of phones must manually have their ITL files deleted.

Cisco Unified IP Phones that support the new ITL file must download this special file from their Unified CM TFTP server. Once an ITL file is installed on a phone, all future configuration files and ITL file updates must be signed by one of the following items:

- The TFTP server certificate that is currently installed on the phone or
- A TFTP certificate that can be validated TVS services on one of the clusters. You can find the certificates of TVS services within the cluster listed in the ITL file.

With this new security functionality in mind, three problems can occur when moving a phone from one cluster to another cluster:

1. The ITL file of the new cluster is not signed by the current ITL file signer, so the phone cannot accept the new ITL file or configuration files.
2. The TVS servers listed in the existing ITL of the phone may not be reachable when the phones are moved to the new cluster.
3. Even if the TVS servers are reachable for certificate verification, the old cluster servers may not have the new server certificates.

If one or more of these three problems are encountered, one possible solution is to delete the ITL file manually from all phones being moved between clusters. However, this is not a desirable solution since it requires massive effort as the number of phones increases.

The most preferred option is to make use of the Cisco Unified CM Enterprise Parameter Prepare Cluster for Rollback to pre-8.0. Once this parameter is set to True, the phones download a special ITL file that contains empty TVS and TFTP certificate sections.

When a phone has an empty ITL file, the phone accepts any unsigned configuration file (for migrations to Unified CM pre-8.x clusters), and also accepts any new ITL file (for migrations to different Unified CM 8.x clusters).

The empty ITL file can be verified on the phone by checking **Settings** > **Security** > **Trust List** > **ITL**. Empty entries appear where the old TVS and TFTP servers used to be.

The phones must have access to the old Unified CM servers only as long as it takes them to download the new empty ITL files.

If you plan to keep the old cluster online, disable the Prepare Cluster for Rollback to pre-8.0 Enterprise Parameter to restore Security By Default.

Related Topics

Roll Back Cluster to a Pre-8.0 Release, on page 57

Bulk Certificate Export

If both the old and new clusters are online at the same time, you can use the Bulk Certificate migration method.

Remember that the Cisco Unified IP Phones verify every downloaded file against either the ITL file, or against a TVS server that exists in the ITL file. If the phone needs to move to a new cluster, the ITL file that the new cluster presents must be trusted by the old cluster TVS certificate store.

Note The Bulk Certificate Export method only works if both clusters are online with network connectivity while the phones are being migrated.

To use the Bulk Certificate Export method complete the following procedure:

Procedure

Step 1 From Cisco Unified Operating System Administration, choose **Security** > **Bulk Certificate Management**.

Step 2 Export certificates from new destination cluster (TFTP only) to a central SFTP server.

Step 3 Consolidate certificates (TFTP only) on the SFTP server using the Bulk Certificate interface.

Step 4 On the origination cluster use the Bulk Certificate function to import the TFTP certificates from the central SFTP server.

Step 5 Use DHCP option 150, or some other method, to point the phones to the new destination cluster.
The phones download the new destination cluster ITL file and attempt to verify it against their existing ITL file. The certificate is not in the existing ITL file so the phone requests the old TVS server to verify the signature of the new ITL file. The phone sends a TVS query to the old origination cluster on TCP port 2445 to make this request.

If the certificate export/consolidate/import process works correctly then the TVS returns success, and the phone replaces the ITL file in memory with the newly downloaded ITL file.

The phones can now download and verify the signed configuration files from the new cluster.

Generate Self-Signed Certificate

Procedure

Step 1 From Cisco Unified OS Administration, choose **Security** > **Certificate Management**.
The **Certificate List** window appears.

Step 2 Enter search parameters to find a certificate and view its configuration details.
The system displays the records that match all the criteria in the **Certificate List** window.

Step 3 Click **Generate Self-Signed Certificate** to generate a new self-signed certificate.

The **Generate New Self-Signed Certificate** window appears.

Step 4 From the **Certificate Purpose** drop-down box, select a system security certificate, such as **CallManager-ECDSA**.

Step 5 Configure the fields in the **Generate New Self-Signed Certificate** window. See the Related Topics section for more information about the fields and their configuration options.

Step 6 Click **Generate**.

Related Topics

Self-signed Certificate Fields, on page 61

Self-signed Certificate Fields

Table 8: Self-signed Certificate Fields

Field	Description
Certificate Purpose	From the drop-down box, select a value: • **CallManager**: When you select this option, the **Key Type** field is automatically set to RSA. • **CallManager-ECDSA**: When you select this option, the**Key Type** field is automatically set to EC (Elliptical Curve).
Distribution	Select a Cisco Unified Communications Manager server.
Common Name	Shows the name of the Cisco Unified Communications Manager application that you selected in the **Distribution** field.
Auto-populated Domains	This field appears in Subject Alternate Names (SANs) section and appears only for CallManager-ECDSA. The **Auto-populated Domains** field lists the host names that are to be protected by a single certificate. Generally, certificate common name is same as the host name. However, CallManager-ECDSA certificate has a common name that differs from host name. The **Auto-populated Domains** field displays the fully qualified domain name for CallManager-ECDSA certificate.
Key Type	This field lists the type of key used for encryption and decryption for the public-private key pair. Cisco Unified Communications Manager supports **EC** and **RSA** key types.

Field	Description
Key Length	From the **Key Length** drop-down box, select one of the values. Depending on the key length, the self-signed certificate request limits the hash algorithm choices. By having the limited hash algorithm choices, you can use a hash algorithm strength that is greater than or equal to the key length strength. For example, for a key length of 256, the supported hash algorithms are SHA256, SHA384, or SHA512. Similarly, for the key length of 384, the supported hash algorithms are SHA384 or SHA512. **Note** Certificates with a **key length** value of 3072 or 4096 can only be selected for RSA certificates. These options are not available for ECDSA certificates. **Note** Some phone models may fail to register if the RSA **key length** selected for the CallManager **Certificate Purpose** is greater than 2048. From the Unified CM Phone Feature List Report on the Cisco Unified Reporting Tool (CURT), you can check the **3072/4096 RSA key size support** feature for the list of supported phone models.
Hash Algorithm	Select a value from the **Hash Algorithm** drop-down box that is larger or equal to the key length. **Note** The values for the **Hash Algorithm** field change based on the value you select in the **Key Length** field.

Generate Certificate Signing Request

If you generate a new certificate signing request for a specific certificate type, the application overwrites the existing certificate signing request for that certificate type.

Note Cisco Unified Communications Manager Release 11.0 onwards, when you choose the bulk operation units—TFTP or all, the ECDSA certificates get included with the RSA certificates.

Procedure

Step 1 From Cisco Unified OS Administration, choose **Security** > **Certificate Management**.
The **Certificate List** window appears.

Step 2 Click **Generate CSR**.
The **Generate Certificate Signing Request** window appears.

Step 3 Enter search parameters to find a certificate and view its configuration details.

The system displays the records that match all the criteria in the **Certificate List** window.

Step 4 From the **Certificate Purpose** drop-down box, select a system security certificate, such as **CallManager-ECDSA**.

Step 5 Configure the fields in the **Generate Certificate Signing Request** window. See the Related Topics section for more information about the fields and their configuration options.

Step 6 Click **Generate**.

Related Topics

Certificate Signing Request Fields, on page 63

Certificate Signing Request Fields

Table 9: Certificate Signing Request Fields

Field	Description
Certificate Purpose	From the drop-down box, select a value: • **CallManager** • **CallManager-ECDSA**
Distribution	Select a Cisco Unified Communications Manager server. When you select this field for multiserver for ECDSA, the syntax is: `Callmanager-ecdsa common name: <host-name>-EC-ms.<domain>` When you select this field for multiserver for RSA, the syntax is: `Callmanager common name: <host-name>-ms.<domain>`
Common Name	Shows the name of the Cisco Unified Communications Manager application that you selected in the **Distribution** field by default.
Auto-populated Domains	This field appears in Subject Alternate Names (SANs) section. It lists the host names that are to be protected by a single certificate.
Parent Domain	This field appears in Subject Alternate Names (SANs) section. It shows the default domain name. You can modify the domain name, if required.
Key Type	This field identifies the type of key used for encryption and decryption for the public-private key pair. Cisco Unified Communications Manager supports **EC** and **RSA** key types.

Field	Description
Key Length	From the **Key Length** drop-down box, select one of the values. Depending on the key length, the CSR request limits the hash algorithm choices. By having the limited hash algorithm choices, you can use a hash algorithm strength that is greater than or equal to the key length strength. For example, for a key length of 256, the supported hash algorithms are SHA256, SHA384, or SHA512. Similarly, for the key length of 384, the supported hash algorithms are SHA384 or SHA512. **Note** Certificates with a **key length** value of 3072 or 4096 can only be selected for RSA certificates. These options are not available for ECDSA certificates. **Note** Some phone models may fail to register if the RSA **key length** selected for the CallManager **Certificate Purpose** is greater than 2048. From the Unified CM Phone Feature List Report on the Cisco Unified Reporting Tool (CURT), you can check the **3072/4096 RSA key size support** feature for the list of supported phone models.
Hash Algorithm	Select a value from the **Hash Algorithm** drop-down box to have stronger hash algorithm as the elliptical curve key length. From the **Hash Algorithm** drop-down box, select one of the values. **Note** The values for the **Hash Algorithm** field change based on the value you select in the **Key Length** field.

Interactions and Restrictions

- SIP devices that do not support **TLS_ECDHE_ECDSA_WITH_AES256_SHA384** and **TLS_ECDHE_ECDSA_WITH_AES128_SHA256** can still connect with **TLS_ECDHE_RSA_WITH_AES_256_SHA384**, **TLS_ECDHE_RSA_WITH_AES_128_SHA256**, or **AES128_SHA1**. These options are dependent on the TLS cipher option that you choose. If you choose **ECDSA only** option, then the device that does not support the ECDSA ciphers will not be able make a TLS connection to the SIP interface. When you choose the **ECDSA only** option, the value of this parameter are **TLS_ECDHE_ECDSA_WITH_AES128_SHA256** and **TLS_ECDHE_ECDSA_WITH_AES256_SHA384**.
- CTI Manager Secure clients do not support **TLS_ECDHE_RSA_WITH_AES_128_SHA256** , **TLS_ECDHE_RSA_WITH_AES_256_SHA384**, **TLS_ECDHE_ECDSA_WITH_AES_128_SHA256**, and **TLS_ECDHE_ECDSA_WITH_AES_256_SHA384**. However, they can connect with **AES128_SHA1**.

Perform Bulk Reset of ITL File

When devices on a Unified Communications Manager cluster are locked and lose their trusted status, perform a bulk reset of the Identity Trust List (ITL) file with the CLI command **utils itl reset**. This command generates a new ITL recovery file.

Tip Whenever you perform a fresh installation of Unified Communications Manager, export the ITL key as soon as possible and perform a backup through the Disaster Recovery System.

The CLI command to export the ITL recovery pair is as follows:

file get tftp *ITLRecovery.p12*
You will be prompted to enter the SFTP server (where the key will be exported) and password.

Before You Begin

Make sure you perform this procedure on the Cisco Unified Communications Manager publisher.

If needed, export the key from the publisher.

Procedure

Step 1 Perform one of the following steps:

- Run **utils itl reset localkey**.
- Run **utils itl reset remotekey**.

For **utils itl reset localkey**, the local key resides on the publisher. This step generates a new ITL file by taking the existing file on the system and replacing the signature of that file with the recovery key signature. The key is then copied to the TFTP servers in the cluster.

Step 2 Run **show itl** to verify that the reset was successful.

Step 3 From Cisco Unified Communications Manager Administration, select **System** > **Enterprise Parameters**

Step 4 Select **Reset**.
The devices restart. They are ready to download the ITL file that is signed by the ITLRecovery key and accept configuration files.

Step 5 Restart the TFTP service and restart all devices.
The devices download the ITL file that is signed with the TFTP key and register correctly to Unified Communications Manager again.

View the Validity of ITLRecovery Certificate

Procedure

Step 1 From the Cisco Unified OS Administration, choose **Security** > **Certificate Management**.
The **Certificate List** window appears.

Step 2 Enter search parameters to find a certificate and view its configuration details.
The system displays the records that match all the criteria in the **Certificate List** window.

Step 3 Click the **ITLRecovery** link to view the validity.

The validity appears as 20 years from the current year.

Step 4 Click **OK**.

Enable Contact Search Authentication

Complete the following tasks to set up Contact Search Authentication in Cisco Unified Communications Manager. When this feature is configured, users must authenticate themselves before searching the directory for other users.

Procedure

	Command or Action	Purpose
Step 1	Confirm Phone Support for Contact Search Authentication, on page 66	Confirm that your phones support this feature. Run the **Unified CM Phone Feature List** report in Cisco Unified Reporting to get a list of phone models that support the feature.
Step 2	Configure Contact Search Authentication, on page 67	Configure Cisco Unified Communications Manager for Contact Search Authentication.
Step 3	Configure Secure Directory Server for Contact Search, on page 67	Use this procedure to configure Cisco Unified Communications Manager with the URL to which phone users are directed when they search the directory for other users.

Confirm Phone Support for Contact Search Authentication

Confirm that the phones in your deployment support contact search authentication. Run a Phone Feature List report to obtain a full list of phone models that support the feature.

Procedure

Step 1 From Cisco Unified Reporting, click **System Reports**.

Step 2 Select **Unified CM Phone Feature**.

Step 3 Click the **Unified CM Phone Feature** report.

Step 4 Leave the **Product** field at the default value.

Step 5 From the **Feature** drop-down, choose **Authenticated Contact Search**.

Step 6 Click **Submit**.

What to Do Next

Configure Contact Search Authentication, on page 67

Configure Contact Search Authentication

Use this procedure on Cisco Unified Communications Manager to configure contact search authentication for phone users.

Procedure

Step 1 Log in to the Command Line Interface.

Step 2 Run the **utils contactsearchauthentication status** command to confirm the contact search authentication setting on this node.

Step 3 If you need to configure contact search authentication:

- To enable authentication, run the **utils contactsearchauthentication enable** command.
- To disable authentication, run the **utils contactsearchauthentication disable** command.

Step 4 Repeat this procedure on all Cisco Unified Communications Manager cluster nodes.

Note You must reset phones in order for the changes to take effect.

What to Do Next

Configure Secure Directory Server for Contact Search, on page 67

Configure Secure Directory Server for Contact Search

Use this procedure to configure Cisco Unified Communications Manager with the directory server URL to which UDS sends user search requests. The default value is `https://<cucm-fqdn-or-ip>:port/cucm-uds/users`.

Note The default UDS port is 8443. When contact search authentication becomes enabled, the default UDS port switches to 9443. If you then disable contact search authentication, you must change the UDS port back to 8443 manually.

Procedure

Step 1 From Cisco Unified CM Administration, choose **System** > **Enterprise Parameters**.

Step 2 In the **Secure Contact Search URL** text box, enter the URL for secure UDS directory requests.

Note We recommend that for the URL, you choose a node that is not running the Cisco TFTP service. The CiscoTFTP and UDS services may disrupt each other if either service gets restarted.

Step 3 Click **Save**.

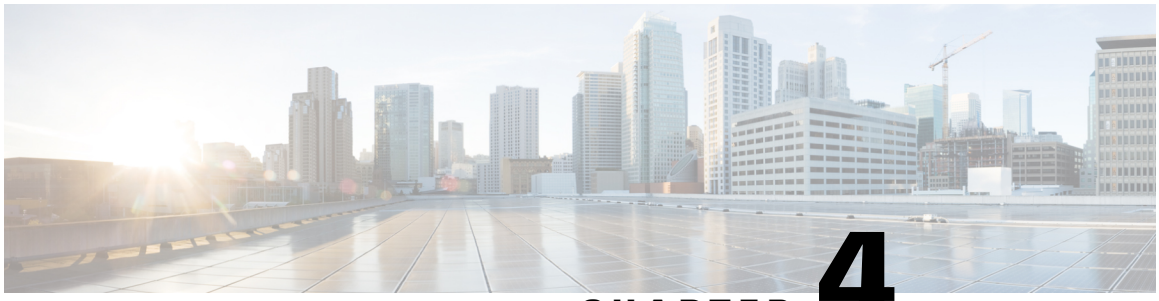

CHAPTER 4

Cisco CTL Client Setup

This chapter provides information about Cisco CTL client setup.

- About Cisco CTL Client Setup, page 70
- Addition of Second SAST Role in the CTL File for Recovery, page 70
- Cluster Encryption Configuration Through CLI, page 71
- Remove eToken Run Time Environment 3.00 for CTL Client 5.0 Plug-In, page 72
- Cisco CTL Client Setup Tips, page 73
- Set Up Cisco CTL Client, page 74
- Activate Cisco CTL Provider Service, page 75
- Cisco CAPF Service Activation, page 76
- Set Up Ports for TLS Connection, page 76
- Cisco CTL Client Installation, page 77
- Upgrade Cisco CTL Client and Migrate Cisco CTL File, page 79
- Set Up Cisco CTL Client, page 79
- Update CTL File, page 83
- Delete CTL File Entry, page 85
- Update Cisco Unified Communications Manager Security Mode, page 85
- Cisco CTL Client Settings, page 86
- Verify Cisco Unified Communications Manager Security Mode, page 88
- Set Up Smart Card Service to Started or Automatic, page 89
- Security Token Password (eToken) Modification, page 89
- Delete CTL File on Cisco Unified IP Phone, page 90
- Determine Cisco CTL Client Version, page 91
- Verify or Uninstall Cisco CTL Client, page 91

About Cisco CTL Client Setup

Device, file, and signaling authentication rely on the creation of the Certificate Trust List (CTL) file, which is created when you install and configure the Cisco Certificate Trust List (CTL) Client on a single Windows workstation or server that has a USB port.

Note Supported Windows versions for Cisco CTL Client include Windows Vista, Windows 7, Windows 8.1 and Windows 10. Do not use Terminal Services to install the Cisco CTL Client. Cisco installs Terminal Services, so Cisco Technical Assistance Center (TAC) can perform remote troubleshooting and configuration tasks.

The CTL file contains entries for the following servers or security tokens:

- System Administrator Security Token (SAST)
- Cisco CallManager and Cisco TFTP services that are running on the same server
- Certificate Authority Proxy Function (CAPF)
- TFTP server(s)
- ASA firewall

The CTL file contains a server certificate, public key, serial number, signature, issuer name, subject name, server function, DNS name, and IP address for each server.

After you create the CTL file, you must restart the Cisco CallManager and Cisco TFTP services in Cisco Unified Serviceability on all nodes that run these services. The next time that the phone initializes, it downloads the CTL file from the TFTP server. If the CTL file contains a TFTP server entry that has a self-signed certificate, the phone requests a signed configuration file in .sgn format. If no TFTP server contains a certificate, the phone requests an unsigned file.

After the Cisco CTL Client adds a server certificate to the CTL file, you can display the certificate in the CTL Client GUI.

When you configure a firewall in the CTL file, you can secure a Cisco ASA Firewall as part of a secure Cisco Unified Communications Manager system. The Cisco CTL Client displays the firewall certificate as a “CCM” certificate.

Cisco Unified Communications Manager Administration uses an etoken to authenticate the TLS connection between the Cisco CTL Client and Cisco CTL Provider.

Addition of Second SAST Role in the CTL File for Recovery

Earlier releases of Cisco Unified Communications Manager that used tokenless approach where endpoints trusted only one Cisco site administrator security token (SAST). This SAST is the CallManager certificate. In this approach, the certificate trust list (CTL) file contained only one SAST record that was used to sign the CTL file. As only one SAST was used, any update in the SAST signer caused the endpoints to get locked out. Following points list the scenarios when endpoints locked out due to update in SAST signer:

- The endpoints accepted the CTL file that is signed by using the CallManager certificate during registration.

- An administrator regenerated the CallManager certificate and updated the CTL file. This regeneration implied that the updated CTL file was signed by updated CallManager certificate instead of the existing CallManager certificate.
- The endpoints did not trust the updated CallManager certificate because the updated certificate was unavailable in the endpoints trust list. So, the endpoints rejected the CTL file instead of downloading it.
- The endpoints tried to connect with the ccm service securely over Transport Layer Security (TLS), ccmservice offered its updated CallManager certificate to the endpoints as part of TLS exchange. Because the updated certificate was unavailable in the endpoints trust list, endpoints rejected the CTL file instead of downloading it.
- The phones no longer talk to ccmservice and get locked out as a result.

For easier recovery from the end point lock out, the tokenless approach for endpoints is enhanced by addition of second SAST in the CTL File for recovery. In this feature, the tokenless CTL file contains two SAST tokens—the CallManager record and the ITLRecovery record.

The ITLRecovery certificate is chosen over other certificates because of the following reasons:

- Does not change because of secondary reasons, such as change in hostname.
- Already being used in the ITL file.

Cluster Encryption Configuration Through CLI

Through the CLI, you can manage the cluster security mode without using the Cisco CTL Client.

Consider the following points:

- With this option, the CTL file is generated using a CLI instead of through the Cisco CTL Client.
- No hardware tokens are required.
- The CTL file is signed using the CallManager certificate private key.

This encryption option consists of the following CLI commands:

utils ctl set-cluster mixed-mode

Updates the CTL file and sets the cluster to mixed mode.

utils ctl set-cluster non-secure-mode

Updates the CTL file and sets the cluster to non-secure mode.

utils ctl update CTLFile

Updates the CTL file on each node in the cluster.

Note

- You must run the CLI commands on the publisher node.
- Be aware that regenerating the CallManager certificate changes the signer of the file. Phones that do not support Security by Default will not accept the new CTL file unless CTL files are manually deleted from the phone.

Related Topics

Obtain Cisco Unified IP Phone Support List, on page 50

Return to CTL Client for Cluster Encryption

If you secured the cluster by using the CLI command set **utils ctl**, you can return to the Cisco CTL Client option.

Follow this procedure to return to the Cisco CTL Client option for encryption or to return your cluster to non-secure mode.

Procedure

Step 1 Set the cluster to non-secure mode by using the CLI command **utils ctl set-cluster non-secure-mode**.

Step 2 Delete `CTLFile.tlv` on the publisher node by using the CLI command **file delete tftp** *CTLFile.tlv*.

Step 3 On the windows machine, open the Safenet 8.2 utility and perform the following steps:

a) Go to **Advanced View** > **Safenet Authentication Client Tools** > **Token**.
b) Insert the first USB token and right click on the certificate.
c) Export it to any location on the PC.
d) Perform the same steps for the second USB token.

Step 4 On the Cisco Unified OS Administration GUI, go to **Security** > **Certificate Management** > **Upload Certificate** and perform the following steps:

a) From **Upload Certificate**, choose the certificate name "Phone-SAST-Trust."
b) Select the first certificate that was exported from the USB token in Step 3 that you want to import.
c) Import the remaining USB token certificates using the preceding steps.

After you import the two certificates into the trust folder, you can run the Cisco CTL Client and move the cluster to secure mode.

Remove eToken Run Time Environment 3.00 for CTL Client 5.0 Plug-In

If you are upgrading to the CTL Client 5.0 or 5.2 plug-in, you first need to remove eToken Run Time Environment 3.00 by performing the following steps:

Procedure

Step 1 Download Windows Installer Cleanup Utility at the following URL:
http://support.microsoft.com/kb/290301

Step 2 Install the utility on your PC.

Step 3 Run the utility.

Step 4 Find eToken rte3.0 in the list of programs and remove it.

Step 5 Proceed with CTL Client installation.

Cisco CTL Client Setup Tips

Consider the following information when you configure the Cisco CTL Client in Cisco Unified Communications Manager:

- The Cisco CTL Client limits the file size of a CTL file to 64 kilobytes because the phones cannot accept a larger CTL file. The following factors affect the size of a CTL file:
  - The number of nodes in the cluster

    More nodes require more certificates in the CTL file.
  - The number of firewalls that are used for TLS Proxy

    Firewalls with TLS Proxy feature, which are the same as nodes, therefore get included in the CTL file.
  - Whether an external certificate authority (CA) signs the CAPF and CallManager certificates

    Because certificates (CAPF/CallManager) that are signed by an external CA are significantly larger than default self-signed certificates, this can limit the maximum number of certificates that can fit into the CTL file.

    These factors directly limit the maximum number of certificates that you can fit in a 64-kilobyte CTL file, so they dictate the maximum number of nodes or firewalls that you can have in a secure Cisco Unified Communications Manager deployment.
- Ensure that the Cisco Unified Communications Manager node hostname or hostnames are resolvable on the remote PC where the Cisco CTL Client is installed, or the Cisco CTL Client will not function correctly.
- You must activate the Cisco CTL Provider service. If you have a cluster environment, you must activate the Cisco CTL Provider service on all servers in the cluster.
- After you create or update the CTL file, you must restart the Cisco CallManager and Cisco TFTP services in Cisco Unified Serviceability on all Cisco Unified Communications Manager servers that run these services and on all TFTP servers in the cluster.
- When the Cisco CTL Client contains entries for off-cluster servers, such as alternate or centralized TFTP server, you must also run the Cisco CTL Provider service on these servers.

- The alternate TFTP server section of the Cisco CTL Client GUI designates a Cisco TFTP server that exists in a different cluster. Use the Alternate TFTP Server Tab settings to configure alternate and centralized TFTP servers in the Cisco CTL Client.

Note For more information see the *System Configuration Guide for Cisco Unified Communications Manager* .

- For centralized TFTP configurations, all off-cluster TFTP servers that are operating in mixed mode must add the Master TFTP server or Master TFTP server IP address to the off-cluster CTL file. The master TFTP server serves configuration files from all alternate TFTP servers in the alternate file list that is configured for the master TFTP server. Clusters in a centralized TFTP configuration do not need to use the same security mode; each cluster can select its own mode.

Set Up Cisco CTL Client

Follow this procedure if you are using the CTL Client option.

Note This procedure requires that you obtain at least two security tokens, as well as the passwords, hostnames/IP addresses, and port numbers for the servers that you will configure for the Cisco CTL Client.

The following table provides a list of configuration tasks that you perform to install and configure the Cisco CTL Client for the first time. See topics related to upgrading the Cisco CTL Client and migrating the Cisco CTL file for more information about configuring the CTL file when you upgrade Cisco Unified Communications Manager.

Procedure

Step 1 Obtain at least two security tokens and the passwords, hostnames/IP addresses, and port numbers for the servers that you will configure for the Cisco CTL Client.

Step 2 Ensure that all the servers in the cluster are online and reachable from the PC on which the CTL Client will run. If a server is configured with a hostname, ping the hostname to verify reachability.

Step 3 Ensure that all of the hostnames of the cluster servers are defined in the DNS server that is configured on the publisher server.

Step 4 Activate the Cisco CTL Provider service in Cisco Unified Serviceability.
Activate the Cisco CTL Provider service on each Cisco Unified Communications Manager server in the cluster.

Tip If you activated this service prior to a Cisco Unified Communications Manager upgrade, you do not need to activate the service again. The service automatically activates after the upgrade.

Step 5 Activate the Cisco Certificate Authority Proxy service in Cisco Unified Serviceability.

Tip Activate the Cisco Certificate Authority Proxy service only on the first node in the cluster.

Timesaver Performing this task before you install and configure the Cisco CTL Client ensures that you do not have to update the CTL file to use CAPF.

Step 6 If you do not want to use the default settings, configure ports for the TLS connection.

Tip If you configured these settings prior to a Cisco Unified Communications Manager upgrade, the settings migrate automatically.

Step 7 Install the Cisco CTL Client.

Step 8 Configure the Cisco CTL Client.

Related Topics

Activate Certificate Authority Proxy Function Service, on page 130
Activate Cisco CTL Provider Service, on page 75
Cisco CTL Client Installation, on page 77
CTL Client, SSL, CAPF, and Security Token Installation, on page 18
Set Up Ports for TLS Connection, on page 76
System Requirements, on page 7
Upgrade Cisco CTL Client and Migrate Cisco CTL File, on page 79

Activate Cisco CTL Provider Service

After you configure the Cisco CTL Client, the Cisco CTL Provider service changes the security mode from nonsecure to mixed mode and transports the server certificates to the CTL file. The service then transports the CTL file to all Cisco Unified Communications Manager and Cisco TFTP servers.

If you activate this service and then upgrade Cisco Unified Communications Manager, Cisco Unified Communications Manager automatically reactivates the service after the upgrade.

Tip You must activate the Cisco CTL Provider service on all servers in the cluster.

To activate the service, perform the following procedure:

Procedure

Step 1 In Cisco Unified Serviceability, choose **Tools** > **Service Activation**.

Step 2 In the Servers drop-down list box, choose a server where you have activated the Cisco CallManager or Cisco TFTP services.

Step 3 Click the **Cisco CTL Provider** service radio button.

Step 4 Click **Save.**

Tip Perform this procedure on all servers in the cluster.

Note You can enter a CTL port before you activate the Cisco CTL Provider service. If you want to change the default port number, see topics related to setting up ports for a TLS connection.

Step 5 Verify that the service runs on the servers. In Cisco Unified Serviceability, choose **Tools** > **Control Center - Feature Services** to verify the state of the service.

Related Topics

Set Up Ports for TLS Connection, on page 76

Cisco CAPF Service Activation

Warning Activating the Cisco certificate authority proxy function service before you install and configure the Cisco CTL Client ensures that you do not have to update the CTL file to use CAPF.

Related Topics

Activate Certificate Authority Proxy Function Service, on page 130

Set Up Ports for TLS Connection

You may have to configure a different TLS port number if the default port is currently being used or if you use a firewall and you cannot use the port within the firewall.

- The Cisco CTL Provider default port for the TLS connection equals 2444. The Cisco CTL Provider port monitors requests from the Cisco CTL Client. This port processes Cisco CTL Client requests, such as retrieving the CTL file, setting the cluster security mode, and saving the CTL file to the TFTP server.

Note Cluster security mode configures the security capability for your standalone server or a cluster.

- The Ethernet Phone Port monitors registration requests from the phone that is running SCCP. In nonsecure mode, the phone connects through port 2000. In mixed mode, the Cisco Unified Communications Manager port for TLS connection equals the value for the Cisco Unified Communications Manager port number added to (+) 443; therefore, the default TLS connection for Cisco Unified Communications Manager equals 2443. Update this setting only if the port number is in use or if you use a firewall and you cannot use the port within the firewall.
- The SIP Secure Port allows Cisco Unified Communications Manager to listen for SIP messages from phones that are running SIP. The default value equals 5061. If you change this port, you must restart the Cisco CallManager service in Cisco Unified Serviceability and reset the phones that are running SIP.

Tip After you update the port(s), you must restart the Cisco CTL Provider service in Cisco Unified Serviceability.

Tip You must open the CTL ports to the data VLAN from where the CTL Client runs.

To change the default setting, perform the following procedure:

Procedure

Step 1 Perform the following tasks, depending on the port that you want to change:

a) To change the Port Number parameter for the Cisco CTL Provider service, perform Step 2, on page 77 through Step 6, on page 77.

b) To change the Ethernet Phone Port or SIP Phone Secure Port settings, perform Step 7, on page 77 through Step 11, on page 77.

Step 2 To change the Cisco CTL Provider port, choose **System** > **Service Parameters** in Cisco Unified Communications Manager Administration.

Step 3 In the Server drop-down list, choose a server where the Cisco CTL Provider service runs.

Step 4 In the Service drop-down list box, choose Cisco CTL Provider service.

Tip For information on the service parameter, click the question mark or the link name.

Step 5 To change the value for the Port Number parameter, enter the new port number in the Parameter Value field.

Step 6 Click **Save.**

Step 7 To change the Ethernet Phone Port or SIP Phone Secure Port settings, choose **System** > **Cisco Unified CM** in Cisco Unified Communications Manager Administration.

Step 8 Find a server where the Cisco CallManager service runs, as described in the *Administration Guide for Cisco Unified Communications Manager*; after the results display, click the **Name** link for the server.

Step 9 After the Cisco Unified Communications Manager Configuration window displays, enter the new port numbers in the Ethernet Phone Port or SIP Phone Secure Port fields.

Step 10 Reset the phones and restart the Cisco CallManager service in Cisco Unified Serviceability.

Step 11 Click **Save**.

Related Topics

Cisco CTL Client Installation

Note This procedure is not required if you manage cluster security using the CLI.

You must use the client and update the CTL file when the following events occur:

- The first time that you set the cluster security mode
- The first time that you create the CTL file
- After the Cisco Unified Communications Manager installation
- After you restore a Cisco Unified Communications Manager server or Cisco Unified Communications Manager data
- After you change the IP address or hostname of the Cisco Unified Communications Manager server
- After you add or remove a security token, if using the Cisco CTL Client

- After you add or remove a ASA firewall
- After you add or remove a TFTP server
- After you add or remove a Cisco Unified Communications Manager server
- After you upload a third-party, CA-signed certificate to the platform

Tip If the Smart Card service is not set to started and automatic on the server or workstation where you plan to install the client, the installation fails.

Install Cisco CTL Client for Windows

To install the Cisco CTL Client for Windows Vista, Windows 7, Windows 8.1, and Windows 10, perform the following procedure:

Procedure

Step 1 From the Windows workstation or server where you plan to install the client, browse to Cisco Unified Communications Manager Administration, as described in the *Administration Guide for Cisco Unified Communications Manager*.

Step 2 In Cisco Unified Communications Manager Administration, choose **Application** > **Plugins**.
The **Find and List Plugins** window displays.

Step 3 From the Plugin Type equals drop-down list box, choose **Installation** and click **Find.**

Step 4 Locate the Cisco CTL Client.

Step 5 To download the file, click **Download** on the left side of the window, directly opposite the Cisco CTL Client plug-in name.

Step 6 Click **Save** and save the file to a location that you will remember.

Step 7 To begin the installation, double-click **Cisco CTL Client** (icon or executable depending on where you saved the file).

Note You can also click **Open** from the Download Complete box.

Step 8 The version of the Cisco CTL Client displays; click **Next**.

Step 9 The installation wizard displays. Click **Next**.

Step 10 Accept the license agreement and click **Next**.

Step 11 Choose a folder where you want to install the client. If you want to do so, click Browse to change the default location; after you choose the location, click **Next**.

Step 12 To begin the installation, click **Next**.

Step 13 After the installation completes, click **Finish**.

Upgrade Cisco CTL Client and Migrate Cisco CTL File

If you want to make changes to the CTL file after a Cisco Unified Communications Manager Release 5.x to 6.x upgrade, you must uninstall the Cisco CTL Client that you installed prior to the upgrade, install the latest Cisco CTL Client and regenerate the CTL file. If you did not remove or add any servers before the upgrade, you do not need to reconfigure the Cisco CTL Client after the upgrade. The Cisco Unified Communications Manager upgrade automatically migrates the data in the CTL file.

When you upgrade from a Cisco Unified Communications Manager 4.x release to a 6.x release and security is enabled on the cluster, you must uninstall the Cisco CTL Client that you installed prior to the upgrade, install the latest Cisco CTL Client, and regenerate the CTL file. Follow this procedure to enable security on the upgraded cluster:

Procedure

Step 1 Uninstall the existing Cisco CTL Client.

Step 2 Install the new Cisco CTL Client.

Step 3 Run the Cisco CTL Client by using at least one of the previously used USB keys.

Step 4 Restart the Cisco CallManager and Cisco TFTP services in Cisco Unified Serviceability on all Cisco Unified Communications Manager servers that run these services and on all TFTP servers in the cluster.

Related Topics

Cisco CTL Client Installation, on page 77
Where to Find More Information, on page 32

Set Up Cisco CTL Client

Important This information applies to the CTL Client encryption option. You may also set up encryption by using the **utils ctl** CLI command set. For more information about this option, see the *Command Line Interface Guide for Cisco Unified Communications Solutions.*

The Cisco CTL Client performs the following tasks:

- Sets the Cisco Unified Communications Manager security mode for a cluster or standalone server.

Note You cannot set the Cisco Unified Communications Manager cluster security parameter to mixed mode through the Enterprise Parameters Configuration window of Cisco Unified Communications Manager Administration. You can set the cluster security mode through the Cisco CTL Client or the CLI command set **utils ctl**.

- Creates the Certificate Trust List (CTL), which is a file that contains certificate entries for security tokens, Cisco Unified Communications Manager, ASA firewall, and CAPF server.

The CTL file indicates the servers that support TLS for the phone connection. The client automatically detects the Cisco Unified Communications Manager, Cisco CAPF, and ASA firewall and adds certificate entries for these servers.

The security tokens that you insert during the configuration sign the CTL file.

Note The Cisco CTL Client also provides supercluster support: up to 16 call processing servers, 1 publisher, 2 TFTP servers, and up to 9 media resource servers.

Tip Configure the Cisco CTL Client during a scheduled maintenance window because you must restart the Cisco CallManager services and Cisco TFTP services on all servers that run these services in the cluster.

After you complete the Cisco CTL Client configuration, the CTL Client performs the following tasks:

- Writes the CTL file to the Cisco Unified Communications Manager server(s).
- Writes CAPF capf.cer to all Cisco Unified Communications Manager subsequent nodes (not first node) in the cluster.
- Writes CAPF certificate file in PEM format to all Cisco Unified Communications Manager subsequent nodes (not first node) in the cluster.
- Writes the file to all configured TFTP servers.
- Writes the file to all configured ASA firewalls.
- Signs the CTL file with the private key of the security token that exists in the USB port at the time you create the CTL file.

To configure the client, perform the following procedure:

Note This procedure is not required if you manage cluster security through the CLI command set **utils ctl**.

Before You Begin

Tip See topics related to upgrading the Cisco CTL Client and migrating the Cisco CTL file for more information about configuring the CTL file when you upgrade Cisco Unified Communications Manager.

Before you configure the Cisco CTL Client, verify that you activated the Cisco CTL Provider service and the Cisco Certificate Authority Proxy Function service in Cisco Unified Serviceability. Obtain at least two security tokens; the Cisco certificate authority issues these security tokens. The security tokens must come from Cisco. You will insert the tokens one at a time into the USB port on the server/workstation. If you do not have a USB port on the server, you may use a USB PCI card.

Obtain the following passwords, hostnames/IP addresses, and port numbers:

- Administrative username and password for Cisco Unified Communications Manager

Tip Ensure the administrative username is an application user, not an end user, and a member of a super user group with super user roles.

- Security token administrative password
- Administrative username and password for the ASA firewall

See Table 10: CTL Client Configuration Settings, on page 86 for a description of the preceding information.

Tip Before you install the Cisco CTL Client, verify that you have network connectivity to the server. To ensure that you have network connectivity, issue a ping command, as described in the *Administration Guide for Cisco Unified Communications Manager*. In a cluster configuration, verify you have network connectivity to all servers in the cluster.

If you installed multiple Cisco CTL Clients, Cisco Unified Communications Manager accepts CTL configuration information on only one client at a time, but you can perform configuration tasks on up to five Cisco CTL Clients simultaneously. While you perform configuration tasks on one client, Cisco Unified Communications Manager automatically stores the information that you entered on the other clients.

After you complete the Cisco CTL Client configuration, the CTL Client performs the following tasks:

- Writes the CTL file to the Cisco Unified Communications Manager server(s).
- Writes CAPF capf.cer to all Cisco Unified Communications Manager subsequent nodes (not first node) in the cluster.
- Writes CAPF certificate file in PEM format to all Cisco Unified Communications Manager subsequent nodes (not first node) in the cluster.
- Writes the file to all configured TFTP servers.
- Writes the file to all configured ASA firewalls.
- Signs the CTL file with the private key of the security token that exists in the USB port at the time you create the CTL file.

To configure the client, perform the following procedure:

Procedure

Step 1 Obtain at least two security tokens that you purchased.

Step 2 Perform one of the following tasks:

a) Double-click the **Cisco CTL Client** icon that exists on the desktop of the workstation/server where you installed it.

b) Choose **Start** > **Programs** > **Cisco CTL Client**.

Step 3 Enter the configuration settings for the Cisco Unified Communications Manager server, as described in Table 10: CTL Client Configuration Settings, on page 86; click **Next.**

Step 4 Click **Set Cisco Unified Communications Manager Cluster to Mixed Mode**, then click **Next.**
See Table 10: CTL Client Configuration Settings, on page 86 for field descriptions.

Step 5 Perform the following tasks, depending on what you want to accomplish:

a) To add a security token, see Cisco CTL Client Setup, on page 69 through Cisco CTL Client Setup, on page 69.

b) To complete the Cisco CTL Client configuration, see Cisco CTL Client Setup, on page 69 through Cisco CTL Client Setup, on page 69.

Caution You need a minimum of two security tokens the first time that you configure the client. Do not insert the tokens until the application prompts you to do so. If you have two USB ports on the workstation or server, do not insert two security tokens at the same time.

Step 6 When the application prompts you to do so, insert one security token in an available USB port on the workstation or server where you are currently configuring the Cisco CTL Client; click **OK**.

Step 7 The security token information displays for the token that you inserted; click **Add**.

Step 8 The detected certificate entries display in the pane.

Step 9 To add other security token(s) to the certificate trust list, click **Add Tokens**.

Step 10 If you have not already done so, remove the token that you inserted into the server or workstation. When the application prompts you to do so, insert the next token and click **OK**.

Step 11 The security token information for the second token displays; click **Add**.

Step 12 For all security tokens, repeat Cisco CTL Client Setup, on page 69 through Cisco CTL Client Setup, on page 69.

Step 13 The certificate entries display in the pane.

Step 14 Enter the configuration settings.
See Table 10: CTL Client Configuration Settings, on page 86 for field descriptions.

Step 15 Click **Next**.

Step 16 Enter the configuration settings, then click **Next**.
See Table 10: CTL Client Configuration Settings, on page 86 for field descriptions.

Step 17 When you have added all security tokens and servers, click **Finish**.

Step 18 Enter the username password for the security token, then click **OK**.
See Table 10: CTL Client Configuration Settings, on page 86 for field descriptions.

Step 19 After the client creates the CTL file, a window displays the server, file location, and status of the CTL file on each server. Click **Finish.**

Step 20 Reset all devices for your standalone server or cluster.

Step 21 In Cisco Unified Serviceability, restart the Cisco CallManager and Cisco Tftp services.

Tip Restart these services on all Cisco Unified Communications Manager servers that run these services and on all TFTP servers in the cluster.

Step 22 After you create the CTL file through the CTL Client, you may remove the security token from the USB port. Store all security tokens in a safe place that you will remember.

Related Topics

Cisco CTL Client Settings, on page 86
Reset Devices, Reboot Servers and Clusters, and Restart Services, on page 16
Upgrade Cisco CTL Client and Migrate Cisco CTL File, on page 79
Where to Find More Information, on page 32

Update CTL File

Note This procedure is not required if you manage cluster security through the CLI command set **utils ctl**.

You must update the CTL file if the following scenarios occur:

- If you add a new Cisco Unified Communications Manager server to the cluster

  Note To add a node to a secure cluster, see *Installing Cisco Unified Communications Manager*, which describes how to add a node and how to configure security for the new node.

- If you change the name or IP address of a Cisco Unified Communications Manager server
- If you change the IP address or hostname for any configured TFTP servers
- If you change the IP address or hostname for any configured ASA firewall
- If you enabled the Cisco Certificate Authority Function service in Cisco Unified Serviceability
- If you need to add or remove a security token
- If you need to add or remove a TFTP server
- If you need to add or remove a Cisco Unified Communications Manager server
- If you need to add or remove an ASA firewall
- If you restore a Cisco Unified Communications Manager server or Cisco Unified Communications Manager data
- If you manually regenerate certificates on a Cisco Unified Communications Manager cluster that contains a CTL file
- If you update from a CUCM version prior to 7.1.5 to a version 7.1.5 or later.
- After you upload a third-party, CA-signed certificate to the platform

Note When a domain name is added or changed on a Cisco Unified Communications Manager cluster in mixed mode, you must re-run the CTL Client or changes to the phone configuration files do not take effect.

Tip Cisco strongly recommends that you update the file when minimal call-processing interruptions will occur.

Procedure

Step 1 Obtain one security token that you inserted to configure the latest CTL file.

Step 2 Double-click the **Cisco CTL Client** icon that exists on the desktop of the workstation/server where you installed it.

Step 3 Enter the configuration settings for the Cisco Unified Communications Manager server, then click **Next**.
See Table 10: CTL Client Configuration Settings, on page 86 for field descriptions.

Tip You make updates in this window for the Cisco Unified Communications Manager server.

Step 4 To update the CTL file, click **Update CTL File**, and then click **Next**.
See Table 10: CTL Client Configuration Settings, on page 86 for field descriptions.

Caution For all CTL file updates when using the CTL Client option, you must insert one security token that already exists in the CTL file into the USB port. The client validates the signature of the CTL file through this token. You cannot add new tokens until the Cisco CTL Client validates the signature. If you have two USB ports on the workstation or server, do not insert both security tokens at the same time.

Step 5 If you have not already inserted one security token in an available USB port on the workstation or server where you are currently updating the CTL file, insert one of the security tokens; click **OK**.

Step 6 The security token information displays for the token that you inserted; click **Next**.
The detected certificate entries display in the pane.

Tip You cannot update the Cisco Unified Communications Manager, Cisco TFTP, or ASA firewall entries from this pane. To update the Cisco Unified Communications Manager entry, click **Cancel** and perform Step 2, on page 84 through Step 6, on page 84 again.

Step 7 Update existing Cisco CTL entries, or add or delete security tokens.

Step 8 When you have finished updating the CTL file, restart the Cisco CallManager and Cisco TFTP services in Cisco Unified Serviceability.

Tip Restart the TFTP and Cisco CallManager services on all nodes in the cluster that run these services.

Caution If Unified Communications Manager is integrated with Unity Connection 10.5 or later using secure SIP or SCCP, then the secure calls may stop working with Unity Connection. You must reset the corresponding port groups on Unity Connection to resolve this issue.

To reset the port group through the Unity Connection Administration interface, navigate to **Telephony Integrations** > **Port Group**, select the port group that you want to reset, and click **Reset** on the **Port Group Basics** page.

Related Topics

Delete CTL File Entry, on page 85
Where to Find More Information, on page 32

Delete CTL File Entry

At any time, you can delete some CTL entries that display in the CTL Entries window of the Cisco CTL Client.

You cannot delete servers that run Cisco Unified Communications Manager, Cisco TFTP, ASA firewall, or Cisco CAPF from the CTL file.

Two security token entries must exist in the CTL file at all times. You cannot delete all security tokens from the file. Alternatively, you can update the CTL file using the CLI command **utils ctl update CTLFile**.

Procedure

After you open the client and follow the prompts to display the CTL Entries window, highlight the item to delete and click **Delete Selected** to delete the entry.

Related Topics

Update Cisco Unified Communications Manager Security Mode

You must use the Cisco CTL Client to configure the cluster security mode. You cannot change the Cisco Unified Communications Manager security mode from the Enterprise Parameters Configuration window in Cisco Unified Communications Manager Administration.

Note Cluster security mode configures the security capability for a standalone server or a cluster.

To change the cluster security mode after the initial configuration of the Cisco CTL Client, you must update the CTL file.

If you change the cluster security mode from mixed to nonsecure mode, the CTL file still exists on the server(s), but the CTL file does not contain any certificates. Because no certificates exist in the CTL file, the phone requests an unsigned configuration file and registers as nonsecure with Cisco Unified Communications Manager.

Procedure

Navigate to the **Cluster Security Mode** window, change the mode setting, and click **Next**, then **Finish**. See Table 10: CTL Client Configuration Settings, on page 86 for more information.

Related Topics

Update CTL File, on page 83

Cisco CTL Client Settings

Important This information applies to the CTL Client encryption option. You may also set up encryption by using the **utils ctl** CLI command set, which does not require security tokens. For more information about this option, see the *Command Line Interface Guide for Cisco Unified Communications Solutions.*

You can set the cluster security mode to nonsecure or mixed mode, as described in the following table. Only mixed mode supports authentication, encrypted signaling, and encrypted media.

Note Cluster security mode configures the security capability for a standalone server or a cluster.

Use the following table to configure the Cisco CTL Client for the first time, to update the CTL file, or to change the mode from mixed to nonsecure.

Table 10: CTL Client Configuration Settings

Setting	Description
Cisco Unified Communications Manager Server	
Hostname or IP Address	Enter the hostname or IP address for the server for the first node.
Port	Enter the CTL port number for the Cisco CTL Provider service that runs on this Cisco Unified Communications Manager server. The default port number equals 2444.
Username and Password	Enter the same application username and password that has superuser administrative privileges on the first node.
Security Mode	
Set Cisco Unified Communications Manager Cluster to Mixed Mode	Mixed mode allows authenticated, encrypted, and nonsecure Cisco Unified IP Phones to register with Cisco Unified Communications Manager. In this mode, Cisco Unified Communications Manager ensures that authenticated or encrypted devices use a secure port. **Note** Cisco Unified Communications Manager disables auto-registration if you configure mixed mode.

Setting	Description
Set Cisco Unified Communications Manager Cluster to Non-Secure Mode	If you configure nonsecure mode, all devices register as unauthenticated, and Cisco Unified Communications Manager supports image authentication only. When you choose this mode, the Cisco CTL Client removes the certificates for all entries that are listed in the CTL file, but the CTL file still exists in the directory that you specified. The phone requests unsigned configuration files and registers as nonsecure with Cisco Unified Communications Manager. **Tip** To revert the phone to the default nonsecure mode, you must delete the CTL file from the phone and all Cisco Unified Communications Manager servers. You can use auto-registration in this mode.
Update CTL File	After you have created the CTL file, you must choose this option to make any changes to the CTL file. Choosing this option ensures that the Cisco Unified Communications Manager security mode does not change.
CTL Entries	
Add Tokens	Click this button to add additional security token(s) to the certificate trust list. If you have not already done so, remove the token that you initially inserted into the server or workstation. When the application prompts you to do so, insert the next token and click **OK**. When the security token information for the additional token displays, click **Add**. For all security tokens, repeat these tasks.
Add TFTP Server	Click this button to add an Alternate TFTP server to the certificate trust list. For information on the settings, click the **Help** button after the Alternate TFTP Server tab settings display. After you enter the settings, click **Next**.
Add Firewall	Click this button to add an ASA firewall to the certificate trust list. For information on the settings, click the **Help** button after the Firewall tab settings display. After you enter the settings, click **Next**.
Alternate TFTP Server	
Hostname or IP Address	Enter the hostname or IP address for the TFTP server. Alternate TFTP server designates a Cisco TFTP server that exists in a different cluster. If you use two different clusters for the alternate TFTP server configuration, both clusters must use the same cluster security mode, which means that you must install and configure the Cisco CTL Client in both clusters. Likewise, both clusters must run the same version of Cisco Unified Communications Manager. Ensure that the path in the TFTP service parameter, FileLocation, is the same for all servers in the cluster.
Port	Not required with this release of Cisco Unified Communications Manager.

Setting	Description
Username and Password	Not required with this release of Cisco Unified Communications Manager.
Firewall	
Hostname or IP Address	Enter the hostname or IP address for the firewall.
Port	Not configurable. The system uses the Cisco Unified Communications Manager port; the default port number equals 2444.
Username and Password	Not configurable. The system uses the administrator name and password that you configured during Cisco Unified Communications Manager installation.
Security Token	
User Password	The first time that you configure the Cisco CTL client, enter Cisco123, the case-sensitive default password, to retrieve the private key of the certificate and ensure that the CTL file gets signed.

Related Topics

Cisco CTL Client Setup Tips, on page 73
Where to Find More Information, on page 32

Verify Cisco Unified Communications Manager Security Mode

To verify the cluster security mode, perform the following procedure:

Note Cluster security mode configures the security capability for a standalone server or a cluster.

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **System** > **Enterprise Parameters Configuration**.

Step 2 Locate the **Cluster Security Mode** field. If the value in the field displays as **1**, you correctly configured Cisco Unified Communications Manager for mixed mode. (Click the field name for more information.)

Tip You cannot configure this value in Cisco Unified Communications Manager Administration. This value displays after you configure the Cisco CTL Client.

Related Topics

Set Up Smart Card Service to Started or Automatic

If the Cisco CTL Client installation detects that the Smart Card service is disabled, you must set the Smart Card service to automatic and started on the server or workstation where you are installing the Cisco CTL Client plug-in.

Tip You cannot add the security tokens to the CTL file if the service is not set to started and automatic.

Tip After you upgrade the operating system, apply service releases, upgrade Cisco Unified Communications Manager, and so on, verify that the Smart Card service is started and automatic.

To set the service to started and automatic, perform the following procedure:

Procedure

Step 1 On the server or workstation where you installed the Cisco CTL Client, choose **Start** > **Programs** > **Administrative Tools** > **Services** or **Start** > **Control Panel** > **Administrative Tools** > **Services**.

Step 2 From the Services window, right-click the **Smart Card** service and choose Properties.

Step 3 In the Properties window, verify that the **General** tab displays.

Step 4 From the Startup type drop-down list box, choose **Automatic**.

Step 5 Click **Apply**.

Step 6 In the Service Status area, click **Start**.

Step 7 Click **OK**.

Step 8 Reboot the server or workstation and verify that the service is running.

Related Topics

Security Token Password (eToken) Modification

Note This procedure is not required if you manage cluster security through the CLI command set **utils ctl**.

This administrative password retrieves the private key of the certificate and ensures that the CTL file is signed. Each security token comes with a default password. You can change the security token password at any time. If the Cisco CTL Client prompts you to change the password, you must change the password before you can proceed with the configuration.

To review pertinent information on setting passwords, click the **Show Tips** button. If you cannot set the password for any reason, review the tips that display.

Change eToken Password for Windows

Important This information applies to the CTL Client encryption option. You may also set up encryption by using the **utils ctl** CLI command set, which does not require security tokens. For more information about this option, see the *Command Line Interface Guide for Cisco Unified Communications Solutions.*

To change the security token password on a Windows Vista, Windows 7, Windows 8.1, and Windows 10 server or workstation, perform the following procedure:

Procedure

Step 1 Verify that you have installed the Cisco CTL Client on a Windows server or workstation.

Step 2 If you have not already done so, insert the security token into the USB port on the Windows server or workstation where you installed the Cisco CTL Client.

Step 3 If you have not already done so, insert the security token into the USB port on the Windows server or workstation where you installed the Cisco CTL Client.

Step 4 Choose **Start** > **Programs** > **etoken** > **Etoken Properties**, right-click **etoken**, and choose **Change etoken password**.

Step 5 In the **Current Password** field, enter the password that you originally created for the token.

Step 6 Enter a new password.

Step 7 Enter the new password again to confirm it.

Step 8 Click **OK**.

Delete CTL File on Cisco Unified IP Phone

Caution Cisco recommends that you perform this task in a secure lab environment, especially if you do not plan to delete the CTL file from the Cisco Unified Communications Manager server(s).

Delete the CTL file on the Cisco Unified IP Phone for the following cases:

- You lose all security tokens that signed the CTL file.
- The security tokens that signed the CTL file appear compromised.
- You move a phone out of a secure environment; for example, to a storage area.
- You move a phone to a nonsecure cluster or to another secure cluster in a different domain.
- You move a phone from an area with an unknown security policy to a secure Cisco Unified Communications Manager.
- You change the alternate TFTP server address to a server that does not exist in the CTL file.

To delete the CTL file on the Cisco Unified IP Phone, perform the tasks in the following table.

Table 11: Deleting the CTL File on the Cisco Unified IP Phone

Cisco Unified IP Phone Model	Tasks
Cisco Unified IP Phones 7960G and 7940G	Under the Security Configuration menu on the phone, press **CTL file**, **unlock** or **#, and **erase**.
Cisco Unified IP Phone 7970G and equivalent	Perform one of the following methods: • Unlock the Security Configuration menu, as described in *Administration Guide for Cisco Unified Communications Manager* for Cisco Unified Communications Manager. Under the CTL option, press the **Erase** softkey. • Under the Settings menu, press the **Erase** softkey. **Note** Pressing the Erase softkey under the Settings menu deletes other information besides the CTL file. For additional information, refer to the *Administration Guide for Cisco Unified Communications Manager* for Cisco Unified Communications Manager.

Related Topics

Determine Cisco CTL Client Version

To determine which version of the Cisco CTL Client you are using, perform the following procedure:

Procedure

Step 1 Perform one of the following tasks:
a) Double-click the **Cisco CTL Client** icon that exists on the desktop.
b) Choose **Start** > **Programs** > **Cisco CTL Client**.

Step 2 In the Cisco CTL Client window, click the icon in the upper, left corner of the window.

Step 3 Choose **About Cisco CTL Client**. The version of the client displays.

Related Topics

Verify or Uninstall Cisco CTL Client

Uninstalling the Cisco CTL Client does not delete the CTL file. Likewise, the cluster security mode and the CTL file do not change when you uninstall the client. If you choose to do so, you can uninstall the Cisco CTL Client, install the client on a different Windows workstation or server, and continue to use the same CTL file.

To verify that the Cisco CTL Client installed, perform the following procedure:

Procedure

Step 1 Choose **Start** > **Control Panel** > **Add Remove Programs**.

Step 2 To verify that the client installed, locate **Cisco CTL Client**.

Step 3 To uninstall the client, click **Remove**.

Related Topics

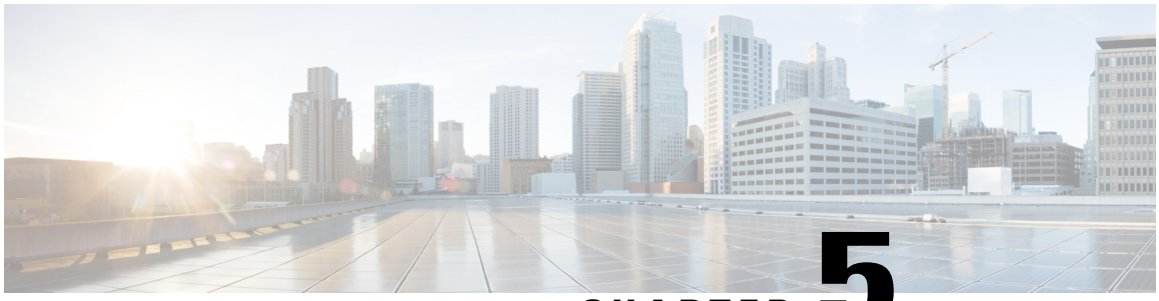

CHAPTER 5

Certificate Setup

This chapter provides information about certificate setup.

- About Certificate Setup, page 93
- Find Certificate, page 93
- Upload Certificate or Certificate Chain, page 94
- Certificate Settings, page 94

About Certificate Setup

Use the Certificate Configuration window to view the certificates on your system. All fields on the Certificate Configuration window are read-only, except Duration in Cache.

Find Certificate

To find a certificate, perform the following procedure:

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **System** > **Security** > **Certificate**.
The **Find and List Certificates** window displays. Records from an active (prior) query may also display in the window.

Step 2 To find all records in the database, ensure the dialog box is empty; go to Step 3, on page 94.
To filter or search records

a) From the first drop-down list box, choose a search parameter.
b) From the second drop-down list box, choose a search pattern.
c) Specify the appropriate search text, if applicable.

Note To add additional search criteria, click the + button. When you add criteria, the system searches for a record that matches all criteria that you specify. To remove criteria, click the – button to remove the last added criterion or click the **Clear Filter** button to remove all added search criteria.

Step 3 Click **Find**.
All matching records display. You can change the number of items that display on each page by choosing a different value from the Rows per Page drop-down list box.

Step 4 From the list of records that display, click the link for the record that you want to view.
Note To reverse the sort order, click the up or down arrow, if available, in the list header.
The window displays the item that you choose.

Upload Certificate or Certificate Chain

Select and upload a certificate or a cluster-wide certificate to distribute it to all the servers in the selected cluster.

Procedure

Step 1 From Cisco Unified OS Administration, choose **Security** > **Certificate Management**.
The **Certificate List** window appears.

Step 2 Click **Upload Certificate/Certificate chain**.
The **Upload Certificate/Certificate chain** window appears.

Step 3 From the **Certificate Purpose** drop-down box, select a system security certificate, such as **CallManager-ECDSA**.

Step 4 In the **Description** field, enter a name for the certificate.

Step 5 In the **Upload File** field, click **Choose File** to browse for the certificate file that you want to distribute for all the servers in the cluster.

Step 6 Click **Upload**.

Certificate Settings

All fields on the Certificate Management window are read-only, except Duration in Cache.

Table 12: VPN Profile Configuration Settings

Field	Definition
Subject Name (read only)	Displays the subject name for the certificate.
Issuer Name (read only)	Displays the issuer name for the certificate.
Serial Number (read only)	Displays the serial number (MAC address).
IPv4 Address (read only)	Displays the IPv4 address.

Field	Definition
IPv6 Address (read only)	Displays the IPv6 address.
Duration in Cache	Enter the time, in hours, that the certificate can persist in the phone cache. A value of zero indicates that the certificate does not get cached. Leave blank to accept the system default value. Maximum: 720 hours
Selected Roles	Displays the roles currently associated with the certificate.
Selected Services	Displays the services currently associated with the certificate.

PART II

Security for Cisco Unified IP Phone and Cisco Voice-Messaging Ports

- Phone Security, page 99
- Phone Security Profile Setup, page 105
- Secure and Nonsecure Indication Tone Setup, page 119
- Encryption to Analog Endpoint Setup, page 123
- Certificate Authority Proxy Function, page 125
- Encrypted Phone Configuration File Setup, page 139
- Digest Authentication for SIP Phones Setup, page 153
- Phone Hardening, page 157
- Secure Conference Resources Setup, page 161
- Voice-Messaging Ports Security Setup, page 175
- Call Secure Status Policy, page 181
- Secure Call Monitoring and Recording Setup, page 183

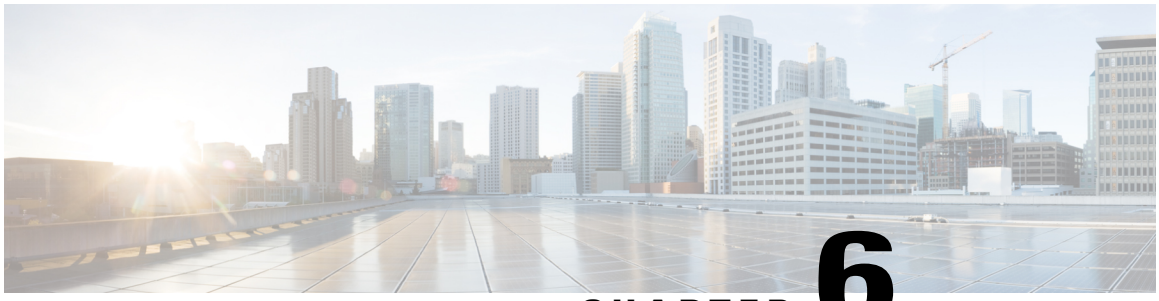

CHAPTER 6

Phone Security

This chapter provides information about phone security.

- Phone Security, page 99
- Trusted Devices, page 100
- Phone Model Support, page 101
- Preferred Vendor SIP Phone Security Set Up, page 102
- View Phone Security Settings, page 103
- Set Up Phone Security, page 103
- Where to Find More Information About Phone Security, page 104

Phone Security

At installation, Cisco Unified Communications Manager boots up in nonsecure mode. When the phones boot up after the Cisco Unified Communications Manager installation, all devices register as nonsecure with Cisco Unified Communications Manager.

After you upgrade from Cisco Unified Communications Manager 4.0(1) or a later release, the phones boot up in the device security mode that you enabled prior to the upgrade; all devices register by using the chosen security mode.

The Cisco Unified Communications Manager installation creates a self-signed certificate on the Cisco Unified Communications Manager and TFTP server. You may also choose to use a third-party, CA-signed certificate for Cisco Unified Communications Manager instead of the self-signed certificate. After you configure authentication, Cisco Unified Communications Manager uses the certificate to authenticate with supported Cisco Unified IP Phones. After a certificate exists on the Cisco Unified Communications Manager and TFTP server, Cisco Unified Communications Manager does not reissue the certificates during each Cisco Unified Communications Manager upgrade. You must create a new CTL file with the new certificate entries.

Tip For information on unsupported or nonsecure scenarios, see topics related to interactions and restrictions.

Cisco Unified Communications Manager maintains the authentication and encryption status at the device level. If all devices that are involved in the call register as secure, the call status registers as secure. If one

device registers as nonsecure, the call registers as nonsecure, even if the phone of the caller or recipient registers as secure.

Cisco Unified Communications Manager retains the authentication and encryption status of the device when a user uses Cisco Extension Mobility. Cisco Unified Communications Manager also retains the authentication and encryption status of the device when shared lines are configured.

Tip When you configure a shared line for an encrypted Cisco Unified IP Phone, configure all devices that share the lines for encryption; that is, ensure that you set the device security mode for all devices to encrypted by applying a security profile that supports encryption.

Related Topics

Interactions and Restrictions, on page 10

Trusted Devices

Cisco Unified Communications Manager allows Security icons to be enabled by phone model on Cisco Unified IP Phones. The Security icon indicates whether the call is secure and the connected device is trusted.

A Trusted Device represents a Cisco device or a third-party device that has passed Cisco security criteria for trusted connections. This includes, but is not limited to, signaling/media encryption, platform hardening, and assurance. If a device is trusted, a Security icon displays and a secure tone plays on supported devices. Also, the device may provide other features or indicators that are related to secure calls.

Cisco Unified Communications Manager determines whether a device is trusted when you add it to your system. The security icon displays for information purposes only, and the administrator cannot configure it directly.

Cisco Unified Communications Manager also indicates whether a gateway is trusted by displaying an icon and a message in Cisco Unified Communications Manager Administration.

This section describes the behavior of the security icon for trusted devices on both the Cisco Unified IP Phones and in Cisco Unified Communications Manager Administration.

Cisco Unified Communications Manager Administration

The following windows in Cisco Unified Communications Manager Administration indicate whether a device is trusted:

Gateway Configuration

For each gateway type, the Gateway Configuration window (**Device** > **Gateway**) displays either **Device is trusted** or **Device is not trusted**, along with a corresponding icon.

The system determines whether the device is trusted, based on the device type. You cannot configure whether the device is trusted.

Phone Configuration

For each phone device type, the Phone Configuration window (**Device** > **Phone**) displays either **Device is trusted** or **Device is not trusted**, along with a corresponding icon.

The system determines whether the device is trusted, based on the device type. You cannot configure whether the device is trusted.

Device Called Trust Determination Criteria

The type of device that a user calls affects the security icon that displays on the phone. The system consider the following three criteria to determine whether the call is secure:

- Are all devices on the call trusted?
- Is the signaling secure (authenticated and encrypted)?
- Is the media secure?

Before a supported Cisco Unified IP Phone displays the Lock Security icon, be aware that all three of these criteria must be met. For calls that involve a device that is not trusted, regardless of signaling and media security, the overall status of the call will stay unsecure, and the phone will not display the Lock icon. For example, if you include an untrusted device in a conference, the system considers its call leg, as well as the conference itself, to be unsecure.

Phone Model Support

There are two categories of phone models which support security in Cisco Unified Communications Manager: Secure Cisco phones and Secure Preferred Vendor phones. Secure Cisco phones are pre-installed with a Manufacture-Installed Certificate (MIC) and support automatic generation and exchange of Locally-Significant Certificates (LSC) using the Certificate Authority Proxy Function (CAPF). Secure Cisco phones are capable of registering with Cisco Unified CM using the MIC without additional certificate management. For additional security, you can create and install an LSC on the phone using CAPF. See topics related to phone security setup and settings for more information.

Secure Preferred Vendor phones do not come pre-installed with a MIC, and do not support CAPF for generating LSCs. In order for Secure Preferred Vendor phones to connect to Cisco Unified CM, a certificate must be provided with the device, or generated by the device. The phone supplier must provide the details on how to acquire or generate a certificate for the phone. Once you obtain the certificate, you must upload the certificate to the Cisco Unified CM using the OS Administration Certificate Management interface. See topics related to preferred vendor SIP phone security set up for more information.

For a list of security features that are supported on your phone, refer to the phone administration and user documentation that supports this Cisco Unified Communications Manager release or the firmware documentation that supports your firmware load.

You can also use Cisco Unified Reporting to list the phones that support a particular feature. For more information about using Cisco Unified Reporting, see the Cisco Unified Reporting Administration Guide.

Related Topics

Set Up Phone Security, on page 103
Preferred Vendor SIP Phone Security Set Up, on page 102
View Phone Security Settings, on page 103

Preferred Vendor SIP Phone Security Set Up

Secure Preferred Vendor phones are phone types that are manufactured by 3rd-party vendors but are installed in the Cisco Unified database via a COP file. Cisco Unified Communications Manager provides security for a preferred vendor SIP phone. In order to support security, you must enable Security Encryption or Security Authentication for the preferred vendor SIP phone in the COP file. These phone types appear in the drop-down list in the Add a New Phone window. While all preferred vendor phones support Digest Authorization, not all preferred vendor phones support TLS security. Security capabilities is based on the phone model. If the Phone Security Profile includes a "Device Security Mode" field, then it supports TLS security.

If the preferred vendor phone supports TLS security, there are two modes that are possible: per-device certificate and shared certificate. The phone supplier must specify which mode is applicable for the phone as well as instructions on generating or acquiring a certificate for the phone.

Set Up Preferred Vendor SIP Phone Security Profile Per-Device Certificates

To configure the preferred vendor SIP phone security profile with per-device certificates, perform the following procedure:

Procedure

Step 1 Upload the certificate for each phone using the OS Administration Certificate Management interface.

Step 2 In the Cisco Unified Administration, choose **System** > **Security** > **Phone Security Profile**.

Step 3 Configure a new Phone Security Profile for the device type of this phone and in the **Device Security Mode** drop-down list box, choose **Encrypted** or **Authenticated**.

Step 4 To configure the new SIP phone in the CCMAdmin interface, choose **Device** > **Phone** > **Add New**.

Step 5 Select Phone type.

Step 6 Fill in the required fields.

Step 7 In the **Device Security Profile** drop-down list box, select the profile you just created.

Set Up Preferred Vendor SIP Phone Security Profile Shared Certificates

To configure the preferred vendor SIP phone security profile with shared certificates, perform the following procedure:

Procedure

Step 1 Using instructions from the phone vendor, generate a certificate with a Subject Alternate Name (SAN) string. The SAN must be of type DNS. Make a note of the SAN specified in this step. For example, X509v3 extensions:

Step 2 X509v3 Subject Alternative Name:

Step 3 DNS:AscomGroup01.acme.com

Note The SAN must be of type DNS or security will not be enabled.

Step 4 Upload the shared certificate using the OS Administration Certificate Management interface.

Step 5 In the Cisco Unified Administration, choose **System** > **Security** > **Phone Security Profile**.

Step 6 In the **Name** field, enter the name of the Subject Alt Name (SAN), which is the name on the certificate provided by the preferred vendor, or if there is no SAN enter the Certificate Name.

Note The name of the security profile must match the SAN in the certificate exactly or security will not be enabled.

Step 7 In the **Device Security Mode** drop-down list box, choose **Encrypted** or **Authenticated**.

Step 8 In the Transport type drop-down list box, choose **TLS**.

Step 9 To configure the new SIP phone in the CCMAdmin interface, choose **Device** > **Phone** > **Add New**.

Step 10 Select Phone type.

Step 11 Fill in the required fields

Step 12 In the **Device Security Profile** drop-down list box, select the profile you just created.

Related Topics

View Phone Security Settings

You can configure and view certain security-related settings on phones that support security; for example, you can view whether a phone has a locally significant certificate or manufacture-installed certificate installed. For additional information on the security menu and icons, refer to the Cisco Unified IP Phone administration and user documentation that supports your phone model and this version of Cisco Unified Communications Manager.

When Cisco Unified Communications Manager classifies a call as authenticated or encrypted, an icon displays on the phone to indicate the call state. To determine when Cisco Unified Communications Manager classifies the call as authenticated or encrypted.

Related Topics

Interactions and Restrictions, on page 10
Security Icons, on page 9

Set Up Phone Security

The following procedure describes the tasks to configure security for supported phones.

Procedure

Step 1 If you have not already done so, configure the Cisco CTL Client and ensure that the Cisco Unified Communications Manager security mode equals Mixed Mode.

Step 2 If the phone does not contain a locally significant certificate (LSC) or manufacture-installed certificate (MIC), install a LSC by using the Certificate Authority Proxy Function (CAPF).

Step 3 Configure phone security profiles.

Step 4 Apply a phone security profile to the phone.

Step 5 After you configure digest credentials, choose the Digest User from the Phone Configuration window.

Step 6 On Cisco Unified IP Phone 7960G or 7940G (SIP only), enter the digest authentication username and password (digest credentials) that you configured in the End User Configuration window.

Note This document does not provide procedures on how to enter the digest authentication credentials on the phone. For information on how to perform this task, refer to the *Administration Guide for Cisco Unified Communications Manager* that supports your phone model and this version of Cisco Unified Communications Manager.

Step 7 Encrypt the phone configuration file, if the phone supports this functionality.

Step 8 To harden the phone, disable phone settings.

Related Topics

Apply Phone Security Profile, on page 114
End User Digest Credential Settings, on page 155
Set Up End User Digest Credentials, on page 155
Set Up Digest User Using Phone, on page 156

Where to Find More Information About Phone Security

Related Cisco Documentation

- *Administration Guide for Cisco Unified Communications Manager f*
- *Troubleshooting Guide for Cisco Unified Communications Manager*

Related Topics

Interactions and Restrictions, on page 10
Authentication, Integrity, and Authorization, on page 22
Encryption, on page 27
Set Up Authentication and Encryption, on page 30
Set Up Phone Security, on page 103

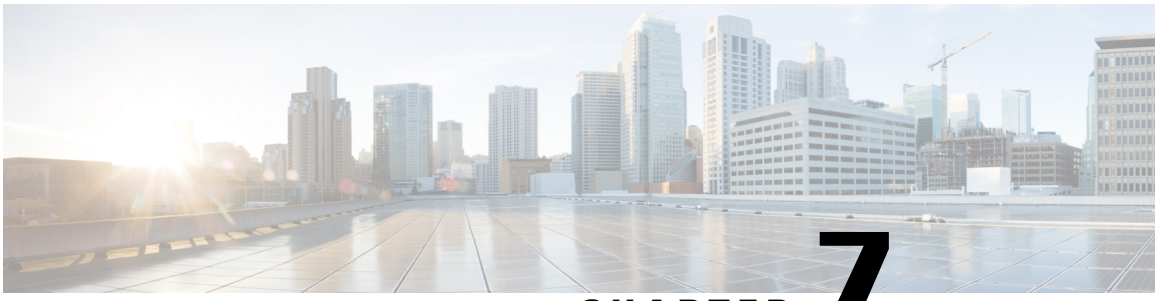

CHAPTER 7

Phone Security Profile Setup

This chapter provides information about security profile setup.

- About Phone Security Profile Setup, page 105
- Phone Security Profile Setup Tips, page 106
- Find Phone Security Profile, page 106
- Set Up Phone Security Profile, page 107
- Phone Security Profile Settings, page 108
- Apply Phone Security Profile, page 114
- Synchronize Phone Security Profile with Phones, page 115
- Delete Phone Security Profile, page 116
- Find Phones with Phone Security Profiles, page 116
- Where to Find More Information About Security Profiles, page 117

About Phone Security Profile Setup

Cisco Unified Communications Manager Administration groups security-related settings for a phone type and protocol into security profiles to allow you to assign a single security profile to multiple phones. Security-related settings include device security mode, digest authentication, and some CAPF settings. You apply the configured settings to a phone when you choose the security profile in the Phone Configuration window.

Installing Cisco Unified Communications Manager provides a set of predefined, nonsecure security profiles for auto-registration. To enable security features for a phone, you must configure a new security profile for the device type and protocol and apply it to the phone.

Only the security features that the selected device and protocol support display in the security profile settings window.

Phone Security Profile Setup Tips

Consider the following information when you configure phone security profiles in Cisco Unified Communications Manager Administration:

- When you configure phones, you must select a security profile in the Phone Configuration window. If the device does not support security, apply the nonsecure profile.
- You cannot delete or change predefined, nonsecure profiles.
- You cannot delete a security profile that is currently assigned to a device.
- If you change the settings in a security profile that is already assigned to a phone, the reconfigured settings apply to all phones that are assigned that profile.
- You can rename security files that are assigned to devices. The phones that are assigned the old profile name and settings assume the new profile name and settings.
- The CAPF settings in the Phone Security Profile, authentication mode and key size, also display in the Phone Configuration window. You must configure CAPF settings for certificate operations that involve manufacture-installed certificates (MICs) or locally significant certificates (LSCs). You can update these fields directly in the Phone Configuration window.
    - If you update the CAPF settings in the security profile, the settings get updated in the Phone Configuration window.
    - If you update the CAPF settings in the Phone Configuration window and a matching profile is found, Cisco Unified Communications Manager applies the matching profile to the phone.
    - If you update the CAPF settings in the Phone Configuration window, and no matching profile is found, Cisco Unified Communications Manager creates a new profile and applies the new profile to the phone.
- If you configured the device security mode prior to a Cisco Unified Communications Manager 5.0 or later upgrade, Cisco Unified Communications Manager creates a profile that is based on the model and protocol and applies the profile to the device.
- Cisco recommends using manufacturer-installed certificates (MICs) for LSC installation only. Cisco supports LSCs to authenticate the TLS connection with Cisco Unified Communications Manager. Because MIC root certificates can be compromised, customers who configure phones to use MICs for TLS authentication or for any other purpose do so at their own risk. Cisco assumes no liability if MICs are compromised.
- Cisco recommends upgrading the Cisco Unified IP Phones to use LSCs for TLS connection to Cisco Unified Communications Manager and removing MIC root certificates from the CallManager trust store to avoid possible future compatibility issues.

Related Topics

Certificates, on page 18

Find Phone Security Profile

To find a phone security profile, perform the following procedure:

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **System** > **Security Profile** > **Phone Security Profile**.
The **Find and List Phone Security Profile** window displays. Records from an active (prior) query may also display in the window.

Step 2 To find all records in the database, ensure the dialog box is empty; go to Step 3, on page 107.
To filter or search records

a) From the first drop-down list box, choose a search parameter.
b) From the second drop-down list box, choose a search pattern.
c) Specify the appropriate search text, if applicable.

Note To add additional search criteria, click the + button. When you add criteria, the system searches for a record that matches all criteria that you specify. To remove criteria, click the – button to remove the last added criterion or click the **Clear Filter** button to remove all added search criteria.

Step 3 Click **Find**.
All matching records display. You can change the number of items that display on each page by choosing a different value from the Rows per Page drop-down list box.

Step 4 From the list of records that display, click the link for the record that you want to view.

Note To reverse the sort order, click the up or down arrow, if available, in the list header.

The window displays the item that you choose.

Related Topics

Where to Find More Information About Security Profiles, on page 117

Set Up Phone Security Profile

To add, update, or copy a security profile, perform the following procedure:

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **System > Security Profile > Phone Security Profile**.

Step 2 Perform one of the following tasks:

a) To add a new profile, click **Add New** in the **Find** window and continue with Phone Security Profile Setup, on page 105.
b) To copy an existing security profile, locate the appropriate profile, click the **Copy** button next to the security profile that you want to copy, and continue with Phone Security Profile Setup, on page 105.
c) To update an existing profile, locate the appropriate security profile and continue with Phone Security Profile Setup, on page 105.
When you click **Add New**, the configuration window displays with the default settings for each field.
When you click **Copy**, the configuration window displays with the copied settings.

Step 3 Enter the appropriate settings as described in Table 13: Security Profile for Phone That Is Running SCCP , on page 108 for phones that are running SCCP or Table 14: Security Profile for Phone That Is Running SIP, on page 111 for phones that are running SIP.

Step 4 Click **Save**.

What to Do Next

After you create the security profile, apply it to the phone, as described in the Apply Phone Security Profile, on page 114.

If you configured digest authentication in the phone security profile for a phone that is running SIP, you must configure the digest credentials in the End User Configuration window. You then must associate the user with the phone by using the Digest User setting in the Phone Configuration window.

Related Topics

Find Phone Security Profile, on page 106
Where to Find More Information About Security Profiles, on page 117

Phone Security Profile Settings

The following table describes the settings for the security profile for the phone that is running SCCP.

Only settings that the selected phone type and protocol support display.

Table 13: Security Profile for Phone That Is Running SCCP

Setting	Description
Name	Enter a name for the security profile. When you save the new profile, the name displays in the **Device Security Profile** drop-down list box in the **Phone Configuration window** for the phone type and protocol. **Tip** Include the device model and protocol in the security profile name to help you find the correct profile when you are searching for or updating a profile.
Description	Enter a description for the security profile. The description can include up to 50 characters in any language, but it cannot include double-quotes ("), percentage sign (%), ampersand (&), back-slash (\), or angle brackets (<>).

Setting	Description
Device Security Mode	From the drop-down list box, choose one of the following options: • **Non Secure—**No security features except image, file, and device authentication exist for the phone. A TCP connection opens to Cisco Unified Communications Manager. • **Authenticated—**Cisco Unified Communications Manager provides integrity and authentication for the phone. A TLS connection that uses NULL/SHA opens for signaling. • **Encrypted—**Cisco Unified Communications Manager provides integrity, authentication, and encryption for the phone. A TLS connection that uses AES128/SHA opens for signaling, and SRTP carries the media for all phone calls.
TFTP Encrypted Config	When this check box is checked, Cisco Unified Communications Manager encrypts phone downloads from the TFTP server.

Setting	Description
Authentication Mode	This field allows you to choose the authentication method that the phone uses during the CAPF certificate operation. From the drop-down list box, choose one of the following options: • **By Authentication String—**Installs/upgrades, deletes, or troubleshoots a locally significant certificate only when the user enters the CAPF authentication string on the phone. • **By Null String—** Installs/upgrades, deletes, or troubleshoots a locally significant certificate without user intervention. This option provides no security; Cisco strongly recommends that you choose this option only for closed, secure environments. • **By Existing Certificate (Precedence to LSC)—** Installs/upgrades, deletes, or troubleshoots a locally significant certificate if a manufacture-installed certificate (MIC) or locally significant certificate (LSC) exists in the phone. If a LSC exists in the phone, authentication occurs via the LSC, regardless whether a MIC exists in the phone. If a MIC and LSC exist in the phone, authentication occurs via the LSC. If a LSC does not exist in the phone, but a MIC does exist, authentication occurs via the MIC. Before you choose this option, verify that a certificate exists in the phone. If you choose this option and no certificate exists in the phone, the operation fails. At any time, the phone uses only one certificate to authenticate to CAPF even though a MIC and LSC can exist in the phone at the same time. If the primary certificate, which takes precedence, becomes compromised for any reason, or, if you want to authenticate via the other certificate, you must update the authentication mode. • **By Existing Certificate (Precedence to MIC)—**Installs/upgrades, deletes, or troubleshoots a locally significant certificate if a LSC or MIC exists in the phone. If a MIC exists in the phone, authentication occurs via the MIC, regardless whether a LSC exists in the phone. If a LSC exists in the phone, but a MIC does not exist, authentication occurs via the LSC. Before you choose this option, verify that a certificate exists in the phone. If you choose this option and no certificate exists in the phone, the operation fails. **Note** The CAPF settings that are configured in the Phone Security Profile window interact with the CAPF parameters that are configured in the **Phone Configuration** window.

Setting	Description
Key Order	This field specifies the sequence of the key for CAPF. Select one of the following values from the drop-down list: • **RSA Only** • **EC Only** • **EC Preferred, RSA Backup** **Note** When you add a phone based on the value in **Key Order**, **RSA Key Size**, and **EC Key Size** fields, the device security profile is associated with the phone. If you select the **EC Only** value with the **EC Key Size** value of 256 bits then the device security profile appends with **EC-256** value.
RSA Key Size (Bits)	From the drop-down list box, choose one of the these values**—512**, **1024**, **2048, 3072**, or **4096**. **Note** Some phone models may fail to register if the RSA **key length** selected for the CallManager **Certificate Purpose** is greater than 2048. From the Unified CM Phone Feature List Report on the Cisco Unified Reporting Tool (CURT), you can check the 3072/4096 RSA key size support feature for the list of supported phone models.
EC Key Size (Bits)	From the drop-down list box, choose one of the these values**—256**, **384**, or **521**.

The following table describes the settings for the security profile for the phone that is running SIP.

Table 14: Security Profile for Phone That Is Running SIP

Setting	Description
Name	Enter a name for the security profile. When you save the new profile, the name displays in the **Device Security Profile** drop-down list box in the **Phone Configuration** window for the phone type and protocol. **Tip** Include the device model and protocol in the security profile name to help you find the correct profile when you are searching for or updating a profile.
Description	Enter a description for the security profile.
Nonce Validity Time	Enter the number of minutes (in seconds) that the nonce value is valid. The default value equals 600 (10 minutes). When the time expires, Cisco Unified Communications Manager generates a new value. **Note** A nonce value, a random number that supports digest authentication, gets used to calculate the MD5 hash of the digest authentication password.

Setting	Description
Device Security Mode	From the drop-down list box, choose one of the following options: • **Non Secure—**No security features except image, file, and device authentication exist for the phone. A TCP connection opens to Cisco Unified Communications Manager. • **Authenticated—**Cisco Unified Communications Manager provides integrity and authentication for the phone. A TLS connection that uses NULL/SHA opens for signaling. • **Encrypted—**Cisco Unified Communications Manager provides integrity, authentication, and encryption for the phone. A TLS connection that uses AES128/SHA opens for signaling, and SRTP carries the media for all phone calls on all SRTP-capable hops.
Transport Type	When Device Security Mode is **Non Secure**, choose one of the following options from the drop-down list box (some options may not display): • **TCP—**Choose the Transmission Control Protocol to ensure that packets get received in the same order as the order in which they are sent. This protocol ensures that no packets get dropped, but the protocol does not provide any security. • **UDP—**Choose the User Datagram Protocol to ensure that packets are received quickly. This protocol, which can drop packets, does not ensure that packets are received in the order in which they are sent. This protocol does not provide any security. • **TCP + UDP—**Choose this option if you want to use a combination of TCP and UDP. This option does not provide any security. When Device Security Mode is **Authenticated** or **Encrypted**, TLS specifies the Transport Type. TLS provides signaling integrity, device authentication, and signaling encryption (encrypted mode only) for SIP phones. If Device Security Mode cannot be configured in the profile, the transport type specifies UDP.
Enable Digest Authentication	If you check this check box, Cisco Unified Communications Manager challenges all SIP requests from the phone. Digest authentication does not provide device authentication, integrity, or confidentiality. Choose a security mode of authenticated or encrypted to use these features.
TFTP Encrypted Config	When this check box is checked, Cisco Unified Communications Manager encrypts phone downloads from the TFTP server. This option exists for Cisco phones only. **Tip** Cisco recommends that you enable this option and configure a symmetric key to secure digest credentials and administrative passwords.

Setting	Description
Exclude Digest Credentials in Configuration File	When this check box is checked, Cisco Unified Communications Manager omits digest credentials in phone downloads from the TFTP server. This option exists for Cisco Unified IP Phones 7905G, 7912G, 7940G, and 7960G (SIP only).
Authentication Mode	This field allows you to choose the authentication method that the phone uses during the CAPF certificate operation. This option exists for Cisco phones only. From the drop-down list box, choose one of the following options: • **By Authentication String—**Installs/upgrades or troubleshoots a locally significant certificate only when the user enters the CAPF authentication string on the phone. • **By Null String—** Installs/upgrades or troubleshoots a locally significant certificate without user intervention. This option provides no security; Cisco strongly recommends that you choose this option only for closed, secure environments. • **By Existing Certificate (Precedence to LSC)—** Installs/upgrades or troubleshoots a locally significant certificate if a manufacture-installed certificate (MIC) or locally significant certificate (LSC) exists in the phone. If a LSC exists in the phone, authentication occurs via the LSC, regardless whether a MIC exists in the phone. If a LSC does not exist in the phone, but a MIC does exist, authentication occurs via the MIC. Before you choose this option, verify that a certificate exists in the phone. If you choose this option and no certificate exists in the phone, the operation fails. At any time, the phone uses only one certificate to authenticate to CAPF even though a MIC and LSC can exist in the phone at the same time. If the primary certificate, which takes precedence, becomes compromised for any reason, or, if you want to authenticate via the other certificate, you must update the authentication mode. • **By Existing Certificate (Precedence to MIC)—**Installs/upgrades or troubleshoots a locally significant certificate if a LSC or MIC exists in the phone. If a MIC exists in the phone, authentication occurs via the MIC, regardless whether a LSC exists in the phone. If a LSC exists in the phone, but a MIC does not exist, authentication occurs via the LSC. Before you choose this option, verify that a certificate exists in the phone. If you choose this option and no certificate exists in the phone, the operation fails. **Note** The CAPF settings that are configured in the **Phone Security Profile** window interact with the CAPF parameters that are configured in the Phone Configuration window. Refer to the

Setting	Description
Key Size	For this setting that is used for CAPF, choose the key size for the certificate from the drop-down list box. The default setting equals 1024. The other option for key size is 512. If you choose a higher key size than the default setting, the phones take longer to generate the entropy that is required to generate the keys. Key generation, which is set at low priority, allows the phone to function while the action occurs. Depending on the phone model, you may notice that key generation takes up to 30 or more minutes to complete. **Note** The CAPF settings that are configured in the **Phone Security Profile** window interact with the CAPF parameters that are configured in the **Phone Configuration** window.
SIP Phone Port	This setting applies to phones that are running SIP that use UDP transport. Enter the port number for Cisco Unified IP Phones (SIP only) that use UDP to listen for SIP messages from Cisco Unified Communications Manager. The default setting equals 5060. Phones that use TCP or TLS ignore this setting.

Related Topics

Configuration File Encryption, on page 29
Digest Authentication, on page 24
Phone Security Profile Setup Tips, on page 106
Where to Find More Information, on page 32

Apply Phone Security Profile

You apply a phone security profile to the phone in the **Phone Configuration** window.

Before You Begin

Before you apply a security profile that uses certificates for authentication of the phone, ensure that phone contains a locally significant certificate (LSC) or manufacture-installed certificate (MIC).

If the phone does not contain a certificate, perform the following steps:

1. In the **Phone Configuration** window, apply a nonsecure profile.
2. In the **Phone Configuration** window, install a certificate by configuring the CAPF settings. For more information on performing this task.
3. In the **Phone Configuration** window, apply a device security profile that is configured for authentication or encryption.

To apply a phone security profile to a device, perform the following procedure:

Procedure

Step 1 Find the phone, as described in the *Administration Guide for Cisco Unified Communications Manager*.

Step 2 After the **Phone Configuration** window displays, locate the **Device Security Profile**.

Step 3 From the **Device Security Profile** drop-down list, choose the security profile that applies to the device. Only the phone security profiles that are configured for the phone type and protocol display.

Step 4 Click **Save**.

Step 5 To apply the changes to the applicable phone, click **Apply Config**.

What to Do Next

If you configured digest authentication for phones that are running SIP, you must configure the digest credentials in the **End User Configuration** window. Then, you must configure the Digest User setting in the **Phone Configuration** window.

Related Topics

Where to Find More Information About Security Profiles, on page 117

Synchronize Phone Security Profile with Phones

To synchronize phones with a Phone Security Profile that has undergone configuration changes, perform the following procedure, which will apply any outstanding configuration settings in the least-intrusive manner possible. (For example, a reset/restart may not be required on some affected phones.)

Procedure

Step 1 Choose **System** > **Security Profile** > **Phone Security Profile**.
The **Find and List Phone Security Profiles** window displays.

Step 2 Choose the search criteria to use.

Step 3 Click **Find**.
The window displays a list of phone security profiles that match the search criteria.

Step 4 Click the phone security profile to which you want to synchronize applicable phones.
The **Phone Security Profile Configuration** window displays.

Step 5 Make any additional configuration changes.

Step 6 Click **Save**.

Step 7 Click **Apply Config**.
The **Apply Configuration Information** dialog displays.

Step 8 Click **OK**.

Related Topics

Where to Find More Information About Security Profiles, on page 117

Delete Phone Security Profile

This section describes how to delete a phone security profile from the Cisco Unified Communications Manager database.

Before You Begin

Before you can delete a security profile from Cisco Unified Communications Manager Administration, you must apply a different profile to the devices or delete all devices that use the profile. To find out which devices use the profile, choose **Dependency Records** from the **Related Links** drop-down list box in the **Security Profile Configuration** window and click **Go**.

If the dependency records feature is not enabled for the system, go to **System** > **Enterprise Parameters Configuration** and change the Enable Dependency Records setting to True. A message displays information about high CPU consumption that relates to the dependency records feature. Save your change to activate dependency records. For more information about dependency records, refer to the *System Configuration Guide for Cisco Unified Communications Manager* .

Procedure

Step 1 Find the security profile to delete.

Step 2 To delete multiple security profiles, check the check boxes next to the appropriate check box in the **Find and List** window; then, click **Delete Selected**. You can delete all configurable records for this selection by clicking **Select All** and then clicking **Delete Selected**.

Step 3 To delete a single security profile, perform one of the following tasks:

a) In the **Find and List** window, check the check box next to the appropriate security profile; then, click **Delete Selected**.

Step 4 When prompted to confirm the delete operation, click **OK** to delete or **Cancel** to cancel the delete operation.

Related Topics

Find Phone Security Profile, on page 106
Where to Find More Information About Security Profiles, on page 117

Find Phones with Phone Security Profiles

To find the phones that use a specific security profile, perform the following procedure:

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **Device** > **Phone**.

Step 2 From the first drop-down list box, choose the search parameter **Security Profile**.

a) From the drop-down list box, choose a search pattern.
b) Specify the appropriate search text, if applicable.

Note To add additional search criteria, click the + button. When you add criteria, the system searches for a record that matches all criteria that you specify. To remove criteria, click the – button to remove the last added criterion or click the **Clear Filter** button to remove all added search criteria.

Step 3 Click **Find**.
All matching records display. You can change the number of items that display on each page by choosing a different value from the **Rows per Page** drop-down list box.

Step 4 From the list of records that display, click the link for the record that you want to view.

Note To reverse the sort order, click the up or down arrow, if available, in the list header.

The window displays the item that you choose.

Related Topics

Where to Find More Information About Security Profiles, on page 117

Where to Find More Information About Security Profiles

Related Topics

Digest Authentication, on page 24
Configuration File Encryption, on page 29
About Phone Security Profile Setup, on page 105
Phone Security Profile Setup Tips, on page 106
Phone Security Profile Settings, on page 108

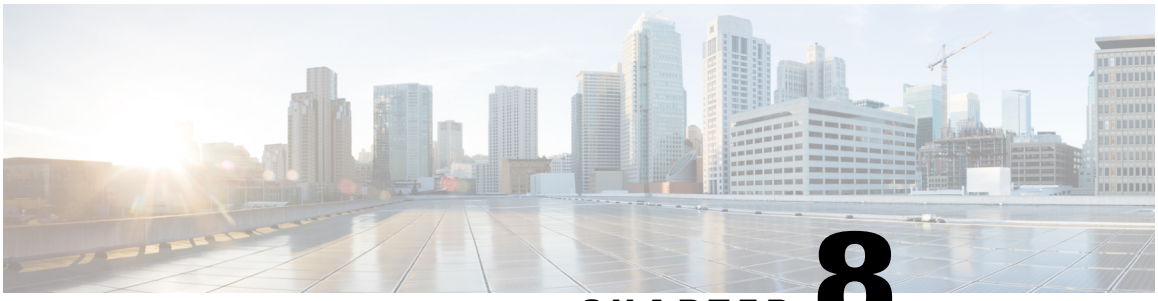

CHAPTER 8

Secure and Nonsecure Indication Tone Setup

This chapter provides information about secure and nonsecure indication tone setup. The system plays secure and nonsecure indication tones on a protected phone to indicate whether a call is encrypted.

- Secure and Nonsecure Indication Tones, page 119
- Supported Devices, page 120
- Secure and Nonsecure Indication Tones Important Information, page 120
- Secure Tone Setup Requirements, page 121

Secure and Nonsecure Indication Tones

The secure indication tone plays on a protected phone when the overall status of the call specifies protected; that is, when the system determines that the call is encrypted. The tone denotes that the call is protected and that confidential information may be exchanged. The tone comprises three long beeps. If the overall status of the call specifies protected, the tone begins to play on a protected phone as soon as the called party answers.

When the overall status of the call is not protected, the system plays nonsecure indication tone, which comprises six short beeps, on a protected phone.

Note Only callers on protected phones can hear secure and nonsecure indication tones. Callers on phones that are not protected never hear these tones.

Protected Devices

Configuration designates a protected device in Cisco Unified Communications Manager. You can configure only supported Cisco Unified IP Phones and MGCP E1 PRI gateways as protected devices in Cisco Unified Communications Manager.

Cisco Unified Communications Manager can also direct an MGCP IOS gateway to play secure and nonsecure indication tones when the system determines the protected status of a call.

You can make the following types of calls that can use the secure and nonsecure indication tones:

- Intracluster IP-to-IP calls
- Intercluster calls that the system determines are protected
- IP-to-Time-Division-Multiplexing (TDM) calls through a protected MGCP E1 PRI gateway

Related Topics

Cisco Unified IP Phones Supporting HTTPS, on page 37

Supported Devices

You can use Cisco Unified Reporting to determine which Cisco Unified IP Phone models support secure and nonsecure indication tones. From Cisco Unified Reporting, click **Unified CM Phone Feature List**. For the Feature pull-down menu, choose **Secure Tone**. The system displays a list of products that support the feature.

For more information about using Cisco Unified Reporting, see the **Cisco Unified Reporting Administration Guide**.

Secure and Nonsecure Indication Tones Important Information

This section provides information that pertains to the impact of using the secure indication tone feature:

- Facts about protected devices
  - You can configure phones that are running SCCP or SIP as protected devices.
  - Protected devices that call nonprotected devices that are encrypted play the secure tone, while Protected devices that call nonprotected and nonencrypted devices play a nonsecure tone.
  - When a protected phone calls another protected phone, but the media is not encrypted, the call does not drop. In this case, the system plays nonsecure indication tone to the phones on the call.
- For video calls, the system plays secure and nonsecure indication tones on protected devices.

Note For video calls, the user may first hear secure indication tone for the audio portion of the call and then nonsecure indication tone for overall nonsecure media.

- A lock icon that displays on a Cisco Unified IP Phone indicates that the media is encrypted, but does not necessarily mean that the phone has been configured as a protected device. However, the lock icon must be present for a protected call to occur.
- The following services and features are impacted:
  - Multiline supplementary services (such as call transfer, conference, and call waiting) are supported on protected phones. When the user invokes a supplementary service on a protected phone, the system plays secure or nonsecure indication tone to reflect the updated status of the call.
  - Cisco Extension Mobility and Join Across Line services are disabled on protected phones.
  - Shared-line configuration is not available on protected phones.
  - Hold/Resume and Call Forward All are supported for protected calls.

- Facts about MGCP E1 PRI gateways
  - You must configure the MGCP gateway for SRTP encryption. Configure the gateway with this command: **mgcp package-capability srtp-package**.
  - The MGCP gateway must specify an Advanced IP Services or Advanced Enterprise Services image (for example, `c3745-adventerprisek9-mz.124-6.T.bin`).
  - Protected status gets exchanged with the MGCP E1 PRI gateway by using proprietary FacilityIE in the MGCP PRI Setup, Alert, and Connect messages.
  - Cisco Unified Communications Manager plays the secure indication tone only to the Cisco Unified IP Phone. A PBX in the network plays the tone to the gateway end of the call.
  - If the media between the Cisco Unified IP Phone and the MGCP E1 PRI gateway is not encrypted, the call drops.

Note For more information about encryption for MGCP gateways, refer to *Media and Signaling Authentication and Encryption Feature for Cisco IOS MGCP Gateways* for the version of Cisco IOS software that you are using.

Secure Tone Setup Requirements

You must configure the following items for the secure tone to play:

- In the **Phone Configuration** window, which you can navigate to by choosing **Device** > **Phone** in Cisco Unified Communications Manager Administration, configure the following items:
  - From the **Softkey Template** drop-down list in the **Device Information** portion of the window, choose **Standard Protected Phone**.

Note You must use a new softkey template without supplementary service softkeys for a protected phone.

  - For the **Join Across Lines** option (also in the **Device Information** portion of the window), choose **Off**.
  - Check the **Protected Device** check box (also in the **Device Information** portion of the window).
  - From the **Device Security Profile** drop-down list (in the **Protocol Specific Information** portion of the window), choose a secure phone profile that is already configured in the **Phone Security Profile Configuration** window (**System** > **Security Profile** > **Phone Security Profile**).

- Go to the **Directory Number Configuration** window that displays when you add a directory number from the **Phone Configuration** window. In the **Multiple Call/Call Waiting Settings on Device DeviceName** area of the **Directory Number Configuration** window, set the following options to a value of 1:
  - Maximum Number of Calls

- Busy Trigger

- In Cisco Unified Communications Manager Administration, choose **System** > **Service Parameters**. In the first **Service Parameter Configuration** window, choose your server and choose the Cisco CallManager service. In the second **Service Parameter Configuration** window, locate the **Clusterwide Parameters (Feature - Secure Tone)** area, and set the **Play Secure Indication Tone** option to **True**. (The default value specifies False.)
- If you are configuring a protected MGCP E1 PRI gateway, choose **Device** > **Gateway** > **Add New** in Cisco Unified Communications Manager Administration and choose a supported gateway. Choose **MCGP** as the protocol. When the **Gateway Configuration** window displays, specify the following configuration choices:
  - Set **Global ISDN Switch Type** to **Euro**.
  - After you complete the rest of the MGCP Gateway configuration, click **Save**; then, click the endpoint icon that appears to the right of subunit 0 in the window. The **Enable Protected Facility IE** check box displays. Check this check box.

    This configuration allows the system to pass protected status of the call between Cisco Unified IP Phone endpoints and the protected PBX phones that connect to the MGCP gateway.

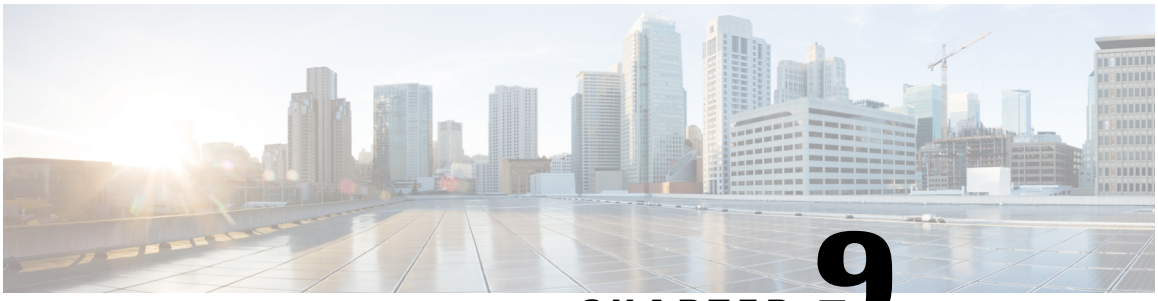

CHAPTER 9

Encryption to Analog Endpoint Setup

This chapter provides information about encryption to analog endpoint setup. This feature enables you to create a secure SCCP connection for analog phones to a Cisco VG2xx Gateway. The gateway uses Transport Layer Security (TLS) with Cisco Unified Communications Manager for SCCP signaling communication and uses SRTP for voice communication. The existing Cisco Unified Communications Manager TLS functionality, including certificate management, is used for secure SCCP communication.

- Analog Phone Security Profile, page 123
- Certificate Management for Secure Analog Phones, page 123

Analog Phone Security Profile

To establish an encrypted connection to analog phones, you must create a Phone Security Profile for analog phones with the Device Security Mode parameter set to **Authenticated** or **Encrypted**. To create a Phone Security Profile, navigate to **System** > **Security Profile** > **Phone Security Profile** in Cisco Unified Communications Manager Administration.

When you configure an analog phone attached to a Cisco VG2xx gateway, choose the secure analog profile you created for the Device Security Profile parameter. To configure the Device Security Profile parameter, navigate to **Device** > **Phone** in Cisco Unified Communications Manager Administration and scroll down to the Protocol Specific Information section for the phone you want to configure.

Related Topics

Certificate Management for Secure Analog Phones

For secure analog phones to function, you must import the same CA-signed certificate into Cisco Unified Communications Manager that is being used by the Cisco VG2xx Gateway. For more information about importing certificates, see Chapter 6, “Security,” in the *Administration Guide for Cisco Unified Communications Manager* .

CHAPTER 10

Certificate Authority Proxy Function

This chapter provides information about the certificate authority proxy function.

- About Certificate Authority Proxy Function, page 125
- Cisco Unified IP Phone and CAPF Interaction, page 126
- CAPF Interaction with IPv6 Addressing, page 127
- CAPF System Interactions and Requirements, page 128
- CAPF in Cisco Unified Serviceability Setup, page 129
- Set Up CAPF, page 129
- Activate Certificate Authority Proxy Function Service, page 130
- Update CAPF Service Parameters, page 130
- Generate and Import Third Party CA-Signed LSCs, page 131
- Install, Upgrade, Troubleshoot, or Delete Certificates From Phone Using CAPF, page 132
- CAPF Settings, page 132
- Find Phones by LSC Status or Authentication String, page 134
- Generate CAPF Report, page 135
- Enter Phone Authentication String, page 136
- Verify Phone Authentication String, page 137
- Where to Find More Information About CAPF Setup, page 137

About Certificate Authority Proxy Function

Certificate Authority Proxy Function (CAPF), which automatically installs with Cisco Unified Communications Manager, performs the following tasks, depending on your configuration:

- Authenticate via an existing Manufacturing Installed Certificate (MIC), Locally Significant Certificate (LSC), randomly generated authentication string, or optional less secure “null” authentication.
- Issues locally significant certificates to supported Cisco Unified IP Phones.

- Upgrades existing locally significant certificates on the phones.
- Retrieves phone certificates for viewing and troubleshooting.

During installation, a certificate that is specific for CAPF gets generated. This CAPF certificate, which the Cisco CTL Client copies to all Cisco Unified Communications Manager servers in the cluster, uses the .0 extension.

Cisco Unified IP Phone and CAPF Interaction

When the phone interacts with CAPF, the phone authenticates itself to CAPF by using an authentication string, existing MIC or LSC certificate, or "null," generates its public key and private key pair, and then forwards its public key to the CAPF server in a signed message. The private key remains in the phone and never gets exposed externally. CAPF signs the phone certificate and then sends the certificate back to the phone in a signed message.

The following information applies when a communication or power failure occurs.

- If a communication failure occurs while the certificate installation is taking place on the phone, the phone will attempt to obtain the certificate three more times in 30-second intervals. You cannot configure these values.
- If a power failure occurs while the phone attempts a session with CAPF, the phone will use the authentication mode that is stored in flash; that is, if the phone cannot load the new configuration file from the TFTP server after the phone reboots. After the certificate operation completes, the system clears the value in flash.

Tip Be aware that the phone user can abort the certificate operation or view the operation status on the phone.

Tip Key generation, which is set at low priority, allows the phone to function while the action occurs. You may notice that key generation takes up to 30 or more minutes to complete.

Although the phone functions during certification generation, additional TLS traffic may cause minimal call-processing interruptions with the phone; for example, audio glitches may occur when the certificate is written to flash at the end of the installation.

Consider the following information about how CAPF interacts with the Cisco Unified IP Phone 7960G and 7940G when the phone is reset by a user or by Cisco Unified Communications Manager.

Note In the following examples, if the LSC does not already exist in the phone and if By Existing Certificate is chosen for the CAPF Authentication Mode, the CAPF certificate operation fails.

Example—Nonsecure Device Security Mode

In this example, the phone resets after you configure the Device Security Mode to Nonsecure and the CAPF Authentication Mode to By Null String or By Existing Certificate (Precedence...). After the phone resets, it immediately registers with the primary Cisco Unified Communications Manager and receives the configuration

file. The phone then automatically initiates a session with CAPF to download the LSC. After the phone installs the LSC, configure the Device Security Mode to Authenticated or Encrypted.

Example—Authenticated/Encrypted Device Security Mode

In this example, the phone resets after you configure the Device Security Mode to Authenticated or Encrypted and the CAPF Authentication Mode to By Null String or By Existing Certificate (Precedence...). The phone does not register with the primary Cisco Unified Communications Manager until the CAPF session ends and the phone installs the LSC. After the session ends, the phone registers and immediately runs in authenticated or encrypted mode.

You cannot configure By Authentication String in this example because the phone does not automatically contact the CAPF server; the registration fails if the phone does not have a valid LSC.

CAPF Interaction with IPv6 Addressing

CAPF can issue and upgrade certificates to a phone that uses an IPv4, an IPv6, or both types of addresses. To issue or upgrade certificates for phones that are running SCCP that use an IPv6 address, you must set the Enable IPv6 service parameter to **True** in Cisco Unified Communications Manager Administration.

When the phone connects to CAPF to get a certificate, CAPF uses the configuration from the Enable IPv6 enterprise parameter to determine whether to issue or upgrade the certificate to the phone. If the enterprise parameter is set to **False**, CAPF ignores/rejects connections from phones that use IPv6 addresses, and the phone does not receive the certificate.

The following table describes how a phone that has an IPv4, IPv6, or both types of addresses connects to CAPF.

Table 15: How IPv6 or IPv4 Phone Connects to CAPF

IP Mode of Phone	IP Addresses on Phone	CAPF IP Address	How Phone Connects to CAPF
Dual-stack	IPv4 and IPv6 available	IPv4, IPv6	Phone uses an IPv6 address to connect to CAPF; if the phone cannot connect via an IPv6 address, it attempts to connect by using an IPv4 address.
Dual-stack	IPv4	IPv4, IPv6	Phone uses an IPv4 address to connect to CAPF.
Dual-stack	IPv6	IPv4, IPv6	Phone uses an IPv6 address to connect to CAPF. If the attempt fails, the phone uses an IPv4 address to connect to CAPF.
Dual-stack	IPv4	IPv4	Phone uses an IPv4 address to connect to CAPF.
Dual-stack	IPv4 and IPv6 available	IPv6	Phone uses and IPv6 address to connect to CAPF.

IP Mode of Phone	IP Addresses on Phone	CAPF IP Address	How Phone Connects to CAPF
Dual-stack	IPv4 and IPv6 available	IPv4	Phone uses an IPv4 address to connect to CAPF.
Dual-stack	IPv4	IPv6	Phone cannot connect to CAPF.
Dual-stack	IPv6	IPv4	Phone cannot connect to CAPF.
Dual-stack	IPv6	IPv6	Phone uses an IPv6 address to connect to CAPF.
IPv4	IPv4	IPv4, IPv6	Phone uses an IPv4 address to connect to CAPF.
IPv6	IPv6	IPv4, IPv6	Phone uses an IPv6 address to connect to CAPF.
IPv4	IPv4	IPv4	Phone uses an IPv4 address to connect to CAPF.
IPv4	IPv4	IPv6	Phone cannot connect to CAPF.
IPv6	IPv6	IPv6	Phone uses an IPv6 address to connect to CAPF.
IPv6	IPv6	IPv4	Phone cannot connect to CAPF.

CAPF System Interactions and Requirements

The following requirements exist for CAPF:

- Before you use CAPF, ensure that you performed all necessary tasks to install and configure the Cisco CTL Client. To use CAPF, you must activate the Cisco Certificate Authority Proxy Function service on the first node.
- During a certificate upgrade or install operation, if By Authentication String is the CAPF authentication method for the phone, you must enter the same authentication string on the phone after the operation, or the operation will fail. If TFTP Encrypted Configuration enterprise parameter is enabled and you fail to enter the authentication string, the phone may fail and may not recover until the matching authentication string is entered on the phone.
- Cisco strongly recommends that you use CAPF during a scheduled maintenance window because generating many certificates at the same time may cause call-processing interruptions.
- All servers in the Cisco Unified Communications Manager cluster must use the same administrator username and password, so CAPF can authenticate to all servers in the cluster.
- Ensure that the first node is functional and running during the entire certificate operation.

- Ensure that the phone is functional during the entire certificate operation.
- If a secure phone gets moved to another cluster, the Cisco Unified Communications Manager will not trust the LSC certificate that the phone sends because it was issued by another CAPF, whose certificate is not in the CTL file. To enable the secure phone to register, delete the existing CTL file. You can then use the Install/Upgrade option to install a new LSC certificate with the new CAPF and reset the phone for the new CTL file (or use the MIC). Use the Delete option in the CAPF section on the Phone Configuration window to delete the existing LSC before you move the phones.

Tip Cisco IP Telephony Backup and Restore System (BARS) backs up the CAPF data and reports because Cisco Unified Communications Manager stores the information in the Cisco Unified Communications Manager database.

Related Topics

Delete CTL File on Cisco Unified IP Phone, on page 90

CAPF in Cisco Unified Serviceability Setup

You perform the following tasks in Cisco Unified Serviceability:

- Activate the Cisco Certificate Authority Proxy Function service.
- Configure trace settings for CAPF.

Refer to the *Cisco Unified Serviceability Administration Guide*s for more information.

Set Up CAPF

Perform the following tasks to install, upgrade, or troubleshoot locally significant certificates.

Procedure

Step 1 Determine whether a locally significant certificate exists in the phone.
Determine whether you need to copy CAPF data to the Cisco Unified Communications Manager publisher database server. For more information, see the Phone documentation that supports your phone model and this version of Cisco Unified Communications Manager and the *Data Migration Assistant User Guide* that supports this version of Cisco Unified Communications Manager.

Tip If you used the CAPF utility with Cisco Unified Communications Manager 4.0 and verified that the CAPF data exists in the Cisco Unified Communications Manager database, you can delete the CAPF utility that you used with Cisco Unified Communications Manager 4.0.

Step 2 Verify that the Cisco Certificate Authority Proxy Function service is running.

Tip This service must run during all CAPF operations. It must also run for the Cisco CTL Client to include the CAPF certificate in the CTL file.

Step 3 Verify that you performed all necessary tasks to install and configure the Cisco CTL Client. Ensure that the CAPF certificate exists in the Cisco CTL file.

Step 4 If necessary, update CAPF service parameters.

Step 5 To install, upgrade, or troubleshoot locally significant certificates in the phone, use Cisco Unified Communications Manager Administration.

Step 6 If it is required for certificate operations, enter the authentication string on the phone.

Related Topics

Activate Certificate Authority Proxy Function Service, on page 130
CAPF Settings, on page 132
Enter Phone Authentication String, on page 136
Find Phones by LSC Status or Authentication String, on page 134
Install, Upgrade, Troubleshoot, or Delete Certificates From Phone Using CAPF, on page 132
Update CAPF Service Parameters, on page 130

Activate Certificate Authority Proxy Function Service

Cisco Unified Communications Manager does not automatically activate the Certificate Authority Proxy Function service in Cisco Unified Serviceability.

If you did not activate this service before you installed and configured the Cisco CTL Client, you must update the CTL file. Activate this service only on the first node.

To activate the service, perform the following procedure:

Procedure

Step 1 In Cisco Unified Serviceability, choose **Tools** > **Service Activation**.

Step 2 From the **Servers** drop-down list box, choose the server on which you want to activate the Certificate Authority Proxy Function service.

Step 3 Check the **Certificate Authority Proxy Function** check box.

Step 4 Click **Save**.

Related Topics

Update CTL File, on page 83
Where to Find More Information About CAPF Setup, on page 137

Update CAPF Service Parameters

The CAPF Service Parameter window provides information on the number of years that the certificate is valid, the maximum number of times that the system retries to generate the key, and so on.

For the CAPF service parameters to show Active status in Cisco Unified Communications Manager Administration, you must activate the Certificate Authority Proxy Function service.

To update the CAPF service parameters, perform the following procedure:

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **System** > **Service Parameters**.

Step 2 From the **Server** drop-down list box, choose the server.

Tip You must choose the first node in the cluster.

Step 3 From the **Service** drop-down list box, choose the **Cisco Certificate Authority Proxy Function** service.

Step 4 Update the CAPF service parameters, as described in help that displays for the parameter.

Note To display help for the CAPF service parameters, click the question mark or the parameter name links.

Step 5 For the changes to take effect, restart the Cisco Certificate Authority Proxy Function service.

Related Topics

Activate Certificate Authority Proxy Function Service, on page 130
Where to Find More Information About CAPF Setup, on page 137

Generate and Import Third Party CA-Signed LSCs

CAPF LSCs are locally signed. However, you may require phones to use third party CA signed LSCs.

Note Perform Steps 1 and 2 once and repeat the remaining steps until you configure all require phone LSC operations.

Procedure

Step 1 Import the third party CA certificate into the Unified Communications Manager trust store.

Step 2 Follow these steps to configure the service parameter Certificate Issuer to Endpoint:

a) In Cisco Unified CM Administration, select **System** > **Service Parameter**.
b) Select your Unified Communications Manager server frop the drop-down list box.
c) Under the service drop-down list box, select **Cisco Certificate Authority Proxy Function**.
d) For the service parameter Certificate Issuer to Endpoint, select **Offline CA**.

Step 3 Check CSR generation progress. After the phones reregister, use the CLI command **utils capf csr count**to check whether the CSRs are generated.

Step 4 Dump the CSRs to the desired location (local directory or remote directory through FTP or TFTP) by using the CLI command **utils capf csr dump**.

The CLI tars and zip the CSRs into a single file (`.tgz`) before uploading.

Step 5 When all the signed certificates are provided by the CA, you need to tar and zip all the certificates into a single file using the Linux command tar cvzf <filename.tgz> *.der.

Step 6 Use the CLI command **utils capf cert import** to import the certificates into Unified Communications Manager.

Note The imported certificate must be in DER format, and they must be tarred in a flat file structure.

The CLI command untars the file, and parses and verifies each certificate. If the certificates are valid, they are sent to the phones, and the corresponding CSR is deleted.

What to Do Next

To remove all the CSRs and certificates that were previously built and imported, you can use the command **utils capf csr delete**.

Install, Upgrade, Troubleshoot, or Delete Certificates From Phone Using CAPF

Perform the following procedure to use the Certificate Authority Proxy Function:

Procedure

Step 1 Find the phone, as described in the *Administration Guide for Cisco Unified Communications Manager* .

Step 2 After the search results display, locate the phone where you want to install, upgrade, delete, or troubleshoot the certificate and click the **Device Name (Line)** link for that phone.

Step 3 Enter the configuration settings, as described in Table 16: CAPF Configuration Settings, on page 133.

Step 4 Click **Save**.

Step 5 Click **Reset**.

Related Topics

Where to Find More Information About CAPF Setup, on page 137

CAPF Settings

The following table describes the CAPF settings in the **Phone Configuration** window in Cisco Unified Communications Manager Administration.

Table 16: CAPF Configuration Settings

Setting	Description
Certificate Operation	From the drop-down list box, choose one of the following options: • **No Pending Operation—**Displays when no certificate operation is occurring. (default setting) • **Install/Upgrade—**Installs a new or upgrades an existing locally significant certificate in the phone. • **Delete—**Deletes the locally significant certificate that exists in the phone. • **Troubleshoot—**Retrieves the locally significant certificate (LSC) or the manufacture-installed certificate (MIC), so you can view the certificate credentials in the CAPF trace file. If both certificate types exist in the phone, Cisco Unified Communications Manager creates two trace files, one for each certificate type. **Tip** By choosing the Troubleshoot option, you can verify that an LSC or MIC exists in the phone. The Delete and Troubleshoot options do not display if a certificate does not exist in the phone.
Authentication String	If you chose the By Authentication String option, this field applies. Manually enter a string or generate a string by clicking the Generate String button. Ensure that the string contains 4 to 10 digits. To install, upgrade, or troubleshoot a locally significant certificate, the phone user or administrator must enter the authentication string on the phone.
Generate String	If you want CAPF to automatically generate an authentication string, click this button. The 4- to 10-digit authentication string displays in the Authentication String field.
Key Order	This field specifies the sequence of the key for CAPF. Select one of the following values from the drop-down list: • **RSA Only** • **EC Only** • **EC Preferred, RSA Backup** **Note** When you add a phone based on the value in **Key Order**, **RSA Key Size**, and **EC Key Size** fields, the device security profile is associated with the phone. If you select the **EC Only** value with the **EC Key Size** value of 256 bits then the device security profile appends with **EC-256** value.
RSA Key Size (Bits)	From the drop-down list box, choose one of the these values**—512**, **1024**, or **2048**.
EC Key Size (Bits)	From the drop-down list box, choose one of the these values**—256**, **384**, or **521**.

Setting	Description
Operation Completes by	This field, which supports all certificate operation options, specifies the date and time by which you must complete the operation. The values that display apply for the first node.
Operation Status	This field displays the progress of the certificate operation; for example, <operation type> pending, failed, or successful, where operating type equals the Install/Upgrade, Delete, or Troubleshoot certificate operation options. You cannot change the information that displays in this field.

Related Topics

CAPF System Interactions and Requirements, on page 128
Enter Phone Authentication String, on page 136
Where to Find More Information, on page 32

Find Phones by LSC Status or Authentication String

To find phones on the basis of certificate operation status or the authentication string, perform the following procedure:

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **Device** > **Phone**.
The Find and List window displays. Records from an active (prior) query may also display in the window.

Step 2 From the first drop-down list box, choose one of the following options:

a) **LSC Status—** Choosing this option returns a list of phones that use CAPF to install, upgrade, delete, or troubleshoot locally significant certificates.
b) **LSC Expires**- Choosing this option returns a list of phones based on the specified lsc expiration search criteria.
c) **LSC Issued by** - Choosing this option returns a list of phones based on the specified lsc issued by search criteria.
d) **LSC Issuer Expires by** - Choosing this option returns a list of phones based on the specified lsc issuer expires by search criteria.
e) **Authentication String—**Choosing this option returns a list of phones with an authentication string that is specified in the Authentication String field.

Step 3 From the second drop-down list box, choose a search pattern.

Step 4 Specify the appropriate search text, if applicable.

Note To add additional search criteria, click the + button. When you add criteria, the system searches for a record that matches all criteria that you specify. To remove criteria, click the – button to remove the last added criterion or click the **Clear Filter** button to remove all added search criteria.

Step 5 Click **Find**.
All matching records display. You can change the number of items that display on each page by choosing a different value from the Rows per Page drop-down list box.

Step 6 From the list of records that display, click the link for the record that you want to view.
Note To reverse the sort order, click the up or down arrow, if available, in the list header.

The window displays the item that you choose.

Related Topics

Where to Find More Information About CAPF Setup, on page 137

Generate CAPF Report

If you want to do so, you can generate a CAPF report to view the status of the certificate operation, the authentication string, security profile, authentication mode, and so on. The report includes information such as device name, device description, security profile, authentication string, authentication mode, LSC status, and so on.

To generate a CAPF report, perform the following procedure:

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **Device** > **Phone**.
The **Find/List** window displays. Records from an active (prior) query may also display in the window.

Step 2 To find all records in the database, ensure the dialog box is empty; go to Step 3, on page 135.
To filter or search records

a) From the first drop-down list box, choose a search parameter.
b) From the second drop-down list box, choose a search pattern.
c) Specify the appropriate search text, if applicable.
Note To add additional search criteria, click the + button. When you add criteria, the system searches for a record that matches all criteria that you specify. To remove criteria, click the – button to remove the last added criterion or click the **Clear Filter** button to remove all added search criteria.

Step 3 Click **Find**.
All matching records display. You can change the number of items that display on each page by choosing a different value from the Rows per Page drop-down list box.

Step 4 In the Related Links drop-down list box, choose **CAPF Report in File**; then, click **Go**.

Step 5 Save the file to a location that you will remember.

Step 6 Use Microsoft Excel to open the .csv file.

Related Topics

Where to Find More Information About CAPF Setup, on page 137

Enter Phone Authentication String

If you chose the By Authentication String mode and generated an authentication string, you must enter the authentication string on the phone to install the locally significant certificate.

Tip The authentication string applies for one-time use only. Obtain the authentication string that displays in the **Phone Configuration** window or in the CAPF report.

Before You Begin

Before you enter the authentication string on the phone, verify that the following conditions are met:

- The CAPF certificate exists in the CTL file.
- You activated the Cisco Certificate Authority Proxy Function service.
- The first node functions and runs. Ensure that the server runs for each certificate installation.
- The device has registered.
- A signed image exists on the phone; refer to the Cisco Unified IP Phone administration documentation that supports your phone model.

Procedure

Step 1 Press the **Settings** button on the phone.

Step 2 If the configuration is locked, press ****#** (asterisk, asterisk, pound sign) to unlock it.

Step 3 Scroll down the **Settings** menu. Highlight "Security Configuration" and press the **Select** softkey.

Step 4 Scroll down the **Security Configuration** menu. Highlight "LSC" and press the **Update** softkey.

Step 5 When prompted for the authentication string, enter the string that the system provides and press the **Submit** softkey.
The phone installs, updates, deletes, or fetches the certificate, depending on the current CAPF configuration.

You can monitor the progress of the certificate operation by viewing the messages that display on the phone. After you press **Submit**, the message "Pending" displays under the LSC option. The phone generates the public and private key pair and displays the information on the phone. When the phone successfully completes the process, the phone displays a successful message. If the phone displays a failure message, you entered the wrong authentication string or did not enable the phone for upgrade.

You can stop the process by choosing the Stop option at any time.

Related Topics

Activate Certificate Authority Proxy Function Service, on page 130
Where to Find More Information About CAPF Setup, on page 137

Verify Phone Authentication String

You can verify that the certificate is installed on the phone by choosing **Settings** > **Model Information** and viewing the LSC setting, which indicates Installed or Not Installed.

Related Topics

Where to Find More Information About CAPF Setup, on page 137

Where to Find More Information About CAPF Setup

Related Topics

About Certificate Authority Proxy Function, on page 125
Cisco Unified IP Phone and CAPF Interaction, on page 126
CAPF System Interactions and Requirements, on page 128
CAPF in Cisco Unified Serviceability Setup, on page 129
Set Up CAPF, on page 129
CAPF Settings, on page 132

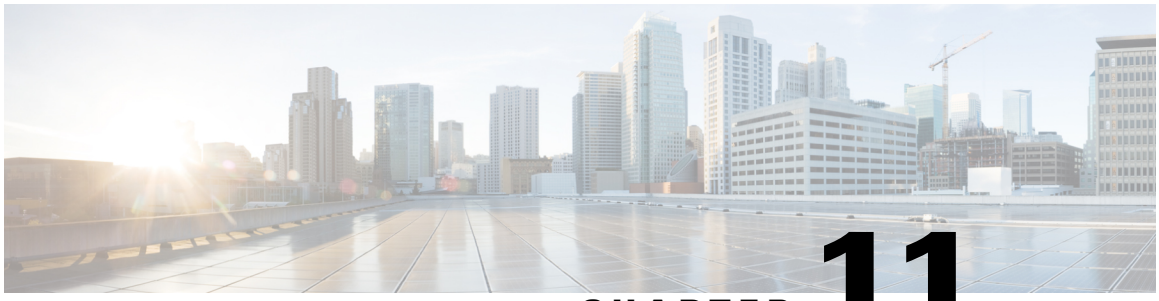

CHAPTER 11

Encrypted Phone Configuration File Setup

This chapter provides information about encrypted phone configuration files setup. After you configure security-related settings, the phone configuration file contains sensitive information, such as digest passwords and phone administrator passwords. To ensure privacy of the configuration file, you must configure the configuration files for encryption.

- About Phone Configuration File Encryption, page 139
- AES 256 Encryption Support for TLS and SIP SRTP, page 142
- Phone Models Supporting Encrypted Configuration File, page 144
- Encrypted Configuration File Setup Tips, page 145
- Set up TFTP Encryption, page 146
- Disable Phone Configuration File Encryption, page 151
- Exclude Digest Credentials From Phone Configuration File Download, page 152
- Where to Find More Information About Encrypted Phone File Setup, page 152

About Phone Configuration File Encryption

To secure digest credentials and secured passwords in phone downloads from Cisco Unified Communications Manager, you must enable the TFTP Encrypted Config option in the Phone Security Profile Configuration window and perform additional tasks in Cisco Unified Communications Manager Administration.

After you enable the TFTP Encrypt Config option, configure the required parameters in Cisco Unified Communications Manager Administration and the phone and restart required services in Cisco Unified Serviceability, the TFTP server

1 Deletes all clear text configuration files on disk

2 Generates encrypted versions of the configuration files

If the phone supports encrypted phone configuration files and if you performed the necessary tasks for phone configuration file encryption, the phone requests an encrypted version of the configuration file.

Warning If digest authentication is True for the phone that is running SIP when the TFTP encrypted configuration setting is False, digest credentials may get sent in the clear.

Some phones do not support encrypted phone configuration files. The phone model and protocol determine the method that the system uses to encrypt the configuration file. Supported methods rely on Cisco Unified Communications Manager functionality and a firmware load that supports encrypted configuration files. If you downgrade the phone firmware load to a version that does not support encrypted configuration files, the TFTP server offers an unencrypted configuration file that provides minimal configuration settings, and the phone may not perform as expected.

To ensure that you maintain the privacy of the key information, Cisco strongly recommends that you perform the tasks that are associated with encrypted phone configuration files in a secure environment.

Cisco Unified Communications Manager supports the following methods:

- Manual key distribution
- Symmetric key encryption with a phone public key

The setup information provided for manual key distribution and symmetric key encryption with a phone public key assume that you have configured Mixed Mode and enabled the TFTP Encrypted Config parameter in Cisco Unified Communications Manager Administration.

Related Topics

Manual Key Distribution, on page 140
Symmetric Key Encryption with Phone Public Key, on page 141
Phone Model Support, on page 101
Disable Phone Configuration File Encryption, on page 151

Manual Key Distribution

With manual key distribution, a 128- or 256-bit symmetric key, which is stored in the Cisco Unified Communications Manager database, encrypts the phone configuration file after the phone resets. To determine the key size for your phone model.

To encrypt the configuration file, the administrator can either manually enter the key into or prompt Cisco Unified Communications Manager to generate the key in the **Phone Configuration** window. After the key exists in the database, the administrator or user must enter the key into the phone by accessing the user interface on the phone; the phone stores the key in flash as soon as you press the **Accept** softkey. After the key is entered, the phone requests an encrypted configuration file after it is reset. After the required tasks occur, the symmetric key uses RC4 or AES 128 encryption algorithms to encrypt the configuration file. To determine which phones use the RC4 or AES 128 encryption algorithms.

When the phone contains the symmetric key, the phone always requests the encrypted configuration file. Cisco Unified Communications Manager downloads the encrypted configuration file to the phone, which the TFTP server signs. Not all phone types validate the signer of the configuration file.

The phone decrypts the file contents by using the symmetric key that is stored in flash. If decryption fails, the configuration file does not get applied to the phone.

Tip If the TFTP Encrypted Config setting gets disabled, administrators must remove the symmetric key from the phone GUI, so the phone requests an unencrypted configuration file the next time that it is reset.

Related Topics

Phone Model Support, on page 101

Symmetric Key Encryption with Phone Public Key

If the phone contains a manufacturing-installed certificate (MIC) or a locally significant certificate (LSC), the phone contains a public and private key pair, which are used for PKI encryption.

If you are using this method for the first time, the phone compares the MD5 hash of the phone certificate in the configuration file to the MD5 hash of the LSC or MIC. If the phone does not identify a problem, the phone requests an encrypted configuration file from the TFTP server after the phone resets. If the phone identifies a problem, for example, the hash does not match, the phone does not contain a certificate, or the MD5 value is blank, the phone attempts to initiate a session with CAPF unless the CAPF authentication mode equals By Authentication String (in which case, you must manually enter the string). The Certificate Authority Proxy Function (CAPF) authenticates Cisco Unified IP Phones to Cisco Unified Communications Manager and issues phone certificates (LSCs). CAPF extracts the phone public key from the LSC or MIC, generates a MD5 hash, and stores the values for the public key and certificate hash in the Cisco Unified Communications Manager database. After the public key gets stored in the database, the phone resets and requests a new configuration file.

After the public key exists in the database and the phone resets, the symmetric key encryption process begins after the database notifies TFTP that the public key exists for the phone. The TFTP server generates a 128-bit symmetric key, which encrypts the configuration file with the Advanced Encryption Standard (AES) 128 encryption algorithm. Then, the phone public key encrypts the symmetric key, which it includes in the signed envelope header of the configuration file. The phone validates the file signing, and, if the signature is valid, the phone uses the private key from the LSC or MIC to decrypt the encrypted symmetric key. The symmetric key then decrypts the file contents.

Every time that you update the configuration file, the TFTP server automatically generates a new key to encrypt the file.

Tip For phones that support this encryption method, the phone uses the encryption configuration flag in the configuration file to determine whether to request an encrypted or unencrypted file. If the TFTP Encrypted Config setting is disabled, and Cisco Unified IP Phones that support this encryption method request an encrypted file (.enc.sgn file), Cisco Unified Communications Manager sends a 'file not found error' to the phone. The phone then requests an unencrypted, signed file (.sgn file).

If the TFTP Encrypted Config setting is enabled but the phone requests an unencrypted configuration file for some reason, the TFTP server offers an unencrypted file that contains minimal configuration settings. After the phone receives the minimum configuration, the phone can detect error conditions, such as key mismatch, and may start a session with CAPF to synchronize the phone public key with the Cisco Unified Communications Manager database. If the error condition is resolved, the phone requests an encrypted configuration file the next time that it resets.

Related Topics

About Certificate Authority Proxy Function, on page 125
Phone Model Support, on page 101

AES 256 Encryption Support for TLS and SIP SRTP

Cisco Collaboration Solutions use Transport Layer Security (TLS) and Secure Real-time Transport Protocol (SRTP) for signaling and media encryption. Currently, Advanced Encryption Standard (AES) with a 128-bit encryption key is used as the encryption cipher. AES also uses Hash-based Message Authentication Code Secure Hash Algorithm-1 (HMAC-SHA-1) as the authentication method. These algorithms cannot effectively scale to meet the required changing security and performance needs. To meet escalating security and performance requirements, the algorithms and protocols for encryption, authentication, digital signatures, and key exchange in Next-Generation Encryption (NGE) are developed. Also, AES 256 encryption support is provided instead of AES 128 for TLS and Session Initiation Protocol (SIP) SRTP that supports NGE.

With Cisco Unified Communications Manager Release 10.5(2), the AES 256 encryption support for TLS and SIP SRTP is enhanced to focus on AES 256 cipher support in signaling and media encryption. This feature is useful for the applications that run on Cisco Unified Communications Manager to initiate and support TLS 1.2 connections with the AES-256 based ciphers that conform to SHA-2 (Secure Hash Algorithm) standards and is Federal Information Processing Standards (FIPS) compliant.

This feature has the following requirements:

- The connection that the SIP trunk and SIP line initiates.
- The ciphers that Cisco Unified Communications Manager supports for SRTP calls over SIP line and SIP trunk.

AES 256 and SHA-2 Support in TLS

The Transport Layer Security (TLS) protocol provides authentication, data integrity, and confidentiality for communications between two applications. TLS 1.2 is based on Secure Sockets Layer (SSL) protocol version 3.0, although the two protocols are not compatible with each other. TLS operates in a client/server mode where one side acts as a server and the other side acts as a client. SSL is positioned as a protocol layer between the Transmission Control Protocol (TCP) layer and the application to form a secure connection between clients and servers so that they can communicate securely over a network. To operate, TLS requires TCP as the reliable transport layer protocol.

In Cisco Unified Communications Manager Release 10.5(2), AES 256 and SHA-2 (Secure Hash Algorithm-2) support in TLS 1.2 is an enhancement to handle the connection that is initiated by the SIP Trunk and the SIP line. The supported ciphers, which are AES 256 and SHA-2 compliant, are listed as follows:

- TLS_ECDH_RSA_WITH_AES_128_GCM_SHA256—The cipher string is ECDH-RSA-AES128-GCM-SHA256.
- TLS_ECDH_RSA_WITH_AES_256_GCM_SHA384—The cipher string is ECDH-RSA-AES256-GCM-SHA384.

where:

- TLS is Transport Layer Security

- ECDH is Elliptic curve Diffie–Hellman, which is an algorithm
- RSA is Rivest Shamir Adleman, which is an algorithm
- AES is Advanced Encryption Standards
- GCM is Galois/Counter Mode

In addition to the newly-supported ciphers, Cisco Unified Communications Manager Release 10.5(2) continues to support TLS_RSA_WITH_AES_128_CBC_SHA. The cipher string of this cipher is AES128-SHA.

Note

- The Cisco Unified Communications Manager certificates are based on RSA.
- In Cisco Unified Communications Manager 10.5(2), Cisco Endpoints (phones) do not support the above mentioned new ciphers for TLS 1.2.
- With AES 256 and SHA-2 (Secure Hash Algorithm-2) support in TLS 1.2 enhancement in Cisco Unified Communications Manager 10.5(2), the default key size for Certificate Authority Proxy Function (CAPF) is increased to 2048 bits.

AES 256 Support in SRTP SIP Call Signaling

Secure Real-time Transport Protocol (SRTP) defines the methods of providing confidentiality and data integrity for both Real-time Transport Protocol (RTP) voice and video media and their corresponding Real-time Transport Control Protocol (RTCP) streams. SRTP implements this method through the use of encryption and message authentication headers. In SRTP, encryption applies to the payload of the RTP packet only, and not to the RTP header. However, message authentication applies to both the RTP header and the RTP payload. Also, SRTP indirectly provides protection against replay attacks because message authentication applies to the RTP sequence number within the header. SRTP uses Advanced Encryption Standards (AES) with a 128-bit encryption key as the encryption cipher. It also uses Hash-based Message Authentication Code Secure Hash Algorithm-1 (HMAC-SHA-1) as the authentication method.

Cisco Unified Communications Manager 10.5(2) supports crypto ciphers for the SRTP calls over SIP line and SIP trunk. These crypto ciphers are AEAD_AES_256_GCM and AEAD_AES_128_GCM, where AEAD is Authenticated-Encryption with Associated-Data, and GCM is Galois/Counter Mode. These ciphers are based on GCM. If these ciphers are present in the Session Description Protocol (SDP), they are treated with higher priority as compared to the AES 128 and SHA-1 based ciphers. Cisco Endpoints (phones) do not support these new ciphers that you add for Cisco Unified Communications Manager 10.5(2) for SRTP.

In addition to the newly supported ciphers, Cisco Unified Communications Manager 10.5(2) continues to support the following ciphers:

- AES_CM_128_HMAC_SHA1_80
- AES_CM_128_HMAC_SHA1_32
- F8_128_HMAC_SHA1_80

AES 256 encryption is supported in the following calls:

- SIP line to SIP line call signaling
- SIP line to SIP trunk signaling

- SIP trunk to SIP trunk signaling

Cisco Unified Communications Manager Requirements

- Support for TLS Version 1.2 on the SIP trunk and SIP line connections is available.
- Cipher support—TLS_ECDHE_RSA_WITH_AES_256_GCM_SHA384 (cipher string ECDHE-RSA-AES256-GCM-SHA384) and TLS_ECDHE_RSA_WITH_AES_128_GCM_SHA256 (cipher string ECDHE-RSA-AES128-GCM-SHA256)—is available when the TLS 1.2 connection is made. These ciphers are based on GCM and conform to SHA-2 category.
- Cisco Unified Communications Manager initiates TLS1.2 with the TLS_ECDHE_RSA_WITH_AES_256_GCM_SHA384 and TLS_ECDHE_RSA_WITH_AES_128_GCM_SHA256 ciphers. If the peer does not support TLS1.2, then Cisco Unified Communications Manager will fall back to TLS 1.0 with the existing AES128-SHA cipher.
- The SRTP calls over SIP line and SIP trunk support the GCM-based AEAD_AES_256_GCM and AEAD_AES_128_GCM ciphers.

Interactions and Restrictions

- Cisco Unified Communications Manager requirements apply to SIP line and SIP trunk, and basic SIP to SIP calls only.
- The device types that are based on non-SIP protocols will continue to support the existing behavior with the TLS versions with the supported ciphers. Skinny Call Control Protocol (SCCP) also supports TLS 1.2 with the earlier supported ciphers.
- SIP to non-SIP calls will continue to use AES 128 and SHA-1 based ciphers.

Phone Models Supporting Encrypted Configuration File

You can encrypt the phone configuration file for the following Cisco Unified IP Phones:

Phone Model and Protocol	Encryption Method
Cisco Unified IP Phone 7905G or 7912G (SIP only)	Manual key distribution—Encryption algorithm: RC4Key size: 256 bits File signing support: No
Cisco Unified IP Phone 7940G or 7960G (SIP only)	Manual key distribution—Encryption algorithm: Advanced Encryption Standard (AES) 128Key size: 128 bits File signing support: These phones that are running SIP receive signed, encrypted configuration files but ignore the signing information.

Phone Model and Protocol	Encryption Method
Cisco Unified IP Phone 6901, 6911, 6921, 6941, 6945, and 6961 Cisco Unified IP Phone 7970G, 7971G, or 7975G; Cisco Unified IP Phone 7961G, 7962G, or 7965G;Cisco Unified IP Phone 7941G, 7942G, or 7945G;Cisco Unified IP Phone 7911G; Cisco Unified IP Phone 7906G Cisco Unified IP Phone 7971G-GE, 7961G-GE, 7941G-GE Cisco Unified IP Phone 7931G, 7921G, 7925G, 7926G (SCCP only) Cisco Unified IP Phone 8941 and 8945 Cisco Unified IP Phone 8961, 9951, and 9971	Symmetric key encryption with phone public key (PKI encryption)—Encryption algorithm: AES 128Key size: 128 bits File signing support: Yes **Note** Cisco Unified IP Phones 6901 and 6911 do not request for the ITL file as they do not support security by default. Therefore, the Cisco Unified Communications Manager cluster should be set to secure (Mixed) mode for the Cisco Unified IP Phones(6901 and 6911) to get the Cisco CTL file containing Cisco Certificate Authority Proxy Function (CAPF) details for the encrypted configuration file to work on the Cisco IP Phones (6901 and 6911).

Encrypted Configuration File Setup Tips

Cisco recommends that you enable the TFTP Encrypted Config flag to secure confidential data in phone downloads. For phones that do not have PKI capabilities, you must also configure a symmetric key in Cisco Unified Communications Manager Administration and in the phone. If the symmetric key is missing from either the phone or Cisco Unified Communications Manager or if a mismatch occurs when the TFTP Encrypted Config flag is set, the phone cannot register.

Consider the following information when you configure encrypted configuration files in Cisco Unified Communications Manager Administration:

- Only phones that support encrypted configuration files display the TFTP Encrypted Config flag in the phone security profile. You cannot configure encrypted configuration files for Cisco Unified IP Phones 7905G, 7912G, 7940G, and 7960G (SCCP only) because these phones do not receive confidential data in the configuration file download.
- The default setting for TFTP Encrypted Config specifies False (not checked). If you apply the default, non-secure profile to the phone, digest credentials and secured passwords get sent in the clear.
- For Cisco Unified IP Phones that use public key encryption, Cisco Unified Communications Manager does not require you to set the Device Security Mode to authenticated or encrypted to enable encrypted configuration files. Cisco Unified Communications Manager uses the CAPF process for downloading its public key during registration.
- You may choose to download unencrypted configuration files to phones if you know your environment is secure or to avoid manually configuring symmetric keys for phones that are not PKI-enabled; however, Cisco does not recommend using this method.
- For Cisco Unified IP Phones 7905G, 7912G, 7940G, and 7960G (SIP only), Cisco Unified Communications Manager Administration provides a method of sending digest credentials to the phone that is easier, but less secure, than using an encrypted configuration file. This method, which uses the Exclude Digest Credential in Configuration File setting, is useful for initializing digest credentials because it does not require you to first configure a symmetric key and enter it on the phone.

With this method, you send the digest credentials to the phone in an unencrypted configuration file. After the credentials are in the phone, Cisco recommends that you keep the TFTP file encryption setting disabled and enable the Exclude Digest Credential in Configuration File flag on the corresponding security profile window, which will exclude digest credentials from future downloads.

After digest credentials exist in these phones and an incoming file does not contain digest credentials, the existing credentials remain in place. The digest credentials remain intact until the phone is factory reset or new credentials (including blanks) are received.

If you change digest credentials for a phone or end user, temporarily disable the Exclude Digest Credentials flag on the corresponding security profile window to download the new digest credentials to the phone.

Set up TFTP Encryption

Complete these tasks to set up encryption for TFTP configuration files.

Before You Begin

- Cluster security must be mixed mode.
- Verify which phones in your cluster support manual key encryption and which support public key encryption.
- Verify which phones support SHA-1 and SHA-512. If you enable SHA-512 clusterwide, and your phones don't support it, those phones won't work.

Procedure

	Command or Action	Purpose
Step 1	Enable TFTP Encryption, on page 147	Enable the TFTP Configuration File option for your phones. You can enable this option in the Phone Security Profile.
Step 2	Configure SHA-512 Encryption, on page 147	Optional. Once TFTP file encryption is enabled, SHA-1 is configured by default as the encryption algorithm. Use this procedure to update the system to use the stronger SHA-512 algorithm. If you want to use SHA-1, you can skip this step. **Note** Make sure that your phones support SHA-512. Otherwise, those phones will not work.
Step 3	Set Up Manual Key Distribution, on page 148	For phones that use manual keys, set up manual key distribution.
Step 4	Enter Phone Symmetric Key, on page 149	For phones that use manual keys, enter the key in Cisco Unified Communications Manager.
Step 5	Verify LSC or MIC Certificate Installation, on page 150	For phones that use public keys, verify the certificate installation.
Step 6	Update CTL File, on page 150	After you complete your TFTP config file updates, regenerate the CTL file.

	Command or Action	Purpose
Step 7	Restart Services, on page 151	Restart the Cisco CallManager and Cisco TFTP services.
Step 8	Reset Phones, on page 151	Once your encrypted TFTP configuration file updates are completed, reset your phones.

Enable TFTP Encryption

Use this procedure to enable encryption for files downloaded from the TFTP server. You can enable this option within the phone security profile for a given phone model.

Procedure

Step 1 From Cisco Unified CM Administration, choose **System** > **Security** > **Phone Security Profile**.
Step 2 Click **Find** and select a phone security profile.
Step 3 Check the **TFTP Encrypted Config** check box.
Step 4 Click **Save**.
Step 5 Repeat these steps for any other phone security profiles that are used in the cluster.

What to Do Next

Optional. Configure SHA-512 Encryption, on page 147

Configure SHA-512 Encryption

SHA-1 is the default algorithm for TFTP file encryption. Use this optional procedure to upgrade the system to use the stronger SHA-512 algorithm for TFTP configuration files such as digital signatures.

Note Make sure that your phones support SHA-512. Otherwise, those phones will not work once you update your system.

Before You Begin

Enable TFTP Encryption, on page 147

Procedure

Step 1 From Cisco Unified CM Administration, choose **System** > **Enterprise Parameters**.
Step 2 Set the **TFTP File Signature Algorithm** enterprise parameter to **SHA-512**.
Step 3 Click **Save**.

What to Do Next

For phones that use manual keys, Set Up Manual Key Distribution, on page 148.

For phones the use public keys, Verify LSC or MIC Certificate Installation, on page 150.

If you have already set up and verified your keys, Update CTL File, on page 150

Set Up Manual Key Distribution

The following procedure assumes that:

- The phone exists in the Cisco Unified Communications Manager database,
- A compatible firmware load exists on the TFTP server, and
- You enabled the TFTP Encrypted Config parameter in Cisco Unified Communications Manager Administration.

Before You Begin

Determine whether your phone supports manual key distribution

Procedure

Step 1 Find the phone, as described in the *Administration Guide for Cisco Unified Communications Manager* .

Step 2 After the **Phone Configuration** window displays, configure the manual key distribution settings.
See Manual Key Distribution, on page 140 for field descriptions.

Note After you have configured the settings, you should not change the key.

Step 3 Click **Save**.

Step 4 Enter the symmetric key on the phone and then reset the phone.
For information on how to perform these tasks, refer to the phone administration guide that supports your phone model.

What to Do Next

Enter Phone Symmetric Key, on page 149

Manual Key Distribution Settings

The following table describes the manual distribution configuration settings in the **Phone Configuration** window.

Table 17: Manual Key Distribution Configuration Settings

Setting	Description
Symmetric Key	Enter a string of hexadecimal characters that you want to use for the symmetric key. Valid characters include numerals, 0-9, and uppercase /lowercase characters, A-F (or a-f). Make sure that you enter the correct bits for the key size; otherwise, Cisco Unified Communications Manager rejects the value. Cisco Unified Communications Manager supports the following key sizes: • Cisco Unified IP Phones 7905G and 7912G (SIP only)—256 bits • Cisco Unified IP Phones 7940G and 7960G (SIP only)—128 bits After the key is configured, you should not change it.
Generate String	If you want Cisco Unified Communications Manager Administration to generate a hexadecimal string for you, click the **Generate String** button. After the key is configured, you should not change it.
Revert to Database Value	If you want to restore the value that exists in the database, click this button.

Enter Phone Symmetric Key

Follow this procedure to enter the symmetric key on the phone after you configure manual key distribution in Cisco Unified Communications Manager Administration.

Procedure

Step 1 Press the **Settings** button on the phone.

Step 2 If the configuration is locked, scroll down the **Settings** menu, highlight **Unlock Phone** and press the **Select** softkey. Enter the phone password and press the **Accept** softkey.
The phone accepts the password.

Step 3 Scroll down the **Settings** menu, highlight **Security Configuration**, and press the **Select** softkey.

Step 4 In the **Security Configuration** menu, highlight the **Set Cfg Encrypt Key** option and press the **Select** softkey.

Step 5 When prompted for the encryption key, enter the key (in hex). If you need to clear the key, enter 32 zero digits.

Step 6 After you have finished entering the key, press the **Accept** softkey.
The phone accepts the encryption key.

Step 7 Reset the phone.
After the phone resets, the phone requests encrypted configuration files.

What to Do Next

Update CTL File, on page 150

Verify LSC or MIC Certificate Installation

This procedure applies to Cisco Unified IP Phones that use PKI encryption. To determine whether your phone supports the method, symmetric key encryption with phone public key (PKI encryption), see the Phone Models Supporting Encrypted Configuration File, on page 144.

The following procedure assumes that the phone exists in the Cisco Unified Communications Manager database and that you enabled the TFTP Encrypted Config parameter in Cisco Unified Communications Manager Administration.

Procedure

Step 1 Verify that a manufacture-installed certificate (MIC) or a locally significant certificate (LSC) exists in the phone.

Tip By choosing the Troubleshoot option in the CAPF settings section of the Phone Configuration window, you can verify that an LSC or MIC exists in the phone in Cisco Unified Communications Manager Administration. The Delete and Troubleshoot options do not display if a certificate does not exist in the phone.

Tip You can also verify that an LSC or MIC exists in the phone by checking the security configuration at the phone. Refer to the Cisco Unified IP Phone administration guides for Cisco Unified IP Phones that support this version of Cisco Unified Communications Manager for more information.

Step 2 If a certificate does not exist, install an LSC by using the CAPF functionality in the Phone Configuration window. For information on how to install a LSC, see topics related to the certificate authority proxy function.

Step 3 After you configure the CAPF settings, click **Save**.

Step 4 In the **Phone Configuration** window, click **Reset**. The phone requests an encrypted configuration file from the TFTP server after the phone resets

What to Do Next

Update CTL File, on page 150

Update CTL File

After you enable TFTP file encryption, regenerate the CTL file.

Procedure

Step 1 Log in to the Command Line Interface.

Step 2 On the publisher node, run the **utils ctl update CTLfile** command.

What to Do Next

Restart Services, on page 151

Restart Services

After you regenerate the CTL file, restart services.

Procedure

Step 1 From Cisco Unified Serviceability, choose **Tools** > **Control Center – Feature Services**.

Step 2 Select each of the following two services, and click **Stop**:

- Cisco CallManager
- Cisco TFTP

Step 3 After both services have stopped, select them again, and click **Start**.

What to Do Next

Reset Phones, on page 151

Reset Phones

After you complete all of your encrypted TFTP configuration file updates, reset your phones.

Procedure

Step 1 From Cisco Unified CM Administration, choose **Device** > **Phones**.

Step 2 Click **Find**.

Step 3 Click **Select All**.

Step 4 Click **Reset Selected**.

Disable Phone Configuration File Encryption

To disable encryption for the phone configuration files, you must uncheck the TFTP Encrypted Config check box in the phone security profile in Cisco Unified Communications Manager Administration and save your change.

Warning If digest authentication is True for the phone that is running SIP when the TFTP encrypted configuration setting is False, digest credentials may get sent in the clear.

After you update the setting, the encryption keys for the phone remain in the Cisco Unified Communications Manager database.

Cisco Unified IP Phones 7911G, 7931G (SCCP only), 7941G, 7941G-GE, 7942G, 7945G, 7961G, 7961G-GE, 7962G, 7965G, 7970G, 7971G, 7971G-GE, and 7975G request an encrypted file (.enc.sgn file) when the encrypted configuration setting gets updated to false, the phone requests an unencrypted, signed file (.sgn file).

If Cisco Unified IP Phones that are running SCCP: 6901, 6911, 6921, 6941, 6945, 6961, 7906G, 7911G, 7921G, 7925G, 7925G-EX, 7926G, 7931G, 7940G, 7941G, 7941G-GE, 7942G, 7945G, 7960G, 7961G, 7961G-GE, 7962G, 7965G, 7970G, 7971G, 7971G-GE, 7975G, 8941, 8945 and Cisco Unified IP Phones that are running SIP: 6901, 6911, 6921, 6941, 6945, 6961, 7906G, 7911G, 7941G, 7941G-GE, 7942G, 7961G, 7961G-GE,7962G, 7965G, 7970G, 7971G, 7971G-GE, 7975G, 8941, 8945, 8961, 9971, and 9971 request an encrypted file when the encryption configuration setting gets updated to False, administrators must remove the symmetric key from the phone GUI so the phone requests an unencrypted configuration file the next time that it is reset.

Tip For Cisco Unified IP Phones 7940G and 7960G (SIP only), enter a 32-byte 0 as the key value for the symmetric key at the phone GUI to disable encryption. For Cisco Unified IP Phones 7905G and 7912G (SIP only), delete the symmetric key at the phone GUI to disable encryption. For information on how to perform these tasks, refer to the phone administration guide that supports your phone model.

Exclude Digest Credentials From Phone Configuration File Download

To exclude digest credentials from the configuration file that is sent to phones after the initial configuration, check the Exclude Digest Credentials in Configuration File check box for the security profile that is applied to the phone. Only Cisco Unified IP Phones 7905G, 7912G, 7940G, and 7960G (SIP only) support this option.

You may need to uncheck this check box to update the configuration file for changes to digest credentials.

Related Topics

Encrypted Configuration File Setup Tips, on page 145
Where to Find More Information About Encrypted Phone File Setup, on page 152

Where to Find More Information About Encrypted Phone File Setup

Related Topics

About Phone Configuration File Encryption, on page 139
Phone Models Supporting Encrypted Configuration File, on page 144
Encrypted Configuration File Setup Tips, on page 145
Disable Phone Configuration File Encryption, on page 151
Phone Security Profile Setup Tips, on page 106

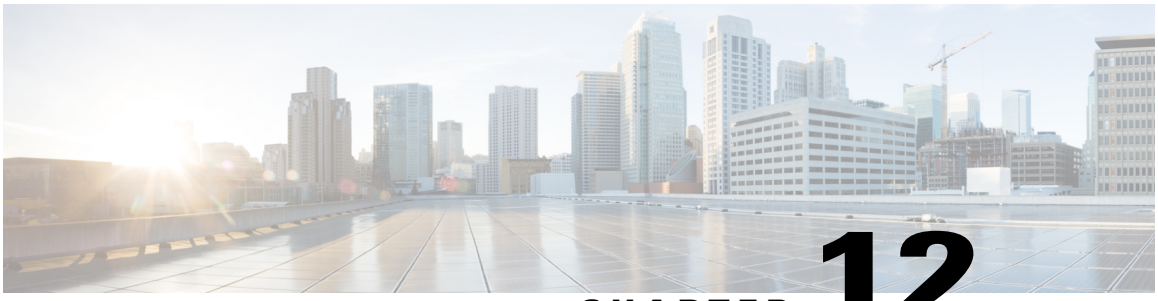

CHAPTER 12

Digest Authentication for SIP Phones Setup

This chapter provides information about digest authentication for SIP phones setup. For additional information on how digest authentication works for phones that are running SIP, see topics related to digest authentication.

When you enable digest authentication for a phone, Cisco Unified Communications Manager challenges all requests except keepalive messages for phones that are running SIP. Cisco Unified Communications Manager uses the digest credentials for the end user, as configured in the **End User Configuration** window, to validate the credentials that the phone offers.

If the phone supports extension mobility, Cisco Unified Communications Manager uses the digest credentials for the extension mobility end user, as configured in the **End User Configuration** window, when the extension mobility user logs in.

For information about configuring digest authentication for non-Cisco phones that are running SIP, refer to Appendix C in the *Administration Guide for Cisco Unified Communications Manager*.

- Set Up SIP Phone Digest Authentication, page 153
- Set Up Digest Authentication Service Parameters, page 154
- Set Up End User Digest Credentials, page 155
- End User Digest Credential Settings, page 155
- Set Up Digest User Using Phone, page 156
- Where to Find More Information About Digest Authentication, page 156

Set Up SIP Phone Digest Authentication

The following procedure provides the tasks used to configure digest authentication for phones that are running SIP.

Procedure

Step 1 Configure the security profiles for phones that are running SIP; make sure that you check the **Enable Digest Authentication** check box.

Step 2 Apply a security profile to the phone that is running SIP.

Step 3 If you want to update the default setting, configure service parameters that are related to digest authentication; for example, configure the SIP Station Realm service parameter.

Step 4 Configure the digest credentials in the **End User Configuration** window.

Step 5 Choose the **Digest User** in the **Phone Configuration** window.
Choosing a digest user for these phones that are running SIP ensures that the digest credentials get included in the phone configuration file.

Step 6 On Cisco Unified IP Phones 7940G or 7960G (SIP only), enter the digest credentials that you configured in the **End User Configuration** window.
For information on how to enter the authentication name and password on the phone, refer to the *Cisco Unified IP Phone Administrator Guide* that supports this version of Cisco Unified Communications Manager.

Related Topics

Set Up Digest Authentication Service Parameters, on page 154
Set Up End User Digest Credentials, on page 155
End User Digest Credential Settings, on page 155
Set Up Digest User Using Phone, on page 156

Set Up Digest Authentication Service Parameters

You configure the SIP Realm for challenges to phones with the service parameter SIP Station Realm. At installation, Cisco Unified Communications Manager provides a default setting, ccmsipline. For additional information on the parameter, click the question mark or the parameter name link that displays in the **Service Parameter Configuration** window.

To update digest authentication service parameters, for example, the SIP Realm Station parameter, perform the following procedure:

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **System** > **Service Parameters**.

Step 2 From the **Server** drop-down list box, choose a node where you activated the Cisco CallManager service.

Step 3 From the **Service** drop-down list box, choose the Cisco CallManager service. Verify that the word “Active” displays next to the service name.

Step 4 Update the SIP Realm Station parameter, as described in the help. To display help for the parameter, click the question mark or the parameter name link.

Step 5 Click **Save**.

Related Topics

Where to Find More Information About Digest Authentication, on page 156

Set Up End User Digest Credentials

The following procedure assumes that the end user exists in the Cisco Unified Communications Manager database. To configure digest credentials for the end user, perform the following procedure:

Procedure

Step 1 Find the end user, as described in the *Administration Guide for Cisco Unified Communications Manager*.

Step 2 After the specific **End User Configuration** window displays, enter the appropriate settings.
See Table 18: Digest Credentials, on page 155 for field descriptions.

Step 3 Click **Save**.

Step 4 To configure digest credentials for additional end users, repeat the procedure.

What to Do Next

After you configure digest credentials in the **End User Configuration** window, choose the digest user for the phone by accessing the **Phone Configuration** window.

After you choose the digest user, enter the digest authentication credentials that you get from the **End User Configuration** window on the Cisco Unified IP Phone 7960G or 7940G (SIP only).

Related Topics

End User Digest Credential Settings, on page 155
Where to Find More Information About Digest Authentication, on page 156

End User Digest Credential Settings

The following table describes the settings for the digest credential settings in the **End User Configuration** window in Cisco Unified Communications Manager Administration.

Table 18: Digest Credentials

Setting	Description
Digest Credentials	Enter a string of alphanumeric characters.
Confirm Digest Credentials	To confirm that you entered the digest credentials correctly, enter the credentials in this field.

Related Topics

Set Up Digest User Using Phone, on page 156

Set Up Digest User Using Phone

To associate a digest user with a phone, perform the following procedure:

Procedure

Step 1 Find the phone, as described in the *Administration Guide for Cisco Unified Communications Manager*.

Step 2 After the specific **Phone Configuration** window displays, locate the **Digest User** setting and choose the end user that you want to associate with the phone.

Step 3 Click **Save**.

Step 4 Click **Reset**.
After you associate the end user with the phone, save the configuration and reset the phone.

Related Topics

Where to Find More Information About Digest Authentication, on page 156

Where to Find More Information About Digest Authentication

Related Topics

Digest Authentication, on page 24
Set Up SIP Phone Digest Authentication, on page 153
End User Digest Credential Settings, on page 155

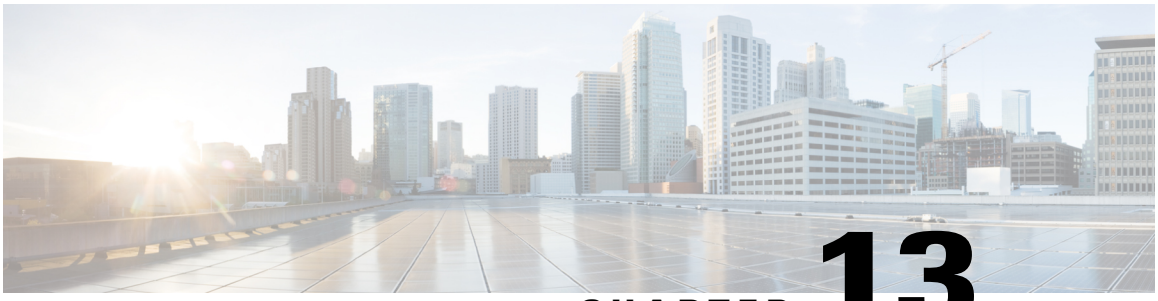

CHAPTER 13

Phone Hardening

This chapter provides information about phone hardening. To tighten security on the phone, you can perform phone hardening tasks in the **Phone Configuration** window in Cisco Unified Communications Manager Administration.

- Gratuitous ARP Disable, page 157
- Web Access Disable, page 157
- PC Voice VLAN Access Disable, page 158
- Setting Access Disable, page 158
- PC Port Disable, page 158
- Set Up Phone Hardening, page 158
- Where to Find More Information About Phone Hardening, page 159

Gratuitous ARP Disable

By default, Cisco Unified IP Phones accept Gratuitous ARP packets. Gratuitous ARP packets, which devices use, announce the presence of the device on the network. However, attackers can use these packets to spoof a valid network device; for example, an attacker could send out a packet that claims to be the default router. If you choose to do so, you can disable Gratuitous ARP in the **Phone Configuration** window.

Note Disabling this functionality does not prevent the phone from identifying its default router.

Web Access Disable

Disabling the web server functionality for the phone blocks access to the phone internal web pages, which provide statistics and configuration information. Features, such as Cisco Quality Report Tool, do not function properly without access to the phone web pages. Disabling the web server also affects any serviceability application, such as CiscoWorks, that relies on web access.

To determine whether the web services are disabled, the phone parses a parameter in the configuration file that indicates whether the services are disabled or enabled. If the web services are disabled, the phone does not open the HTTP port 80 for monitoring purposes and blocks access to the phone internal web pages.

PC Voice VLAN Access Disable

By default,Cisco Unified IP Phones forward all packets that are received on the switch port (the one that faces the upstream switch) to the PC port. If you choose to disable the PC Voice VLAN Access setting in the Phone Configuration window, packets that are received from the PC port that use voice VLAN functionality will drop. Various Cisco Unified IP Phones use this functionality differently.

- Cisco Unified IP Phones 7940G and 7960G drop any packets that are tagged with the voice VLAN, in or out of the PC port.
- Cisco Unified IP Phone 7970G drops any packet that contains an 802.1Q tag on any VLAN, in or out of the PC port.
- Cisco Unified IP Phone 7912G cannot perform this functionality.

Setting Access Disable

By default, pressing the Settings button on a Cisco Unified IP Phone provides access to a variety of information, including phone configuration information. Disabling the Setting Access setting in the Phone Configuration window prohibits access to all options that normally display when you press the Settings button on the phone; for example, the Contrast, Ring Type, Network Configuration, Model Information, and Status settings.

The preceding settings do not display on the phone if you disable the setting in Cisco Unified Communications Manager Administration. If you disable this setting, the phone user cannot save the settings that are associated with the Volume button; for example, the user cannot save the volume.

Disabling this setting automatically saves the current Contrast, Ring Type, Network Configuration, Model Information, Status, and Volume settings that exist on the phone. To change these phone settings, you must enable the Setting Access setting in Cisco Unified Communications Manager Administration.

PC Port Disable

By default, Cisco Unified Communications Manager enables the PC port on all Cisco Unified IP Phones that have a PC port. If you choose to do so, you can disable the PC Port setting in the Phone Configuration window. Disabling the PC port proves useful for lobby or conference room phones.

Set Up Phone Hardening

Caution The following procedure disables functionality for the phone.

To disable functionality for the phone, perform the following procedure:

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **Device** > **Phone**.

Step 2 Specify the criteria to find the phone and click **Find** or click **Find** to display a list of all phones.

Step 3 To open the **Phone Configuration** window for the device, click the device name.

Step 4 Locate the following product-specific parameters:

a) PC Port
b) Settings Access
c) Gratuitous ARP
d) PC Voice VLAN Access
e) Web Access

Tip To review information on these settings, click the question mark that displays next to the parameters in the **Phone Configuration** window.

Step 5 From the drop-down list box for each parameter that you want to disable, choose **Disabled**. To disable the speakerphone or speakerphone and headset, check the corresponding check boxes.

Step 6 Click **Save**.

Step 7 Click **Reset**.

Related Topics

Where to Find More Information About Phone Hardening, on page 159

Where to Find More Information About Phone Hardening

Related Topics

Gratuitous ARP Disable, on page 157
Web Access Disable, on page 157
PC Voice VLAN Access Disable, on page 158
Setting Access Disable, on page 158
PC Port Disable, on page 158

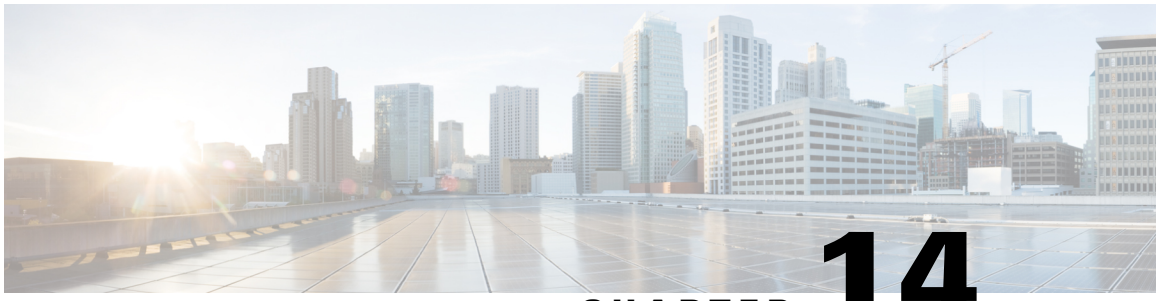

CHAPTER 14

Secure Conference Resources Setup

This chapter provides information about secure conference resources setup.

- Secure Conference, page 161
- Conference Bridge Requirements, page 162
- Secure Conference Icons, page 163
- Secure Conference Status, page 164
- Cisco Unified IP Phone Secure Conference and Icon Support, page 166
- Secure Conference CTI Support, page 167
- Secure Conference Over Trunks and Gateways, page 167
- CDR Data, page 167
- Interactions and Restrictions, page 167
- Securing Conference Resources Tips, page 169
- Set Up Secure Conference Bridge, page 170
- Set Up Secure Conference Bridge in Cisco Unified Communications Manager Administration, page 171
- Set Up Minimum Security Level for Meet-Me Conferences, page 171
- Set Up Packet Capturing for Secure Conference Bridge, page 172
- Where to Find More Information About Secure Conferences Resources, page 172

Secure Conference

The Secure Conferencing feature provides authentication and encryption to secure a conference. A conference gets considered secure when all participating devices have encrypted signaling and media. The secure conference feature supports SRTP encryption over a secure TLS or IPSec connection.

The system provides a security icon for the overall security status of the conference, which is determined by the lowest security level of the participating devices. For example, a secure conference that includes two encrypted connections and one authenticated connection has a conference security status of authenticated.

To configure secure ad hoc and meet-me conferences, you configure a secure conference bridge.

- If a user initiates a conference call from a phone that is authenticated or encrypted, Cisco Unified Communications Manager allocates the secure conference bridge
- If a user initiates a call from a phone that is nonsecure, Cisco Unified Communications Manager allocates a nonsecure conference bridge.

When you configure conference bridge resources as nonsecure, the conference remains nonsecure, regardless of the security configuration for the phone.

Note Cisco Unified Communications Manager allocates a conference bridge from the Media Resource Group List (MRGL) for the phone that is initiating the conference. If a secure conference bridge is not available, Cisco Unified Communications Manager assigns a nonsecure conference bridge, and the conference is nonsecure. Likewise, if a nonsecure conference bridge is not available, Cisco Unified Communications Manager assigns a secure conference bridge, and the conference is nonsecure. If no conference bridge is available, the call will fail.

For meet-me conference calls, the phone that initiates the conference must also meet the minimum security requirement that is configured for the meet-me number. If no secure conference bridge is available or if the initiator security level does not meet the minimum, Cisco Unified Communications Manager rejects the conference attempt.

To secure conferences with barge, configure phones to use encrypted mode. After the Barge key is pressed and if the device is authenticated or encrypted, Cisco Unified Communications Manager establishes a secure connection between the barging party and the built-in bridge at the target device. The system provides a conference security status for all connected parties in the barge call.

Note Nonsecure or authenticated Cisco Unified IP Phones that are running release 8.3 or later can now barge encrypted calls.

Related Topics

Meet-Me Conference with Minimum Security Level, on page 165

Conference Bridge Requirements

A conference bridge can register as a secure media resource when you add a hardware conference bridge to your network and configure a secure conference bridge in Cisco Unified Communications Manager Administration.

Note Due to the performance impact to Cisco Unified Communications Manager processing, Cisco does not support secure conferencing on software conference bridge.

A Digital Signal Processor (DSP) farm, which provides conferencing on a H.323 or MGCP gateway, acts as the network resource for IP telephony conferencing. The conference bridge registers to Cisco Unified Communications Manager as a secure SCCP client.

- The conference bridge root certificate must exist in CallManager trust store, and the Cisco CallManager certificate must exist in the conference bridge trust store.
- The secure conference bridge security setting must match the security setting in Cisco Unified Communications Manager to register.

For more information about conferencing routers, refer to the IOS router documentation that is provided with your router.

Cisco Unified Communications Manager assigns conference resources to calls on a dynamic basis. The available conference resource and the enabled codec provide the maximum number of concurrent, secure conferences allowed per router. Because transmit and receive streams are individually keyed for each participating endpoint (so no rekeying is necessary when a participant leaves the conference), the total secure conference capacity for a DSP module equals one-half the nonsecure capacity that you can configure.

See "Understanding Conference Devices" in the *Feature Configuration Guide for Cisco Unified Communications Manager* for more information.

Secure Conference Icons

Cisco Unified IP Phones display a conference security icon for the security level of the entire conference. These icons match the status icons for a secure two-party call, as described in the user documentation for your phone.

The audio and video portions of the call provide the basis for the conference security level. The call gets considered secure only if both the audio and video portions are secure.

For ad hoc and meet-me secure conferences, the security icon for the conference displays next to the conference softkey in the phone window for conference participants. The icon that displays depends on the security level of the conference bridge and all participants:

- A lock icon displays if the conference bridge is secure and all participants in the conference are encrypted.
- A shield icon displays if the conference bridge is secure and all participants in the conference are authenticated. Some phone models do not display the shield icon.
- When the conference bridge or any participant in the conference is nonsecure, the call state icon (active, hold, and so on) displays, or, on some older phone models, no icon displays.

Note The "Override BFCP Application Encryption Status When Designating Call Security Status" service parameter displays the lock icon when parameter value is True and audio is secure. This condition ignores the security statuses of all other media channels. The default parameter value is False.

When an encrypted phone connects to a secure conference bridge, the media streaming between the device and the conference bridge gets encrypted; however, the icon for the conference can be encrypted, authenticated, or nonsecure depending on the security levels of the other participants. A nonsecure status indicates that one of the parties is not secure or cannot be verified.

When a user presses Barge, the icon that displays next to the Barge softkey provides the security level for the barge conference. If the barging device and the barged device support encryption, the system encrypts the media between the two devices, but the barge conference status can be nonsecure, authenticated, or encrypted, depending on the security levels of the connected parties.

Secure Conference Status

Conference status can change as participants enter and leave the conference. An encrypted conference can revert to a security level of authenticated or nonsecure if an authenticated or nonsecure participant connects to the call. Likewise, the status can upgrade if an authenticated or nonsecure participant drops off the call. A nonsecure participant that connects to a conference call renders the conference nonsecure.

Conference status can also change when participants chain conferences together, when the security status for a chained conference changes, when a held conference call is resumed on another device, when a conference call gets barged, or when a transferred conference call completes to another device.

Note The Advanced Ad Hoc Conference Enabled service parameter determines whether ad hoc conferences can be linked together by using features such as conference, join, direct transfer, and transfer.

Cisco Unified Communications Manager provides these options to maintain a secure conference:

- Ad hoc conference lists
- Meet-Me conference with minimum security level

Related Topics

Ad Hoc Conference Lists, on page 164
Meet-Me Conference with Minimum Security Level, on page 165

Ad Hoc Conference Lists

A conference list displays on participating phones when the ConfList softkey is pressed during a conference call. The conference list provides the conference status as well as the security status for each participant to identify participants that are not encrypted.

Conference list displays these security icons: nonsecure, authenticated, encrypted, held. The conference initiator can use the conference list to eject participants with a low security status.

Note The Advanced Ad Hoc Conference Enabled service parameter determines whether conference participants other than the conference initiator can eject conference participants.

As participants join the conference, they get added to the top of the conference list. To remove nonsecure participants from a secure conference with the ConfList and RmLstC softkeys, refer to the user documentation for your phone.

The following sections describe secure ad hoc conference interactions with other features.

Secure Ad Hoc Conference and Conference Chaining

When an ad hoc conference is chained to another ad hoc conference, the chained conference displays in the list as member “Conference” with its own security status. Cisco Unified Communications Manager includes the security level for the chained conference to determine the overall conference security status.

Secure Ad Hoc Conference and cBarge

When a user presses the cBarge softkey to join an active conference, Cisco Unified Communications Manager creates an ad hoc conference and allocates a conference bridge according to the security level and MRGL of the barged device. The cbarge member names display in the conference list.

Secure Ad Hoc Conference and Barge

If a participant in a secure ad hoc conference gets barged, the barge call security status shows in the conference list next to the barge target. The security icon for the barge target may show authenticated when, in fact, the media is encrypted between the barge target and the conference bridge, because the barge caller has an authenticated connection.

If the barge target is secure but in an unsecured ad hoc conference, if the ad hoc conference status later changes to secure, the barge caller icon will update as well.

Secure Ad Hoc Conference and Join

Authenticated or encrypted phone users can use the Join softkey at a Cisco Unified IP Phone (only phones that are running SCCP) to create or join a secure ad hoc conference. If a user presses Join to add a participant with an unknown security status to an existing conference, Cisco Unified Communications Manager downgrades the conference status to unknown. A participant who adds a new member with Join becomes the conference initiator and can eject the new member or any other participant from the conference list (if the Advanced Ad Hoc Conference Enabled setting is True).

Secure Ad Hoc Conference and Hold/Resume

When a conference initiator puts the conference call on hold to add a participant, the conference status remains unknown (nonsecure) until the added participant answers the call. After the new participant answers, conference status updates in the conference list.

If a caller on a shared line resumes a held conference call at another phone, the conference list updates when the caller presses Resume.

Meet-Me Conference with Minimum Security Level

As administrator, you can specify a minimum security level for a conference when you configure a meet-me pattern or number as nonsecure, authenticated, or encrypted. Participants must meet the minimum security requirement, or the system blocks the participant and drops the call. This action applies to meet-me conference call transfers, resumed meet-me conference calls on shared lines, and chained Meet-Me conferences.

The phone that initiates the meet-me conference must meet the minimum security level, or the system rejects the attempt. When the minimum security level specifies authenticated or encrypted and a secure conference bridge is not available, the call fails.

If you specify nonsecure as the minimum level for the conference bridge, the conference bridge accepts all calls, and the conference status is nonsecure.

The following sections describe secure meet-me conference interactions with other features.

Meet-Me Conference and Ad Hoc Conference

To add a meet-me conference to an ad hoc conference or add an ad hoc conference to a meet-me conference, the ad hoc conference must meet the minimum security level for the meet-me conference, or the call is dropped. The conference icon can change when the conference gets added.

Meet-Me Conference and Barge

Unless a barge caller meets the minimum security requirement when the caller barges a meet-me conference participant, the security level of the barged device downgrades, and both the barge caller and the barged call get dropped.

Meet-Me Conference and Hold/Resume

A phone on a shared line cannot resume a meet-me conference unless the phone meets the minimum security level. If a phone does not meet the minimum security level, all phones on the shared line get blocked when the user presses Resume.

Related Topics

Set Up Minimum Security Level for Meet-Me Conferences, on page 171

Cisco Unified IP Phone Secure Conference and Icon Support

These Cisco Unified IP Phones support secure conference and secure conference icons:

- Cisco Unified IP Phones 7940G and 7960G (SCCP only, authenticated secure conference only)
- Cisco Unified IP Phones 6901, 6911, 6921, 6941, 6945, 6961, 7906G, 7911G, 7921G, 7925G, 7925G-EX, 7926G, 7931G, 7940G, 7941G, 7941G-GE, 7942G, 7945G, 7960G, 7961G, 7961G-GE, 7962G, 7965G, 7970G, 7971G, 7971G-GE, 7975G, 8941, and 8945. (SCCP only)
- Cisco Unified IP Phones 6901, 6911, 6921, 6941, 6945, 6961, 7906G, 7911G, 7941G, 7941G-GE, 7942G, 7961G, 7961G-GE,7962G, 7965G, 7970G, 7971G, 7971G-GE, 7975G, 8941, 8945, 8961, 9971, and 9971.

Warning To obtain the full benefit of secure conference features, Cisco recommends upgrading Cisco Unified IP Phones to release 8.3, which supports the encryption features in this release. Encrypted phones that run earlier releases do not fully support these new features. These phones can only participate in secure conference as authenticated or nonsecure participants.

Cisco Unified IP Phones that are running release 8.3 with an earlier release of Cisco Unified Communications Manager will display their connection security status, not the conference security status, during a conference call, and do not support secure conference features like conference list.

See topics related to Cisco Unified Communications Manager secure conference restrictions for more restrictions that apply to Cisco Unified IP Phones.

For additional information about secure conference calls and security icons, refer to your phone user guide and the *Cisco Unified IP Phone Administration Guide* for Cisco Unified Communications Manager that supports this Cisco Unified Communications Manager release.

Related Topics

Restrictions, on page 11

Secure Conference CTI Support

Cisco Unified Communications Manager supports secure conference over licensed CTI devices. Refer to the *Cisco Unified Communications Manager JTAPI Developers Guide* and *Cisco Unified Communications Manager TAPI Developers Guide* for this release for more information.

Secure Conference Over Trunks and Gateways

Cisco Unified Communications Manager supports secure conference over intracluster trunks (ICTs), H.323 trunks/gateways, and MGCP gateways; however, encrypted phones that are running release 8.2 or earlier will revert to RTP for ICT and H.323 calls, and the media does not get encrypted.

If a conference involves a SIP trunk, the secure conference status is nonsecure. In addition, SIP trunk signaling does not support secure conference notifications to off-cluster participants.

CDR Data

CDR data provides the security status of each call leg from the phone endpoint to the conference bridge as well as the security status of the conference itself. The two values use two different fields inside the CDR database.

CDR data provides termination cause code 58 (Bearer capability not presently available) when a meet-me conference rejects a join attempt that does not meet the minimum security level requirement. See the *CDR Analysis and Reporting Administration Guide* for more information.

Interactions and Restrictions

This section contains information on the following topics:

- Cisco Unified Communications Manager Interactions with Secure Conference, on page 167
- Cisco Unified Communications Manager Restrictions with Secure Conference, on page 168

Cisco Unified Communications Manager Interactions with Secure Conference

This section describes Cisco Unified Communications Manager interactions with the secure conference feature.

- To keep a conference secure, if a participant in a secure ad hoc conference puts a call on hold or parks the call, the system does not play MOH, even if the Suppress MOH to Conference Bridge service parameter is set to False. The secure conference status does not change.
- In intercluster environments, if an off-cluster conference participant presses hold in a secure ad hoc conference, the media stream to the device stops, MOH plays, and the media status changes to unknown. If the off-cluster participant resumes a held call with MOH, the conference status may upgrade.
- A secure MeetMe call across an intercluster trunk (ICT) will clear if the remote user invokes a phone feature such a hold/resume, which changes the media status to unknown.

- Annunciator tones or announcements for Cisco Unified Communications Manager Multilevel Precedence and Preemption that play on a participant phone during a secure ad hoc conference change the conference status to nonsecure.
- If a caller barges a secure SCCP phone call, the system uses an internal tone-playing mechanism at the target device, and the conference status remains secure.
- If a caller barges a secure SIP phone call, the system provides tone-on-hold, and the conference status remains nonsecure during the tone.
- If a conference is secure and RSVP is enabled, the conference remains secure.
- For conference calls that involve the PSTN, the security conference icon shows the security status for only the IP domain portion of the call.
- The Maximum Call Duration Timer service parameter also controls the maximum conference duration.
- Conference bridge supports packet capture. During a packet capture session, the phone displays a nonsecure status for the conference, even if the media stream is encrypted.
- The media security policy that is configured for your system may alter secure conference behavior; for example, an endpoint will use media security according to the system media security policy, even when participating in a conference call with endpoints that do no support media security.

Cisco Unified Communications Manager Restrictions with Secure Conference

This section describes Cisco Unified Communications Manager restrictions with secure conferencing feature.

- Encrypted Cisco Unified IP Phones that are running release 8.2 or earlier can only participate in a secure conference as authenticated or nonsecure participants.
- Cisco Unified IP Phones that are running release 8.3 with an earlier release of Cisco Unified Communications Manager will display their connection security status, not the conference security status, during a conference call and do not support secure conference features like conference list.
- Cisco Unified IP Phones 7905G and 7911G do not support conference list.
- Due to bandwidth requirements, Cisco Unified IP Phones 7940G and 7960G do not support barge from an encrypted device on an active encrypted call. The barge attempt will fail.
- Cisco Unified IP Phone 7931G does not support conference chaining.
- Phones that are calling over SIP trunks get treated as nonsecure phones, regardless of their device security status.
- If a secure phone attempts to join a secure meet-me conference over a SIP trunk, the call gets dropped. Because SIP trunks do not support providing the “device not authorized” message to a phone that is running SIP, the phone does not update with this message. In addition, 7960G phones that are running SIP do not support the “device not authorized” message.
- In intercluster environments, the conference list does not display for off-cluster participants; however, the security status for the connection displays next to the Conference softkey as long as the connection between the clusters supports it. For example, for H.323 ICT connections, the authentication icon does not display (the system treats the authenticated connection as nonsecure), but the encryption icon displays for an encrypted connection.

  Off-cluster participants can create their own conference that connects to another cluster across the cluster boundary. The system treats the connected conferences as a basic, two-party call.

Securing Conference Resources Tips

Consider the following information before you configure secure conference bridge resources:

- Use localization if you want the phone to display custom text for secure conference messages. Refer to the Cisco Unified Communications Manager Locale Installer documentation for more information.
- The conference or built-in bridge must support encryption to secure conference calls.
- To enable secure conference bridge registration, set the cluster security mode to mixed mode.
- Ensure the phone that initiates a conference is authenticated or encrypted to procure a secure conference bridge.
- To maintain conference integrity on shared lines, do not configure devices that share a line with different security modes; for example, do not configure an encrypted phone to share a line with an authenticated or nonsecure phone.
- Do not use SIP trunks as ICTs when you want to share conference security status between clusters.
- If you set the cluster security mode to mixed mode, the security mode that is configured for the DSP farm (nonsecure or encrypted) must match the conference bridge security mode in Cisco Unified Communications Manager Administration, or the conference bridge cannot register. The conference bridge registers as encrypted when both security modes specify encrypted; the conference bridge registers as nonsecure when both security modes specify nonsecure.
- If you set the cluster security mode to mixed mode, if the security profile you applied to the conference bridge is encrypted, but the conference bridge security level is nonsecure, Cisco Unified Communications Manager rejects conference bridge registration.
- If you set the cluster security mode to nonsecure mode, configure the security mode at the DSP farm as nonsecure, so the conference bridge can register. The conference bridge registers as nonsecure even if the setting in Cisco Unified Communications Manager Administration specifies encrypted.
- During registration, the conference bridge must pass authentication. To pass authentication, the DSP farm must contain the Cisco Unified Communications Manager certificate, and Cisco Unified Communications Manager must contain certificates for the DSP farm system and the DSP connection. To ensure the conference bridge passes authentication, the X509 certification name must contain the conference bridge name.
- If conference bridge certificates expire or change for any reason, use the certificate management feature in Cisco Unified Communications Operating System Administration to update the certificates in the trusted store. The TLS authentication fails when certificates do not match, and conference bridge does not work because it cannot register to Cisco Unified Communications Manager.
- The secure conference bridge registers to Cisco Unified Communications Manager through TLS connection at port 2443; a nonsecure conference bridge registers to Cisco Unified Communications Manager through TCP connection at port 2000.
- Changing the device security mode for the conference bridge requires a reset of Cisco Unified Communications Manager devices and a restart of the Cisco CallManager service.

Set Up Secure Conference Bridge

The following procedure provides the tasks used to add secure conferencing to your network.

Procedure

Step 1 Verify that you installed and configured the Cisco CTL Client for Mixed Mode.

Step 2 Verify that you configured the DSP farm security settings for Cisco Unified Communications Manager connection, including adding the Cisco Unified Communications Manager certificate to the trust store. Set the DSP farm security level to encrypted.
Refer to the documentation for your conference bridge.

Tip The DSP farm establishes the TLS port connection to Cisco Unified Communications Manager on port 2443.

Step 3 Verify the DSP farm certificate is in the CallManager trust store.
To add the certificate, use the certificate management function in the Cisco Unified Communications Operating System to copy the DSP certificate to the trusted store in Cisco Unified Communications Manager.

When you have finished copying the certificate, restart the Cisco CallManager service on the server.

For more information, see the *Administration Guide for Cisco Unified Communications Manager* and the *Cisco Unified Serviceability Administration Guide*.

Tip Be sure to copy the certificate to each server in the cluster and restart the Cisco CallManager service on each server in the cluster.

Step 4 In Cisco Unified Communications Manager Administration, configure Cisco IOS Enhanced Conference Bridge as the conference bridge type and select Encrypted Conference Bridge for device security mode.

Tip When you upgrade to this release, Cisco Unified Communications Manager automatically assigns a nonsecure conference bridge security profile to Cisco IOS Enhanced Conference Bridge configurations.

Step 5 Configure a minimum security level for Meet-Me Conferences.

Tip When you upgrade to this release, Cisco Unified Communications Manager automatically assigns a minimum security level of nonsecure to all Meet Me patterns.

Step 6 Configure packet capturing for the secure conference bridge.
See the *Troubleshooting Guide for Cisco Unified Communications Manager* for more information.

Tip Set packet capture mode to batch mode and capture tier to SRTP.

Related Topics

Securing Conference Resources Tips, on page 169
Set Up Minimum Security Level for Meet-Me Conferences, on page 171
Set Up Packet Capturing for Secure Conference Bridge, on page 172
Set Up Secure Conference Bridge in Cisco Unified Communications Manager Administration, on page 171

Set Up Secure Conference Bridge in Cisco Unified Communications Manager Administration

To configure a secure conference bridge in Cisco Unified Communications Manager Administration, perform the following procedure. After you configure encryption for the conference bridge, you must reset Cisco Unified Communications Manager devices and restart the Cisco CallManager service.

Ensure that you installed certificates in Cisco Unified Communications Manager and in the DSP farm to secure the connection between the devices.

Before You Begin

Before You Begin

Procedure

Step 1 Choose **Media Resources** > **Conference Bridge**.

Step 2 In the **Find and List Conference Bridges** window, verify that a Cisco IOS Enhanced Conference Bridge is installed and go to Set Up Secure Conference Bridge, on page 170.

Step 3 If the device does not exist in the database, click **Add New**; go to Set Up Secure Conference Bridge in Cisco Unified Communications Manager Administration, on page 171.

Step 4 In the Conference Bridge Configuration window, select **Cisco IOS Enhanced Conference Bridge** in the **Conference Bridge Type** drop-down list box. Configure the Conference Bridge Name, Description, Device Pool, Common Device Configuration, and Location settings as described in the *Administration Guide for Cisco Unified Communications Manager* .

Step 5 In the Device Security Mode field, select **Encrypted Conference Bridge**.

Step 6 Click **Save**.

Step 7 Click **Reset**.

What to Do Next

To perform additional conference bridge configuration tasks, you can jump to the Meet-Me/Number Pattern Configuration window or the Service Parameter Configuration window by selecting the option from the Related Links drop-down list box and clicking **Go**.

Related Topics

Where to Find More Information About Secure Conferences Resources, on page 172

Set Up Minimum Security Level for Meet-Me Conferences

To configure a minimum security level for Meet-Me conferences, perform the following procedure.

Procedure

Step 1 Choose **Call Routing** > **Meet-Me Number/Pattern**.

Step 2 In the Find and List Conference Bridges window, verify that the Meet-Me number/pattern is configured and go to Set Up Secure Conference Bridge, on page 170.

Step 3 If the Meet-Me number/pattern is not configured, click **Add New**; go to Set Up Minimum Security Level for Meet-Me Conferences, on page 171.

Step 4 In the **Meet-Me Number Configuration** window, enter a Meet-Me number or range in the Directory Number or Pattern field. Configure the Description and Partition settings as described in the *Feature Configuration Guide for Cisco Unified Communications Manager*.

Step 5 In the Minimum Security Level field, select **Non Secure**, **Authenticated**, or **Encrypted**.

Step 6 Click **Save**.

What to Do Next

If you have not yet installed a secure conference bridge, install and configure a secure conference bridge.

Related Topics

Set Up Secure Conference Bridge in Cisco Unified Communications Manager Administration, on page 171
Where to Find More Information About Secure Conferences Resources, on page 172

Set Up Packet Capturing for Secure Conference Bridge

To configure packet capturing for a secure conference bridge, enable packet capturing in the **Service Parameter Configuration** window; then, set the packet capture mode to batch mode and capture tier to SRTP for the phone, gateway, or trunk in the device configuration window. Refer to the *Troubleshooting Guide for Cisco Unified Communications Manager* for more information.

During a packet capture session, the phone displays a nonsecure status for the conference, even if the media stream is encrypted.

Where to Find More Information About Secure Conferences Resources

Related Topics

System Requirements, on page 7
Interactions and Restrictions, on page 10
Certificates, on page 18
Set Up Authentication and Encryption, on page 30
Secure Conference, on page 161
Conference Bridge Requirements, on page 162
Secure Conference Icons, on page 163
Secure Conference Status, on page 164

Cisco Unified IP Phone Secure Conference and Icon Support, on page 166
Secure Conference CTI Support, on page 167
Secure Conference Over Trunks and Gateways, on page 167
Interactions and Restrictions, on page 167
Securing Conference Resources Tips, on page 169
Set Up Secure Conference Bridge, on page 170
Set Up Packet Capturing for Secure Conference Bridge, on page 172

CHAPTER 15

Voice-Messaging Ports Security Setup

This chapter provides information about voice-messaging ports security setup.

- Voice-Messaging Security, page 175
- Voice-Messaging Security Setup Tips, page 176
- Set Up Secure Voice-Messaging Port, page 177
- Apply Security Profile to Single Voice-Messaging Port, page 177
- Apply Security Profile Using Voice Mail Port Wizard, page 178
- Where to Find More Information About Voice-messaging Security, page 179

Voice-Messaging Security

To configure security for Cisco Unified Communications Manager voice-messaging ports and Cisco Unity devices that are running SCCP or Cisco Unity Connection devices that are running SCCP, you choose a secure device security mode for the port. If you choose an authenticated voice mail port, a TLS connection opens, which authenticates the devices by using a mutual certificate exchange (each device accepts the certificate of the other device). If you choose encrypted voice mail port, the system first authenticates the devices and then sends encrypted voice streams between the devices.

- For Cisco Unity or Cisco Unity Connection 1.2 or earlier, the Cisco Unity Unified CM TSP connects to Cisco Unified Communications Manager through the TLS port when the device security mode equals authenticated or encrypted. When the device security mode equals nonsecure, the Cisco Unity Unified CM TSP connects to Cisco Unified Communications Manager through the SCCP port.
- Cisco Unity Connection 2.0 or later connects to Cisco Unified Communications Manager through the TLS port. When the device security mode equals nonsecure, Cisco Unity Connection connects to Cisco Unified Communications Manager through the SCCP port.

Note In this chapter, the use of the term “server” refers to a Cisco Unified Communications Manager server. The use of the phrase “voice-mail server” refers to a Cisco Unity server or to a Cisco Unity Connection server.

Voice-Messaging Security Setup Tips

Consider the following information before you configure security:

- You must run Cisco Unity 4.0(5) or later with this version of Cisco Unified Communications Manager.
- You must run Cisco Unity Connection 1.2 or later with this version of Cisco Unified Communications Manager.
- For Cisco Unity, you must perform security tasks by using the Cisco Unity Telephony Integration Manager (UTIM); for Cisco Unity Connection, you must perform security tasks by using Cisco Unity Connection Administration. For information on how to perform these tasks, refer to the applicable Cisco Unified Communications Manager integration guide for Cisco Unity or for Cisco Unity Connection.
- In addition to the procedures that are described in this chapter, you must use the certificate management feature in Cisco Unified Communications Operating System to save the Cisco Unity certificate to the trusted store.

  For more information, see the "To Add Voice Messaging Ports in Cisco Unity Connection Administration" procedure in the *Cisco Unified Communications Manager SCCP Integration Guide for Cisco Unity Connection* at the following URL:

  http://www.cisco.com/en/US/docs/voice_ip_comm/connection/10x/integration/guide/cucm_sccp/guide/cucintcucmskinny230.html

  After you copy the certificate, you must restart the Cisco CallManager service on each Cisco Unified Communications Manager server in the cluster.
- If Cisco Unity certificates expire or change for any reason, use the certificate management feature in the *Administration Guide for Cisco Unified Communications Manager* to update the certificates in the trusted store. The TLS authentication fails when certificates do not match, and voice messaging does not work because it cannot register to Cisco Unified Communications Manager.
- When configuring voice-mail server ports, you must select a device security mode.
- The setting that you specify in the Cisco Unity Telephony Integration Manager (UTIM) or in Cisco Unity Connection Administration must match the voice-messaging port device security mode that is configured in Cisco Unified Communications Manager Administration. In Cisco Unity Connection Administration, you apply the device security mode to the voice-messaging port in the Voice Mail Port Configuration window (or in the Voice Mail Port Wizard).

Tip If the device security mode settings do not match, the voice-mail server ports fail to register with Cisco Unified Communications Manager, and the voice-mail server cannot accept calls on those ports.

- Changing the security profile for the port requires a reset of Cisco Unified Communications Manager devices and a restart of the voice-mail server software. If you apply a security profile in Cisco Unified Communications Manager Administration that uses a different device security mode than the previous profile, you must change the setting on the voice-mail server.
- You cannot change the Device Security Mode for existing voice-mail servers through the Voice Mail Port Wizard. If you add ports to an existing voice-mail server, the device security mode that is currently configured for the profile automatically applies to the new ports.

Set Up Secure Voice-Messaging Port

The following procedure provides the tasks used to configure security for voice-messaging ports.

Procedure

Step 1 Verify that you installed and configured the Cisco CTL Client for Mixed Mode.

Step 2 Verify that you configured the phones for authentication or encryption.

Step 3 Use the certificate management feature in Cisco Unified Communications Operating System Administration to copy the Cisco Unity certificate to the trusted store on the Cisco Unified Communications Manager server; then restart the Cisco CallManager service.
For more information, see the *Administration Guide for Cisco Unified Communications Manager* and *Cisco Unified Serviceability Administration Guide*.

Tip Activate the Cisco CTL Provider service on each Cisco Unified Communications Manager server in the cluster; then restart the Cisco CallManager service on all servers.

Step 4 In Cisco Unified Communications Manager Administration, configure the device security mode for the voice-messaging ports.

Step 5 Perform security-related configuration tasks for Cisco Unity or Cisco Unity Connection voice-messaging ports; for example, configure Cisco Unity to point to the Cisco TFTP server.
For more information, see Cisco Unified Communications Manager Integration Guide for Cisco Unity or for Cisco Unity Connection

Step 6 Reset the devices in Cisco Unified Communications Manager Administration and restart the Cisco Unity software.
For more information, see the Cisco Unified Communications Manager Integration Guide for Cisco Unity or for Cisco Unity Connection.

Related Topics

Apply Security Profile to Single Voice-Messaging Port, on page 177
Apply Security Profile Using Voice Mail Port Wizard, on page 178
Voice-Messaging Security Setup Tips, on page 176

Apply Security Profile to Single Voice-Messaging Port

To apply a security profile to a single voice-messaging port, perform the following procedure.

This procedure assumes that you added the device to the database and installed a certificate in the phone, if a certificate does not already exist. After you apply a security profile for the first time or if you change the security profile, you must reset the device.

Before You Begin

Before you apply a security profile, review topics related to voice-messaging security and secure voice-messaging port setup.

Procedure

Step 1 Find the voice-messaging port, as described in the *Administration Guide for Cisco Unified Communications Manager*.

Step 2 After the configuration window for the port displays, locate the **Device Security Mode** setting. From the drop-down list box, choose the security mode that you want to apply to the port. The database predefines these options. The default value specifies **Not Selected**.

Step 3 Click **Save**.

Step 4 Click **Reset**.

Related Topics

Voice-Messaging Security, on page 175
Voice-Messaging Security Setup Tips, on page 176
Where to Find More Information About Voice-messaging Security, on page 179

Apply Security Profile Using Voice Mail Port Wizard

Use this procedure to apply the Device Security Mode setting in the Voice Mail Port Wizard for a new voice-mail server.

To change the security setting for an existing voice-mail server, see topics related to applying the security profile to a single voice-messaging port.

Before You Begin

Before you apply a security profile, review topics related to voice-messaging security and secure voice-messaging port setup.

Procedure

Step 1 Cisco Unified Communications Manager Administration, choose **Voice Mail** > **Cisco Voice Mail Port Wizard**.

Step 2 Enter the name of the voice-mail server; click **Next**.

Step 3 Choose the number of ports that you want to add; click **Next**.

Step 4 In the **Cisco Voice Mail Device Information** window, choose a **Device Security Mode** from the drop-down list box. The database predefines these options. The default value specifies **Not Selected**.

Step 5 Configure the other device settings, as described in the *Administration Guide for Cisco Unified Communications Manager*. Click **Next**.

Step 6 Continue the configuration process, as described in the *Administration Guide for Cisco Unified Communications Manager*. When the **Summary** window displays, click **Finish**.

Related Topics

Apply Security Profile to Single Voice-Messaging Port, on page 177
Voice-Messaging Security, on page 175
Voice-Messaging Security Setup Tips, on page 176
Where to Find More Information About Voice-messaging Security, on page 179

Where to Find More Information About Voice-messaging Security

Related Topics

System Requirements, on page 7
Interactions and Restrictions, on page 10
Certificates, on page 18
Set Up Authentication and Encryption, on page 30
Voice-Messaging Security, on page 175
Voice-Messaging Security Setup Tips, on page 176

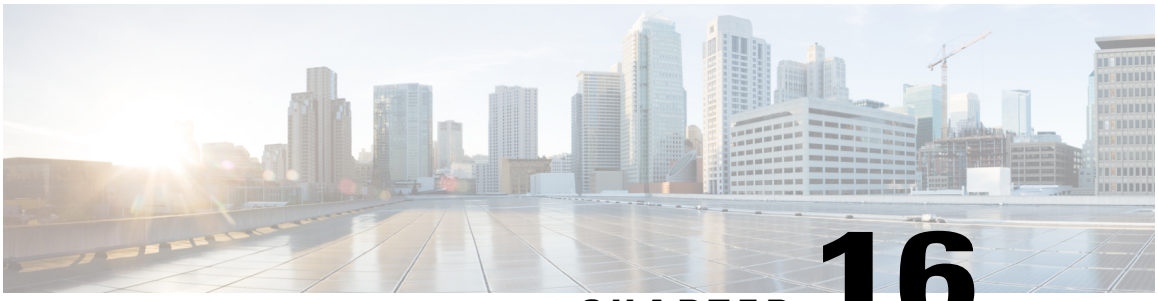

CHAPTER 16

Call Secure Status Policy

- About Call Secure Status Policy, page 181
- Setup Call Secure Status Policy, page 182

About Call Secure Status Policy

Call Secure Status Policy controls display of secure status icon on phones. The following are the policy options:

- All media except BFCP and iX application streams must be encrypted

  This is the default value. The security status of the call is not dependent on the encryption status of BFCP and iX application streams.

- All media except iX application streams must be encrypted

  The security status of the call is not dependent on the encryption status iX application streams.

- All media except BFCP application streams must be encrypted

  The security status of the call is not dependent on the encryption status BFCP.

- All media in a session must be encrypted

  The security status of the call is dependent on the encryption status of all the media streams of an established phone session.

- Only Audio must be encrypted

  The security status of the call is dependent on the encryption of the audio stream.

Note Changes to the policy impacts display of the secure icon and playing of secure tone on the phone.

Setup Call Secure Status Policy

Procedure

Step 1 Find the Call Secure Status Policy service parameter, as described in the *System Configuration Guide for Cisco Unified Communications Manager* .

Step 2 From the **Secure Call Icon Display Policy** drop-down list, choose a policy option.
A warning message with the impact on video calls and secure tone is displayed.

Step 3 Click Save
The window refreshes, and Cisco Unified Communications Manager updates the service parameter with your changes.

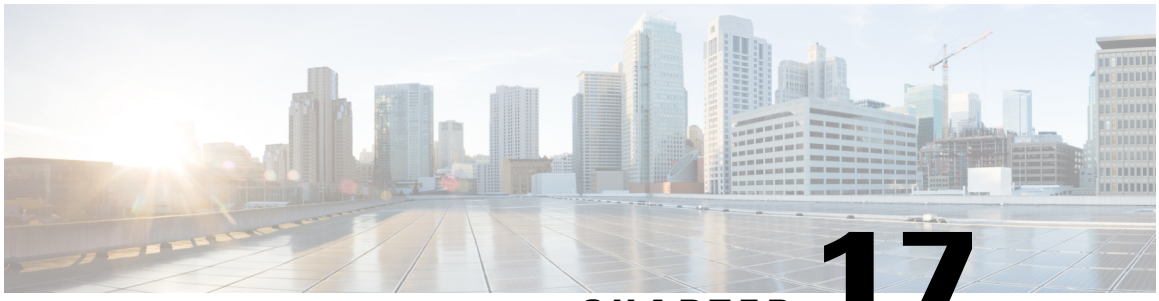

CHAPTER 17

Secure Call Monitoring and Recording Setup

This chapter provides information about secure call monitoring and recording setup.

- About Secure Call Monitoring and Recording Setup, page 183
- Set Up Secure Call Monitoring and Recording, page 183

About Secure Call Monitoring and Recording Setup

Secure calls can be monitored and recorded, as described in this section:

- A supervisor can establish a secured monitoring session for a secured or a non-secured call.
- The call security of the original call is never impacted or downgraded as a result of a call monitoring request.
- The monitoring call is allowed to proceed only when it can be established and maintained at the same security level as the device capability of the agent.
- The original call between the agent and customer must have different crypto keys than that of monitoring call. In a monitoring session, the system encrypts the mixed voices of the agent and customer with the new key first before sending to the supervisor.

Note The system does not support secure recording on authenticated phones.

Set Up Secure Call Monitoring and Recording

To configure Secure Call Monitoring and Recording, use the following procedure:

Procedure

Step 1 Provision secure capability on agent and supervisor phones.

Step 2 Create a secure SIP trunk with the following configuration:

- Set the Device Security Mode to Encrypted.
- Check the Transmit Security Status check box.
- Check the SRTP Allowed check box.
- Configure the TLS SIP trunk to the recorder.

Step 3 Configure monitoring and recording, in the same way you would for non-secure monitoring and recording.

a) Configure a built-in bridge for the agent phone.
b) Configure the Recording Option (Automatic Call Recording Enabled and Application Invoked Call Recording Enabled.) using the DN page on the agent phone.
c) Create a route pattern for the recorder.
d) Add a call recording profile to the DN.
e) Provision monitoring and recording tones as needed.

For more information and detailed procedures, see the “Monitoring and Recording” chapter in the *Feature Configuration Guide for Cisco Unified Communications Manager* .

Related Topics

Set Up Phone Security, on page 103

PART III

Virtual Private Networks for Cisco Unified IP Phones

- VPN Client, page 187

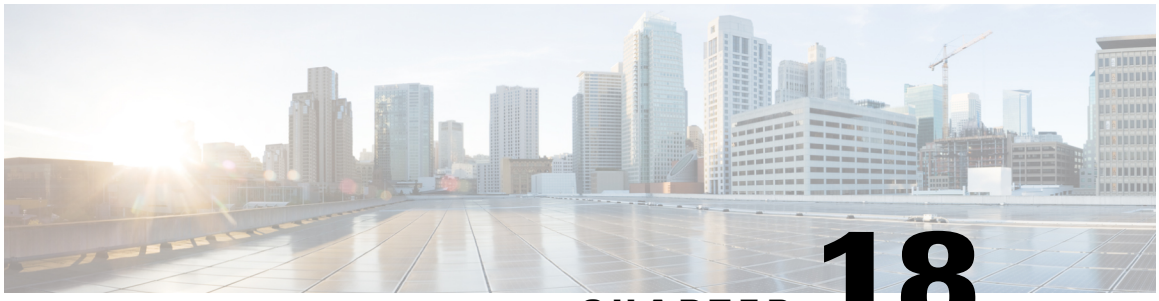

CHAPTER 18

VPN Client

- VPN Client Overview, page 187
- VPN Client Prerequisites, page 187
- VPN Client Configuration Task Flow, page 187

VPN Client Overview

The Cisco VPN Client for Cisco Unified IP Phones creates a secure VPN connection for employees who telecommute. All settings of the Cisco VPN Client are configured through Cisco Unified CM Administration. After the phone is configured within the Enterprise, the users can plug it into their broadband router for instant connectivity.

Note The VPN menu and its options are not available in the U.S. export unrestricted version of Cisco Unified Communications Manager.

VPN Client Prerequisites

Pre-provision the phone and establish the initial connection inside the corporate network to retrieve the phone configuration. You can make subsequent connections using VPN, as the configuration is already retrieved on the phone.

VPN Client Configuration Task Flow

Procedure

	Command or Action	Purpose
Step 1	Complete Cisco IOS Prerequisites, on page 188	Complete Cisco IOS prerequisites. Perform this action if you want to configure Cisco IOS VPN.

	Command or Action	Purpose
Step 2	Configure Cisco IOS SSL VPN to Support IP Phones , on page 189	Configure Cisco IOS for VPN client on an IP Phone. Perform this action if you want to configure Cisco IOS VPN.
Step 3	Complete ASA Prerequisites for AnyConnect, on page 191	Complete ASA prerequisites for AnyConnect. Perform this action if you want to configure ASA VPN.
Step 4	Configure ASA for VPN Client on IP Phone, on page 192	Configure ASA for VPN client on an IP Phone. Perform this action if you want to configure ASA VPN.
Step 5	Configure the VPN concentrators for each VPN Gateway.	To avoid long delays when the user upgrades the firmware or configuration information on a remote phone, set up the VPN concentrator close in the network to the TFTP or Cisco Unified Communications Manager server. If this is not feasible in your network, you can set up an alternate TFTP or load server that is next to the VPN concentrator.
Step 6	Upload VPN Concentrator Certificates, on page 194	Upload the VPN concentrator certificates.
Step 7	Configure VPN Gateway, on page 195	Configure the VPN gateways.
Step 8	Configure VPN Group, on page 196	After you create a VPN group, you can add one of the VPN gateways that you just configured to it.
Step 9	Perform one of the following: • Configure VPN Profile, on page 197 • Configure VPN Feature Parameters, on page 199	You must configure a VPN profile only if you have multiple VPN groups. The VPN Profile fields take precedence over the VPN Feature Configuration fields.
Step 10	Add VPN Details to Common Phone Profile, on page 200	Add the VPN Group and VPN Profile to a Common Phone Profile.
Step 11	Upgrade the firmware for Cisco Unified IP Phones to a version that supports VPN.	To run the Cisco VPN client, a supported Cisco Unified IP Phone must be running firmware release 9.0(2) or higher. For more information about upgrading the firmware, see the *Cisco Unified IP Phone Administration Guide* for Cisco Unified Communications Manager for your Cisco Unified IP Phone model.
Step 12	Using a supported Cisco Unified IP Phone, establish the VPN connection.	Connect your Cisco Unified IP Phone to a VPN.

Complete Cisco IOS Prerequisites

Before you create Cisco IOS configuration for VPN client on an IP Phone, complete the following steps:

Procedure

Step 1 Install Cisco IOS Software version 15.1(2)T or later.
Feature Set/License: Universal (Data & Security & UC) for IOS ISR-G2

Feature Set/License: Advanced Security for IOS ISR

Step 2 Activate the SSL VPN License.

What to Do Next

Configure Cisco IOS SSL VPN to Support IP Phones , on page 189

Configure Cisco IOS SSL VPN to Support IP Phones

Before You Begin

Complete Cisco IOS Prerequisites, on page 188

Procedure

Step 1 Configure Cisco IOS locally.

a) Configure the Network Interface.
Example:

```
router(config)# interface GigabitEthernet0/0
router(config-if)# description "outside interface"
router(config-if)# ip address 10.1.1.1 255.255.255.0
router(config-if)# duplex auto
router(config-if)# speed auto
router(config-if)# no shutdown
router#show ip interface brief (shows interfaces summary)
```

b) Configure static and default routes by using this command:
router(config)# **ip route** <*dest_ip*> < *mask*> < *gateway_ip*>

Example:

```
router(config)# ip route 10.10.10.0 255.255.255.0 192.168.1.1
```

Step 2 Generate and register the CAPF certificate to authenticate the IP phones with an LSC.

Step 3 Import the CAPF certificate from Cisco Unified Communications Manager:

a) From the Cisco Unified OS Administration, choose **Security** > **Certificate Management**.
Note This location may change based on the Unified Communications Manager version.

b) Find the Cisco_Manufacturing_CA and CAPF certificates. Download the .pem file and save as .txt file.

c) Create trustpoint on the Cisco IOS software.

```
hostname(config)# crypto pki trustpoint trustpoint_name
hostname(config-ca-trustpoint)# enrollment terminal
hostname(config)# crypto pki authenticate trustpoint
```

When prompted for the base 64-encoded CA certificate, copy and paste the text in the downloaded .pem file along with the BEGIN and END lines. Repeat the procedure for the other certificates.

d) Generate the following Cisco IOS self-signed certificates and register them with Cisco Unified Communications Manager, or replace with a certificate that you import from a CA.

- Generate a self-signed certificate.

```
Router> enable
Router# configure terminal
Router(config)# crypto key generate rsa general-keys label <name>
<exportable -optional>Router(config)# crypto pki trustpoint <name>
Router(ca-trustpoint)# enrollment selfsigned
Router(ca-trustpoint)# rsakeypair <name> 1024 1024
Router(ca-trustpoint)#authorization username subjectname commonname
Router(ca-trustpoint)# crypto pki enroll <name>
Router(ca-trustpoint)# end
```

- Generate a self-signed certificate with Host-id check enabled on the VPN profile in Cisco Unified Communications Manager.

  Example:

```
Router> enable
Router# configure terminal
Router(config)# crypto key generate rsa general-keys label <name>
<exportable -optional>Router(config)# crypto pki trustpoint <name>
Router(ca-trustpoint)# enrollment selfsigned
Router(config-ca-trustpoint)# fqdn <full domain
name>Router(config-ca-trustpoint)# subject-name CN=<full domain
name>, CN=<IP>Router(ca-trustpoint)#authorization username
subjectname commonname
Router(ca-trustpoint)# crypto pki enroll <name>
Router(ca-trustpoint)# end
```

- Register the generated certificate with Cisco Unified Communications Manager.

  Example:

```
Router(config)# crypto pki export <name> pem terminal
```

  Copy the text from the terminal and save it as a .pem file and upload it to the Cisco Unified Communications Manager using the Cisco Unified OS Administration.

Step 4 Install AnyConnect on Cisco IOS.
Download the Anyconnect package from cisco.com and install to flash.

Example:

```
router(config)#webvpn install svc
flash:/webvpn/anyconnect-win-2.3.2016-k9.pkg
```

Step 5 Configure the VPN feature.

Note To use the phone with both certificate and password authentication, create a user with the phone MAC address. Username matching is case sensitive. For example:

```
username CP-7975G-SEP001AE2BC16CB password k1kLGQIoxyCO4ti9 encrypted
```

What to Do Next

Configure VPN concentrators for each VPN gateway.

Complete ASA Prerequisites for AnyConnect

Before you create an ASA configuration for VPN client on an IP phone, complete the following steps:

Procedure

Step 1 Install ASA software (version 8.0.4 or later) and a compatible ASDM.

Step 2 Install a compatible AnyConnect package.

Step 3 Activate License.

a) Check features of the current license by executing the following command:
show activation-key detail

b) If necessary, obtain a new license with additional SSL VPN sessions and Linksys phone enabled.

Step 4 Ensure that you configure a tunnel-group with a non-default URL as follows:

```
tunnel-group phonevpn type remote-access
tunnel-group phonevpn general-attribute
  address-pool vpnpool
tunnel-group phonevpn webvpn-attributes
  group-url https://172.18.254.172/phonevpn enable
```

Consider the following when configuring non-default URL:

- If the IP address of the ASA has a public DNS entry, you can replace it with a Fully Qualified Domain Name (FQDN).
- You can only use a single URL (FQDN or IP address) on the VPN gateway in Cisco Unified Communications Manager.
- If it preferred to have the certificate CN or subject alternate name match the FQDN or IP address in the group-url.
- If the ASA certificate CN or SAN does not match with the FQDN or IP address, then disable host id check on Cisco Unified Communications Manager.

Configure ASA for VPN Client on IP Phone

Note Replacing ASA certificates results in non-availability of Cisco Unified Communications Manager.

Perform the following steps to configure ASA for VPN client on IP phone.

Procedure

Step 1 Local configuration

a) Configure network interface.
Example:

```
ciscoasa(config)# interface Ethernet0/0
ciscoasa(config-if)# nameif outside
ciscoasa(config-if)# ip address 10.89.79.135 255.255.255.0
ciscoasa(config-if)# duplex auto
ciscoasa(config-if)# speed auto
ciscoasa(config-if)# no shutdown
ciscoasa#show interface ip brief (shows interfaces summary)
```

b) Configure static routes and default routes.
ciscoasa(config)# **route** <interface_name> <ip_address> <netmask> <gateway_ip>

Example:

```
ciscoasa(config)# route outside 0.0.0.0 0.0.0.0 10.89.79.129
```

c) Configure the DNS.
Example:

```
ciscoasa(config)# dns domain-lookup inside
ciscoasa(config)# dns server-group DefaultDNS
ciscoasa(config-dns-server-group)# name-server 10.1.1.5 192.168.1.67
209.165.201.6
```

Step 2 Generate and register the necessary certificates for Cisco Unified Communications Manager and ASA. Import the following certificates from the Cisco Unified Communications Manager.

- CallManager - Authenticating the Cisco UCM during TLS handshake (Only required for mixed-mode clusters).
- Cisco_Manufacturing_CA - Authenticating IP phones with a Manufacturer Installed Certificate (MIC).
- CAPF - Authenticating IP phones with an LSC.

To import these Cisco Unified Communications Manager certificates, do the following:

a) From the Cisco Unified OS Administration, choose **Security** > **Certificate Management**.
b) Locate the certificates Cisco_Manufacturing_CA and CAPF. Download the `.pem` file and save as a `.txt` file.

c) Create trustpoint on the ASA.
Example:

```
ciscoasa(config)# crypto ca trustpoint trustpoint_name
ciscoasa(ca-trustpoint)# enrollment terminal
ciscoasa(config)# crypto ca authenticate trustpoint_name
```

When prompted for base 64 encoded CA Certificate, copy-paste the text in the downloaded `.pem` file along with the BEGIN and END lines. Repeat the procedure for the other certificates.

d) Generate the following ASA self-signed certificates and register them with Cisco Unified Communications Manager, or replace with a certificate that you import from a CA.

- Generate a self-signed certificate.

  Example:

```
ciscoasa> enable
ciscoasa# configure terminal
ciscoasa(config)# crypto key generate rsa general-keys label <name>

ciscoasa(config)# crypto ca trustpoint <name>
ciscoasa(ca-trustpoint)# enrollment self
ciscoasa(ca-trustpoint)# keypair <name>
ciscoasa(config)# crypto ca enroll <name>
ciscoasa(config)# end
```

- Generate a self-signed certificate with Host-id check enabled on the VPN profile in Cisco Unified Communications Manager.

  Example:

```
ciscoasa> enable
ciscoasa# configure terminal
ciscoasa(config)# crypto key generate rsa general-keys label <name>

ciscoasa(config)# crypto ca trustpoint <name>
ciscoasa(ca-trustpoint)# enrollment self
ciscoasa(ca-trustpoint)# fqdn <full domain name>
ciscoasa(config-ca-trustpoint)# subject-name CN=<full domain
name>,CN=<IP>
ciscoasa(config)# crypto ca enroll <name>
ciscoasa(config)# end
```

- Register the generated certificate with Cisco Unified Communications Manager.

  Example:

```
ciscoasa(config)# crypto ca export <name> identity-certificate
```

  Copy the text from the terminal and save it as a .pem file and upload it to Cisco Unified Communications Manager

Step 3 Configure the VPN feature. You can use the Sample ASA configuration summary below to guide you with the configuration.

Note To use the phone with both certificate and password authentication, create a user with the phone MAC address. Username matching is case sensitive. For example:

```
ciscoasa(config)# username CP-7975G-SEP001AE2BC16CB password
k1kLGQIoxyCO4ti9 encrypted
ciscoasa(config)# username CP-7975G-SEP001AE2BC16CB attributes
ciscoasa(config-username)# vpn-group-policy GroupPhoneWebvpn
ciscoasa(config-username)#service-type remote-access
```

ASA Certificate Configuration

For more information on ASA certificate configuration, refer to http://www.cisco.com/en/US/products/sw/voicesw/ps556/products_configuration_example09186a0080bef910.shtml

Upload VPN Concentrator Certificates

Generate a certificate on the ASA when you set it up to support the VPN feature. Download the generated certificate to your PC or workstation and then upload it to Cisco Unified Communications Manager using the procedure in this section. Cisco Unified Communications Manager saves the certificate in the Phone-VPN-trust list.

The ASA sends this certificate during the SSL handshake, and the Cisco Unified IP Phone compares it against the values stored in the Phone-VPN-trust list.

The Cisco Unified IP Phone sends its Manufacturer Installed Certificate (MIC) by default. If you configure the CAPF service, the Cisco Unified IP Phone sends its Locally Significant Certificate (LSC).

To use device level certificate authentication, install the root MIC or CAPF certificate in the ASA, so that the Cisco Unified IP Phones are trusted.

To upload certificates to Cisco Unified Communications Manager, use the Cisco Unified OS Administration..

Procedure

Step 1 From Cisco Unified OS Administration, choose **Security** > **Certificate Management**.
The **Certificate List** window appears.

Step 2 Click **Upload Certificate**.
The **Upload Certificate** dialog box appears.

Step 3 From the **Certificate Purpose** drop-down list, choose **Phone-VPN-trust**.

Step 4 Click **Browse** to choose the file that you want to upload.

Step 5 Click **Upload File**.

Step 6 Choose another file to upload or click **Close**.
For more information about certificate management, see the *Administration Guide for Cisco Unified Communications Manager* at http://www.cisco.com/c/en/us/support/unified-communications/unified-communications-manager-callmanager/products-installation-and-configuration-guides-list.html.

What to Do Next

Configure VPN Gateway, on page 195

Configure VPN Gateway

To add, update, or copy a VPN gateway, perform the following procedure:

Before You Begin

Ensure that you have configured VPN concentrators for each VPN gateway. After configuring the VPN concentrators, upload the VPN concentrator certificates. For more information, see Upload VPN Concentrator Certificates, on page 194.

Procedure

Step 1 In Cisco Unified CM Administration, choose **Advanced Features** > **VPN** > **VPN Gateway**.

Step 2 Perform one of the following tasks:

a) To add a new profile, click **Add New**.

b) To copy an existing VPN gateway, locate the appropriate profile, click the **Copy** button next to the VPN gateway that you want to copy.

c) To update an existing profile, locate the appropriate VPN gateway and modify the settings.

When you click **Add New**, the configuration window appears with the default settings for each field. When you click **Copy**, the configuration window appears with the copied settings.

Step 3 Configure the fields in the **VPN Gateway Configuration** window. See the Related Topics section for more information about the fields and their configuration options.

Step 4 Click **Save**.

What to Do Next

Configure VPN Group, on page 196

Related Topics

VPN Gateway Fields for VPN Client, on page 195

VPN Gateway Fields for VPN Client

Field	Description
VPN Gateway Name	Enter the name of the VPN gateway.
VPN Gateway Description	Enter a description of the VPN gateway.

Field	Description
VPN Gateway URL	Enter the URL for the main VPN concentrator in the gateway. **Note** You must configure the VPN concentrator with a group URL and use this URL as the gateway URL. For configuration information, refer to the documentation for the VPN concentrator, such as the following: • *SSL VPN Client (SVC) on ASA with ASDM Configuration Example*
VPN Certificates in this Gateway	Use the up and down arrow keys to assign certificates to the gateway. If you do not assign a certificate for the gateway, the VPN client will fail to connect to that concentrator. **Note** You can assign up to 10 certificates to a VPN gateway, and you must assign at least one certificate to each gateway. Only certificates that are associated with the Phone-VPN-trust role appear in the available VPN certificates list.

Configure VPN Group

To add, update, or copy a VPN group, perform the following procedure:

Before You Begin

Configure VPN Gateway, on page 195

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **Advanced Features** > **VPN** > **VPN Group**.

Step 2 Perform one of the following tasks:

a) To add a new profile, click **Add New**.

b) To copy an existing VPN group, locate the appropriate profile, click the **Copy** button next to the VPN group that you want to copy.

c) To update an existing profile, locate the appropriate VPN group and modify the settings.
When you click **Add New**, the configuration window appears with the default settings for each field. When you click **Copy**, the configuration window appears with the copied settings.

Step 3 Configure the fields in the **VPN Group Configuration** window. See the Related Topics section for more information about the fields and their configuration options.

Step 4 Click **Save**.

What to Do Next

Perform one of the following tasks:

- Configure VPN Profile, on page 197
- Configure VPN Feature Parameters, on page 199

Related Topics

VPN Group Fields for VPN Client, on page 197
VPN Group Fields for VPN Client, on page 197

VPN Group Fields for VPN Client

Field	Definition
VPN Group Name	Enter the name of the VPN group.
VPN Group Description	Enter a description of the VPN group.
All Available VPN Gateways	Scroll to see all available VPN gateways.
Selected VPN Gateways in this VPN Group	Use the up and down arrow buttons to move available VPN gateways into and out of this VPN group. If the VPN client encounters a critical error and cannot connect to a particular VPN gateway, it will attempt to move to the next VPN gateway in the list. **Note** You can add up to a maximum of three VPN gateways to a VPN group. Also, the total number of certificates in the VPN group cannot exceed 10.

Configure VPN Profile

To add, update, or copy a VPN profile, perform the following procedure:

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **Advanced Features** > **VPN** > **VPN Profile**.

Step 2 Perform one of the following tasks:

a) To add a new profile, click **Add New**.
b) To copy an existing profile, locate the appropriate profile and click the **Copy** button next to the VPN profile that you want to copy.
c) To update an existing profile, specify the appropriate filters in the **Find VPN Profile Where**, click **Find**, and modify the settings.
When you click **Add New**, the configuration window appears with the default settings for each field. When you click **Copy**, the configuration window appears with the copied settings.

Step 3 Configure the fields in the **VPN Profile Configuration** window. See the Related Topics section for more information about the fields and their configuration options.

Step 4 Click **Save**.

Related Topics

VPN Profile Fields for VPN Client, on page 198

VPN Profile Fields for VPN Client

Field	Definition
Name	Enter a name for the VPN profile.
Description	Enter a description for the VPN profile.
Enable Auto Network Detect	When you check this check box, the VPN client can only run when it detects that it is out of the corporate network. Default: Disabled.
MTU	Enter the size, in bytes, for the Maximum Transmission Unit (MTU). Default: 1290 bytes.
Fail to Connect	This field specifies the amount of time to wait for login or connect operations to complete while the system creates the VPN tunnel. Default: 30 seconds
Enable Host ID Check	When you check this check box, the gateway certificate subjectAltName or CN must match the URL to which the VPN client is connected. Default: Enabled
Client Authentication Method	From the drop-down list, choose the client authentication method: • User and password • Password only • Certificate (LSC or MIC)

Field	Definition
Enable Password Persistence	When you check this check box, a user password gets saved in the phone until either a failed login attempt occurs, a user manually clears the password, or the phone resets or loses power.

Configure VPN Feature Parameters

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **Advanced Features** > **VPN** > **VPN Feature Configuration**.

Step 2 Configure the fields in the **VPN Feature Configuration** window. See the Related Topics section for more information about the fields and their configuration options.

Step 3 Click **Save**.

What to Do Next

Perform the following tasks:

- Upgrade the firmware for Cisco Unified IP Phones to a version that supports VPN. For more information about upgrading the firmware, see the *Cisco Unified IP Phone Administration Guide* for your Cisco Unified IP Phone model.
- Using a supported Cisco Unified IP Phone, establish the VPN connection.

Related Topics

VPN Feature Parameters, on page 199

VPN Feature Parameters

Field	Default
Enable Auto Network Detect	When True, the VPN client can only run when it detects that it is out of the corporate network. Default: False
MTU	This field specifies the maximum transmission unit: Default: 1290 bytes Minimum: 256 bytes Maximum: 1406 bytes

Field	Default
Keep Alive	This field specifies the rate at which the system sends the keep alive message. **Note** If it is non zero and less than the value specified in Cisco Unified Communications Manager, the keep alive setting in the VPN concentrator overwrites this setting. Default: 60 seconds Minimum: 0 Maximum: 120 seconds
Fail to Connect	This field specifies the amount of time to wait for login or connect operations to complete while the system creates the VPN tunnel. Default: 30 seconds Minimum: 0 Maximum: 600 seconds
Client Authentication Method	From the drop-down list, choose the client authentication method: • User and password • Password only • Certificate (LSC or MIC) Default: User And Password
Enable Password Persistence	When True, a user password gets saved in the phone, if Reset button or "**#**" is used for reset. The password does not get saved and the phone prompts for credentials if the phone loses power or you initiate a factory reset. Default: False
Enable Host ID Check	When True, the gateway certificate subjectAltName or CN must match the URL to which the VPN client is connected. Default: True

Add VPN Details to Common Phone Profile

Before You Begin

Configure VPN Profile, on page 197

Procedure

Step 1 Choose **Device** > **Device Settings** > **Common Phone Profile**.
The **Find and List Common Phone Profiles** window appears.

Step 2 Choose the search criteria to use.

Step 3 Click **Find**.
The window displays a list of common phone profiles that match the search criteria.

Step 4 Click the common phone profile to which you want to add the VPN details.
The **Common Phone Profile Configuration** window appears.

Step 5 In the **VPN Information** section, choose the appropriate **VPN Group** and **VPN Profile**.

Step 6 Click **Save**.

Step 7 Click **Apply Config**.
The **Apply Configuration** window appears.

Step 8 Click **Ok**.

What to Do Next

Perform the following tasks:

- Upgrade the firmware for Cisco Unified IP Phones to a version that supports VPN. For more information about upgrading the firmware, see the *Cisco Unified IP Phone Administration Guide* for your Cisco Unified IP Phone model.
- Using a supported Cisco Unified IP Phone, establish the VPN connection.

PART IV

Cisco CTI, JTAPI, and TAPI Application Security

- Authentication and Encryption Setup for CTI, JTAPI, and TAPI, page 205
- Certificate Revocation/Expiry Status Verification, page 219

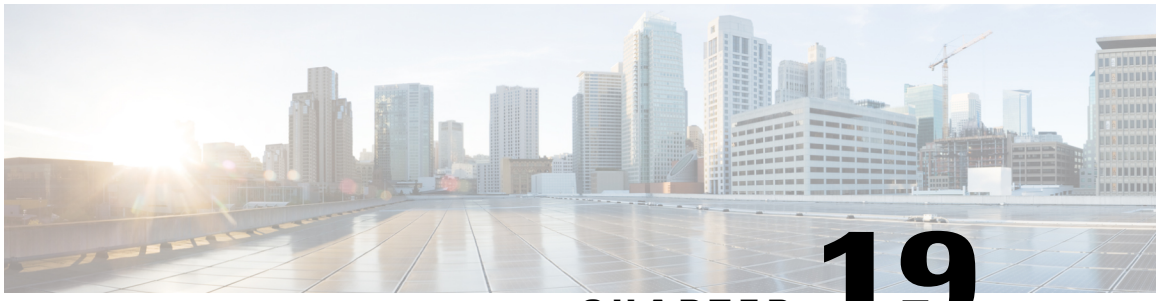

CHAPTER 19

Authentication and Encryption Setup for CTI, JTAPI, and TAPI

This chapter provides a brief overview of how to secure the CTI, JTAPI, and TAPI applications. It also describes the tasks that you must perform in Cisco Unified Communications Manager Administration to configure authentication and encryption for CTI/TAPI/JTAPI applications.

This document does not describe how to install the Cisco JTAPI or TSP plug-ins that are available in Cisco Unified Communications Manager Administration, nor does it describe how to configure the security parameters during the installation. Likewise, this document does not describe how to configure restrictions for CTI-controlled devices or lines.

- Authentication for CTI, JTAPI, and TAPI Applications, page 206
- Encryption for CTI, JTAPI, and TAPI Applications, page 207
- CAPF Functions for CTI, JTAPI, and TAPI Applications, page 208
- CAPF System Interactions and Requirements for CTI, JTAPI, and TAPI Applications, page 209
- Securing CTI, JTAPI, and TAPI, page 209
- Add Application and End Users to Security-Related Users Groups, page 210
- Certificate Authority Proxy Function Service Activation, page 212
- Update CAPF Service Parameters, page 212
- Find Application User or End User CAPF Profile, page 213
- Set Up Application User or End User CAPF Profile, page 213
- CAPF Settings, page 214
- Delete Application User CAPF or End User CAPF Profile, page 216
- Set Up JTAPI/TAPI Security-Related Service Parameters, page 217
- View Certificate Operation Status for Application or End User, page 218
- Where to Find More Information About CTI, JTAPI, and TAPI Authentication, page 218

Authentication for CTI, JTAPI, and TAPI Applications

Cisco Unified Communications Manager allows you to secure the signaling connections and media streams between CTIManager and CTI/JTAPI/TAPI applications.

Note The following information assumes that you configured security settings during the Cisco JTAPI/TSP plug-in installation. It also assumes that the Cluster Security Mode equals Mixed Mode, as configured in the Cisco CTL Client or through the CLI command set **utils ctl**. If these settings are not configured when you perform the tasks that are described in this chapter, CTIManager and the application connect via a nonsecure port, port 2748.

CTIManager and the application verify the identity of the other party through a mutually authenticated TLS handshake (certificate exchange). When a TLS connection occurs, CTIManager and the application exchange QBE messages via the TLS port, port 2749.

To authenticate with the application, CTIManager uses the Cisco Unified Communications Manager certificate — either the self-signed certificate that installs automatically on the Cisco Unified Communications Manager server during installation or a third-party, CA-signed certificate that you uploaded to the platform.

After you generate the CTL file through the CLI command set **utils ctl** or the Cisco CTL Client, this certificate is added automatically to the CTL file. Before the application attempts to connect to CTIManager, the application downloads the CTL file from the TFTP server.

The first time that the JTAPI/TSP client downloads the CTL file from the TFTP server, the JTAPI/TSP client trusts the CTL file. Because the JTAPI/TSP client does not validate the CTL file, Cisco strongly recommends that the download occur in a secure environment. The JTAPI/TSP client verifies subsequent downloads of the CTL file; for example, after you update the CTL file, the JTAPI/TSP client uses the security tokens in the CTL file to authenticate the digital signature of the new CTL file it downloads. Contents of the file include the Cisco Unified Communications Manager certificates and CAPF server certificate.

If the CTL file appears compromised, the JTAPI/TSP client does not replace the downloaded CTL file; the client logs an error and attempts to establish a TLS connection by using an older certificate in the existing CTL file. The connection may not succeed if the CTL file has changed or is compromised. If the CTL file download fails and more than one TFTP server exists, you can configure another TFTP server to download the file. The JTAPI/TAPI client does not connect to any port under the following circumstances:

- The client cannot download the CTL file for some reason; for example, no CTL file exists.
- The client does not have an existing CTL file.
- You configured the application user as a secure CTI user.

To authenticate with CTIManager, the application uses a certificate that the Certificate Authority Proxy Function (CAPF) issues. To use TLS for every connection between the application and CTIManager, each instance that runs on the application PC must have a unique certificate. One certificate does not cover all instances. To ensure that the certificate installs on the node where Cisco IP Manager Assistant service is running, you configure a unique Instance ID for each Application User CAPF Profile Configuration or End User CAPF Profile Configuration in Cisco Unified Communications Manager Administration, as described in Table 19: Application and End User CAPF Profile Configuration Settings , on page 215.

Tip If you uninstall the application from one PC and install it on another PC, you must install a new certificate for each instance on the new PC.

You must also add the application users or the end users to the Standard CTI Secure Connection user group in Cisco Unified Communications Manager Administration to enable TLS for the application. After you add the user to this group and install the certificate, the application ensures that the user connects via the TLS port.

Related Topics

CAPF Settings, on page 214

Encryption for CTI, JTAPI, and TAPI Applications

Tip Authentication serves as the minimum requirement for encryption; that is, you cannot use encryption if you have not configured authentication.

Cisco Unified Communications Manager Assistant, Cisco QRT, and Cisco Web Dialer do not support encryption. CTI clients that connect to the CTIManager service may support encryption if the client sends voice packets.

To secure the media streams between the application and CTIManager, add the application users or the end users to the Standard CTI Allow Reception of SRTP Key Material user group in Cisco Unified Communications Manager Administration. If these users also exist in the Standard CTI Secure Connection user group and if the cluster security mode equals Mixed Mode, CTIManager establishes a TLS connection with the application and provides the key materials to the application in a media event

Note Cluster security mode configures the security capability for your standalone server or cluster.

Although applications do not record or store the SRTP key materials, the application uses the key materials to encrypt its RTP stream and decrypt the SRTP stream from CTIManager.

If the application connects to the nonsecure port, port 2748, for any reason, CTIManager does not send the keying material. If CTI/JTAPI/TAPI cannot monitor or control a device or directory number because you configured restrictions, CTIManager does not send the keying material.

Tip For an application to receive SRTP session keys, the application or end user must exist in three groups: Standard CTI Enabled, Standard CTI Secure Connection, and Standard CTI Allow Reception of SRTP Key Material.

Although Cisco Unified Communications Manager can facilitate secure calls to and from CTI ports and route points, you must configure the application to support secure calls because the application handles the media parameters.

CTI ports/route points register through dynamic or static registration. If the port/route point uses dynamic registration, the media parameters get specified for each call; for static registration, media parameters get specified during registration and cannot change per call. When CTI ports/route points register to CTIManager

through a TLS connection, the device registers securely, and the media gets encrypted via SRTP if the application uses a valid encryption algorithm in the device registration request and if the other party is secure.

When the CTI application begins to monitor a call that is already established, the application does not receive any RTP events. For the established call, the CTI application provides a DeviceSnapshot event, which defines whether the media for the call is secure or nonsecure; this event provides no keying material.

CAPF Functions for CTI, JTAPI, and TAPI Applications

Certificate Authority Proxy Function (CAPF), which automatically installs with Cisco Unified Communications Manager, performs the following tasks for CTI/TAPI/TAPI applications, depending on your configuration:

- Authenticates to the JTAPI/TSP client via an authentication string.
- Issues locally significant certificates (LSC) to CTI/JTAPI/TAPI application users or end users.
- Upgrades existing locally significant certificates.
- Retrieves certificates for viewing and troubleshooting.

When the JTAPI/TSP client interacts with CAPF, the client authenticates to CAPF by using an authentication string; the client then generates its public key and private key pair and forwards its public key to the CAPF server in a signed message. The private key remains in the client and never gets exposed externally. CAPF signs the certificate and then sends the certificate back to the client in a signed message.

You issue certificates to application users or end users by configuring the settings in the Application User CAPF Profile Configuration window or End User CAPF Profile Configuration window, respectively. The following information describes the differences between the CAPF profiles that Cisco Unified Communications Manager supports:

- Application User CAPF Profile—This profile allows you to issue locally significant certificates to secure application users so that a TLS connection opens between the CTIManager service and the application.

  One Application User CAPF Profile corresponds to a single instance of the service or application on a server. If you activate multiple web services or applications on the same server, you must configure two Application User CAPF Profiles, one for each service on the server.

  If you activate a service or application on two servers in the cluster, you must configure two Application User CAPF Profiles, one for each server.

- End User CAPF Profile—This profile allows you to issue locally significant certificates to CTI clients so that the CTI client communicates with the CTIManager service via a TLS connection.

Tip The JTAPI client stores the LSC in Java Key Store format in the path that you configure in the JTAPI Preferences window. The TSP client stores the LSC in an encrypted format in the default directory or in the path that you configure.

The following information applies when a communication or power failure occurs.

- If a communication failure occurs while the certificate installation is taking place, the JTAPI client attempts to obtain the certificate three more times in 30-second intervals. You cannot configure this value.

For the TSP client, you can configure the retry attempts and the retry timer. Configure these values by specifying the number of times that the TSP client tries to obtain the certificate in an allotted time. For both values, the default equals 0. You can configure up to 3 retry attempts by specifying 1 (for one retry), 2, or 3. You can configure no more than 30 seconds for each retry attempt.

- If a power failure occurs while the JTAPI/TSP client attempts a session with CAPF, the client attempts to download the certificate after power gets restored.

CAPF System Interactions and Requirements for CTI, JTAPI, and TAPI Applications

The following requirements exist for CAPF:

- Before you configure the Application User and End User CAPF Profiles, verify that you performed all necessary tasks to install and configure the Cisco CTL Client. Verify that the Cluster Security Mode in the Enterprise Parameters Configuration window is 1 (mixed mode).
- To use CAPF, you must activate the Cisco Certificate Authority Proxy Function service on the first node.
- Because generating many certificates at the same time may cause call-processing interruptions, Cisco strongly recommends that you use CAPF during a scheduled maintenance window.
- Ensure that the first node is functional and running during the entire certificate operation.
- Ensure that the CTI/ JTAPI/TAPI application is functional during the entire certificate operation.

Securing CTI, JTAPI, and TAPI

The following procedure provides the tasks that you perform to secure the CTI/JTAPI/TAPI application.

Procedure

Step 1 Verify that the CTI application and any JTAPI/TSP plug-ins are installed and running.

Tip Assign the application user to the Standard CTI Enabled group.

See the following documentation for more information:

- *Computer Telephony Integration, System Configuration Guide for Cisco Unified Communications Manager*
- *Cisco JTAPI Installation Guide for Cisco Unified Communications Manager*
- *Cisco TAPI Installation Guide for Cisco Unified Communications Manager*
- *Administration Guide for Cisco Unified Communications Manager*

Step 2 Verify that the following Cisco Unified Communications Manager security features are installed (if not installed, install and configure these features):

- Verify that you installed the CTL Client and the CTL file has run, so the CTL file is created.

- Verify that you installed the CTL provider service and that the service is activated.
- Verify that you installed the CAPF service and that the service is activated. If necessary, update CAPF service parameters.
  Tip The CAPF service must run for the Cisco CTL Client to include the CAPF certificate in the CTL file. If you updated these parameters when you used CAPF for the phones, you do not need to update the parameters again.
- Verify that the cluster security mode is set to Mixed Mode. (Cluster security mode configures the security capability for your standalone server or cluster.)
  Tip The CTI/JTAPI/TAPI application cannot access the CTL file if the cluster security mode does not equal Mixed Mode.

See the *Administration Guide for Cisco Unified Communications Manager* for more information.

Step 3 If you want CTIManager and the application to use a TLS connection, add the application user or end users to the Standard CTI Secure Connection user group.
Tip A CTI application can be assigned to either an application user or an end user, but not both.

Step 4 If you want to use SRTP, add the application user or end user to the Standard CTI Allow Reception of SRTP Key Material user group.
The user must already exist in the Standard CTI Enabled and Standard CTI Secure Connection user group. The application or end user cannot receive SRTP session keys if it does not exist in these three groups. For more information, see topics related to role configuration in the *Administration Guide for Cisco Unified Communications Manager* .

Note Cisco Unified Communications Manager Assistant, Cisco QRT, and Cisco Web Dialer do not support encryption. CTI clients that connect to the CTIManager service may support encryption if the client sends voice packets.

Step 5 Configure the Application User CAPF Profile or End User CAPF Profile in Cisco Unified Communications Manager Administration.

Step 6 Enable the corresponding security-related parameters in the CTI/JTAPI/TAPI application.

Related Topics

Update CAPF Service Parameters, on page 130
Add Application and End Users to Security-Related Users Groups, on page 210
CAPF Functions for CTI, JTAPI, and TAPI Applications, on page 208
Set Up Application User or End User CAPF Profile, on page 213
CAPF Settings, on page 214
Set Up JTAPI/TAPI Security-Related Service Parameters, on page 217

Add Application and End Users to Security-Related Users Groups

The Standard CTI Secure Connection user group and the Standard CTI Allow Reception of SRTP Key Material user group display in Cisco Unified Communications Manager Administration by default. You cannot delete these groups.

To secure the user connection to CTIManager, you must add the application user or end users to the Standard CTI Secure Connection user group. You can assign a CTI application to either an application user or an end user, but not both.

If you want the application and CTIManager to secure the media streams, you must add the application user or end users to the Standard CTI Allow Reception of SRTP Key Material user group.

Before the application and end user can use SRTP, the user must exist in the Standard CTI Enabled and Standard CTI Secure Connection user groups, which serve as a baseline configuration for TLS. SRTP connections require TLS. After the user exists in these groups, you can add the user to the Standard CTI Allow Reception of SRTP Key Material user group. For an application to receive SRTP session keys, the application or end user must exist in three groups: Standard CTI Enabled, Standard CTI Secure Connection, and Standard CTI Allow Reception of SRTP Key Material.

Because Cisco Unified Communications Manager Assistant, Cisco QRT, and Cisco Web Dialer do not support encryption, you do not need to add the application users, CCMQRTSecureSysUser, IPMASecureSysUser, and the WDSecureSysUser, to the Standard CTI Allow Reception of SRTP Key Material user group.

Tip For information on deleting an application or end user from a user group, refer to the *Administration Guide for Cisco Unified Communications Manager*. For information about security-related settings in the **Role Configuration** window, refer to the *Administration Guide for Cisco Unified Communications Manager*.

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **User Management** > **User Groups**.

Step 2 To display all user groups, click **Find**.

Step 3 Depending on what you want to accomplish, perform one of the following tasks:

a) Verify that the application or end users exist in the Standard CTI Enabled group.

b) To add an application user or end users to the Standard CTI Secure Connection user group, click the **Standard CTI Secure Connection** link.

c) To add an application user or end users to the Standard CTI Allow Reception of SRTP Key Material user group, click the **Standard CTI Allow Reception of SRTP Key Material** link.

Step 4 To add an application user to the group, perform Step 5, on page 211 through Step 7, on page 211.

Step 5 Click the **Add Application Users to Group** button.

Step 6 To find an application user, specify the search criteria; then, click **Find**.
Clicking Find without specifying search criteria displays all available options.

Step 7 Check the check boxes for the application users that you want to add to the group; then, click **Add Selected**.
The users display in the **User Group** window.

Step 8 To add end users to the group, perform Step 9, on page 211 through Step 11, on page 211.

Step 9 Click the **Add Users to Group** button.

Step 10 To find an end user, specify the search criteria; then, click **Find**.
Clicking Find without specifying search criteria displays all available options.

Step 11 Check the check boxes for the end users that you want to add to the group; then, click **Add Selected**.
The users display in the **User Group** window.

Related Topics

Where to Find More Information About CTI, JTAPI, and TAPI Authentication, on page 218

Certificate Authority Proxy Function Service Activation

Cisco Unified Communications Manager does not automatically activate the Certificate Authority Proxy Function service in Cisco Unified Serviceability.

To use the CAPF functionality, you must activate this service on the first node.

If you did not activate this service before you installed and configured the Cisco CTL Client, you must update the CTL file.

After you activate the Cisco Certificate Authority Proxy Function service, CAPF automatically generates a key pair and certificate that is specific for CAPF. The CAPF certificate, which the Cisco CTL Client copies to your standalone server or all server(s) in the cluster, uses the .0 extension. To verify that the CAPF certificate exists, display the CAPF certificate at the Cisco Unified Communications Operating System GUI.

Related Topics

Update CTL File, on page 83

Update CAPF Service Parameters

The CAPF Service Parameter window provides information on the number of years that the certificate is valid, the maximum number of times that the system retries to generate the key, and so on

For the CAPF service parameters to display as Active in Cisco Unified Communications Manager Administration, you must activate the Certificate Authority Proxy Function service in Cisco Unified Serviceability.

Tip If you updated the CAPF service parameters when you used CAPF for the phones, you do not need to update the service parameters again.

To update the CAPF service parameters, perform the following procedure:

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **System** > **Service Parameters**.

Step 2 From the Server drop-down list box, choose the server.

Tip You must choose the first node in the cluster.

Step 3 From the Service drop-down list box, choose the Cisco Certificate Authority Proxy Function service. Verify that the word “Active” displays next to the service name.

Step 4 Update the CAPF service parameters, as described in the help. To display help for the CAPF service parameters, click the question mark or the parameter name link.

Step 5 For the changes to take effect, restart the Cisco Certificate Authority Proxy Function service in Cisco Unified Serviceability.

Related Topics

Where to Find More Information About CTI, JTAPI, and TAPI Authentication, on page 218

Find Application User or End User CAPF Profile

To find an application or end user CAPF profile, perform the following procedure:

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose one of the following options, depending on which profile you want to access:

a) **User Management** > **Application User CAPF Profile**

b) **User Management** > **End User CAPF Profile**

The Find and List window displays. Records from an active (prior) query may also display in the window.

Step 2 To find all records in the database, ensure the dialog box is empty; go to Step 3, on page 213.
To filter or search records

- From the first drop-down list box, choose a search parameter

a) From the second drop-down list box, choose a search pattern.

b) Specify the appropriate search text, if applicable.

Note To add additional search criteria, click the + button. When you add criteria, the system searches for a record that matches all criteria that you specify. To remove criteria, click the – button to remove the last added criterion or click the **Clear Filter** button to remove all added search criteria.

Step 3 Click **Find**.
All matching records display. You can change the number of items that display on each page by choosing a different value from the Rows per Page drop-down list box.

Step 4 From the list of records that display, click the link for the record that you want to view.

Note To reverse the sort order, click the up or down arrow, if available, in the list header.

The window displays the item that you choose.

Related Topics

Where to Find More Information About CTI, JTAPI, and TAPI Authentication, on page 218

Set Up Application User or End User CAPF Profile

Use Table 19: Application and End User CAPF Profile Configuration Settings , on page 215 as a reference when you install/upgrade/troubleshoot locally significant certificates for JTAPI/TAPI/CTI applications.

Tip Cisco recommends that you configure Application User CAPF Profiles before you configure End User CAPF Profiles.

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose one of the following options:

a) **User Management** > **Application User CAPF Profile**.

b) **User Management** > **End User CAPF Profile**.
The **Find and List** window displays.

Step 2 Perform one of the following tasks:

a) To add a new CAPF profile, click **Add New** in the Find window. (You can also display a profile and then click **Add New**.) The configuration window displays with the default settings for each field.

b) To copy an existing profile, locate the appropriate profile and click the Copy icon for that record in the Copy column. (You can also display a profile and then click **Copy**.) The configuration window displays with the settings from the displayed profile.

c) To update an existing entry, locate and display the appropriate profile. The configuration window displays with the current settings.

Step 3 Enter the appropriate settings as described in Table 19: Application and End User CAPF Profile Configuration Settings , on page 215.

Step 4 Click **Save**.

Step 5 Repeat the procedure for each application and end user that you want to use security.

What to Do Next

If you configured the CCMQRTSecureSysUser, IPMASecureSysUser, or WDSecureSysUser in the Application User CAPF Profile Configuration window, you must configure service parameters.

Related Topics

Find Application User or End User CAPF Profile, on page 213
Set Up JTAPI/TAPI Security-Related Service Parameters, on page 217
Where to Find More Information About CTI, JTAPI, and TAPI Authentication, on page 218

CAPF Settings

The following table describes the CAPF settings in the **Application User CAPF Profile Configuration** and **End User CAPF Profile Configuration** windows.

Table 19: Application and End User CAPF Profile Configuration Settings

Setting	Description
Application User	From the drop-down list box, choose the application user for the CAPF operation.This setting shows configured application users. This setting does not display in the End User CAPF Profile window.
End User ID	From the drop-down list box, choose the end user for the CAPF operation. This setting shows configured end users. This setting does not display in the Application User CAPF Profile window.
Instance ID	Enter 1-128 alphanumeric characters (a-zA-Z0-9). The Instance ID identifies the user for the certificate operation. You can configure multiple connections (instances) of an application.To secure the connection between the application and CTIManager, ensure that each instance that runs on the application PC (for end users) or server (for application users) has a unique certificate. This field relates to the CAPF Profile Instance ID for Secure Connection to CTIManager service parameter that supports web services and applications.
Certificate Operation	From the drop-down list box, choose one of the following options: • **No Pending Operation—**Displays when no certificate operation is occurring. (default setting) • **Install/Upgrade—**Installs a new or upgrades an existing locally significant certificate for the application.
Authentication Mode	The authentication mode for the Install/Upgrade certificate operation specifies By Authentication String, which means CAPF installs/upgrades or troubleshoots a locally significant certificate only when the user/administrator enters the CAPF authentication string in the JTAPI/TSP Preferences window.
Authentication String	Manually enter a unique string or generate a string by clicking the Generate String button. Ensure that the string contains 4 to 10 digits. To install or upgrade a locally significant certificate, the administrator must enter the authentication string in the JTAPI/TSP preferences GUI on the application PC. This string supports one-time use only; after you use the string for the instance, you cannot use it again.
Generate String	If you want CAPF to automatically generate an authentication string, click this button. The 4- to10-digit authentication string displays in the Authentication String field.

Setting	Description
Key Order	This field specifies the sequence of the key for CAPF. Select one of the following values from the drop-down list: • **RSA Only** • **EC Only** • **EC Preferred, RSA Backup** **Note** When you add a phone based on the value in **Key Order**, **RSA Key Size**, and **EC Key Size** fields, the device security profile is associated with the phone. If you select the **EC Only** value with the **EC Key Size** value of 256 bits then the device security profile appends with **EC-256** value.
RSA Key Size (Bits)	From the drop-down list box, choose one of the these values—**512**, **1024**, **2048, 3072**, or **4096**.
EC Key Size (Bits)	From the drop-down list box, choose one of the these values—**256**, **384**, or **521**.
Operation Completes by	This field, which supports all certificate operations, specifies the date and time by which you must complete the operation. The values that display apply for the first node. Use this setting with the CAPF Operation Expires in (days) enterprise parameter, which specifies the default number of days in which the certificate operation must be completed. You can update this parameter any time.
Certificate Operation Status	This field displays the progress of the certificate operation, such as pending, failed, or successful. You cannot change the information that displays in this field.

Related Topics

CAPF System Interactions and Requirements, on page 128
Set Up JTAPI/TAPI Security-Related Service Parameters, on page 217
Where to Find More Information, on page 32

Delete Application User CAPF or End User CAPF Profile

This section describes how to delete an Application User CAPF Profile or End User CAPF Profile from the Cisco Unified Communications Manager database.

Before You Begin

Before you can delete an Application User CAPF Profile or End User CAPF Profile from Cisco Unified Communications Manager Administration, you must apply a different profile to the devices or delete all

devices that use the profile. To find out which devices use the profile, choose **Dependency Records** from the **Related Links** drop-down list box in the **Security Profile Configuration** window and click **Go**.

If the dependency records feature is not enabled for the system, the dependency records summary window displays a message that shows the action that you can take to enable the dependency records; the message also displays information about high CPU consumption that is related to the dependency records feature. For more information about dependency records, refer to the *System Configuration Guide for Cisco Unified Communications Manager*.

Procedure

Step 1 Find the Application User CAPF Profile or End User CAPF Profile.

Step 2 Perform one of the following tasks:

a) To delete multiple profiles, check the check boxes next to the appropriate check box in the **Find and List** window; then, click **Delete Selected**. You can delete all configurable records for this selection by clicking **Select All** and then clicking **Delete Selected**.

b) To delete a single profile, check the check box next to the appropriate profile In the **Find and List** window; then, click **Delete Selected**.

Step 3 When prompted to confirm the delete operation, click **OK** to delete or **Cancel** to cancel the delete operation.

Related Topics

Find Application User or End User CAPF Profile, on page 213
Where to Find More Information About CTI, JTAPI, and TAPI Authentication, on page 218

Set Up JTAPI/TAPI Security-Related Service Parameters

After you configure the Application User CAPF Profile or End User CAPF Profile, you must configure the following service parameters for Cisco IP Manager Assistant service:

- CTIManager Connection Security Flag
- CAPF Profile Instance ID for Secure Connection to CTIManager

To access the service parameters, perform the following procedure:

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **System** > **Service Parameters**.

Step 2 From the **Server** drop-down list box, choose the server where the Cisco IP Manager Assistant service is activated.

Step 3 From the **Service** drop-down list box, choose the **Cisco IP Manager Assistant** service.

Step 4 After the parameters display, locate the CTIManager Connection Security Flag and CAPF Profile Instance ID for Secure Connection to CTIManager parameters.

Step 5 Update the parameters, as described in the help that displays when you click the question mark or parameter name link.

Step 6 Click **Save**.

Step 7 Repeat the procedure on each server where the service is activated.

View Certificate Operation Status for Application or End User

You can view the certificate operation status in a specific Application User or **End User CAPF Profile configuration** window (not the Find/List window) or in the **JTAPI/TSP Preferences** GUI window.

Where to Find More Information About CTI, JTAPI, and TAPI Authentication

Related Topics

Authentication for CTI, JTAPI, and TAPI Applications, on page 206
Encryption for CTI, JTAPI, and TAPI Applications, on page 207
CAPF Functions for CTI, JTAPI, and TAPI Applications, on page 208
CAPF System Interactions and Requirements for CTI, JTAPI, and TAPI Applications, on page 209
Securing CTI, JTAPI, and TAPI, on page 209
About Certificate Authority Proxy Function, on page 125
CAPF Settings, on page 214
Set Up JTAPI/TAPI Security-Related Service Parameters, on page 217
View Certificate Operation Status for Application or End User, on page 218

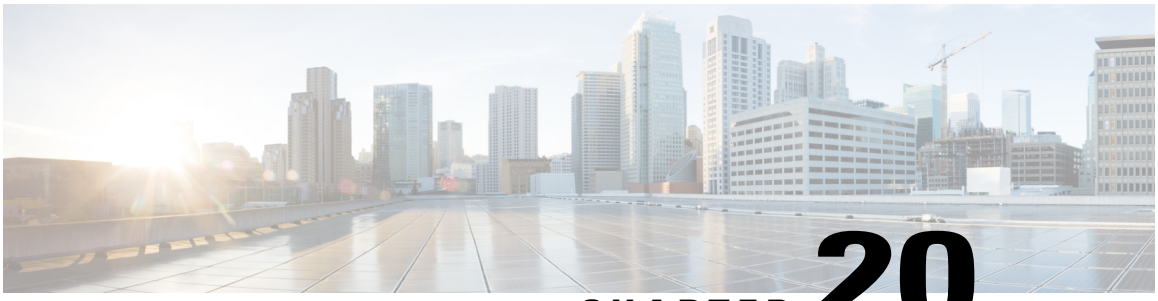

CHAPTER 20

Certificate Revocation/Expiry Status Verification

This chapter provides a brief overview of how to check the status of the certificates generated for sessions in Cisco Unified Communications Manager Administration. The certificate service periodically checks for long lived sessions between Cisco Unified Communications Manager and other services. Long lived sessions have duration of six hours or more. The check is performed for the following long lived sessions:

- CTI Connections with JTAPI /TAPI applications.
- LDAP Connection between Cisco Unified Communications Manager and SunOne servers.
- IPSec Connections

It also describes how to configure the enterprise parameter for verifying certificate revocation and expiry.

The enterprise parameter **Certificate Revocation and Expiry** allows you to control the certificate validation checks. The revocation and expiry check parameter is enabled on the **Enterprise Parameter** page of Cisco Unified Communications Manager. The certificate expiry for the long lived sessions is not verified, when the enterprise parameter value is disabled.

The certificate revocation service is active for LDAP and IPSec connections, when the **Enable Revocation** is selected on the Operating System Administration of Cisco Unified Communications Manager and revocation and expiry check parameter is set to enabled. The periodicity of the check for IPSec connections are based on the **Check Every** value. The revocation check for the certificate is not performed, if the **Enable Revocation** check box is unchecked.

- Certificate Revocation/Expiry Status Verification, page 219
- Verify Certificate Status, page 220
- Support for Delegated Trust Model in OCSP Response, page 220

Certificate Revocation/Expiry Status Verification

This chapter provides a brief overview of how to check the status of the certificates generated for sessions in Cisco Unified Communications Manager Administration. The certificate service periodically checks for long lived sessions between Cisco Unified Communications Manager and other services. Long lived sessions have duration of six hours or more. The check is performed for the following long lived sessions:

- CTI Connections with JTAPI /TAPI applications.

- LDAP Connection between Cisco Unified Communications Manager and SunOne servers.
- IPSec Connections

It also describes how to configure the enterprise parameter for verifying certificate revocation and expiry.

The enterprise parameter **Certificate Revocation and Expiry** allows you to control the certificate validation checks. The revocation and expiry check parameter is enabled on the **Enterprise Parameter** page of Cisco Unified Communications Manager. The certificate expiry for the long lived sessions is not verified, when the enterprise parameter value is disabled.

The certificate revocation service is active for LDAP and IPSec connections, when the **Enable Revocation** is selected on the Operating System Administration of Cisco Unified Communications Manager and revocation and expiry check parameter is set to enabled. The periodicity of the check for IPSec connections are based on the **Check Every** value. The revocation check for the certificate is not performed, if the **Enable Revocation** check box is unchecked.

Verify Certificate Status

The following procedure provides the tasks that you perform to enable or disable the certificate validity check.

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **System > Enterprise Parameters**
The Enterprise Parameters Configuration window displays.

Step 2 Under **Certificate Revocation and Expiry** section,

a) From the **Certificate Validity Check** drop-down list box, select Enabled to enable the validity check.
b) Enter the **Validity Check Frequency (hours)** value.
The default value is 24 hours. The minimum value is 6 hours and the maximum value is 576 hours.

Step 3 Click Save.

Step 4 Click Apply Config.
The Apply Configuration Information dialog displays.

Step 5 Click Ok.
The timers for DIRSYNC and CTI are restarted.

Support for Delegated Trust Model in OCSP Response

Online Certificate Status Protocol (OCSP) allows a device to obtain real-time information about the status of a given certificate. Examples of certificate status are Good, Revoked, and Unknown.

Cisco Unified Communications Manager uses OCSP to validate third-party certificates that are uploaded into the Cisco Unified Communications Manager trust store. Cisco Unified Communications Manager requires an OCSP Responder URL to connect to the OCSP responder server over HTTP. It sends an HTTP request to the responder to validate a certificate.

Cisco Unified Communications Manager currently supports the Trusted Responder Model of OCSP, where the OCSP response is signed by a self-signed certificate of the OCSP server. This self-signed certificate is uploaded to the trust store before initiating an OCSP request. This certificate is used to verify the signature on the OCSP response.

Cisco Unified Communications Manager 11.0 and later support the Delegated Trust Model (DTM) of the OCSP responder, where the OCSP responses are no longer approved by the self-signed certificate but are issued by a Certificate Authority (Root CA or Subordinate CA). The CA certificate validates the OCSP responder certificates. The CA certificate that issued the OCSP responder certificate in Cisco Unified Communications Manager trust store is required, instead of OCSP response signing certificate. When you receive an OCSP response, the CA's certificate is used to validate the signature in the response.

Note In case of a DTM execution failure, the OCSP response is verified using the self-signed certificate.

PART V

Security for SRST References, Trunks, and Gateways

- Secure Survivable Remote Site Telephony (SRST) Reference, page 225
- Encryption Setup for Gateways and Trunks, page 231
- SIP Trunk Security Profile Setup, page 239
- Digest Authentication Setup for SIP Trunks, page 251
- Cisco Unified Mobility Advantage Server Security Profile Setup, page 257
- FIPS 140-2 Mode Setup, page 263
- Cisco V.150 Minimum Essential Requirements (MER), page 269

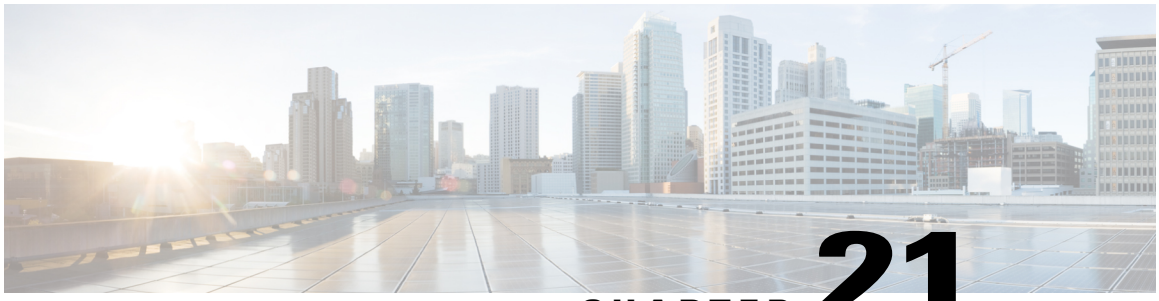

CHAPTER 21

Secure Survivable Remote Site Telephony (SRST) Reference

This chapter provides information about SRST references.

- Securing SRST, page 225
- Securing SRST Tips, page 226
- Set Up Secure SRST, page 227
- Set Up Secure SRST References, page 227
- SRST Reference Security Settings, page 229
- Delete Security From SRST Reference, page 230
- SRST Certificate Deletion From Gateway, page 230
- Where to Find More Information About Securing SRST, page 230

Securing SRST

A SRST-enabled gateway provides limited call-processing tasks if the Cisco Unified Communications Manager cannot complete the call.

Secure SRST-enabled gateways contain a self-signed certificate. After you perform SRST configuration tasks in Cisco Unified Communications Manager Administration, Cisco Unified Communications Manager uses a TLS connection to authenticate with the Certificate Provider service in the SRST-enabled gateway. Cisco Unified Communications Manager then retrieves the certificate from the SRST-enabled gateway and adds the certificate to the Cisco Unified Communications Manager database.

After you reset the dependent devices in Cisco Unified Communications Manager Administration, the TFTP server adds the SRST-enabled gateway certificate to the phone cnf.xml file and sends the file to the phone. A secure phone then uses a TLS connection to interact with the SRST-enabled gateway.

Tip The phone configuration file only contains a certificate from a single issuer. Consequently, the system does not support HSRP.

Securing SRST Tips

Ensure that the following criteria are met to secure the connection between the secure phone and the SRST-enabled gateway:

- The SRST reference contains a self-signed certificate.
- You configured Mixed Mode through the Cisco CTL Client.
- You configured the phone for authentication or encryption.
- You configured the SRST reference in Cisco Unified Communications Manager Administration.
- You reset the SRST-enabled gateway and the dependent phones after the SRST configuration.

Note Cisco Unified Communications Manager provides the PEM format files that contain phone certificate information to the SRST-enabled gateway.

Note For LSC authentication, download the CAPF root certificate (CAPF.der). This root certificate allows the secure SRST to verify the phone LSC during the TLS handshake.

- When the cluster security mode equals nonsecure, the device security mode remains nonsecure in the phone configuration file, even though Cisco Unified Communications Manager Administration may indicate that the device security mode is authenticated or encrypted. Under these circumstances, the phone attempts nonsecure connections with the SRST-enabled gateway and Cisco Unified Communications Manager.

  Note Cluster security mode configures the security capability for your standalone server or a cluster.

- When the cluster security mode equals nonsecure, the system ignores the security-related configuration; for example, the device security mode, the Is SRST Secure? check box, and so on. The configuration does not get deleted in from the database, but security is not provided.
- The phone attempts a secure connection to the SRST-enabled gateway only when the cluster security mode equals Mixed Mode, the device security mode in the phone configuration file is set to authenticated or encrypted, the Is SRST Secure? check box is checked in the **SRST Configuration** window, and a valid SRST-enabled gateway certificate exists in the phone configuration file.
- If you configured secure SRST references in a previous Cisco Unified Communications Manager release, the configuration automatically migrates during the upgrade.
- If phones in encrypted or authenticated mode fail over to SRST, and, during the connection with SRST, the cluster security mode switches from Mixed Mode to Nonsecure Mode, these phones will not fall back to Cisco Unified Communications Manager automatically. You must power down the SRST router to force these phones to reregister to Cisco Unified Communications Manager. After phones fall back

to Cisco Unified Communications Manager, you can power up SRST, and failover and fallback will be automatic again.

Set Up Secure SRST

The following procedure provides the tasks to perform the SRST configuration process for security.

Procedure

Step 1 Verify that you performed all necessary tasks on the SRST-enabled gateway, so the device supports Cisco Unified Communications Manager and security.
For more information, see the *Cisco IOS SRST Version System Administrator Guide* that supports this version of Cisco Unified Communications Manager.

Step 2 Verify that you performed all necessary tasks to install and configure the Cisco CTL Client.

Step 3 Verify that a certificate exists in the phone.
For more information, refer to the Cisco Unified IP Phone documentation for your phone model.

Step 4 Verify that you configured the phones for authentication or encryption.

Step 5 Configure the SRST reference for security, which includes enabling the SRST reference in the Device Pool Configuration window.

Step 6 Reset the SRST-enabled gateway and phones.

Related Topics

Apply Phone Security Profile, on page 114
Set Up Secure SRST References, on page 227

Set Up Secure SRST References

Consider the following information before you add, update, or delete the SRST reference in Cisco Unified Communications Manager Administration:

- Adding a Secure SRST Reference—The first time that you configure the SRST reference for security, you must configure all settings that are described in Table 20: Configuration Settings for Secure SRST References , on page 229.
- Updating a Secure SRST Reference—Performing SRST updates in Cisco Unified Communications Manager Administration does not automatically update the SRST-enabled gateway certificate. To update the certificate, you must click the **Update Certificate** button; after you click the button, the contents of the certificate display, and you must accept or reject the certificate. If you accept the certificate, Cisco Unified Communications Manager replaces the SRST-enabled gateway certificate in the trust folder on the Cisco Unified Communications Manager server or on each Cisco Unified Communications Manager server in the cluster.

- Deleting a Secure SRST Reference—Deleting a secure SRST reference removes the SRST-enabled gateway certificate from the Cisco Unified Communications Manager database and the cnf.xml file in the phone.
  For information on how to delete SRST references, refer to the *Administration Guide for Cisco Unified Communications Manager* .

To configure a secure SRST reference, perform the following procedure:

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **System** > **SRST**.
The **Find and List** window displays.

Step 2 Perform one of the following tasks:

a) To add a new SRST reference, click **Add New** in the **Find** window. (You can also display a profile and then click **Add New**.) The configuration window displays with the default settings for each field.

b) To copy an existing SRST reference, locate the appropriate SRST reference as described in the *Administration Guide for Cisco Unified Communications Manager*, and click the **Copy** icon for that record in the Copy column. (You can also display a profile and then click **Copy**.) The configuration window displays with the configured settings.

c) To update an existing SRST reference, locate the appropriate SRST reference as described in the *Administration Guide for Cisco Unified Communications Manager*.
The configuration window displays with the current settings.

Step 3 Enter the security-related settings as described in Table 20: Configuration Settings for Secure SRST References , on page 229.
For descriptions of additional SRST reference configuration settings, refer to the *Administration Guide for Cisco Unified Communications Manager*.

The **Find and List** window displays.

Step 4 After you check the Is SRST Secure? check box, a dialog box displays a message that you must download the SRST certificate by clicking the Update Certificate button. Click **OK**.

Step 5 Click **Save**.

Step 6 To update the SRST-enabled gateway certificate in the database, click the **Update Certificate** button.

Tip This button displays only after you check the Is SRST Secure? check box and click **Save**.

Step 7 The fingerprint for the certificate displays. To accept the certificate, click **Save**.

Step 8 Click **Close**.

Step 9 In the SRST Reference Configuration window, click **Reset**.

What to Do Next

Verify that you enabled the SRST reference in the **Device Pool Configuration** window.

Related Topics

Where to Find More Information About Securing SRST, on page 230

SRST Reference Security Settings

The following table describes the available settings for secure SRST references in Cisco Unified Communications Manager Administration.

Table 20: Configuration Settings for Secure SRST References

Setting	Description
Is SRST Secure?	After you verify that the SRST-enabled gateway contains a self-signed certificate, check this check box. After you configure the SRST and reset the gateway and dependent phones, the Cisco CTL Provider service authenticates to the Certificate Provider service on the SRST-enabled gateway. The Cisco CTL Client retrieves the certificate from the SRST-enabled gateway and stores the certificate in the Cisco Unified Communications Manager database. **Tip** To remove the SRST certificate from the database and phone, uncheck this check box, click **Save**, and reset the dependent phones.
SRST Certificate Provider Port	This port monitors requests for the Certificate Provider service on the SRST-enabled gateway. Cisco Unified Communications Manager uses this port to retrieve the certificate from the SRST-enabled gateway. The Cisco SRST Certificate Provider default port equals 2445. After you configure this port on the SRST-enabled gateway, enter the port number in this field. **Tip** You may need to configure a different port number if the port is currently used or if you use a firewall and you cannot use the port within the firewall.The port number must exist in the range of 1024 and 49151; otherwise, the following message displays: Port Numbers can only contain digits.
Update Certificate	**Tip** This button displays only after you check the Is SRST Secure? check box and click Save. After you click this button, the Cisco CTL Client replaces the existing SRST-enabled gateway certificate that is stored in the Cisco Unified Communications Manager database, if a certificate exists in the database. After you reset the dependent phones, the TFTP server sends the cnf.xml file (with the new SRST-enabled gateway certificate) to the phones.

Related Topics

Securing SRST Tips, on page 226
Where to Find More Information, on page 32

Delete Security From SRST Reference

To make the SRST reference nonsecure after you configure security, uncheck the Is SRTS Secure? check box in the SRST Configuration window. A message states that you must turn off the credential service on the gateway.

SRST Certificate Deletion From Gateway

If the SRST certificate no longer exists in the SRST-enabled gateway, you must remove the SRST certificate from the Cisco Unified Communications Manager database and the phone.

To perform this task, uncheck the **Is SRST Secure?** check box and click **Update** in the SRST Configuration window; then, click **Reset Devices**.

Where to Find More Information About Securing SRST

Related Topics

Securing SRST, on page 225
Securing SRST Tips, on page 226
Set Up Secure SRST, on page 227
SRST Reference Security Settings, on page 229
Delete Security From SRST Reference, on page 230
SRST Certificate Deletion From Gateway, on page 230

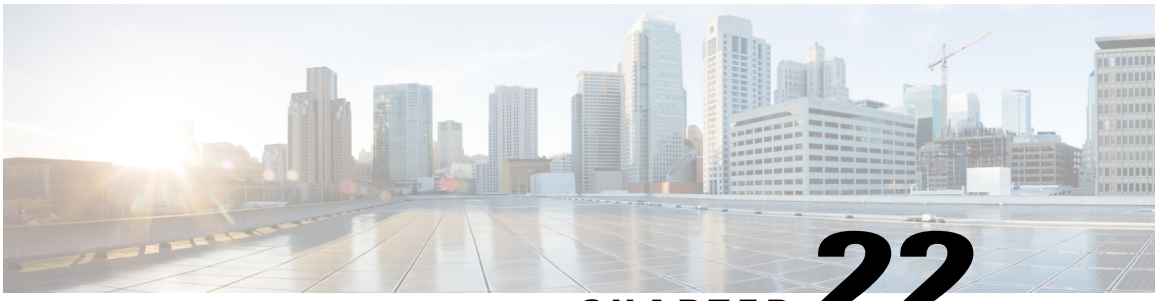

CHAPTER 22

Encryption Setup for Gateways and Trunks

This chapter provides information about encryption setup for gateways and trunks.

- Cisco IOS MGCP Gateway Encryption, page 231
- H.323 Gateway and H.323/H.225/H.245 Trunk Encryption, page 232
- SIP Trunk Encryption, page 233
- Set Up Secure Gateways and Trunks, page 234
- IPSec Setup Within Network Infrastructures, page 235
- IPSec Setup Between Cisco Unified Communications Manager and Gateway or Trunks, page 235
- Allow SRTP Using Cisco Unified Communications Manager Administration, page 236
- Where to Find More Information About Gateway and Trunk Encryption, page 236

Cisco IOS MGCP Gateway Encryption

Cisco Unified Communications Manager supports gateways that use the MGCP SRTP package, which the gateway uses to encrypt and decrypt packets over a secure RTP connection. The information that gets exchanged during call setup determines whether the gateway uses SRTP for a call. If the devices support SRTP, the system uses a SRTP connection. If at least one device does not support SRTP, the system uses a RTP connection. SRTP-to-RTP fallback (and vice versa) may occur for transfers from a secure device to a non-secure device, conferencing, transcoding, music on hold, and so on.

When the system sets up an encrypted SRTP call between two devices, Cisco Unified Communications Manager generates a master encryption key and salt for secure calls and sends them to the gateway for the SRTP stream only. Cisco Unified Communications Manager does not send the key and salt for SRTCP streams, which the gateway also supports. These keys get sent to the gateway over the MGCP signaling path, which you should secure by using IPSec. Although Cisco Unified Communications Manager does not recognize whether an IPSec connection exists, the system sends the session keys to the gateway in the clear if IPSec is not configured. Confirm that the IPSec connection exists, so the session keys get sent through a secure connection.

Tip If the MGCP gateway, which is configured for SRTP, is involved in a call with an authenticated device, for example, an authenticated phone that is running SCCP, a shield icon displays on the phone because Cisco Unified Communications Manager classifies the call as authenticated. Cisco Unified Communications Manager classifies a call as encrypted if the SRTP capabilities for the devices are successfully negotiated for the call. If the MGCP gateway is connected to a phone that can display security icons, the phone displays the lock icon when the call is encrypted.

H.323 Gateway and H.323/H.225/H.245 Trunk Encryption

H.323 gateways and gatekeeper or non-gatekeeper controlled H.225/H.323/H.245 trunks that support security can authenticate to Cisco Unified Communications Manager if you configure an IPSec association in the Cisco Unified Communications Operating System. For information on creating an IPSec association between Cisco Unified Communications Manager and these devices, refer to the *Administration Guide for Cisco Unified Communications Manager* .

The H.323, H.225, and H.245 devices generate the encryption keys. These keys get sent to Cisco Unified Communications Manager through the signaling path, which you secure through IPSec. Although Cisco Unified Communications Manager does not recognize whether an IPSec connection exists, the session keys get sent in the clear if IPSec is not configured. Confirm that the IPSec connection exists, so the session keys get sent through a secure connection.

In addition to configuring an IPSec association, you must check the SRTP Allowed check box in the device configuration window in Cisco Unified Communications Manager Administration; for example, the H.323 Gateway, the H.225 Trunk (Gatekeeper Controlled), the Inter-Cluster Trunk (Gatekeeper Controlled), and the Inter-Cluster Trunk (Non-Gatekeeper Controlled) configuration windows. If you do not check this check box, Cisco Unified Communications Manager uses RTP to communicate with the device. If you check the check box, Cisco Unified Communications Manager allows secure and nonsecure calls to occur, depending on whether SRTP is configured for the device.

Caution If you check the SRTP Allowed check box in Cisco Unified Communications Manager Administration, Cisco strongly recommends that you configure IPSec, so security-related information does not get sent in the clear.

Cisco Unified Communications Manager does not confirm that you configured the IPSec connection correctly. If you do not configure the connection correctly, security-related information may get sent in the clear.

If the system can establish a secure media or signaling path and if the devices support SRTP, the system uses a SRTP connection. If the system cannot establish a secure media or signaling path or if at least one device does not support SRTP, the system uses a RTP connection. SRTP-to-RTP fallback (and vice versa) may occur for transfers from a secure device to a non-secure device, conferencing, transcoding, music on hold, and so on.

Tip If the call uses pass-through capable MTP, if the audio capabilities for the device match after region filtering, and if the MTP Required check box is not checked for any device, Cisco Unified Communications Manager classifies the call as secure. If the MTP Required check box is checked, Cisco Unified Communications Manager disables audio pass-through for the call and classifies the call as nonsecure. If no MTP is involved in the call, Cisco Unified Communications Manager may classify the call as encrypted, depending on the SRTP capabilities of the devices.

For SRTP-configured devices, Cisco Unified Communications Manager classifies a call as encrypted if the SRTP Allowed check box is checked for the device and if the SRTP capabilities for the devices are successfully negotiated for the call. If the preceding criteria are not met, Cisco Unified Communications Manager classifies the call as nonsecure. If the device is connected to a phone that can display security icons, the phone displays the lock icon when the call is encrypted.

Cisco Unified Communications Manager classifies outbound faststart calls over a trunk or gateway as nonsecure. If you check the SRTP Allowed check box in Cisco Unified Communications Manager Administration, Cisco Unified Communications Manager disables the **Enable Outbound FastStart** check box.

Cisco Unified Communications Manager allows some types of gateways and trunks to transparently pass through the shared secret (Diffie-Hellman key) and other H.235 data between two H.235 endpoints, so the two endpoints can establish a secure media channel.

To enable the passing through of H.235 data, check the **H.235 pass through allowed** check box in the configuration settings of the following trunks and gateways:

- H.225 Trunk
- ICT Gatekeeper Control
- ICT non-Gatekeeper Control
- H.323 Gateway

For information about configuring trunks and gateways, see the *Administration Guide for Cisco Unified Communications Manager* .

SIP Trunk Encryption

SIP trunks can support secure calls both for signaling as well as media; TLS provides signaling encryption and SRTP provides media encryption.

To configure signaling encryption for the trunk, choose the following options when you configure the SIP trunk security profile (in the **System** > **Security Profile** > **SIP Trunk Security Profile** window):

- From the Device Security Mode drop-down list, choose “Encrypted.”
- From the Incoming Transport Type drop-down list, choose “TLS.”
- From the Outgoing Transport Type drop-down list, choose “TLS.”

After you configure the SIP trunk security profile, apply it to the trunk (in the **Device** > **Trunk** > **SIP Trunk** configuration window).

To configure media encryption for the trunk, check the SRTP Allowed check box (also in the **DeviceTrunkSIP Trunk** configuration window).

Caution If you check this check box, Cisco strongly recommends that you use an encrypted TLS profile, so that keys and other security-related information do not get exposed during call negotiations. If you use a non-secure profile, SRTP will still work but the keys will be exposed in signaling and traces. In that case, you must ensure the security of the network between Cisco Unified Communications Manager and the destination side of the trunk.

Related Topics

Set Up Secure Gateways and Trunks

Use this procedure in conjunction with the document, *Media and Signaling Authentication and Encryption Feature for Cisco IOS MGCP Gateways*, which provides information on how to configure your Cisco IOS MGCP gateways for security.

Procedure

Step 1 Verify that you installed and configured the Cisco CTL Client; verify that the cluster security mode equals Mixed Mode.

Step 2 Verify that you configured the phones for encryption.

Step 3 Configure IPSec.

Tip You may configure IPSec in the network infrastructure, or you may configure IPSec between Cisco Unified Communications Manager and the gateway or trunk. If you implement one method to set up IPSec, you do not need to implement the other method.

Step 4 For H.323 IOS gateways and intercluster trunks, check the SRTP Allowed check box in Cisco Unified Communications Manager Administration.

The SRTP Allowed check box displays in the Trunk Configuration or **Gateway Configuration** window. For information on how to display these windows, refer to the trunk and gateway chapters in the *Administration Guide for Cisco Unified Communications Manager* .

Step 5 For SIP trunks, configure the SIP trunk security profile and apply it to the trunk(s), if you have not already done so. Also, be sure to check the "SRTP Allowed" check box in the **Device** > **Trunk** > **SIP Trunk** configuration window.

Caution If you check the "SRTP Allowed" check box, Cisco strongly recommends that you use an encrypted TLS profile, so that keys and other security-related information does not get exposed during call negotiations. If you use a non-secure profile, SRTP will still work but the keys will be exposed in signaling and traces. In that case, you must ensure the security of the network between Cisco Unified Communications Manager and the destination side of the trunk.

Step 6 Perform security-related configuration tasks on the gateway.

For more information, see *Media and Signaling Authentication and Encryption Feature for Cisco IOS MGCP Gateways*.

Related Topics

IPSec Setup Between Cisco Unified Communications Manager and Gateway or Trunks, on page 235
IPSec Setup Within Network Infrastructures, on page 235
Default Security Features, on page 47

IPSec Setup Within Network Infrastructures

This document does not describe how to configure IPSec. Instead, it provides considerations and recommendations for configuring IPSec in your network infrastructure. If you plan to configure IPSec in the network infrastructure and not between Cisco Unified Communications Manager and the device, review the following information before you configure IPSec:

- Cisco recommends that you provision IPSec in the infrastructure rather than in the Cisco Unified Communications Manager itself.
- Before you configure IPSec, consider existing IPSec or VPN connections, platform CPU impact, bandwidth implications, jitter or latency, and other performance metrics.
- Review the *Voice and Video Enabled IPSec Virtual Private Networks Solution Reference Network Design Guide*.
- Review the *Cisco IOS Security Configuration Guide, Release 12.2* (or later).
- Terminate the remote end of the IPSec connection in the secure Cisco IOS MGCP gateway.
- Terminate the host end in a network device within the trusted sphere of the network where the telephony servers exist; for example, behind a firewall, access control list (ACL), or other layer three device.
- The equipment that you use to terminate the host-end IPSec connections depends on the number of gateways and the anticipated call volume to those gateways; for example, you could use Cisco VPN 3000 Series Concentrators, Catalyst 6500 IPSec VPN Services Module, or Cisco Integrated Services Routers.
- Perform the steps in the order that is specified in the topics related to setting up secure gateways and trunks.

Caution Failing to configure the IPSEC connections and verify that the connections are active may compromise privacy of the media streams.

IPSec Setup Between Cisco Unified Communications Manager and Gateway or Trunks

For information on configuring IPSec between Cisco Unified Communications Manager and the gateways or trunks that are described in this chapter, refer to the *Administration Guide for Cisco Unified Communications Manager* .

Allow SRTP Using Cisco Unified Communications Manager Administration

The SRTP Allowed check box displays in the following configuration windows in Cisco Unified Communications Manager Administration:

- H.323 Gateway Configuration window
- H.225 Trunk (Gatekeeper Controlled) Configuration window
- Inter-Cluster Trunk (Gatekeeper Controlled) Configuration window
- Inter-Cluster Trunk (Non-Gatekeeper Controlled) Configuration window
- SIP Trunk Configuration window

To configure the SRTP Allowed check box for H.323 gateways and gatekeeper or non-gatekeeper controlled H.323/H.245/H.225 trunks or SIP trunks, perform the following procedure:

Procedure

Step 1 Find the gateway or trunk, as described in the *Administration Guide for Cisco Unified Communications Manager* .

Step 2 After you open the configuration window for the gateway/trunk, check the SRTP Allowed check box.

Caution If you check the "SRTP Allowed" check box for a SIP trunk, Cisco strongly recommends that you use an encrypted TLS profile, so keys and other security-related information are not exposed during call negotiations. If you use a non-secure profile, SRTP will still work but the keys will be exposed in signaling and traces. In that case, you must ensure the security of the network between Cisco Unified Communications Manager and the destination side of the trunk.

Step 3 Click **Save**.

Step 4 To reset the device, click **Reset**.

Step 5 Verify that you configured IPSec correctly for H323. (For SIP, make sure you configured TLS correctly.)

Related Topics

Where to Find More Information About Gateway and Trunk Encryption, on page 236

Where to Find More Information About Gateway and Trunk Encryption

Related Topics

Authentication, Integrity, and Authorization, on page 22
Encryption, on page 27
Cisco IOS MGCP Gateway Encryption, on page 231
H.323 Gateway and H.323/H.225/H.245 Trunk Encryption, on page 232
SIP Trunk Encryption, on page 233
Set Up Secure Gateways and Trunks, on page 234
IPSec Setup Within Network Infrastructures, on page 235

IPSec Setup Between Cisco Unified Communications Manager and Gateway or Trunks, on page 235

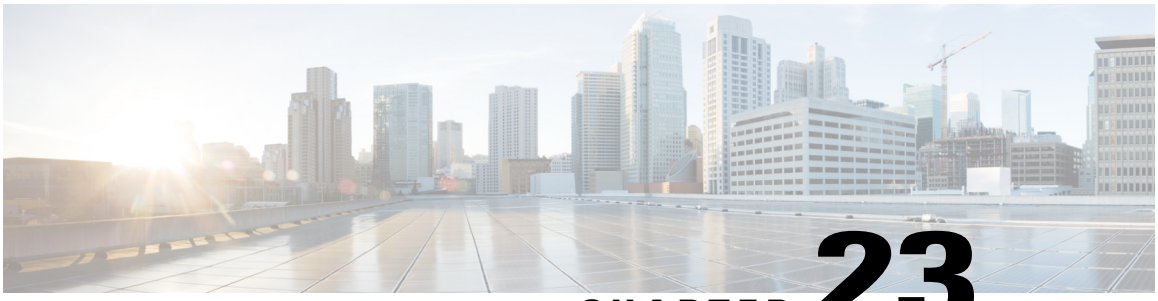

CHAPTER 23

SIP Trunk Security Profile Setup

This chapter provides information about SIP trunk security profile setup.

- About SIP Trunk Security Profile Setup, page 239
- SIP Trunk Security Profile Setup Tips, page 239
- Find SIP Trunk Security Profile, page 240
- Set Up SIP Trunk Security Profile, page 241
- SIP Trunk Security Profile Settings, page 241
- Apply SIP Trunk Security Profile, page 246
- Synchronize SIP Trunk Security Profile with SIP Trunks, page 247
- Delete SIP Trunk Security Profile, page 248
- Where to Find More Information About SIP Trunk Security Profiles, page 249

About SIP Trunk Security Profile Setup

Cisco Unified Communications Manager Administration groups security-related settings for the SIP trunk to allow you to assign a single security profile to multiple SIP trunks. Security-related settings include device security mode, digest authentication, and incoming/outgoing transport type settings. You apply the configured settings to the SIP trunk when you choose the security profile in the Trunk Configuration window.

Installing Cisco Unified Communications Manager provides a predefined, nonsecure SIP trunk security profile for autoregistration. To enable security features for a SIP trunk, configure a new security profile and apply it to the SIP trunk. If the trunk does not support security, choose a nonsecure profile.

Only security features that the SIP trunk supports display in the security profile settings window.

SIP Trunk Security Profile Setup Tips

Consider the following information when you configure SIP trunk security profiles in Cisco Unified Communications Manager Administration:

- When you are configuring a SIP trunk, you must select a security profile in the Trunk Configuration window. If the device does not support security, apply a nonsecure profile.
- You cannot delete a security profile that is currently assigned to a device.
- If you change the settings in a security profile that is already assigned to a SIP trunk, the reconfigured settings apply to all SIP trunks that are assigned that profile.
- You can rename security files that are assigned to devices. The SIP trunks that are assigned the old profile name and settings assume the new profile name and settings.
- If you configured the device security mode prior to a Cisco Unified Communications Manager 5.0 or later upgrade, Cisco Unified Communications Manager creates a profile for the SIP trunk and applies the profile to the device.

Find SIP Trunk Security Profile

To find a SIP trunk security profile, perform the following procedure:

Procedure

Step 1 Choose **System** > **Security Profile** > **SIP Trunk Security Profile**.
The **Find and List** window displays. Records from an active (prior) query may also display in the window.

Step 2 To find all records in the database, ensure the dialog box is empty; go to Step 3, on page 240.
To filter or search records

a) From the drop-down list box, choose a search parameter.
b) Then from the drop-down list box, choose a search pattern.
c) Specify the appropriate search text, if applicable.

Note To add additional search criteria, click the + button. When you add criteria, the system searches for a record that matches all criteria that you specify. To remove criteria, click the – button to remove the last added criterion or click the **Clear Filter** button to remove all added search criteria.

Step 3 Click **Find**.
All matching records display. You can change the number of items that display on each page by choosing a different value from the **Rows per Page** drop-down list box.

Step 4 From the list of records that display, click the link for the record that you want to view.

Note To reverse the sort order, click the up or down arrow, if available, in the list header.

The window displays the item that you choose.

Related Topics

Where to Find More Information About SIP Trunk Security Profiles, on page 249

Set Up SIP Trunk Security Profile

To add, update, or copy a SIP trunk security profile, perform the following procedure:

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **System** > **Security Profile** > **SIP Trunk Security Profile**.

Step 2 Perform one of the following tasks:

a) To add a new profile, click **Add New** in the **Find** window.
(You can also display a profile and then click **Add New**.)

The configuration window displays with the default settings for each field.

b) To copy an existing security profile, locate the appropriate profile and click the **Copy** icon for that record in the Copy column.
(You can also display a profile and then click **Copy**.)

The configuration window displays with the configured settings.

c) To update an existing profile, locate and display the appropriate security profile as described in Find SIP Trunk Security Profile, on page 240.
The configuration window displays with the current settings.

Step 3 Enter the appropriate settings as described in Table 21: SIP Trunk Security Profile Configuration Settings, on page 242.

Step 4 Click **Save**.

What to Do Next

After you create the security profile, apply it to the trunk.

If you configured digest authentication for SIP trunks, you must configure the digest credentials in the **SIP Realm** window for the trunk and **Application User** window for applications that are connected through the SIP trunk, if you have not already done so.

If you enabled application-level authorization for applications that are connected through the SIP trunk, you must configure the methods that are allowed for the application in the **Application User** window, if you have not already done so.

Related Topics

Apply SIP Trunk Security Profile, on page 246
Where to Find More Information About SIP Trunk Security Profiles, on page 249

SIP Trunk Security Profile Settings

The following table describes the settings for the SIP Trunk Security Profile.

Table 21: SIP Trunk Security Profile Configuration Settings

Setting	Description
Name	Enter a name for the security profile. When you save the new profile, the name displays in the **SIP Trunk Security Profile** drop-down list box in the **Trunk Configuration** window.
Description	Enter a description for the security profile. The description can include up to 50 characters in any language, but it cannot include double-quotes ("), percentage sign (%), ampersand (&), back-slash (\), or angle brackets (<>).
Device Security Mode	From the drop-down list box, choose one of the following options: • **Non Secure—**No security features except image authentication apply. A TCP or UDP connection opens to Cisco Unified Communications Manager. • **Authenticated—**Cisco Unified Communications Manager provides integrity and authentication for the trunk. A TLS connection that uses NULL/SHA opens. • **Encrypted—**Cisco Unified Communications Manager provides integrity, authentication, and signaling encryption for the trunk. A TLS connection that uses AES128/SHA opens for signaling.
Incoming Transport Type	When Device Security Mode is Non Secure, TCP+UDP specifies the transport type. When Device Security Mode is Authenticated or Encrypted, TLS specifies the transport type. **Note** The Transport Layer Security (TLS) protocol secures the connection between Cisco Unified Communications Manager and the trunk.
Outgoing Transport Type	From the drop-down list box, choose the outgoing transport mode. When Device Security Mode is Non Secure, choose TCP or UDP. When Device Security Mode is Authenticated or Encrypted, TLS specifies the transport type. **Note** TLS ensures signaling integrity, device authentication, and signaling encryption for SIP trunks. **Tip** You must use UDP as the outgoing transport type when connecting SIP trunks between Cisco Unified Communications Manager systems and IOS gateways that do not support TCP connection reuse.

Setting	Description
Enable Digest Authentication	Check this check box to enable digest authentication. If you check this check box, Cisco Unified Communications Manager challenges all SIP requests from the trunk. Digest authentication does not provide device authentication, integrity or confidentiality. Choose a security mode of Authenticated or Encrypted to use these features. **Tip** Use digest authentication to authenticate SIP trunk users on trunks that are using TCP or UDP transport.
Nonce Validity Time	Enter the number of minutes (in seconds) that the nonce value is valid. The default value equals 600 (10 minutes). When the time expires, Cisco Unified Communications Manager generates a new value. **Note** A nonce value, a random number that supports digest authentication, gets used to calculate the MD5 hash of the digest authentication password.
X.509 Subject Name	This field applies if you configured TLS for the incoming and outgoing transport type. For device authentication, enter the subject name of the X.509 certificate for the SIP trunk device. If you have a Cisco Unified Communications Manager cluster or if you use SRV lookup for the TLS peer, a single trunk may resolve to multiple hosts, which results in multiple X.509 subject names for the trunk. If multiple X.509 subject names exist, enter one of the following characters to separate the names: space, comma, semicolon, or a colon. You can enter up to 4096 characters in this field. **Tip** The subject name corresponds to the source connection TLS certificate. Ensure subject names are unique for each subject name and port. You cannot assign the same subject name and incoming port combination to different SIP trunks.Example: SIP TLS trunk1 on port 5061 has X.509 Subject Names my_cm1, my_cm2. SIP TLS trunk2 on port 5071 has X.509 Subject Names my_cm2, my_cm3. SIP TLS trunk3 on port 5061 can have X.509 Subject Name my_ccm4 but cannot have X.509 Subject Name my_cm1.
Incoming Port	Choose the incoming port. Enter a value that is a unique port number from 0-65535. The default port value for incoming TCP and UDP SIP messages specifies 5060. The default SIP secured port for incoming TLS messages specifies 5061. The value that you enter applies to all SIP trunks that use the profile. **Tip** All SIP trunks that use TLS can share the same incoming port; all SIP trunks that use TCP + UDP can share the same incoming port. You cannot mix SIP TLS transport trunks with SIP non-TLS transport trunk types on the same port.

Setting	Description
Enable Application Level Authorization	Application-level authorization applies to applications that are connected through the SIP trunk. If you check this check box, you must also check the **Enable Digest Authentication** check box and configure digest authentication for the trunk. Cisco Unified Communications Manager authenticates a SIP application user before checking the allowed application methods. When application level authorization is enabled, trunk-level authorization occurs first, and application-level authorization then occurs, which means that Cisco Unified Communications Manager checks the methods that are authorized for the trunk (in this security profile) before the methods that are authorized for the SIP application user in the **Application User Configuration** window. **Tip** Consider using application-level authorization if you do not trust the identity of the application or if the application is not trusted on a particular trunk; that is, application requests may come from a different trunk than you expect.
Accept Presence Subscription	If you want Cisco Unified Communications Manager to accept presence subscription requests that come via the SIP trunk, check this check box. If you checked the **Enable Application Level Authorization** check box, go to the **Application User Configuration** window and check the **Accept Presence Subscription** check box for any application users that are authorized for this feature. When application-level authorization is enabled, if you check the **Accept Presence Subscription** check box for the application user but not for the trunk, a 403 error message gets sent to the SIP user agent that is connected to the trunk.
Accept Out-of-Dialog Refer	If you want Cisco Unified Communications Manager to accept incoming non-INVITE, Out-of-Dialog REFER requests that come via the SIP trunk, check this check box. If you checked the Enable Application Level Authorization check box, go to the **Application User Configuration** window and check the **Accept Out-of-Dialog Refer** check box for any application users that are authorized for this method.
Accept Unsolicited Notification	If you want Cisco Unified Communications Manager to accept incoming non-INVITE, unsolicited notification messages that come via the SIP trunk, check this check box. If you checked the **Enable Application Level Authorization** check box, go to the **Application User Configuration** window and check the **Accept Unsolicited Notification** check box for any application users that are authorized for this method.

Setting	Description
Accept Replaces Header	If you want Cisco Unified Communications Manager to accept new SIP dialogs, which have replaced existing SIP dialogs, check this check box. If you checked the **Enable Application Level Authorization** check box, go to the **Application User Configuration** window and check the **Accept Header Replacement** check box for any application users that are authorized for this method.
Transmit Security Status	If you want Cisco Unified Communications Manager to transmit the security icon status of a call from the associated SIP trunk to the SIP peer, check this check box. Default: This box is not checked.
SIP V.150 Outbound SDP Offer Filtering	From the drop-down list box, select one of the following filter options: • **Use Default Filter—**The SIP trunk uses the default filter that is indicated in the SIP V.150 Outbound SDP Offer Filtering service parameter. To locate the service parameter, go to **System** > **Service Parameters** > **Clusterwide Parameters (Device-SIP)** in Cisco Unified Communications Manager Administration. • **No Filtering—**The SIP trunk performs no filtering of V.150 SDP lines in outbound offers. • **Remove MER V.150—**The SIP trunk removes V.150 MER SDP lines in outbound offers. Select this option to reduce ambiguity when the trunk is connected to a pre-MER V.150 Cisco Unified Communications Manager. • **Remove Pre-MER V.150—**The SIP trunk removes any non-MER compliant V.150 lines in outbound offers. Select this option to reduce ambiguity when your cluster is contained in a network of MER compliant devices that are incapable of processing offers with pre-MER lines.

Setting	Description
SIP V.150 Outbound SDP Offer Filtering	From the drop-down list box, select one of the following filter options: • **Use Default Filter—**The SIP trunk uses the default filter that is indicated in the SIP V.150 Outbound SDP Offer Filtering service parameter. To locate the service parameter, go to **System** > **Service Parameters** > **Clusterwide Parameters (Device-SIP)** in Cisco Unified Communications Manager Administration. • **No Filtering—**The SIP trunk performs no filtering of V.150 SDP lines in outbound offers. • **Remove MER V.150—**The SIP trunk removes V.150 MER SDP lines in outbound offers. Select this option to reduce ambiguity when the trunk is connected to a pre-MER V.150 Cisco Unified Communications Manager. • **Remove Pre-MER V.150—**The SIP trunk removes any non-MER compliant V.150 lines in outbound offers. Select this option to reduce ambiguity when your cluster is contained in a network of MER compliant devices that are incapable of processing offers with pre-MER lines. **Note** You have to configure IOS on SIP for V.150 to make a secure call connection. For more information to configure IOS on Cisco Unified Communication Manager, see http://www.cisco.com/c/en/us/td/docs/ios/12_4t/12_4t4/mer_cg_15_1_4M.html.

Related Topics

Authorization, on page 26
Digest Authentication, on page 24
SIP Trunk Security Profile Setup Tips, on page 239
Where to Find More Information About SIP Trunk Security Profiles, on page 249

Apply SIP Trunk Security Profile

You apply a SIP trunk security profile to the trunk in the **Trunk Configuration** window. To apply a security profile to a device, perform the following procedure:

Procedure

Step 1 Find the trunk, as described in the *Administration Guide for Cisco Unified Communications Manager* .

Step 2 After the **Trunk Configuration** window displays, locate the **SIP Trunk Security Profile** setting.

Step 3 From the security profile drop-down list box, choose the security profile that applies to the device.

Step 4 Click **Save**.

Step 5 To reset the trunk, click **Apply Config**.

What to Do Next

If you applied a profile enabling digest authentication for SIP trunks, you must configure the digest credentials in the SIP Realm window for the trunk.

If you applied a profile enabling application-level authorization, you must configure the digest credentials and allowed authorization methods in the **Application User** window, if you have not already done so.

Related Topics

Configure SIP Realm, on page 254
Where to Find More Information About SIP Trunk Security Profiles, on page 249

Synchronize SIP Trunk Security Profile with SIP Trunks

To synchronize SIP trunks with a SIP Trunk Security Profile that has undergone configuration changes, perform the following procedure, which will apply any outstanding configuration settings in the least-intrusive manner possible. (For example, you may not need to perform a reset/restart on some affected devices.)

Procedure

Step 1 Choose **System** > **Security Profile** > **SIP Trunk Security Profile**.
The **Find and List SIP Trunk Security Profiles** window displays.

Step 2 Choose the search criteria to use.

Step 3 Click **Find**.
The window displays a list of SIP trunk security profiles that match the search criteria.

Step 4 Click the SIP trunk security profile to which you want to synchronize applicable SIP trunks. The **SIP Trunk Security Profile Configuration** window displays.

Step 5 Make any additional configuration changes.

Step 6 Click **Save**.

Step 7 Click **Apply Config**.
The **Apply Configuration Information** dialog displays.

Step 8 Click **OK**.

Related Topics

Where to Find More Information About SIP Trunk Security Profiles, on page 249

Delete SIP Trunk Security Profile

This section describes how to delete a SIP trunk security profile from the Cisco Unified Communications Manager database.

Before You Begin

Before you can delete a security profile from Cisco Unified Communications Manager Administration, you must apply a different profile to the devices or delete all devices that use the profile. To find out which devices use the profile, choose **Dependency Records** from the **Related Links** drop-down list box in the **SIP Trunk Security Profile Configuration** window and click **Go**.

If the dependency records feature is not enabled for the system, the dependency records summary window displays a message that shows the action that you can take to enable the dependency records; the message also displays information about high CPU consumption that is related to the dependency records feature. For more information about dependency records, refer to the *System Configuration Guide for Cisco Unified Communications Manager* .

Procedure

Step 1 Find the SIP trunk security profile to delete.

Step 2 Perform one of the following tasks:

a) To delete multiple security profiles, perform one of these tasks in the **Find and List** window:

- Check the check boxes next to the security profiles that you want to delete; then, click **Delete Selected**.
- You can delete all configurable records for this selection by clicking **Select All** and then clicking **Delete Selected**.

b) To delete a single security profile, perform one of these tasks in the **Find and List** window:

- Check the check box next to the security profile that you want to delete; then, click **Delete Selected**.
- Click the **Name** link for the security profile. After the specific Security Profile Configuration window displays, click **Delete Selected**.

Step 3 When prompted to confirm the delete operation, click **OK** to delete or **Cancel** to cancel the delete operation.

Related Topics

Find SIP Trunk Security Profile, on page 240
Where to Find More Information About SIP Trunk Security Profiles, on page 249

Where to Find More Information About SIP Trunk Security Profiles

Related Topics

About SIP Trunk Security Profile Setup, on page 239
SIP Trunk Security Profile Setup Tips, on page 239
Authorization, on page 26
Interactions, on page 10
Digest Authentication, on page 24

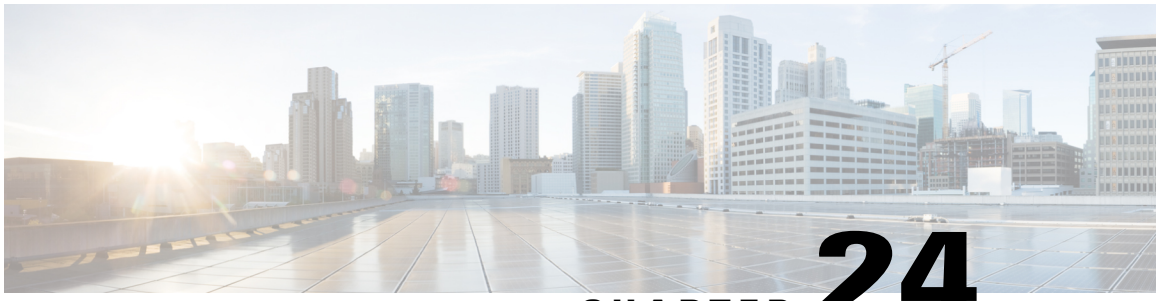

CHAPTER 24

Digest Authentication Setup for SIP Trunks

This chapter provides information about digest authentication setup for SIP trunks. When you configure digest authentication for SIP trunks, Cisco Unified Communications Manager challenges the identity of the SIP user agent when it receives a SIP request on the SIP trunk. The SIP user agent, in turn, can challenge the identity of Cisco Unified Communications Manager when Cisco Unified Communications Manager sends a SIP request to the trunk. For additional information on how digest authentication works for SIP trunks, see topics related to digest authentication.

- Set Up SIP Trunk Digest Authentication, page 251
- Set Up Digest Authentication Enterprise Parameters, page 252
- Set Up Digest Credentials, page 252
- Application User Digest Credential Settings, page 253
- Find SIP Realm, page 253
- Configure SIP Realm, page 254
- SIP Realm Settings, page 255
- Delete SIP Realm, page 255
- Where to Find More Information About SIP Trunk Digest Authentication, page 256

Set Up SIP Trunk Digest Authentication

The following procedure describes the tasks to configure digest authentication for SIP trunks.

Procedure

Step 1 Configure the SIP trunk security profiles; make sure that you check the **Enable Digest Authentication** check box.

Step 2 Apply a SIP trunk security profile to the trunk.

Step 3 Configure the enterprise parameter, Cluster ID, if not configured.
This parameter supports Cisco Unified Communications Manager challenges to the identity of the SIP user agent that is sending a SIP request on the SIP trunk.

Step 4 If Cisco Unified Communications Manager challenges the identity of SIP user agents that are sending SIP requests on the SIP trunk, configure the digest credentials for the application user in the **Application User Configuration** window.

Step 5 If Cisco Unified Communications Manager responds to challenges from a trunk peer, configure the SIP realm.

Related Topics

Application User Digest Credential Settings, on page 253
Apply SIP Trunk Security Profile, on page 246
Configure SIP Realm, on page 254
Digest Authentication, on page 24
Set Up Digest Authentication Enterprise Parameters, on page 252
Set Up Digest Credentials, on page 252
SIP Realm Settings, on page 255

Set Up Digest Authentication Enterprise Parameters

To configure the enterprise parameter, Cluster ID, for digest authentication, choose **System** > **Enterprise Parameters** in Cisco Unified Communications Manager Administration. Locate the Cluster ID parameter and update the value, as described in the Help for the parameter. This parameter supports Cisco Unified Communications Manager challenges to the identity of the SIP user agent that is sending a SIP request on the SIP trunk.

Tip To access the Help for the parameter, click the question mark that displays in the **Enterprise Parameters Configuration** window or click the parameter link.

Set Up Digest Credentials

If Cisco Unified Communications Manager challenges the identity of a SIP user agent, you must configure the digest credentials for the application user in the Application User Configuration window in Cisco Unified Communications Manager Administration. Cisco Unified Communications Manager uses these credentials to verify the identity of SIP user agents that are sending requests through the SIP trunk.

To configure the digest credentials for an application user, perform the following procedure:

Procedure

Step 1 Find the application user, as described in the *Administration Guide for Cisco Unified Communications Manager* .

Step 2 Click the application user link.

Step 3 After the specific **Application User Configuration** window displays, enter the appropriate settings, as described in Table 23: SIP Realm Security Profile, on page 255.

Step 4 Click **Save**.

Related Topics

SIP Realm Settings, on page 255
Where to Find More Information About SIP Trunk Digest Authentication, on page 256

Application User Digest Credential Settings

The following table describes the settings for the digest credential settings in the **Application User Configuration** window in Cisco Unified Communications Manager Administration.

Table 22: Digest Authentication Credentials

Setting	Description
Digest Credentials	Enter a string of alphanumeric characters.
Confirm Digest Credentials	To confirm that you entered the digest credentials correctly, enter the credentials in this field.

Related Topics

Where to Find More Information About SIP Trunk Digest Authentication, on page 256

Find SIP Realm

To find a SIP Realm, perform the following procedure:

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **User Management** > **SIP Realm**.
The **Find and List** window displays. Records from an active (prior) query may also display in the window.

Step 2 To find all records in the database, ensure the dialog box is empty; go to Step 3, on page 254.
To filter or search records

a) From the first drop-down list box, choose a search parameter.
b) From the second drop-down list box, choose a search pattern.
c) Specify the appropriate search text, if applicable.

Note To add additional search criteria, click the + button. When you add criteria, the system searches for a record that matches all criteria that you specify. To remove criteria, click the – button to remove the last added criterion or click the **Clear Filter** button to remove all added search criteria.

Step 3 Click **Find**.
All matching records display. You can change the number of items that display on each page by choosing a different value from the **Rows per Page** drop-down list box.

Step 4 From the list of records that display, click the link for the record that you want to view.

Note To reverse the sort order, click the up or down arrow, if available, in the list header.

The window displays the item that you choose.

What to Do Next

If you have not already done so, configure the Cluster ID enterprise parameter.

Related Topics

Set Up Digest Authentication Enterprise Parameters, on page 252
Where to Find More Information About SIP Trunk Digest Authentication, on page 256

Configure SIP Realm

If Cisco Unified Communications Manager responds to challenges from one or more trunk peers, you must configure SIP Realm for each SIP trunk user agent that can challenge Cisco Unified Communications Manager.

To add or update a SIP Realm, perform the following procedure:

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **User Management** > **SIP Realm**.
Step 2 Enter the appropriate settings as described in Table 23: SIP Realm Security Profile, on page 255.
Step 3 Click **Save**.
Step 4 Perform the procedure for all realms that you must add or update.

What to Do Next

To ensure that digest authentication is successful, verify that the same settings that you configured in Cisco Unified Communications Manager are configured on the SIP user agent.

Related Topics

Find SIP Realm, on page 253
Where to Find More Information About SIP Trunk Digest Authentication, on page 256

SIP Realm Settings

The SIP Realm provides the trunk-side credentials when Cisco Unified Communications Manager gets challenged by a trunk peer.

The following table describes the settings for the SIP Realm.

Table 23: SIP Realm Security Profile

Setting	Description
Realm	Enter the domain name for the realm that connects to the SIP trunk; for example, SIPProxy1_xyz.com. You can use alphanumeric characters, period, dash, underscore, and space.
User	Enter the user name for the SIP user agent in this realm; for example, enter the Cisco Unified Communications Manager server name. The SIP trunk uses this user name to challenge this Cisco Unified Communications Manager.
Digest Credentials	Enter the password that Cisco Unified Communications Manager uses to respond to a challenge for this realm and user.
Confirm Digest Credentials	Re-enter the password for verification.

Related Topics

Where to Find More Information About SIP Trunk Digest Authentication, on page 256

Delete SIP Realm

This section describes how to delete a SIP Realm from the Cisco Unified Communications Manager database.

Procedure

Step 1 Find the SIP Realm to delete.

Step 2 Perform one of the following tasks:

a) To delete multiple SIP Realms, perform one of these tasks in the **Find and List** window:

- Check the check boxes next to the realms that you want to delete; then, click **Delete Selected**.

  You can delete all configurable records for this selection by clicking **Select All** and then clicking **Delete Selected**.

b) To delete a single SIP Realm, perform one of these tasks in the **Find and List** window:

- Check the check box next to the realm that you want to delete; then, click **Delete Selected**.

  Click the **Name** link for the realm. After the specific **SIP Realm Configuration** window displays, click **Delete Selected**.

Step 3 When prompted to confirm the delete operation, click **OK** to delete or **Cancel** to cancel the delete operation.

Related Topics

Find SIP Realm, on page 253
Where to Find More Information About SIP Trunk Digest Authentication, on page 256

Where to Find More Information About SIP Trunk Digest Authentication

Related Topics

Digest Authentication, on page 24
Set Up SIP Trunk Digest Authentication, on page 251
Set Up Digest Authentication Enterprise Parameters, on page 252

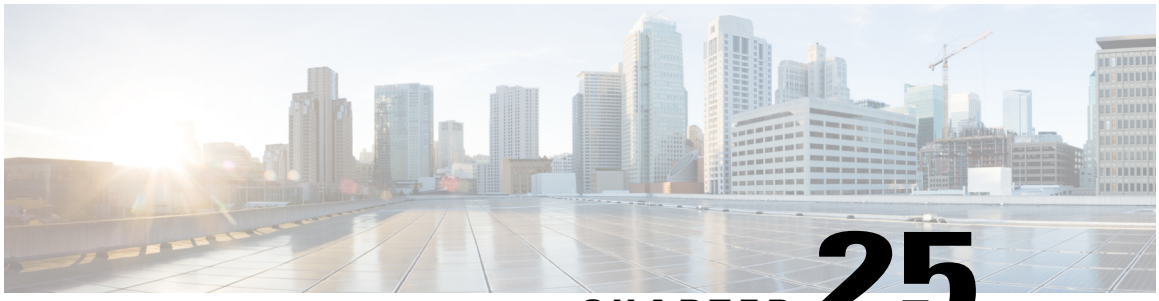

CHAPTER 25

Cisco Unified Mobility Advantage Server Security Profile Setup

This chapter provides information about Cisco Unified Mobility Advantage server security profile setup.

- About Cisco Unified Mobility Advantage Server Security Profile Setup, page 257
- Find Cisco Unified Mobility Advantage Server Security Profile, page 258
- Set Up Cisco Unified Mobility Advantage Server Security Profile, page 259
- Cisco Unified Mobility Advantage Server Security Profile Settings, page 259
- Cisco Unified Mobility Advantage Server Security Profile Client Application, page 260
- Delete Cisco Unified Mobility Advantage Server Security Profile, page 261
- Where to Find More Information About Cisco Unified Mobility Advantage Server Security Profile, page 261

About Cisco Unified Mobility Advantage Server Security Profile Setup

Cisco Unified Communications Manager Administration groups security-related settings to allow you to assign a single security profile to multiple Mobile Communicator clients. Security-related settings include device security mode, incoming transport type, and X.509 subject name. Configuring a Cisco Unified Mobility Advantage server security profile in Cisco Unified Communications Manager Administration automatically applies this profile to all configured Mobile Communicator clients on that Cisco Unified Communications Manager.

Only the security features that the Cisco Unified Mobility Advantage server supports display in the security profile settings window.

Note You cannot configure Cisco Unified Mobility Advantage servers in Cisco Unified Communications Manager Administration. For information on setting up a security profile for a Cisco Unified Mobility Advantage server, refer to your Cisco Unified Mobility Advantage documentation. Make sure that the Cisco Unified Mobility Advantage Security Profile you configure on Cisco Unified Communications Manager matches the security profile on the Cisco Unified Mobility Advantage servers. For information on configuring a Cisco Unity Cisco Unified Mobility Advantage server security profile, see the *Cisco Unified Communications Manager Security Guide*.

Find Cisco Unified Mobility Advantage Server Security Profile

To find a Cisco Unified Mobility Advantage server security profile, perform the following procedure:

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **System > Security Profile** > **CUMA Server Security Profile**.
The Find and List CUMA Server Security Profile window displays. Records from an active (prior) query may also display in the window.

Step 2 To find all records in the database, ensure the dialog box is empty; go to Step 3, on page 258.
To filter or search records

a) From the first drop-down list box, choose a search parameter.
b) From the second drop-down list box, choose a search pattern.
c) Specify the appropriate search text, if applicable.

Note To add additional search criteria, click the + button. When you add criteria, the system searches for a record that matches all criteria that you specify. To remove criteria, click the – button to remove the last added criterion or click the **Clear Filter** button to remove all added search criteria.

Step 3 Click **Find**.
All matching records display. You can change the number of items that display on each page by choosing a different value from the Rows per Page drop-down list box.

Step 4 From the list of records that display, click the link for the record that you want to view.

Note To reverse the sort order, click the up or down arrow, if available, in the list header.

The window displays the item that you choose.

Related Topics

Where to Find More Information About Cisco Unified Mobility Advantage Server Security Profile, on page 261

Set Up Cisco Unified Mobility Advantage Server Security Profile

To add, update, or copy a security profile, perform the following procedure:

Procedure

Step 1 In Cisco Unified Communications Manager Administration, choose **System** > **Security Profile** > **CUMA Server Security Profile**.

Step 2 Perform one of the following tasks:

a) To add a new profile, click **Add New** in the **Find** window and continue with Cisco Unified Mobility Advantage Server Security Profile Setup, on page 257.

b) To copy an existing security profile, locate the appropriate profile and click the **Copy** button next to the security profile that you want to copy, and continue with Cisco Unified Mobility Advantage Server Security Profile Setup, on page 257.

c) To update an existing profile, locate the appropriate security profile and continue with Cisco Unified Mobility Advantage Server Security Profile Setup, on page 257.
When you click **Add New**, the configuration window displays with the default settings for each field.
When you click **Copy**, the configuration window displays with the copied settings.

Step 3 Enter the appropriate settings as described in Table 24: Security Profile Settings, on page 259

Step 4 Click **Save**.

Related Topics

Cisco Unified Mobility Advantage Server Security Profile Settings, on page 259
Find Cisco Unified Mobility Advantage Server Security Profile, on page 258
Where to Find More Information About Cisco Unified Mobility Advantage Server Security Profile, on page 261

Cisco Unified Mobility Advantage Server Security Profile Settings

The following table describes the settings for the Cisco Unified Mobility Advantage Server security profiles.

Table 24: Security Profile Settings

Setting	Description
Name	Enter a name for the security profile. **Tip** Include the device model in the security profile name to help you find the correct profile when you are searching for or updating a profile.
Description	Enter a description for the security profile. The description can include up to 50 characters in any language, but it cannot include double-quotes ("), percentage sign (%), ampersand (&), back-slash (\), or angle brackets (<>).

Setting	Description
Device Security Mode	From the drop-down list box, choose one of the following options: • **Non Secure**—No security features except image authentication exist for the Cisco Unified Mobility Advantage server. A TCP connection opens to Cisco Unified Communications Manager. • **Authenticated**—Cisco Unified Communications Manager provides integrity and authentication for the Cisco Unified Mobility Advantage server. A TLS connection that uses NULL/SHA opens for signaling. • **Encrypted**—Cisco Unified Communications Manager provides integrity, authentication, and encryption for the Cisco Unified Mobility Advantage server. A TLS connection that uses AES128/SHA opens for signaling, and SRTP carries the media for all mobile calls.
Transport Type	When Device Security Mode is **Non Secure**, choose the following option from the drop-down list box: • **TCP**—Choose the Transmission Control Protocol to ensure that packets get received in the same order as the order in which they are sent. This protocol ensures that no packets get dropped, but the protocol does not provide any security. When Device Security Mode is **Authenticated** or **Encrypted**, TLS specifies the Transport Type. TLS provides signaling integrity, device authentication, and signaling encryption (encrypted mode only).
X.509 Subject Name	(Required for Authenticated or Encrypted Device Security Mode setting.) This field applies if you configured TLS as the transport type. X.509 is an ITU Telecommunication Standardization Sector standard for Public Key Infrastructure in cryptography. The subject name corresponds to the source connection TLS certificate. If multiple X.509 subject names exist, enter one of the following characters to separate the names: space, comma, semicolon, or a colon. You can enter up to 4096 characters in this field.

Related Topics

Find Cisco Unified Mobility Advantage Server Security Profile, on page 258
Where to Find More Information, on page 32

Cisco Unified Mobility Advantage Server Security Profile Client Application

No “Device Security Profile” field exists on the device configuration window for a Mobile Communicator client, which means that you do not have to manually apply the Cisco Unified Mobility Advantage Server Security profile to a client.

Configuring a Cisco Unified Mobility Advantage server security profile in Cisco Unified Communications Manager Administration automatically applies this profile to all configured Mobile Communicator clients on that Cisco Unified Communications Manager.

Related Topics

Where to Find More Information About Cisco Unified Mobility Advantage Server Security Profile, on page 261

Delete Cisco Unified Mobility Advantage Server Security Profile

This section describes how to delete a Cisco Unified Mobility Advantage server security profile from the Cisco Unified Communications Manager database.

Procedure

Step 1 Find the security profile to delete.

Step 2 To delete a security profile, perform the following task:

a) In the **Find and List** window, check the check box next to the appropriate security profile; then, click **Delete Selected**.

Step 3 When prompted to confirm the delete operation, click **OK** to delete or **Cancel** to cancel the delete operation.

Related Topics

Find Cisco Unified Mobility Advantage Server Security Profile, on page 258
Where to Find More Information About Cisco Unified Mobility Advantage Server Security Profile, on page 261

Where to Find More Information About Cisco Unified Mobility Advantage Server Security Profile

Related Topics

About Cisco Unified Mobility Advantage Server Security Profile Setup, on page 257
Cisco Unified Mobility Advantage Server Security Profile Settings, on page 259

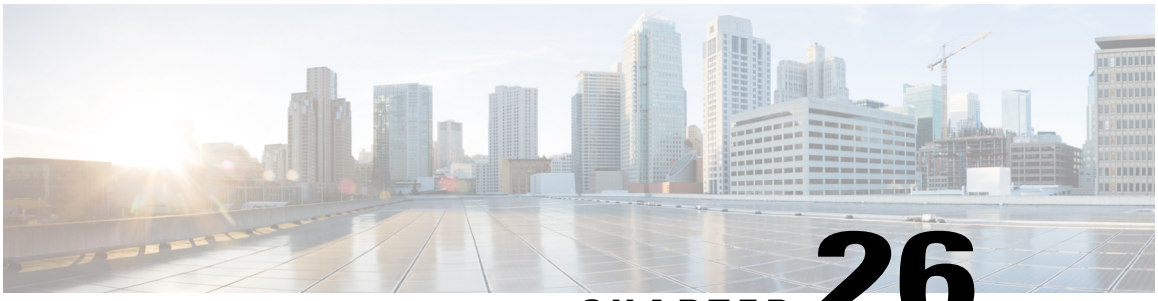

CHAPTER 26

FIPS 140-2 Mode Setup

This chapter provides information about FIPS 140-2 mode setup.

- FIPS 140-2 Setup, page 263
- FIPS Mode Restrictions, page 268

FIPS 140-2 Setup

Caution FIPS mode is only supported on releases that have been through FIPS compliance. Be warned that FIPS mode should be disabled before you upgrade to a non-FIPS compliance version of Cisco Unified Communications Manager.

For information about which releases are FIPS compliant and to view their certifications, see the *FIPS 140* document at http://www.cisco.com/web/strategy/government/security_certification/net_business_benefit_seccert_fips140.html.

FIPS, or Federal Information Processing Standard, is a U.S. and Canadian government certification standard that defines requirements that cryptographic modules must follow.

Certain versions of Unified Communications Manager are FIPS 140-2 compliant, in accordance with the U.S. National Institute of Standards (NIST), and can operate in FIPS mode, level 1 compliance.

When you enable FIPS 140-2 mode, Unified Communications Manager reboots, runs certification self-tests at startup, performs the cryptographic modules integrity check, and then regenerates the keying materials. At this point, Unified Communications Manager operates in FIPS 140-2 mode.

FIPS requirements include the following: performance of startup self-tests and restriction to a list of approved cryptographic functions.

FIPS mode uses the following FIPS 140-2 level 1 validated cryptographic modules:

- Openssl 0.9.8l with FIPS Module 1.2
- RSA CryptoJ 4.1
- Red Hat Openssl
- Red Hat Openswan

- NSS

You can perform the following FIPS-related tasks:

- Enable FIPS 140-2 mode
- Disable FIPS 140-2 mode
- Check the status of FIPS 140-2 mode

Note By default, your system is in non-FIPS mode. You must enable FIPS mode.

Enable FIPS 140-2 Mode

You can enable FIPS 140-2 through the CLI. For more information, see the *Command Line Interface Reference Guide for Cisco Unifed Communications Solutions*.

Consider the following information before you enable FIPS 140-2 mode on Unified CM:

- When you switch from non-FIPS to FIPS mode, the MD5 and DES protocols will not be functional.
- In single server clusters, because certificates are regenerated, you need to run the CTL Client or apply the Prepare Cluster for Rollback to pre-8.0 enterprise parameter before you enable FIPS mode. If you do not perform either of these steps, you must manually delete the ITL file after you enable FIPS mode.
- After you enable FIPS mode on a server, please wait until the server reboots and the phones re-register successfully before enabling FIPS on the next server.

Caution Before you enable FIPS mode, we strongly recommend that you perform a system backup. If FIPS checks fail at start-up, the system halts and requires a recovery CD to be restored.

Procedure

Step 1 Start a CLI session.
For more information, see "Start CLI Session" in the *Command Line Interface Reference Guide for Cisco Unifed Communications Solutions*.

Step 2 In the CLI, enter **utils fips enable**
The following prompts appear:

```
Security Warning: The operation will regenerate certificates for1)
CallManager

2)Tomcat
3)IPsec
4)TVS
5)CAPF
6)SSH
Any third party CA signed certificates that have been uploaded for the
```

```
above
components will need to be re-uploaded. If the system is operating in
mixed
mode, then the CTL client needs to be run again to update the CTL file.
******************************************************************************
This will change the system to FIPS mode and will reboot.
******************************************************************************
Do you want to continue (yes/no)?
```

Step 3 Enter **yes**.
The following message appears:

```
Generating certificates...Setting FIPS mode in operating system.
FIPS mode enabled successfully.
******************************************************
It is highly recommended that after your system restarts
that a system backup is performed.
******************************************************
The system will reboot in a few minutes.
```

Unified CM reboots automatically.

Note Certificates and SSH key are regenerated automatically, in accordance with FIPS requirements.

Note If you have a single server cluster and applied the **Prepare Cluster for Rollback to pre 8.0** enterprise parameter before you enabled FIPS 140-2 mode, you must disable this enterprise parameter after making sure that all the phones registered successfully to the server.

Note In FIPS mode, Unified CM uses RedHat Openswan (FIPS validated) in place of Racoon (non-FIPS validated). If the security policies in Racoon contain functions that are not FIPS approved, the CLI command will ask you to redefine the security policies with FIPS approved functions and abort. For more information, see topics related to IPsec Management in the *Administration Guide for Cisco Unified Communications Manager*.

Disable FIPS 140-2 Mode

FIPS 140-2 is disabled through the CLI. For more information, see the *Command Line Interface Reference Guide for Cisco Unified Communications Solutions*.

Consider the following information before you disable FIPS 140-2 mode on Cisco Unified Communications Manager (Unified CM):

- In single or multiple server clusters, we strongly recommend that you run the CTL Client. If the CTL Client is not run on a single server cluster, you must manually delete the ITL File after disabling FIPS mode.
- In multiple server clusters, each server must be disabled separately, because FIPS mode is not disabled cluster-wide but rather on a per-server basis.

To disable FIPS 140-2 mode, perform the following procedure:

Procedure

Step 1 Start a CLI Session.
For more information, see the Starting a CLI Session section in the *Command Line Interface Reference Guide for Cisco Unified Communications Solutions*.

Step 2 In the CLI, enter **utils fips disable**
Unified CM reboots and is restored to non-FIPS mode.

Note Certificates and SSH key are regenerated automatically, in accordance with FIPS requirements.

Check FIPS 140-2 Mode Status

To confirm that FIPS 140-2 mode is enabled, check the mode status from the CLI.

To check the status of FIPS 140-2 mode, perform the following procedure:

Procedure

Step 1 Start a CLI Session.
For more information, see the Starting a CLI Session section in the *Command Line Interface Reference Guide for Cisco Unified Communications Solutions*.

Step 2 In the CLI, enter **utils fips status**

The following message appears to confirm that FIPS 140-2 mode is enabled.

```
admin:utils fips status
The system is operating in FIPS mode. Self test status:

- S T A R T ---------------------
Executing FIPS selftests
runlevel is N 3
Start time: Thu Apr 28 15:59:24 PDT 2011
NSS self tests passed.
Kernel Crypto tests passed.
Operating System OpenSSL self tests passed.
Openswan self tests passed.
OpenSSL self tests passed.
CryptoJ self tests passed...
```

FIPS 140-2 Mode Server Reboot

When a Cisco Unified Communications Manager (Unified CM) server reboots in FIPS 140-2 mode, it triggers FIPS startup self-tests in each of the FIPS 140-2 modules after rebooting.

Caution If any of these self-tests fail, the Unified CM server halts.

Note A Unified CM server is automatically rebooted when FIPS is enabled or disabled with the corresponding CLI command. A user can also initiate a reboot.

Caution If the startup self-test failed because of a transient error, restarting the Unified CM server fixes the issue. However, if the startup self-test error persists, it indicates a critical problem in the FIPS module and the only option is to use a recovery CD.

Enhanced Security Mode

Enhanced Security Mode runs on a FIPS-enabled system. Both Cisco Unified Communications Manager and the IM and Presence Service can be enabled to operate in Enhanced Security Mode, which enables the system with the following security and risk management controls:

- Stricter credential policy is implemented for user passwords and password changes.
- Contact search authentication feature becomes enabled by default.
- If remote audit logging is configured, TCP becomes the default transfer protocol for remote logs.

Credential Policy Updates

When Enhanced Security Mode is enabled, a stricter credential policy takes effect for new user passwords and password changes. After Enhanced Security Mode is enabled, administrators can use the **set password** *** series of CLI commands to modify any of these requirements:

- Password Length should be between 14 to 127 characters.
- Password should have at least 1 lowercase, 1 uppercase, 1 digit and 1 special character.
- Any of the previous 24 passwords cannot be reused.
- Minimum age of the password is 1 day and Maximum age of the password is 60 days.
- Any newly generated password's character sequence will need to differ by at least 4 characters from the old password's character sequence.

Configure Enhanced Security Mode

Use this procedure on all Cisco Unified Communications Manager or IM and Presence Service cluster nodes to configure Enhanced Security Mode.

Before You Begin

Enable FIPS before you enable Enhanced Security Mode.

Procedure

Step 1 Log in to the Command Line Interface.

Step 2 Run the **utils EnhancedSecurityMode status** command to confirm whether Enhanced Security Mode is enabled.

Step 3 Run one of the following commands on a cluster node:

- To enable Enhanced Security Mode, run the **utils EnhancedSecurityMode enable** command.
- To disable Enhanced Security Mode, run the **utils EnhancedSecurityMode disable** command.

Step 4 After the node updates, repeat this procedure on the next node. Repeat for each Cisco Unified Communications Manager and IM and Presence Service cluster node.

Note Do not run either the **utils EnhancedSecurityMode enable** or **utils EnhancedSecurityMode disable** CLI commands on all nodes simultaneously.

FIPS Mode Restrictions

Feature	Restrictions
SNMP v3	FIPS mode does not support SNMP v3 with MD5 or DES. If you have SNMP v3 configured while FIPS mode is enabled, you must configure **SHA** as the Authentication Protocol and **AES128** as the Privacy Protocol.

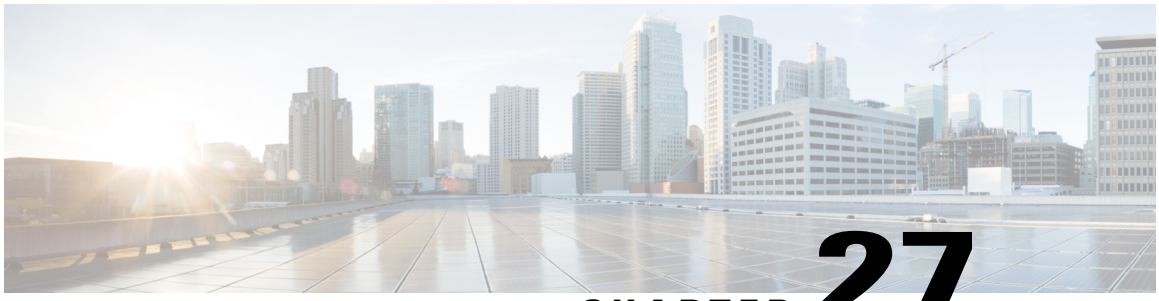

CHAPTER 27

Cisco V.150 Minimum Essential Requirements (MER)

- V.150 Overview, page 269
- Prerequisites for Cisco V.150.1 MER, page 269
- Configure V.150 Task Flow, page 270

V.150 Overview

The V.150 Minimum Essential Requirements feature allows you to make secure calls in a modem over IP network. The feature uses a dialup modem for large installed bases of modems and telephony devices operating on a traditional public switched telephone network (PSTN). The V.150.1 recommendation specifically defines how to relay data from modems and telephony devices on a PSTN into and out of an IP network through a modem. The V.150.1 is an ITU-T recommendation for using a modem over IP networks that support dialup modem calls.

The Cisco V.150.1 Minimum Essential Requirements feature complies with the requirements of the National Security Agency (NSA) SCIP-216 Minimum Essential Requirements (MER) for V.150.1 recommendation. The SCIP-216 recommendation has simplified the existing V.150.1 requirements.

Cisco V.150.1 MER feature supports the following interfaces:

- Media Gateway Control Protocol(MGCP) T1(PRI and CAS) and E1(PRI) trunks
- Session Initiation Protocol (SIP) trunks
- Skinny Client Control Protocol (SCCP) for analog gateway endpoints
- Secure Communication Interoperability Protocol-End Instruments (SCIP-EI)

Prerequisites for Cisco V.150.1 MER

Your system should already be set up with basic call control functionality. For instructions on how to set up the call control system, refer to the *System Configuration Guide for Cisco Unified Communications Manager* at http://www.cisco.com/c/en/us/td/docs/voice_ip_comm/cucm/admin/11_0_1/sysConfig/CUCM_BK_C733E983_00_cucm-system-configuration-guide.html.

For Cisco Unified Communications Manager, you must have one of the following releases installed:

- The minimum version is Release 10.5(2) SU3
- For 11.0, the minimum version will be 11.0(1) SU2 available in Spring 2016
- All releases from 11.5(1) on support this feature
- You must have Cisco IOS Release 15.6(2)T or later.

V.150 is not supported with Media Termination Point (MTP). We recommend that you remove MTP from devices, trunks, and gateways that are handling V.150 calls.

Configure V.150 Task Flow

Complete these tasks to add V.150 support in Cisco Unified Communications Manager.

Procedure

	Command or Action	Purpose
Step 1	To Configure Media Resource Group Task Flow, on page 271, perform the following subtasks: • Configure Media Resource Group for Non-V.150 Endpoints, on page 271 • Configure a Media Resource Group List for Non-V.150 Endpoints, on page 272 • Configure Media Resource Group for V.150 Endpoints, on page 272 • Configure a Media Resource Group List for V.150 Endpoints, on page 272	Add Media Resource Group and Media Resource Group List for V.150 and non V.150 devices.
Step 2	Configure the Gateway for Cisco V.150 (MER), on page 273	Add V.150 functionality to a gateway.
Step 3	Configure V.150 MGCP Gateway Port Interface, on page 274	If you want to use V.150 support across an MGCP gateway, add V.150 support to the port interface.
Step 4	Configure V.150 SCCP Gateway Port Interface, on page 274	If you want to use V.150 support across an SCCP gateway, add V.150 support to the port interface.
Step 5	Configure V.150 Support for Phone, on page 275	Add V.150 support to the phones that will be placing V.150 calls.
Step 6	To Configure SIP Trunk Task Flow, on page 276, perform one or both of the following subtasks: • Set the Clusterwide V.150 Filter, on page 277	Add V.150 support to the SIP trunk that will be used for V.150 calls.

	Command or Action	Purpose
	• Add V.150 Filter to SIP Trunk Security Profile, on page 278	

Configure Media Resource Group Task Flow

Complete these tasks to configure two sets of media resource groups: one media resource group with MTP resources for non-V.150 calls, and a media resource group without MTP resources for V.150 calls.

Procedure

	Command or Action	Purpose
Step 1	Configure Media Resource Group for Non-V.150 Endpoints, on page 271	You can configure the Media Resource Group with MTP that you want to be used by non-V.150 endpoints.
Step 2	Configure a Media Resource Group List for Non-V.150 Endpoints, on page 272	Configure a Media Resource Group list that includes your MTP Media Resources for non-V.150 endpoints.
Step 3	Configure Media Resource Group for V.150 Endpoints, on page 272	Configure Media Resource Group without MTP resources for secure V.150 calls.
Step 4	Configure a Media Resource Group List for V.150 Endpoints, on page 272	Configure a Media Resource Group list for non-V.150 endpoints without MTP after adding the required resources in the Media Resource Group.

Configure Media Resource Group for Non-V.150 Endpoints

Use this procedure to add a new media resource group that includes MTP resources for non-V.150 endpoints.

Procedure

Step 1 From Cisco Unified CM Administration, choose **Media Resources** > **Media Resource Group**.

Step 2 Click **Add New**.

Step 3 In the **Name** field, enter the media resource group name as “Do not use with V.150 devices”.

Step 4 From the **Available Media Resources** field, choose only MTP devices and click the down-arrow key. The selected devices appear in the **Selected Media Resources** field.

Step 5 Click **Save**.

What to Do Next

Configure a Media Resource Group List for Non-V.150 Endpoints, on page 272

Configure a Media Resource Group List for Non-V.150 Endpoints

Use this procedure to add new media resource group list with MTP resources for non-V.150 end points.

Before You Begin

Configure Media Resource Group for Non-V.150 Endpoints, on page 271

Procedure

Step 1 From Cisco Unified CM Administration, choose **Media Resources** > **Media Resource Group List**.

Step 2 Click **Add New**.

Step 3 In the **Name** field, enter a name for the media resource group list as " Non- V.150".

Step 4 From the **Available Media Resources** field, choose the V.150 MER resource group named "Do not use with V.150 Devices" and click the down-arrow key.
The selected devices appear in the **Selected Media Resources** field.

Step 5 Click **Save**.

Configure Media Resource Group for V.150 Endpoints

Use this procedure to add new media resource group without MTP resources for V.150 devices.

Procedure

Step 1 From Cisco Unified CM Administration, choose **Media Resources** > **Media Resource Group**.

Step 2 Click **Add New**.

Step 3 In the **Name** field, enter the media resource group name as "For use with V.150 devices".

Step 4 From the **Available Media Resources** field, choose multiple devices except the MTP resources and click the down-arrow key.
The selected devices appear in the **Selected Media Resources** field.

Step 5 Click **Save**.

What to Do Next

Configure a Media Resource Group List for V.150 Endpoints, on page 272

Configure a Media Resource Group List for V.150 Endpoints

Use this procedure to add a media resource group list without MTP resources for V.150 devices.

Before You Begin

Configure Media Resource Group for V.150 Endpoints, on page 272

Procedure

Step 1 From Cisco Unified CM Administration, choose **Media Resources** > **Media Resource Group List**.

Step 2 Click **Add New**.

Step 3 In the **Name** field, enter a name for the media resource group list as “V.150”.

Step 4 From the **Available Media Resources** field, choose the V.150 MER resource group named “ For V.150 Devices” and click the down-arrow key.
The selected media resource groups appear in the **Selected Media Resources** field.

Step 5 Click **Save**.

Configure the Gateway for Cisco V.150 (MER)

Procedure

Step 1 From Cisco Unified CM Administration, choose **Device** > **Gateway**.

Step 2 Click **Add New**.

Step 3 Choose the gateway from the **Gateway Type** drop-down list.

Step 4 Click **Next**.

Step 5 From the **Protocol** drop-down list, choose a protocol.

Step 6 Depending on which Protocol you chose for the gateway, perform:

- For MGCP, in the **Domain Name** field, enter the domain name that is configured on the gateway.
- For SCCP, in the **MAC Address (Last 10 Characters)** field, enter the gateway MAC address.

Step 7 From the **Cisco Unified Communications Manager Group** drop-down list, choose **Default**.

Step 8 In the **Configured Slots, VICs and Endpoints** area, perform the following steps:

a) From each **Module** drop-down list, select the slot that corresponds to the Network Interface Module hardware that is installed on the gateway.
b) From each **Subunit** drop-down list, select the VIC that is installed on the gateway.
c) Click **Save**.
The port icons appear. Each port icon corresponds to an available port interface on the gateway. You can configure any port interface by clicking the corresponding port icon.

Step 9 Complete the remaining fields in the **Gateway Configuration** window. See the online help for more information about the fields and their configuration options.

Step 10 Click **Save**.

What to Do Next

Perform one of the following:

- Configure V.150 MGCP Gateway Port Interface, on page 274 or
- Configure V.150 SCCP Gateway Port Interface, on page 274

Configure V.150 MGCP Gateway Port Interface

Before You Begin

Configure the Gateway for Cisco V.150 (MER), on page 273

Procedure

Step 1 From Cisco Unified CM Administration, choose **Device** > **Gateway**.

Step 2 Enter the appropriate search criteria to modify the settings for an existing gateway and click **Find**.

Step 3 In the **Configured Slots, VICs, and Endpoints** area, locate the module and subunit on which you want to configure a port for V.150 MER and click the corresponding port icon.

Step 4 From the **Device Protocol** drop-down list, choose **Digital Access T1** or **Digital Access PRI** and click **Next**.

Note The **Device Protocol** drop-down list is displayed only if T1 port is selected in the **Configured Slots, VICs, and Endpoints** area.

The **Gateway Configuration** window now displays the port interface configuration.

Step 5 Select the **Media Resource Group List** named "V.150".

Step 6 Check the **V150 (subset)** check box.

Step 7 Configure the remaining fields, if applicable. See the online help for more information about the fields and their configuration options.

Step 8 Click **Save**.

Step 9 Optional. If you want to configure additional port interfaces for the gateway, from the **Related Links** drop-down list, choose **Back to MGCP Configuration** and click **Go**. You can select a different port interface

Configure V.150 SCCP Gateway Port Interface

Before You Begin

Configure the Gateway for Cisco V.150 (MER), on page 273

Procedure

Step 1 From Cisco Unified CM Administration, choose **Device** > **Gateway**.

Step 2 Enter the appropriate search criteria to modify the settings for an existing SCCP gateway and click **Find**.

Step 3 In the **Configured Slots, VICs, and Endpoints** area, locate the module and subunit on which you want to configure a port for V.150 MER and click the corresponding port icon.

Step 4 Select the **Media Resource Group List** named "V.150".

Step 5 In the **Product Specific Configuration Layout** area, if the **Latent Capability Registration Setting** drop-down list appears, select **Modem Relay** or **Modem Relay and Passthrough**.

Step 6 Configure the remaining fields, if applicable. See the online help for more information about the fields and their configuration options.

Step 7 Click **Save**.

Configure V.150 Support for Phone

Use this procedure to add V.150 support for a phone. The following phone types support V.150:

- Cisco 7960—Third party SCCP end point registered as Cisco 7960
- Cisco 7961G-GE—Third party SCCP end point registered as Cisco 7961G-GE
- Third Party AS-SIP Endpoints

Before You Begin

Ensure to create an End User with the User ID same as the intended phone number.

Ensure to configure the **Digest Credentials** field in the **End User Configuration** window for Third Party AS-SIP SIP endpoints.

For more information on how to configure a new End User, see the "Provision End Users Manually" chapter in the *System Configuration Guide for Cisco Unified Communications Manager* at http://www.cisco.com/c/en/us/support/unified-communications/unified-communications-manager-callmanager/products-installation-and-configuration-guides-list.html

Procedure

Step 1 From Cisco Unified CM Administration, choose **Device** > **Phone**.

Step 2 Perform either of the following steps:

- To configure V.150 on an existing phone, click **Find** and select the phone.

- To configure a new phone for V.150, click **Add New**.

Step 3 From the **Phone Type** drop-down list, select one of the phone types that supports V.150, and click **Next**.

Step 4 For third party SCCP endpoints registered as Cisco 7960 or Cisco 7961G-GE. From the **Device Protocol** drop-down list, select **SCCP** and click **Next**.

Step 5 From the **Media Resource Group List** drop-down menu, select **V.150**.

Step 6 Third Party AS-SIP SIP endpoints only. Configure the following fields:

- From the **Digest User** drop-down select the end user for this phone. The end user will be used for digest authentication.
- Leave the **Media Termination Point Required** check box unchecked.
- Check the **Early Offer support for voice and video calls** check box.

Step 7 Click **Save**.
A message window to **Apply Config** is displayed.

Step 8 Click **Apply Config**.

Step 9 Click **OK**.

Configure SIP Trunk Task Flow

Procedure

	Command or Action	Purpose
Step 1	Configure SIP Profile for V.150, on page 276	Configure a SIP Profile with SIP Best Effort Early Offer support for the SIP trunk.
Step 2	Set the Clusterwide V.150 Filter, on page 277	Optional. Configure a clusterwide default setting for SIP V.150 SDP Offer Filtering.
Step 3	Add V.150 Filter to SIP Trunk Security Profile, on page 278	Configure a V.150 Filter within a SIP Trunk Security Profile that you can assign to specific SIP trunks.
Step 4	Configure SIP Trunk for V.150, on page 278	Configure V.150 support for the SIP trunks that will handle V.150 calls.

Configure SIP Profile for V.150

Use this procedure to configure a SIP Profile with SIP Best Effort Early Offer support for the SIP trunk.

Procedure

Step 1 In Cisco Unified CM Administration, choose **Device** > **Device Settings** > **SIP Profile** .

Step 2 Perform either of the following steps:

- To create a new profile, click **Add New**.
- To select an existing profile, click **Find** and select a SIP profile.

Step 3 In the **Name** field, enter the SIP name for V.150.

Step 4 In the **Description** field, enter the description for V.150.

Step 5 From the **Early Offer Support for Voice and video class** drop-down list, choose **Select Best Effort (no MTP inserted)**.

Step 6 Enter any other configuration settings that you want. See the online help for more information about the fields and their configuration options.

Step 7 Click **Save**.

Set the Clusterwide V.150 Filter

Use this procedure to configure a clusterwide default setting for SIP V.150 SDP Offer filtering.

Note If you configure a **SIP V.150 SDP Offer Filtering** value within a SIP Trunk Security Profile that is different than the clusterwide service parameter setting, the security profile setting overrides the cluster-wide service parameter setting for the trunks that use that security profile.

Procedure

Step 1 From Cisco Unified CM Administration, choose **System** > **Service Parameters**.

Step 2 From the **Server** drop-down list, choose an active server.

Step 3 From the **Service** drop-down list, choose **Cisco CallManager**.

Step 4 In the **Clusterwide Parameters (Device- SIP)** section, configure a value for the **SIP V.150 SDP Offer Filtering** service parameter.

Step 5 Choose **SIP V.150 SDP Offer Filtering** from the drop-down list.

Step 6 Specify the desired filtering action.

Step 7 Click **Save**.

What to Do Next

Add V.150 Filter to SIP Trunk Security Profile, on page 278

Add V.150 Filter to SIP Trunk Security Profile

Use this procedure to assign a V.150 Filter within a SIP Trunk Security Profile.

Note If you configure a **SIP V.150 SDP Offer Filtering** value within a SIP Trunk Security Profile that is different than the clusterwide service parameter, the security profile setting overrides the cluster-wide service parameter setting for the trunks that use that security profile.

Before You Begin

Set the Clusterwide V.150 Filter, on page 277

Procedure

Step 1 From Cisco Unified CM Administration, choose **System** > **Security** > **SIP Trunk Security Profile**.

Step 2 Perform one of the following tasks:

- To modify the settings for an existing SIP Trunk Security Profile, enter search criteria, click Find, and choose an existing profile from the list.
- To add a new SIP Trunk Security Profile, click **Add New**.

Step 3 Configure a value for the **SIP V.150 Outbound SDP Offer Filtering** drop-down list.

Note The default setting is to use the value of the **SIP V.150 Outbound SDP Offer Filtering** cluster-wide service parameter.

Step 4 Configure any remaining fields in the **SIP Trunk Security Profile Configuration** window. See the online help for more information about the fields and their configuration options.

Step 5 Click **Save**.

What to Do Next

Configure SIP Trunk for V.150, on page 278

Configure SIP Trunk for V.150

Use this procedure to configure settings for a SIP trunk.

Before You Begin

Add V.150 Filter to SIP Trunk Security Profile, on page 278

Procedure

Step 1 From Cisco Unified CM Administration, choose **Device** > **Trunk**.

Step 2 Perform either of the following steps:

- To create a new profile, click **Add New**.

- To select an existing trunk, click **Find** and select a SIP trunk.

Step 3 For new trunks, do the following:

- From the **Trunk Type** drop-down list, choose **SIP Trunk**.
- From the **Protocol Type** drop-down list, choose **SIP**.
- From the **Trunk Service Type** drop-down list, choose **None(Default)**.
- Click **Next**.

Step 4 Enter the SIP trunk name in the **Name** field.

Step 5 Enter the SIP trunk description in the **Description** field.

Step 6 From the **Media Resource Group List** drop-down list, choose the Media resource group list named "V.150".

Step 7 Configure the destination address for the SIP trunk:

a) In the **Destination Address** text box, enter an IPv4 address, fully qualified domain name, or DNS SRV record for the server or endpoint that you want to connect to the trunk.
b) If the destination is a DNS SRV record, check the **Destination Address is an SRV** check box.
c) To add additional destinations, click the **(+)** button. You can add up to 16 destinations for a SIP trunk.

Step 8 From the **SIP Trunk Security Profile** drop-down list, assign the SIP trunk security profile that you configured for this trunk.

Step 9 From the **SIP Profile** drop-down list, assign the SIP profile that you set up with the Best Effort Early Offer setting.

Step 10 Leave the **Media Termination Point Required** check box unchecked.

Step 11 Configure any additional fields in the **Trunk Configuration** window. See the online help for more information about the fields and their configuration options.

Step 12 Click **Save**.