Aastra Business Communication Solution

AASTRA

Aastra 630d
User's Guide

Supported platforms:
Aastra 415
Aastra 430
Aastra 470

This user's guide describes the functions, the configuration, and the use of the Aastra 600d.

eud-1292_en / 1.0 – R1.0 – © 01.2011

Operating and display elements

Operating and display elements

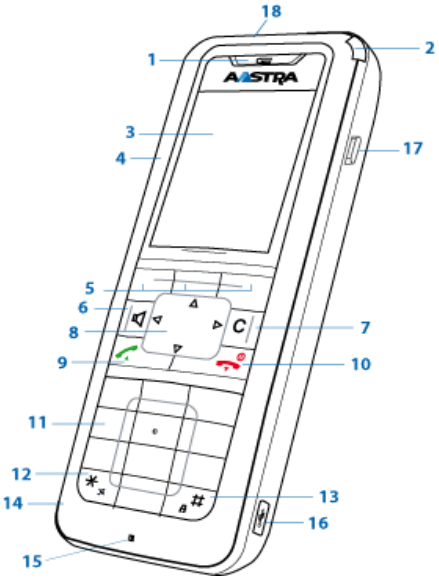

Operating elements

	Key	Press	In the state...	Description
1	Loudspeaker			
2	LED indicator			LED as per Table in Chapter "Indicator LED signals", page 27
3	Display			

	Key	Press	In the state...	Description
4	**Side keys + / -**	short	• Idle state • In a connection	• Call up the phone number • Adjusting the volume
	Middle side key	short	all states	Excute configured call number
		long	Idle state	Configure side key
5	**Left softkey/foxkey**	short	• Idle state • Menus	• Call up complete menu • Executes displayed function above key.
	Middle softkey/foxkey	short	• Idle state • Menus	• Call up configured call number • Executes displayed function above key.
	Right softkey/foxkey	short	• Idle state • Menus	• Call up configured call number • Executes displayed function above key.
		approx. 2 seconds each	Idle state	Configure key
6	**Loudspeaker key**	short	• Idle state • In a connection	• Activate/deactivate open listening • Activate/deactivate open listening
7	**Correction key**	short	• Editor • Menu	• Delete the last character • Scrolling back through the menu

	Key	Press	In the state...	Description
8	**Navigation key**			
		top	• Idle state • Lists	• Call up activated features • Navigation
		right	• Idle state • Menu • Editor • Lists	• Call up complete menu • Goes forward one step in the menu • Navigate cursor • Call up details
		bottom	• Idle state • Lists	• Call up phone book • Navigation
		left	• Idle state • Menu • Editor • Lists	• Call up profiles • Scrolling back through the menu • Navigate cursor
9	**Call key**	short	• Idle state • Lists	• Call up redial list • Dial select call number
10	**End key**	short	• In a connection • Menu • Editor	• Ending a call • Back to idle state • Exit editor without changes.
		long	Idle state	Activate/deactivate phone
11	**Key block**	short	• Idle state • Editor	• Digit input • Characters as per Table in Chapter "Digit keys", page 23
	Key 2	long	Idle state	Switching system
	Key 5	long	Idle state	Calling up the service menu
12	**Asterisk key**	short	Idle state, Editor	* input
		long	Idle state, for incoming call	Activate/deactivate ring tone

	Key	Press	In the state...	Description
13	**Hash key**	short	Idle state, Editor	# input
		long	Idle state	Activate keylock
14	**Headset connection**			
15	**Microphone**			
16	**USB connection**			
17	**Hotkey**	short	all states	• List of 6 configurable phone numbers • Configure hotkey
18	**SOS key**	short or hold down	• Idle state • With locked keypad	Call up the preconfigured emergency number

Display symbols

	Radio link quality		
	Very good		Good
	Disruption probable		Phone calls not possible

	State of charge		
	Charge state 61-100 %		Charge state 31-60 %
	Charge state 11-30 %		Charge state 6-10 %
	Charge state 4-5 %		Charge state 0-3 % (flashing)

Notes:

- If the battery is completely discharged when the phone is placed in the charging bay, there will be no display initially until the battery has reached a certain charge level. This may take several minutes and does not mean there is a malfunction.
- Even when the phone is switched off, the battery will still slowly discharge.
- When the battery capacity is almost exhausted, a series of warning beeps sounds. This warning can be disabled, see Chapter "Setting up a profile", page 73. If you are making a call, you have approximately five minutes' talk time left before the handset switches itself off.
- The state of charge is also available via the service menu: Press key 5 and hold it down for a moment.

	System registrations
A	Phone registered in system A, B, C, or D and ready for use (only displayed when phone is registered on more than one system)

Status information			
	Incoming call		Incoming call forwarded
	Call forwarding activated		Call Forwarding on No Reply activated
	Search mode		Entries in call list
	More softkeys available		
	New voice mail		Voice mail retrieved
	Voice mail greeting with possibility to leave a voice message		Voice mail greeting without possibility to leave a voice message
	New text messages		Read text messages
	Ringing tone deactivated		Activate discreet ringing
	Call key activated		Loudspeaker/hands-free mode activated
	Announcement		
	Room monitoring activated		Room monitoring is triggered
	Headset mode activated		Microphone deactivated
	Call parked		Keypad locked
	Bluetooth activated		Bluetooth headset connected
	Alarm		Appointment call

Status information

	About		Warning
	Not permitted		

Phone book

	Name		Private phone number
	Business phone number		Mobile phone number

Presence state

	Available (default)		Absent
	Meeting		Busy
	Not available		

Alarm status information

	Man-down alarm		Man-down alarm temporarily deactivated
	No-movement alarm		No-movement alarm temporarily deactivated
	Escape alarm		Escape alarm temporarily deactivated

Safety

Safety Information

Failure to observe this information can be hazardous and infringe existing laws.

Medical equipment

The cordless phone must not be used near medical equipment, such as pacemakers or hearing aids.

Availability of telephone connections

Do not rely on your cordless phone as your only means of communication in emergency or critical situations. Availability cannot always be guaranteed.
The device will be inoperable when mains power of the communications system fails.

Risk of explosion through sparking

On premises subject to explosion hazards only use ATEX models specially approved for that purpose.

Hands-free mode and Ringing tone

Do not hold the cordless phone up against your ear in hands-free operation and during ringing tone, as the volume is then very high. The default setting for ringing loudness meets regulatory requirements. It is recommended the default setting is retained.

Mains power

Use the original power supply only (ID: 23-00-1061-00). Connect the power supply only to power sources that conform to the indications on the power supply.

Maintenance

Make sure all installation and repair work is carried out by a specially qualified technician. Do not touch the charging contacts with sharp, metallic, and/or greasy objects. Always use a soft, moistened, or antistatic cloth to clean your device. Do not use chemicals or other chemical products.

Cost control and Data protection

You should protect your phone with a PIN so that no-one can make phone calls at your expense. A code will also protect your personal settings. When carrying the handset around, you should lock the keypad so it cannot be accidentally activated.

Ambient conditions

Do not operate the device outside the temperature range of +5 °C to approx. +40 °C.
Avoid direct sunlight and other sources of heat.
Protect your device against the wet, excessive dust, corrosive liquids and steam.
Do not expose your device to electromagnetic fields (electric motors, household appliances). The speech quality could be affected. To prevent interference, avoid placing your handset in the immediate vicinity of computers, radios, TV sets, VCRs, and other telephone sets.

Disposal
Be sure to dispose of your device, batteries and its packaging in an environmentally compatible way. Electrical equipment does not belong in domestic waste. Deposit it at a return centre.

Accessories
Use original accessories or specifically approved accessories only. The use of other accessories may decrease performance or pose a risk to your health or safety.

Dealing with batteries

Please observe the following rules and regulations when dealing with batteries:

General rules when dealing with batteries
- Never tamper with or dismantle batteries.
- Never immerse the batteries in water or throw it into a fire.
- Do not expose the batteries to high temperatures.

When putting your cordless phone into operation
- Only use the battery pack supplied by the manufacturer.
- Take note of the instructions in Chapter "Battery", page 93 and follow the procedure described there.
- It takes two to three charging cycles for the batteries to reach their fully charged state.
- Only use the charging bay supplied by the manufacturer.
- For the charging bay only use the plug-in power adapter supplied by the manufacturer (ID: 23-00-1061-00). Otherwise the phone may be damaged.

When operating your cordless phone
- It is normal for the batteries to become warm when charging.
- Discharge the batteries from time to time to prolong their service life. To do so do not place the cordless phone back into the charging bay until the batteries are completely or almost completely discharged.

To replace the batteries
- Switch off the cordless phone before removing the batteries.
- Only use original batteries and charging units approved by the manufacturer. To do so, contact your supplier or servicing agent.

To store the cordless phone or the batteries
- If you do not intend to use the phone for some time, switch off the phone and take out the battery pack.
- Store the batteries at room temperature. Above-average temperatures tend to reduce the service life of batteries.

To dispose of the battery packs
Do not throw away the batteries with your domestic waste. Take the batteries to an appropriate collection point for recycling.

User information

Document portal:	*www.aastra.com/docfinder*

© The information, graphics and layouts featured in the user information are subject to copyright and may not be duplicated, presented or processed without the written consent of Aastra Telecom Schweiz AG.

Your product is supplied with a Quick User's Guide, safety information and, where applicable, with other product-specific information.

These and all other user documents are available for download on the Aastra document portal: *www.aastra.com/docfinder* as individual documents or as a documentation set. It is your responsibility to keep up to date with the scope of functions, the proper use and the operation of your product.

- Please make sure you have all the user documents required to operate your product efficiently and correctly.
- Make sure that the versions of the user documents comply with the software level of the Aastra 400 products used and that you have the latest editions.
- Always read the user documents first before you put your product into operation.
- Store the user information within easy reach and refer to it whenever uncertainties arise in connection with the use of the product.
- When handing over your product to others, make sure you enclose the relevant user information.

Purpose and function

This product is part of the Aastra 400 communication solution.

Aastra 400 is an open, modular and comprehensive communication solution for the business sector with several communication servers of different output and expansion capacity, a comprehensive telephone portfolio and a multitude of expansions. They include an application server for Unified Communications and multimedia services, an FMC (Fixed Mobile Conversion) controller for integrating mobile phones, an open interface for application developers and a multitude of expansion cards and modules.

The business communication solution with all its components was developed to cover in full the communication requirements of businesses and organisations, in a way that is both user- and maintenance-friendly. The individual products and components are coordinated and must not be used for other purposes or replaced by third-party products or components (unless it is to connect other approved networks, applications and telephones to the interfaces certified specially for that purpose).

One number user concept:

Your system administrator can set up several phones for you that hold all the same phone number (one number user concept). You have only one name and phone number with which to identify yourself to your call partners, regardless of which of the phone you make your calls. The advantage is that you can always be reached under the same phone number, regardless of where you happen to be.

With Personal call routing and Ring Alone you can define where incoming calls shall be routed to (see chapter "Activating personal call routing", page 57 and "Activating ring alone", page 58). Your system administrator can set whether or not you are busy for further incoming calls (Busy if busy). You are still able to make further outgoing calls with the other terminals.

Call lists and contacts are available on all your phones and are automatically synchronised.

An announcement is signalled on all your phones which support announcement.

Protection against listening in and recording

The Aastra 400 communication solution comprises features which allow calls to be monitored and recorded without the call parties noticing. Please note that these features can only be used in compliance with national data protection provisions.

Disclaimer

All parts and components of the Aastra 400 communication solution are manufactured in accordance with ISO 9001 quality guidelines.

The relevant user information has been compiled with the utmost care. The functions of the Aastra 400 products have been tested and approved after comprehensive conformity tests. Nonetheless errors cannot be entirely excluded. The manufacturers shall not be liable for any direct or indirect damage that may be caused by incorrect handling, improper use, or any other faulty behaviour. Potential hazards are mentioned in the relevant places in the user information. Liability for loss of profit shall be excluded in any case.

Trademarks

Aastra® is a registered trademark of Aastra Technologies Limited.

Bluetooth® is a registered trademark of Bluetooth SIG, Inc. All other trademarks, product names and logos are trademarks or registered trademarks of their respective proprietors.

The designations used in this manual for software and hardware are registered trademarks and are thus subject to the relevant regulations.

Document information

- Document number: eud-1292
- Document version: 1.0
- Valid as of: R1.0
- Copyright © 01.2011 Aastra Technologies Limited
- In PDF Viewer, click on this link to download the latest version of this document:
- *https://pbxweb.aastra.com/doc_finder/DocFinder/eud-1292_en.pdf?get&DNR=eud-1292*

Content

Operating and display elements 2

Safety 9

Dialling and phoning 16

Answering calls 17
Making calls 18

Using the display and operating elements 21

Keys 22
Input 23
Menu-guided navigation 25
Signals 27

Supplementary features 28

Making and answering calls 29
Using functions while in a call 39
Organising absences from the desk 43
Functions for special situations 49
Setting functions by remote control 62

Personalizing your phone 64

Configuring cordless phone functions 65
Display settings 71
Setting the volume 72
Profile settings 73
Hands-free and headset settings 75
General settings 77
Protection settings 82
Managing your private contacts 83
Configuring voice mail 85
Configure presence 86
Configuring keys 87
Formulating functions 88

Installation and first-time operation 90

Equipment provided 91

Options 91
Connecting a cordless phone 92
Battery 93
Carry strap 94
USB and external charging socket 94
Logging your phone on 95

Further information 96

Troubleshooting 97
Technical data 98

Index 100

Dialling and phoning

The following sections explain how to make phone calls simply and the functions your phone offers you whenever you receive a call.

Answering calls 17
Making calls 18

Answering calls

This section explains the procedure for answering a call.

Answering a call

Your phone is ringing and the indicator LED is flashing. To answer the call, proceed as follows.

The volume of the ringing call can become very loud. Do not hold the sound aperture up to your ear.

Press the Call key.

Notes:
- If the caller's phone number is received, it is shown on the display. If the phone number is stored in the private phone book or in the system, the display also shows the corresponding name.
- To find out how to make phone calls with the headset, refer to the Chapter "Using a headset", page 20.
- To find out how to activate the automatic hands-free mode, refer to the Chapter "Using your phone in hands-free mode", page 19.
- To find out how to set Auto Answer, refer to Chapter "Setting up a profile", page 73.

Ending a call

You want to end the call.

The call duration is displayed both during and after the call.

Call charges are also displayed after any external call which you initiated, provided your provider supports this function.

Press the End key.

Notes:
- To find out how to make phone calls with the headset, refer to the Chapter "Using a headset", page 20.
- To find out how to activate the automatic hands-free mode, refer to the Chapter "Using your phone in hands-free mode", page 19.

Making calls

This section explains the different ways you can make a call with your phone.

Dialling with the phone number

You want to call someone and key in that person's phone number.

With call preparation you can enter a phone number without it being dialled automatically, so you have time to check the number and, if necessary, correct it. The number is not dialled until you press the Call key.

For the communication system (communication server, OIP, Microsoft Outlook, TwixTel) to identify an external number it is recommended to enter the number in canonical format (+Country Code (Region Code) Phone Number). Press and hold down the 0 key to insert +.

<Phone number>

Enter a phone number in call preparation.
Press and hold down the 0 key to enter +.
You can use the Correction key to delete any incorrect character.

Press the Call key.
➔The user is called.

Dialling with redial

You want to call a person you have already called.

In the last-number redial list your phone automatically stores the phone numbers of the persons you have already called, complete with their names, where available. You can now call the person in question using this last-number redial list.

The last-number redial list has a maximum of 10 entries.

Press the Call key.
➔Redial list is displayed.

To scroll through the call numbers last dialled, press the navigation key downwards.

Press the Call key.
➔The phone number displayed is dialled.

Using your phone in hands-free mode

You want other people to join the conversation or to have your hands free while making the call.

The hands-free mode function activates the loudspeaker and the microphone.

During a call:
Press the Loudspeaker key.
➔The hands-free mode is now activated, is displayed.

Notes:
- Make sure the hands-free microphone is not obstructed.
- The sound quality is improved if you set the volume of your phone to a low setting.

To continue the call without hands-free operation:
Press the Loudspeaker key.
➔The loudspeaker and hands-free microphone are now deactivated.

Notes:
- To end a call in open-listening mode, press the End call key.
- To find out how to make phone calls with the headset, refer to the Chapter "Using a headset", page 20.
- To find out how to set Auto Answer, refer to Chapter "Setting up a profile", page 73.

Muting the microphone

In the middle of a call you want to talk briefly with other persons in the room without your call partner hearing your conversation.

You can switch the microphone on and off during a call.

Micro

Switching the microphone off:
Press the *Micro* softkey.
➔The microphone is deactivated, is displayed.

Micro

Switching the microphone back on:
Press the *Micro* softkey once again.

Using a headset

To make a phone call with the headset.

If you answer a call in headset mode using the Call key or Loudspeaker key, the call is provided on the headset.

Note:
If you loose the radio contact with a Bluetooth headset, you can go back into the radio area without being disconnected from the active connection.

Your phone is ringing. To answer the call, proceed as follows:
Press the Call key or Loudspeaker key.
→The call is provided on your headset.

Press the Loudspeaker key.
→The phone's microphone is switched on and the headset microphone is switched off.

Headset <--> *Handset*

You can use the *Headset* or *Handset* softkey to switch modes.

Ending a call:
Press the End key.

Notes:
- To find out how to activate the headset, refer to the Chapter "To activate headset mode", page 75.
- To find out how to connect a Bluetooth headset, refer to Chapter "Activating Bluetooth mode and Bluetooth devices", page 75.
- To call a user, dial the user's phone number and press the Call key or Loudspeaker key.
- For more information refer to your headset's user's guide.

Using the display and operating elements

The following sections explain how to operate your phone quickly and simply.

Keys *22*
Input *23*
Menu-guided navigation *25*
Signals *27*

Keys

Using the softkey

The 3 softkeys have variable functions. These functions are displayed above the key.

You can also store phone numbers on a softkey (see Chapter "Store a phone number under a key – number key", page 87).

<Setting value>

Press the softkey where the display shows the function you want.

<long>

Keep the softkey held down for a moment (about 2 seconds).

Using the hotkey

The hotkey is a user configurable key for 1 to 6 phone numbers and names.

Press the hotkey to open the hotkey menu.
Select the entry you want and call the contact using the Call key.

Input

Digit keys

The characters are assigned to the digit keys as follows. Press the relevant digit key repeatedly until the character you want is displayed.

1	- . _ ? 1 ! , : ; ' " ¿ ¡	2	A B C 2 Ä Æ Å Ç a b c 2 ä æ å à ç Press and hold down: Switching system
3	D E F 3 É d e f 3 é è ê	4	G H I 4 g h i 4 ì
5	J K L 5 j k l 5 Press and hold down: Calling up the service menu	6	M N O 6 Ñ Ö Ø Œ m n o 6 ñ ö ø ó œ
7	P Q R S 7 ß Š p q r s 7 ß š	8	T U V 8 Ü t u v 8 ü ù
9	W X Y Z 9 Ÿ Ž w x y z ž 9	0	+ 0
*	@ * / ( ) < = > % £ $ ¥ ª & § €	#	<Space> #

Enters digits

The digit keys are used to enter the digits 0 to 9.

Enter the letters

You can also use the digit keys to enter letters and special characters. A number of letters and special characters are assigned to each key.

To enter letters using the digit keys, you need to be in text mode. The text mode is activated automatically if the phone is expecting a text input. You can switch back and forth between number mode and letter mode during your input.

abc-->123

Switching between number mode and letter mode during your input:
Press the *abc-->123* or *123-->abc* softkey.

Switching between upper and lower case

You want to switch between upper and lower case while making an input in text mode.

Upper-case input is automatically activated when the first letter is entered. The text mode then automatically switches to lower-case input. You can use the Softkey to switch manually between upper-case and lower-case input.

a-->A

Switching between upper case and lower case in text mode:
Press the *a-->A* or *A-->a* softkey.

Correcting your input

You notice you have entered a wrong digit or character. You can either delete the input one character at a time or cancel the entire input.

To delete the last character:
Press the Correction key of the *Delete* softkey.

Exit editor without changes:
Press the End key.

Moving the Cursor

You want to go to a certain character for an input or correction.

With the navigation key you can move the cursor to the left or right.

Move the cursor with the horizontal navigation key.

Menu-guided navigation

Accessing the menu

The phone is in standby mode:

Press the navigation key to the right or the *Menu* softkey.
➔The first menu entry is displayed.

Use the vertical navigation key to scroll through the menu entries.

Select

Press the *Select* softkey.
➔Accessing the displayed menu.

Using the navigation key

You can retrieve a particular menu entry even more simply and efficiently using the navigation key. You can scroll vertically and horizontally through the different menu entries.

Navigation key in the idle state:
Left: *Profiles*
Right: *Main menu*
Top: *Activated features*
Bottom: *Phone book*

Horizontal navigation key:
Left: scrolls back through the menu.
Right: opens displayed menu, scrolls forward through the menu, retrieves detailed information.

Vertical navigation key:
Top: scrolls upwards in the list.
Bottom: scrolls downwards in the list.

Undoing actions

To cancel operating steps, proceed as follows:

Exit editor without changes:
Press the End key.

Scrolling back through the menu step by step:
Press the Correction key.

Back to the idle state in the menu:
Press the End key.

Activate/deactivate function

You can enable or disable a function or a menu entry by selecting the entry you want and pressing the *Select* softkey.

Select

Activate/deactivate function:
Press the *Select* softkey.

Resetting activated features

You can deactivate again all the activated functions (e.g. Forwarding).

Press the navigation key up.
→*Activated features* is opened.
Or:
Activated features are also available via the menu: *Menu* > *Activated features*.

Reset

Press the *Reset* softkey to deactivate the function you want.
→The function is now deactivated.

Signals

Indicator LED signals

Depending on the situation the indicator LEDs will flash or light up in different colours.

Colour	State	Description
	Flashes fast	• Incoming call • Callback
	Lit	Hands-free on
	Flashes fast	No-movement, man-down and escape alarm
	Flashes slowly	New voice mail or new text message
	Flashes fast	Outside the system's service area
	Flashes slowly	• Battery almost empty • Not subscribed to any system
	Flashes alternately	The phone is switched off

Supplementary features

The following sections explain the supplementary features provided by your phone for more efficient use.

Making and answering calls *29*
Using functions while in a call..... *39*
Organising absences from the desk *43*
Functions for special situations *49*
Setting functions by remote control..... *62*

Making and answering calls

This section explains some convenient features provided by your phone for making a call.

Dialling by name (Quickdial)

You want to make a call by entering a name.

With Quickdial you only need to press the digit keys for each letter once, even though each key is assigned several letters. An efficient algorithm provides quick search results.

Requirement: The name and the corresponding call number have to be stored in one of the system's phone books.

The surname and first name have to be separated by a space (# key), for example "no s" (6 6 # 7) for Noble Stephen. Ask your system administrator whether you should start with the surname or the first name.

Note:
The response time may vary greatly depending on the size and the number of phone books connected.

<Setting value>

Quickdial:
Press each of the corresponding digit keys once for the first few letters of the name you are looking for.
➔For each letter, the display shows the corresponding digit, for example a "6" for the letter "n".

ABC

Press the *ABC* softkey until the user or a list is displayed.
Or:
Phone book is also available via the menu: *Menu* > *Phone book* > *Quickdial*.

Scroll through the list until the user you want is displayed. Select the phone number you want.

Note:
If the phone is unable to find a matching user, *List empty* will appear on the display.

Press the Call key.
➔The phone number displayed is dialled.

Dialling from the phone book

You want to search a user in one of the connected phone books.

The surname and first name have to be separated by a space, for example "no s" for Noble Stephen. Ask your system administrator whether you should start with the surname or the first name.

To find out to create a new contact in your private phone book, refer to the Chapter "Creating a new contact entry", page 83.

Press the navigation key down.
Or:
Phone book is also available via the menu: *Menu* > *Phone book*.

Alphasearch

Scroll to *Alphasearch* and press the *Select* softkey.
If required, enter the first few letters of the name you are looking for (first name and surname separated by a space) until the user or a list is displayed.

Notes:
- Text mode is activated automatically.
- Use the # key to enter spaces.

Scroll through the list until the user you want is displayed. Select the phone number you want.

Press the Call key.
➔The phone number displayed is dialled.

Notes:
- The search function is not affected by upper/lower case and special characters.
- If the phone is unable to find a matching user, *List empty* will appear on the display.

Dialling from the call list of unanswered calls

You want to call someone who has previously tried to reach you.

Your phone automatically stores the phone number of this user in the call list and the display shows *Missed calls*. You can now call the person back using this call list.

The call list of unanswered calls contains a maximum of 10 entries.

Show

Calling a user back:
Press the *Show* softkey.
➔The display shows a list of the last unanswered calls.

Scroll through the list until the user you want is displayed.

Press the Call key.
➔The phone number displayed is dialled. Once the call has been successfully connected, the entry is deleted from the call list.

Close

Clearing the "Missed calls" display:
Press the *Close* softkey.
➔Deletes the display. The entry remains stored in the list of the last unanswered calls, is displayed.

Note:
The call list of unanswered calls can also be selected using the menu: *Menu* > *Call lists* > *Missed calls*.

Dialling from the call list of answered calls

You want to call back someone whose call you answered.

Your phone automatically stores the phone number of this user in the call list. You can now call the person back using this call list.

The list of answered calls contains a maximum of 10 entries.

Press the navigation key to the right or the *Menu* softkey.

Call lists

Scroll to *Call lists* and press the *Select* softkey.

Answered calls

Scroll to the *Answered calls* call list and press the *Select* softkey.
➔The display shows a list of the last answered calls.

Scroll through the list until the user you want is displayed.

Press the Call key.
➔The phone number displayed is dialled.

Dialling with redial

You want to call a person you have already called.

In the last-number redial list your phone automatically stores the phone numbers of the persons you have already called, complete with their names, where available. You can now call the person in question using this last-number redial list.

The last-number redial list has a maximum of 10 entries.

Press the Call key.
➔Redial list is displayed.

To scroll through the call numbers last dialled, press the navigation key downwards.

Press the Call key.
➔The phone number displayed is dialled.

Note:
Redial list can also be selected using the menu: *Menu* > *Call lists* > *Redial list*.

Dialling with configured softkey

You want to call someone whose phone number is stored under a softkey.

You can dial the person by pressing the corresponding softkey. To find out how to configure a softkey, refer to the Chapter "Configuring keys", page 87.

<Setting value>

Press the configured softkey.
→The key's allocated phone number is shown on the display.

Press the Call key.
→The phone number displayed is dialled.

Dialling with configured hotkey

You want to call someone whose phone number is stored under a configurable hotkey.

You can dial the person by pressing the corresponding hotkey. To find out how to configure a hotkey, refer to the Chapter "Configuring keys", page 87.

Press the hotkey.
→The key's allocated phone number is shown on the display.

Press the Call key.
→The phone number displayed is dialled.

Requesting a callback

You want to talk to a certain person. The person is busy or does not answer. You can make callback requests to both internal and external users. Not all providers support this function.

If the called party is busy, you can activate an automatic callback. In this case, your phone will start ringing as soon as the party you are trying to reach goes on-hook. Then when you press the Call key, the user is called directly.

If the called party does not answer, you can also request a callback. The user then obtains a message indicating your callback request on his display.

You called someone and hear the busy tone or the ring-back tone.

Callback

To activate a callback request:
Press the *Callback* softkey.
➔The display shows *Call expected*.

Close

Back to the idle state:
Press the *Close* softkey.
➔Callback remains activated.

Note:
The callback is stored in *Menu* > *Activated features* as long as it was not answered or cancelled by the system.

Reset

Reset callback:
Press the *Reset* softkey.
➔Callback is deactivated.

Note:
You can only have 1 callback activated at a time and only 1 callback can be expected from you. Your callback request will automatically be cancelled by the system after about half an hour.

To answer the callback request

Someone has asked you to call back. The display shows *Callback requested*.

Call

To answer the callback request:
Press the *Call* softkey.
➔The phone number is dialled.

Delete

Clear callback:
Press the *Delete* softkey.
➔Callback is deleted.

Note:
The callback can be changed via *Menu* > *Activated features* > *Delete* or *Call* as long as it was not answered or cancelled by the system.

Call waiting on an internal user

You want to talk to an internal user. However, the person is busy.

As a result of your call waiting, the person hears a call waiting tone and your phone number or name appears on his display. The user has the possibility of answering, deflecting or rejecting your call.

Requirement: It is essential that the internal user has not barred the Call waiting function on his phone (for configuration see the Chapter "Activating protection against call types", page 82).

Ask your system administrator whether the Call waiting function is enabled on the system.

Call waiting

User is busy:
Press the *Call waiting* softkey.
➔You hear the dialling tone.

Note:
If the person rejects your call request or if call waiting is not possible, the call is, depending on the system's configuration, disconnected (busy tone) or forwarded to a preconfigured destination.

Answering call waiting

You are in a call and hear the call waiting tone. Another user is urgently trying to reach you.

You can either answer, deflect or reject the call.

Answer

Answering the call:
Press the *Answer* softkey.
➔The first call party is put on hold. You are now connected with the party who initiated the call waiting.

Note:
For more detailed information on how to broker between callers or set up a conference, please refer to the Chapters "Brokering between an enquiry call party and your call partner", page 40 and "Making a conference call", page 40 respectively.

Deflect

Deflect call:
Press the *Deflect* softkey.

<Phone number>

Enter the user's phone number and confirm with the *Ok* softkey.
➔Call-waiting party is put through.

Note:
You can also find the call number of the user you want in the phone book or in a call list.

Reject

Rejecting the call:
Press the *Reject* softkey or the End key.
➔You remain connected with your original call partner. Depending on the system configuration the call-waiting party hears the busy tone or he is forwarded to a preconfigured destination.

End call

Ending a current call:
Press the *End call* softkey.
➔The first call is terminated. You are now connected with the party who initiated the call waiting.

Starting an announcement

You want to address internal users directly via their loudspeaker – where available –, without waiting for a reply (similar principle to that of an intercom system).

Requirement: It is essential that the internal user has not barred his phone against announcement (for configuration see the Chapter "Activating protection against call types", page 82).

<Phone number>

Enter the call number and press the *Announcement* softkey.
➔The call number is displayed.

Announcement

Note:
You can also find the call number of the user you want in the phone book or in a call list.

Ok

Confirm with the *Ok* softkey.
➔User is made aware of the announcement. You can now talk.
Or:
You can also start the announcement using *Menu* > *Call features* > *Announcement* > *User*/*Group*.

Receiving an announcement

Your phone rings once and then automatically initiates the announcement. The display shows . You will be addressed via your loudspeaker.

You can listen to the announcement or stop it.

To continue the announcement as a phone call:
Press the Call key.
➔You are now connected to the person who initiated the announcement.

To stop the announcement:
Press the End key.

Private call with PIN

You want to make a private call on your phone or on a third-party phone.

With the aid of your PIN you can use any phone to make an external call with your own personal settings, even if that phone is locked for external calls. The called party's display shows your personal phone number and not the number of the phone from which you are making your call. Any call charges incurred will be charged to you.

The call number dialled is not stored in the last-number redial list.

<Setting value>

1. Enter procedure #46 followed by your internal call number.
2. Enter your PIN.
3. Enter the external call number directly, without the exchange access digit.

Press the Call key.
→The phone is now enabled. The external user is called.

Note:
The default PIN setting "0000" is not accepted. First change the PIN as described in chapter "Changing the User PIN", page 78 or use */# procedure *47 (see "User's Guide */# Procedures" on the Aastra document portal: *www.aastra.com/docfinder*). If you have forgotten your PIN, your system administrator can reset it to the default setting.

Using functions while in a call

This section explains the different options provided by your phone while you are in a call.

Enquiry call during a call

You want to call someone else briefly without losing your current call partner. Then you want to resume your conversation with your original call partner.

With the *Enquiry* function you can call someone else in the middle of a call and put your original call partner on hold. You can make enquiry calls to both internal and external users.

Enquiry

You are making/taking a call:
Press the *Enquiry* softkey.

<Phone number>

Enter the phone number of the enquiry call party.
➔Enquiry call party is called; first call partner is on hold.

Note:
You can also find the call number of the user you want in the phone book or in a call list.

End call

To end the enquiry call:
Press the *End call* softkey or the End key.
➔You are now back through to your original call partner.

Notes:
- If your enquiry call party hangs up and you also go on-hook by mistake, you will hear a continuous ringing signal for 10 seconds to draw your attention to the person still on hold. If you press the Call key during the continuous ringing, you will be reconnected with your first call partner.
- If the other user does not answer, you can cancel the enquiry call with the *End call* softkey and take back the first call.

Brokering between an enquiry call party and your call partner

You are talking with an enquiry call party and have your original call partner on hold. You want to be able to switch back and forth between the two.

In an enquiry call you can use the brokering function to switch back and forth between an enquiry call party and the party on hold. Brokering is possible with both internal and external users. You can also broker between conference parties as a group and an enquiry call party.

Brokering

Brokering:
Press the *Brokering* softkey.
→Your call partner changes. The other call party is put on hold.

End call

To terminate the current connection:
Press the *End call* softkey.
→Call party disconnected. Connected with the call party on hold.

Making a conference call

You are in a call and have a call party on hold at the same time. You want to include the party on hold in the conversation and hold a conference call.

With the conference function you can include a call party on hold in the current conversation. From the conference call you can initiate an enquiry call to someone else. You can broker between the parties of the conference and the enquiry call party.

Depending on the system, a conference call can consist of up to 6 conference participants. You can hold a conference call with internal and external users.

Conference

Add a caller on hold:
Press the *Conference* softkey.
→The call party on hold is now included in the call.

Note:
Depending on the system's configuration you may hear an attention tone.

Leaving a conference call:
Press the End key.
→The other conference parties remain in the call.

Transferring a call partner

You want to put your call partner through to someone else.

With the *Enquiry* function you can connect your call partner with someone else. You can connect internal and external users with one another.

Enquiry

You are making/taking a call:
Press the *Enquiry* softkey.

<Phone number>

Enter the phone number of the enquiry call party.
➔Enquiry call party is called; first call partner is on hold.

Note:
You can also find the call number of the user you want in the phone book or in a call list.

Connecting with notification:
Wait until the person has answered the call. Announce the call party.

Connect

Press the *Connect* softkey or the End key.
➔Your first call partner and the other person are now connected with each other.

Note:
If the other user does not answer, you can cancel the enquiry call with the *End call* softkey and take back the first call.

Connecting without notification:
Wait for the first ringing tone, then press the End key.
➔The other party is then called directly by your first call partner.

Note:
Recall: If the other party does not answer, the call comes back to your phone.

Parking a call partner

You want to put your call partner on hold without using a phone line as a result.

You can park your call partner locally. A locally parked call partner can only be retrieved by the phone from which the function was initially carried out.

You can also allocate the Park function to a freely configurable key (see Chapter "Configuring keys", page 87).

Park

Press the *Park* softkey.
➔Your call partner is now parked locally; P is displayed.

Take back

To retrieve a parked call party:
Press the *Take back* softkey.

Notes:

- With the End key the display returns to the idle state. As long as your call partner does not hang up, he remains parked. You can retrieve your parked call party using *Menu* > *Activated features* > *Take back*.
- The */# procedure for central parking can be found in the "User's Guide */# Procedures" on the Aastra document portal: *www.aastra.com/docfinder*.

Organising absences from the desk

This section explains the different options provided by your phone when you want to leave your desk.

The Presence function lets you set your personal presence status quickly. It also tells you directly whether the user you want is reachable or absent without you having to call him. The information details depend on the type of telephone.

Presence state

You have a choice of 5 presence profiles for controlling your presence status:

	Presence state		
	Available (default)		*Absent*
	Meeting		*Busy*
	Not available		

You can call up the presence of the user you want in the following situations (providing the user has a phone with presence profiles).

- when you call an internal user;
- in the phone book or in a call list;
- during dialling by name;

Notes:
- You can only call up a user's presence if the user in question has a phone with presence profiles.
- External applications such as Open Interfaces Platform (OIP) can affect your presence status. Contact your system administrator for more information.

<Presence profile>

To activate the presence profile:
Select the profile you want and press the *Select* softkey.
➔The profile is activated.
Or:
Press the function key for*<Presence>*.

<Presence profile>

To deactivate the presence profile:
Select another profile and press the *Select* softkey.
➔The profile is deactivated.
Or:
Press the function key for*<Presence>*.

To check a user's presence:
Enter a complete internal name.
Or:
Select the user you want from the phone book or a call list.
➔Presence status is displayed.
Press the *Call* softkey.
➔The phone number is dialled.

Forwarding calls (Call forwarding)

You want to leave your desk. Calls for you are to be forwarded to a different destination (phone, voice mail).

With call forwarding you can forward incoming calls directly to a different destination.

Notes:
- A forwarding applies to all connected phones.
- Only one forwarding variant at a time is possible.

Forwarding

Call Forwarding

User

To activate forwarding:
Press the navigation key to the right or the *Menu* softkey.

Scroll to *Forwarding* and press the *Select* softkey.

Scroll to *Call forwarding* and confirm with the *Ok* softkey.

Scroll to *User* and confirm with the *Ok* softkey.
Enter the user's phone number and confirm with the *Ok* softkey.
➔Forwarding is activated.

Note:
You can also find the call number of the user you are looking for in the redial list.

To deactivate forwarding:
Press *Menu* > *Activated features* > *Reset*.

Notes:
- If a call is to be forwarded only when you are already in a call, select *Forwarding busy*.
- You can also forward to your *Voice Mail* (see Chapter "Forwarding to voice mail", page 47) or to a *Message* (see Chapter "Forwarding to a message", page 48).
- You can also activate forwarding by remote control, see Chapter "Setting functions by remote control", page 62.

Forwarding a Call on No Reply (CFNR)

You want calls that you receive on your phone to be forwarded to another destination.

Both your own phone and the other destination will then start ringing. The system configuration determines whether or not there is a ringing delay at the other destination. Whoever goes off-hook first, answers the call. Depending on the system configuration, Call Forwarding on No Reply can also be activated when your phone is busy.

Notes:
- A forwarding applies to all connected phones.
- Only one forwarding variant at a time is possible.

Forwarding

Call Forwarding on No Reply

User

To activate forwarding:
Press the navigation key to the right or the *Menu* softkey.

Scroll to *Forwarding* and press the *Select* softkey.

Scroll to *Forwarding on No Reply* and confirm with the *Ok* softkey.

Scroll to *User* and confirm with the *Ok* softkey.
Enter the phone number of the destination to which your calls are to be forwarded and confirm with the *Ok* softkey.
➔Forwarding is activated.

Note:
You can also find the call number of the user you are looking for in the redial list.

To deactivate forwarding:
Press *Menu* > *Activated features* > *Reset*.

Notes:
- You can also forward calls to your *Voice Mail* (see Chapter "Forwarding to voice mail", page 47).
- You can also activate forwarding by remote control, see Chapter "Setting functions by remote control", page 62.

Forwarding to voice mail

You cannot momentarily be reached on your phone. If you forward to your voice mail, a user can leave you a voice message.

You can use the global greeting or your own greeting (see Chapter "Configuring voice mail", page 85).

For further information on voice mail refer to the "User's Guide Voice Mail Systems" on the Aastra document portal: *www.aastra.com/docfinder*.

Notes:
- A forwarding applies to all connected phones.
- Only one forwarding variant at a time is possible.

Forwarding

Call Forwarding

Voice Mail

To activate forwarding:
Press the navigation key to the right or the *Menu* softkey.

Scroll to *Forwarding* and press the *Select* softkey.

Scroll to *Call forwarding* and confirm with the *Ok* softkey.

Scroll to *Voice Mail* and confirm with the *Ok* softkey.
➔Forwarding is activated.

To deactivate forwarding:
Press *Menu* > *Activated features* > *Reset*.

Notes:
- You can specify whether your voice mail should answer directly (*Call forwarding*) or with a delay (*Forwarding on No Reply*), or only if you are already on the phone (*Forwarding if busy*).
- A new voice mail message is signalled with a text message on the display and a red-flashing LED indicator in the idle state.

Forwarding to a message

You cannot be reached on your phone. You want any internal user who calls you to get a text message. The user hears the busy tone and obtains a text message on his display.

Requirement: The internal user must have a phone capable of receiving text messages. Users whose phone cannot receive text messages are put through to your phone or rerouted to a destination predefined within the system.

Notes:
- A forwarding applies to all connected phones.
- Only one forwarding variant at a time is possible.

To activate forwarding:
Press the navigation key to the right or the *Menu* softkey.

Forwarding

Scroll to *Forwarding* and press the *Select* softkey.

Call Forwarding

Scroll to *Call forwarding* and confirm with the *Ok* softkey.

Message

Scroll to *Message* and confirm with the *Ok* softkey.

<Text>

Enter the text and confirm with the *Ok* softkey.
➔Forwarding is activated.

To deactivate forwarding:
Press *Menu* > *Activated features* > *Reset*.

Note:
If you activate another forwarding, your forwarding to message is deactivated.

Functions for special situations

This section explains the different options provided by your phone to deal with special situations.

Function selection for configurable key

This section contains a list of all the functions you can store under a configurable key via the menu. Contact your system administrator for more information.

More information on how to store functions under a configurable key using function commands and */# procedures can be found in Chapter "Formulating functions", page 88.

Function	Description
Call Forwarding Unconditional	With this function you forward incoming calls directly to a different destination. For further information refer to Chapter "Forwarding calls (Call forwarding)", page 45.
Forwarding if busy	With this function you forward incoming calls directly to a different destination if you are busy. For further information refer to Chapter "Forwarding calls (Call forwarding)", page 45.
Call Forwarding on No Reply	With this function you forward incoming calls you receive on your phone to another destination. For further information refer to Chapter "Forwarding a Call on No Reply (CFNR)", page 46.
Switch group	This function lets you route calls and functions via switch groups (with two switch positions).
Relay	You can control external electric equipment or installations using relays. For example you can use your phone to open and close electric gates or to switch the lights on or off throughout a building.
Welcome announcement	Announcement service for incoming internal and external calls. If you do not answer an external call after a set delay, the user who is calling will obtain an announcement. After the announcement the caller will then hear the ring-back tone again.
Lock	This function protects you against Call Waiting and Announcement. For further information refer to Chapter "Activating protection against call types", page 82.
Remote control	This function lets you set remote maintenance access to your phone on a one-off basis of permanently.
MCID	This function lets you track a malicious call. For further information refer to Chapter "Tracking a malicious call", page 56.
***ACD* (Automatic Call Distribution)**	The call routing of calls in the queue can be controlled using an ACD application.

Function	Description
User group	In the user group incoming and internal calls are routed to a group of internal destinations according to a preconfigured call distribution.
Home alone	If calls to a user group can only be answered by one user, the user in question can activate Home Alone on the user group. Then if the user is already in a call, all subsequent internal or external calls to the user group obtain a busy tone.
configurable	You can use function commands to define a function to suit your personal requirements. A function can consist of one or more function commands, function codes, and the phone number. You can either carry out a function directly or store it under a key. For further information refer to Chapter "Formulating functions", page 88.
CLIR	This function lets you prevent your call number from being displayed to the caller. For further information refer to Chapter "Suppressing your call number from your called party's terminal display", page 56.
Deflect	This function lets you deflect an incoming call to another user. For further information refer to Chapter "Deflect a call during the ringing phase", page 51.
Park	With this function you put your call partner on hold without using a phone line as a result. For further information refer to Chapter "Parking a call partner", page 42.
Do not disturb	With this function incoming calls are automatically forwarded to a specific destination. For further information refer to Chapter "Activating protection against call types", page 82.
Greeting	This function allows you to activate/deactivate the greeting you want. For further information refer to Chapter "Managing personal greeting", page 85.
Ring alone	This function lets you specify which of your phones signals incoming calls acoustically (as part of the one-number user concept). For further information refer to Chapter "Activating ring alone", page 58.
Personal call routing	This function lets you specify where incoming calls are routed to (as part of the one-number user concept). For further information refer to Chapter "Activating personal call routing", page 57.
Personal call routing menu	Menu for selecting the personal call routing. For further information refer to Chapter "Activating personal call routing", page 57.
Fast take **(Pick up a Call)**	You can take an incoming call or an active call from another phone to your phone.
Presence	Menu for selecting a presence profile. For further information refer to Chapter "Presence state", page 43.
Presence profile	Menu for selecting a presence profile. For further information refer to Chapter "Presence state", page 43.

Deflect a call during the ringing phase

You do not want to answer a call yourself but deflect it to another user.

With the function *Deflect* you can deflect calls to an internal or external user or to the voice mail during the ringing phase.

Your phone is ringing and the indicator LED is flashing. To deflect the call, proceed as follows.

Deflect

Press the *Deflect* softkey.

<Phone number>

Enter the phone number and confirm with the *Ok* softkey.
➔The call is deflected to the user you want.

Notes:
- You can also find the call number of the user you want in the phone book or in a call list.
- If the user you want to deflect to is busy, the call will not be deflected. The display shows *Busy* and your phone still rings.

Reject a call during the ringing phase

You do not want to answer a call.

You can reject a call already during the ringing phase.

Reject

Press the *Reject* softkey or the End key.
➔The connection is rejected and, depending on the system configuration, the caller obtains the busy tone or he is forwarded to a preconfigured destination.

Listening to voice mail

Voice Mail from is displayed and the indicator LED is red-flashing.

Note:
Depending on the system configuration your system administrator can specify that you are notified by e-mail whenever you receive a new voice mail (with the voice mail attached). Contact your system administrator for more information.

Listen

Listening new messages:
Press the *Listen* softkey.
➔Message is played back.
Or:
Voice mail can also be selected using the menu: *Menu* > *Voice Mail* > *Inbox* > *Listen*.

Listening to all messages:
Listening to all messages is available via the menu: *Menu* > *Voice Mail* > *Inbox* > *Listen all*.

Menu

To delete the message:
Press the navigation key to the right or the *Menu* softkey.

Voice Mail

Scroll to *Voice Mail* and press the *Select* softkey.

Inbox

Scroll to *Inbox* and press the *Select* softkey.

Delete

Press the *Delete* softkey.
➔Voice mail is deleted.

Notes:
- To find out how to configure call forwarding to your voice mail, refer to the Chapter "Forwarding to voice mail", page 47.
- To find out how to configure a voice mail, refer to the Chapter "Configuring voice mail", page 85 or in the "User's Guide Voice Mail Systems" on the Aastra document portal: *www.aastra.com/docfinder*.

Send text messages

You want to send a written message to an internal user.

You can send a text message to an internal user. The text message will appear on the person's display.

Requirement: The internal user must have a phone capable of receiving text messages.

You can use one of the text messages stored in the system directly, modify it or create a new text message.

Press the navigation key to the right or the *Menu* softkey.

Text message

Scroll to *Text message* and press the *Select* softkey.

New

Scroll to *New* and press the *Select* softkey.

<Text message>

Select one of the text messages stored in the system and press the *Select* softkey.

<Text>

Adapt or expand the text and press the *Send* softkey.

<Destination>

Select the destination and press the *Select* softkey.

<Phone number>

For *User* and *Group*: Enter the call number and press the *Send* softkey.
➔The text message is sent.

Note:
If the display shows *Not available*, the text message could not be sent.

Read text messages

Your display shows *New message received from* and the envelope symbol. The LED indicator is red-flashing.

Show

Show text message:
Press the *Show* softkey.
➔The display shows the sender and the date/time of the text message.

Read

Read text messages:
Select the text message you want and press the *Read* softkey.
➔If the text message runs over several lines, use the navigation key to scroll.

Delete

Delete text message:
Press the *Delete* softkey.
➔The text message is deleted; the next text message is retrieved from the memory.

Or:
Press *Menu* > *Text message* > *Inbox* to select the text message and continue as described above.

Note:
You can select and read a new text message even during an active call using *Text message* > *Inbox*.

Picking up a call

You hear a phone ringing in your vicinity and want to pick up the call.

With the *Pick up* function you can pick up the call from the other phone on your own phone.

Press the navigation key to the right or the *Menu* softkey.

Call features

Scroll to *Call features* and press the *Select* softkey.

Pick up

Scroll to *Pick up* and press the *Select* softkey.

<Phone number>

Enter the number of the phone from which you want to pick up the call and confirm with the *Ok* softkey.

Note:
You can also find the call number of the user you want in the phone book or in a call list.

Making a call on a third-party phone

You want to make a call on a third-party phone using your personal settings, for example on a colleague's phone or in a meeting room.

You can activate a third-party phone to make an internal or external call using your personal settings, even if the phone is locked for external calls.

You can activate the phone for a business or private call.

Once you have activated the phone using a */# procedure and your PIN, dialling by your private phone book is available.

The called party's display shows your personal phone number and not the number of the phone from which you are making your call.

Any call charges incurred will be charged to you.

<Setting value>

1. Enter procedure #36 for a business call.
2. Enter your internal phone number.
3. Enter your PIN.
4. Enter the internal or external phone number with the exchange access digit.

Press the Call key.

➔The phone number displayed is dialled.

Note:
When you hang up, dialling by name and your private phone book remain available for a whole minute so you can make another call.

Or:

1. Enter procedure #46 for a private call.
2. Enter your internal phone number.
3. Enter your PIN.
4. Enter the external call number directly, without the exchange access digit.
5. Press the Call key.
   ➔The phone is now enabled; the external user is called.

Note:
The default PIN setting "0000" is not accepted. First change the PIN as described in chapter "Changing the User PIN", page 78 or use */# procedure *47 (see "User's Guide */# Procedures" on the Aastra document portal: *www.aastra.com/docfinder*). If you have forgotten your PIN, your system administrator can reset it to the default setting.

Suppressing your call number from your called party's terminal display

You do not want your call number to appear on the terminal display of a called party in the public network.

You have two possibilities:

- If you never want the phone number to be displayed, set *CLIR Permanent*.
- To suppress your call number display for certain calls only, select the function *CLIR Per call* before dialling your party's call number.

This function must be stored under a function key (see chapter "Configuring keys", page 87).

You can also execute the function with a */# procedure (see "User's Guide */# Procedures" on the Aastra document portal: *www.aastra.com/docfinder*).

Before the call:
Press the function key for *<CLIR>*.

Notes:
- CLIR works only with external calls.
- This feature depends on the range of services offered by your provider.

Tracking a malicious call

Your are being threatened or molested by a call. You want to identify the caller.

Using the *MCID* (Malicious Call Identification) function the provider records the following call data: Your phone number, the caller's phone number, and the date and time of the call.

MCID has to be enabled by your provider. Your provider will inform you about accessing the recorded call data.

This function must be stored under a function key (see chapter "Configuring keys", page 87).

During a call:
Press the function key for *MCID*.

After the call do not hang up: press the function key for *MCID* while you hear the busy tone.

Activating personal call routing

You wan to specify which of your phone shall ring when you receive a call.

If your system administrator has set up a phone number with several phones for you as well as the call routings, you can specify which of your phones shall signal a call by using the personal call routing. Your system administrator can set up up to 5 call routings. You can only answer a call on phone where the call is signalled. Contact your system administrator for more information.

You can activate a call routing for all phones. If you have not configured a call routing, the default setting (all phones are ringing) is used as standard.

This function can also be stored under a configurable key (see Chapter "Configuring keys", page 87).

Activating personal call routing:
Press the navigation key to the right or the *Menu* softkey.

Settings

Scroll to *Settings* and press the *Select* softkey.

General

Scroll to *General* and press the *Select* softkey.

Personal call routing

Scroll to *Personal call routing* and press the *Select* softkey.

<Setting value>

Select the call routing you want and confirm with the *Select* softkey.
➔Personal call routing is activated.

To deactivate personal call routing:
Press *Menu* > *Activated features* > *Reset*.

Renaming personal call routing:
Press *Menu* > *Settings* > *General* > *Personal call routing* > *Modify*.

Activating ring alone

You want to specify which of your phones shall ring acoustically when you receive a call.

When your system administrator has set up a phone number with several phones, you can define on which phones a call shall acoustically be signalled using ring alone.

When you have activated ring alone on a phone, the acoustic ringing tone is deactivated for all other phones ( ). An incoming call is signalled in the display of all phones. You can answer the call on each of your phones.

Note:
When you have activated ring alone but deactivated the personal call routing for a phone in parallel, an incoming call is not acoustically but only visually signalled.

This function must be stored under a function key (see chapter "Configuring keys", page 87).

In the idle state:
Press the function key for *<Ring alone>*.
➔Ring alone is activated/deactivated.

Activating / deactivating room monitoring (Baby surveillance)

You want to use your cordless phone to observe acoustic monitoring tasks, for example to monitor a toddler.

You can activate a room monitoring mode on your cordless phone. You can select between active and passive room monitoring.

Activate the room monitoring on your cordless phone. The microphone for room monitoring is activated after a delay of 10, 20 or 30 seconds. Use this time lag to position the cordless phone in the room where you want e.g. to monitor your child and leave the room.

Active room monitoring:

As soon as the ambient noise level near the monitoring phone exceeds the configured level (noise sensitivity: *Very low*, *Low*, *Medium*, *High*) for more than 2 seconds, a call is immediately triggered to an internal or external destination number you have specified (destination phone). is displayed.

When the call is answered on the destination phone, a call is set up: one-way (connection only from the monitoring to the destination phone) or two-way (mutual call connection during 1 minute in hands-free mode). Provided the call connection is not previously terminated neither on the monitoring nor on the destination phone, the connection will automatically be terminated after 1 minute. The microphone for room monitoring is reactivated after 1 minute and a call only triggered when the configured level is again exceeded.

When the destination phone is busy, the microphone for room monitoring is reactivated after 15 seconds. When the destination phone does not answer, the call is terminated and the microphone for room monitoring is reactivated after 1 minute. A call is only triggered again when the configured level is again exceeded.

When the monitoring phone receives an internal or external call from another phone as the destination phone, this call is only visually but not acoustically signalled. You can answer the call on the monitoring phone. You can also make a call on the monitoring phone. Once the call has been terminated, the monitoring phone immediately switches back to monitoring mode. Please note that room monitoring is deactivated as long as the monitoring phone is called or is in a call connection. Avoid these monitoring gaps by activating a call forwarding on the monitoring phone. A verification call of the destination phone is yet possible with call forwarding.

Room monitoring mode:

- Active room monitoring with one-way call connection.
- Active room monitoring with two-way call connection.
- Passive room monitoring (*Listen only*).

Notes:
- Room monitoring based on DECT technology cannot be 100% reliable.
- Extraneous noises in the monitored room call lead to false calls.
- Therefore no liability can be assumed for failed monitoring calls or for false calls.

Passive room monitoring:

You can also listen into the monitored room using a verification call. Call the monitoring phone from the destination phone. When the destination number is an external call number, CLIP may not be suppressed. The monitoring phone answers the call automatically and without acoustic signalling and sets up a one-way or two-way call connection depending on the settings. This is possible even if a call forwarding is activated on the monitoring phone.

There is no time limit to the duration of a verification call, which must be terminated on the destination phone or on the monitoring handset. Once the call has been cleared down, the monitoring phone immediately switches back to monitoring mode.

Press the navigation key to the right or the *Menu* softkey.

Settings

Scroll to *Settings* and press the *Select* softkey.

Room monitoring

Scroll to *Room monitoring* and press the *Select*.

<Settings>

Settings:

1. Scroll to *Mode*, select the room monitoring mode you want and press the *Select* softkey.
2. Scroll to *Sensitivity*, select the level you want and press the *Select* softkey.
3. Scroll to *Activation delay*, select the destination you want and press the *Select* softkey.
4. Scroll to *Destination number*, enter the destination number and press the *Save* softkey.

Note:
Test call destination > *Select* allows you to test the phone number you have entered to make sure it is correct.

Enable room monitoring

Activating room monitoring:
Scroll to *Enable room monitoring* and press the *Select* softkey.
➔You hear the acknowledgement tone and the display shows the destination number after 10 seconds. The symbol shows when the microphone for room monitoring is activated.

Enable room monitoring

To deactivate room monitoring:
Press the *Reset* softkey.
Or:
Scroll to *Enable room monitoring* and press the *Select* softkey.
➔Room monitoring is now deactivated.

Silent intrusion

Silent intrusion is a variant of the *Intrusion* function and is used mainly in call centres.

Another user can intrude on your active call and listen in to your conversation without you and your call party noticing. Unlike Intrusion you will receive neither a visual nor an acoustic signal.

This means you cannot reject Silent intrusion. The third user's microphone remains switched off. He can however intrude on the call at any time by enabling his microphone or pressing the *Intrusion* function key.

Your system administrator can allocate this function to a configurable key.

Notes:
- Silent intrusion has to be enabled. Contact your system administrator for more information.
- Silent intrusion may infringe on your national data protection provisions or be permitted only under certain circumstances.
- If you intend to use this function notify your call party in advance.

1. Enter the call number of the user you want.
2. Once the busy tone sounds, press key 4.
➔Silent intrusion is activated.

Free seating

You do not have your own workplace and share desk and phone with other employees.

Log in:

Free Seating lets you log in on a phone configured for that purpose. Once you are logged in, your personal call lists, phone book and all your other personal settings and Hotkeys are available to you immediately.

Notes:
- You can only log in to a phone if no other user has yet logged in to that phone for free seating purposes.
- You can only log on once to a Free Seating phone. The moment you log in to another free seating phone, you are automatically logged off the original phone.

Log out:

To free up a phone, you need to log off again. To ensure a phone is not blocked for other users if you forget to log off, your system administrator can set up a logoff process with an automatic time limit:

- After a certain amount of time after login (e.g. after 6 hours and 30 minutes).
- At a certain time (e.g. 6.30 pm)

Notes:
- If no user is currently logged on to a Free Seating phone, depending on the system configuration only emergency calls can be made from that phone.
- As long as you do not have your own phone or are not logged on to a Free Seating phone, your caller will obtain either the busy signal or be forwarded to a preconfigured destination, depending on the system configuration.

Free seating log in:

Log in free seating:
Press the *Free seating log in* softkey.
Or:
Free seating can also be selected using the menu: *Menu* > *Settings* > *Free seating log in*.

Enter phone number and PIN and confirm with the *Ok* softkey.
➔You are now logged in and can use the free seating phone with your personal settings.

Note:
The default PIN setting "0000" is not accepted. First change the PIN as described in chapter "Changing the User PIN", page 78 or use */# procedure *47 (see "User's Guide */# Procedures" on the Aastra document portal: *www.aastra.com/docfinder*). If you have forgotten your PIN, your system administrator can reset it to the default setting.

Free seating log out:

Log out free seating:
Press the *Free seating log out* softkey.
➔The display with the call number is displayed.
Depending on the system configuration enter the PIN and confirm with the *Ok* softkey.
➔You are now logged off; the free seating phone is now available again to other users.

Note:
You are automatically logged off if your system administrator has set up an automatic logoff process.

Setting functions by remote control

This section explains how you can alter your phone's settings even if you are not directly at your phone.

You are not at your desk and want to set various functions on your phone from a different phone.

You can activate/deactivate many of your phone's functions by remote control from a different phone.

The remote control is initiated using a special */# procedure. You can then enter the function commands and */# procedures.

<Setting value>

Using remote control from a third-party phone:

1. Enter procedure #36.
2. Enter your phone number.
3. Enter your PIN.
4. Enter the */# procedure for activating/deactivating the function you want.

Press the Call key.

➔Acknowledgement tone sounds; function is activated/deactivated.

Note:
The default PIN setting "0000" is not accepted. First change the PIN as described in chapter "Changing the User PIN", page 78 or use */# procedure *47 (see "User's Guide */# Procedures" on the Aastra document portal: *www.aastra.com/docfinder*). If you have forgotten your PIN, your system administrator can reset it to the default setting.

Personalizing your phone

These sections explain how to adapt the phone's basic settings to suit your personal requirements.

Configuring cordless phone functions *65*

Display settings *71*

Setting the volume *72*

Profile settings *73*

Hands-free and headset settings *75*

General settings *77*

Protection settings *82*

Managing your private contacts *83*

Configuring voice mail *85*

Configure presence *86*

Configuring keys *87*

Formulating functions *88*

Configuring cordless phone functions

This section explains the procedure for making settings on your cordless phone.

Switching the cordless phone on/off

You want to switch your phone on or off.

Switching the phone off:
Keep the End call key pressed down for approx. 2 seconds and answer *Ok* to the safety prompt.
➔The phone is switched off.
Or:
Function is also available via the menu: *Menu* > *Settings* > *General* > *Switch off*.

Notes:
- You cannot switch the phone off in a call.
- When the phone is switched off, incoming calls are stored in the call list.

Switching the phone on:
Pick up the phone from the charging bay and keep the End call key pressed down for approx. 2 seconds.
➔The phone is switched on.

Note:
If you cordless phone cannot find a system, the display shows "No system". You can switch to an available system using *Menu* > *Settings* > *System* > *System registrations*.

Locking/unlocking the keypad

You leave your workstation and want to avoid accidentally pressing your phone keys.

You can lock the keypad against unintentional actuation. You can choose whether you want the keypad to be unlocked automatically when you receive a call or whether you prefer to unlock the keys manually in any case.

Locking the keypad:
Keep the hash key pressed down for approx. 2 seconds.
➔The keypad is locked.

Unlocking the keypad:
Press the *Unlock* softkey and the hash key.
➔The keypad is unlocked.

Unlocking the keypad automatically:
Enable the *Auto key lock* via *Menu* > *Settings* > *General*.
➔The keypad is locked automatically after approx. 10 seconds, 🔒 is displayed. The keypad is automatically unlocked when you receive a call. The lock is reactivated immediately after the end of the call.

Locking your phone

You need to leave your desk and want to ensure that no-one can alter your phone's settings, look at your private data, or make outside calls from your phone.

You can lock your phone with a PIN consisting of two to ten digits. You can change it via menu (see the Chapter "Changing the User PIN", page 78) or with the function code *47 (see "User's Guide */# Procedures" on the Aastra document portal: *www.aastra.com/docfinder*).

You can lock either just the configuration (*Configuration locked*) or the entire phone (*Phone locked*). With *Phone locked* your private data cannot be viewed and external calls can only be made from your phone in accordance with the system settings.

Press the navigation key to the right or the *Menu* softkey.

Settings

Scroll to *Settings* and press the *Select* softkey.

General

Scroll to *General* and press the *Select* softkey.

Lock

Scroll to *Barring* and press the *Select* softkey.
➔You are prompted to enter your PIN.

<PIN>

Enter the PIN and confirm with the *Ok* softkey.

<Setting value>

Select the barring you want and enable with the *Select* softkey.
➔The phone is now locked; 🔒 is displayed.
➔To lock all your phones, execute function code *33* <PIN> # (see "User's Guide */# Procedures" on the Aastra document portal: *www.aastra.com/docfinder*).

Unlocking your phone

You want to unlock your phone.

You can use the PIN to unlock your phone. If you have forgotten your PIN, your system administrator can reset it to the default setting.

Press the navigation key to the right or the *Menu* softkey.

Activated features

Scroll to *Activated features* and press the *Select* softkey.

<Barring>

Select the barring you want and press the *Reset* softkey.
➔You are prompted to enter your PIN.

<PIN>

Enter the PIN and confirm with the *Ok* softkey.

Unlocked

Scroll to *Free* and confirm with the *Select* softkey.
➔The phone is unlocked.
➔To unlock all your phones, execute function code #33* <PIN> # (see "User's Guide */# Procedures" on the Aastra document portal: *www.aastra.com/docfinder*).

Activating range alarm and system busy beep

You want to set the system parameters with your cordless phone.

The *Range alarm* indicates that the connection between your phone and the system is weak. You can set the phone so that you receive a warning signal if you leave the coverage area

- You are making a call and are getting near the limit of the radio area: A warning signal sounds in the loudspeaker and the LED indicator is flashing red. If you leave the radio area, the call is disconnected.
- The phone is in standby mode and you leave the radio area (only for phones on an alarm system, see chapter "Alarm", page 89): The phone warns you by means of a continuous ringing. After acknowledging this continuous ringing, it will be again triggered after approx. one minute.

The *System busy beep* tells you that the system is overloaded – you need to wait until the system is available again.

Press the navigation key to the right or the *Menu* softkey.

Settings

Scroll to *Settings* and press the *Select* softkey.

General

Scroll to *General* and press the *Select* softkey.

<Setting>

Select the setting you want and switch on or off with the *Select* softkey.

Setting the server alarm

Depending on the system's settings, you can receive server alarms for specific situations. These settings are made by your system administrator in the system. Contact your system administrator for more information.

When the server alarms are activated in the system, you can select from the alarm signalling as follows: *Vibracall*, *Progressive ring tone*, *Suppress ring tone*.

A list of all melodies is available.

Note:
Your settings for *Vibra call* and *Suppress ring tone* can be overruled by the alarm server.

Press the navigation key to the right or the *Menu* softkey.

Settings

Scroll to *Settings* and press the *Select* softkey.

Server alarm

Scroll to *Server alarm* and press the *Select* softkey.

<Setting>

Select the setting you want and switch on or off with the *Select* softkey.

Logging a cordless phone on/off

See (also) the Chapter "Managing communication systems", page 80.

Linking the charging contact to direct call answer

You want to choose whether to answer a call simply by lifting the phone out of its charging bay or whether you also need to press the Call key after lifting out the phone.

You can specify that your cordless phone should behave like a fixed phone when you answer a call. In this case you do not have to press the Call key when you lift the phone out of its charging bay.

Press the navigation key to the right or the *Menu* softkey.

Settings

Scroll to *Settings* and press the *Select* softkey.

General

Scroll to *General* and press the *Select* softkey.

Direct call answer

Scroll to *Direct call answer* and press the *Select* softkey.
➔The setting is stored.

Display settings

This section explains how to set display properties.

Setting the display

You want to optimise the display settings.

You can activate or deactivate the following settings:

- Font size (*Font*)
- *Colour scheme*
- *Backlight*: *Brightness*, *Idle timeout* (Duration how long the display backlight remains enabled after a keystroke), *Charging bay timeout* (Duration how long the display backlight remains enabled when the cordless phone is placed in the charging bay), *Backlight during call* (Enable function to leave the display dimmed during the entire duration of a call).

Press the navigation key to the right or the *Menu* softkey.

Settings

Scroll to *Settings* and press the *Select* softkey.

Display

Scroll to *Display* and press the *Select* softkey.

<Display setting>

Scroll to the display setting you want and press the *Select* softkey.

<Setting value>

Select the setting you want.
Note:
The *Select* softkey displays the colour scheme you want.
➔The setting is stored.

Setting the LED indicator

You want the attention LED to inform you of any phone incidents.

You can activate or deactivate the following settings:

- *In Service*: The phone is switched on.
- *Incoming call*
- *Info*
- *Appointment call*: Function can only be set with a function code, see Chapter "*/# Procedures", page 89)
- *Hands-free operation*
- *Battery empty*

Press the navigation key to the right or the *Menu* softkey.

Settings

Scroll to *Settings* and press the *Select* softkey.

LED indications

Scroll to *LED indications* and press the *Select* softkey.

<LED setting>

Scroll to the LED setting you want and confirm with the *Select* softkey.

Setting the volume

All the ring tone properties are set using the profiles, see Chapter "Profile settings", page 73.

Setting the volume during a call

You want to adjust the volume while in a call. You have to set the volume of handset and loudspeaker separately.

The new volume will remain stored even after the call is ended.

Louder: Press top side key.
Quieter: Press bottom side key.

Profile settings

6There are five different application profiles to adapt the phones to any given work situation, e.g. headset or conference mode.

Setting up a profile

All your phone's ringing properties are stored in the profiles.

There are 3 preset default profiles: *Normal*, *Meeting*, *Charging bay*. You can set up to 6 profiles.

A profile comprises a set of ringing and phone settings, which you can specify individually for each profile. One profile is always active in telephone mode. The default profile is the *Normal* profile. Activate the appropriate profile depending on the situation (e.g. before a meeting you can activate the *Meeting* profile). The *Charging bay* profile is selected automatically whenever the phone is placed in the charging bay.

You can set the following profile properties:

- *Ringing volume*
- Ringing melody for *Internal ring*, *External ring* and *Discreet ring*
- *Vibracall*
- *Discreet ring* Phone only rings once.
- *Auto answer*: Phone only rings once and then automatically answers the call without you having to press for example the call key on the headset. Disable this setting when you do not make your calls using headset to avoid unnoticed listening by callers.
- *Suppress ring tone*: is displayed.
- *Progressive ring tone*
- *Loud environment*: In a loud environment the phone tries to improve the voice transfer (not for connections with Bluetooth headset and in hands-free mode). It's recommended to create a "Loud environment" profile.
- *Confirmation tone*: each keystroke is confirmed with a beep.
- *Battery warning*: battery nearly run-down triggers a warning.

Press the navigation key to the left.
Or:
The profiles are also available via the menu: *Menu* > *Settings* > *Profiles*.

New

Creating a new profile:
Press the *New* softkey.

Modify

Setting up a profile:

1. Scroll to the profile you want and press the *Modify* softkey.
2. Scroll to the setting you want and confirm your choice of setting with the *Select* softkey.
   ➔The setting is stored.

Note:
To listen to all the ring properties use the *Test* softkey.

Rename

Renaming a profile:
Scroll to the profile you want and press the *Rename* softkey.
➔The setting is stored.

Delete

Delete profile:
Scroll to the profile you want and press the *Delete* softkey.
➔The profile is deleted.

Activate profile

In your everyday phoning habits you want to adapt your phone's ringing properties to each situation.

The ringing properties are stored in different profiles. Select the profile you want from the list of profiles.

The current profile is indicated on the display (except for *Normal* profile).

Press the navigation key to the left.
Or:
The profiles are also available via the menu: *Menu* > *Settings* > *Profiles*.
➔All the profiles are displayed.

Select

Select the profile you want and activate with the *Select* softkey.
➔The profile is activated.

Hands-free and headset settings

This section explains other ways in which you can make calls with your phone.

Connecting a headset

Connect your headset to the socket on the bottom left-hand side of your phone. The headset mode is then automatically activated.

Your phone also has a Bluetooth interface (2.0) so you can operate the corresponding headsets. Only audio data can be transmitted via the Bluetooth interface with a headset.

The opening of the headset connection is closed with a captive cover. If the headset is not in use, please close the opening so the device can be used in accordance with its protection class.

Remove the cover by pulling it at the top edge of the housing. Never pull it at the bottom edge!

To activate headset mode

You have connected a headset and now want to activate the headset mode.

A headset can be connected in parallel with the handset.

If you answer a call in headset mode using the Call key or Loudspeaker key, the call is provided on the headset.

When you connect a Bluetooth headset (see chapter "Activating Bluetooth mode and Bluetooth devices", page 75), the headset is automatically activated.

Note:
To find out how to make phone calls with the headset, refer to the Chapter "Using a headset", page 20.

Activating Bluetooth mode and Bluetooth devices

You want to make and receive phone calls with a Bluetooth-supported headset.

You can activate Bluetooth devices as soon as you have activated the Bluetooth mode.

You can activate or deactivate the Bluetooth manually.

Notes:
- Only one Bluetooth connection at a time is possible.
- To find out how to make phone calls with the headset, refer to the Chapter "Using a headset", page 20.

Press the navigation key to the right or the *Menu* softkey.

Settings

Scroll to *Settings* and press the *Select* softkey.

Bluetooth

Scroll to *Bluetooth* and press the *Select* softkey.

Enable Bluetooth

Activating/deactivating Bluetooth mode:
Scroll to *Enable Bluetooth* and press the *Select* softkey.
➔The setting is stored, ᛒ is displayed.
Or:
The Bluetooth-mode is also available via the service menu: Press key 5 and hold it down for a moment, >*activate Bluetooth*.

Note:
An activated Bluetooth mode does not imply that a Bluetooth connection is running.

Subscribe headset

Pair new device:
Scroll to *Subscribe headset* and press the *Select* softkey.
Switch on the device you want and set to subscribe mode. Select the device you want and enter the Bluetooth device PIN.
➔Device is paired, ⟳ is displayed.

Select headset

List of paired devices:
Switch on the device you want, scroll to *Select headset*, press the *Select* softkey and select a device from the list.
➔The list of coupled devices is displayed.

Note:
The list is limited to 2 Bluetooth devices. Remove a device before you connect another one.

Delete

Remove device:
Scroll to *Select headset* and press the *Select* softkey.
Select the device you want and press the *Delete* softkey.
➔Device was removed.

General settings

This section explains other settings you can make on your phone.

Selecting the language

The display text is not in the language you want.

You can select a different language. The menu item under which you select your language is marked by an "*" in front of the word for "language" in the language of your choice, e.g. "*Language" for English.

Press the navigation key to the right or the *Menu* softkey.

**Language*

Scroll to **Language* and press the *Select* softkey.

<Language>

Select the language you want and confirm with the *Select* softkey.
➔The display text appears in your selected language.

Configuring the DTMF mode

You want to be able to use your phone to control other equipment or to access certain services, such as remote polling of an answering machine or telebanking. For these services you need the DTMF mode.

In the DTMF mode each keystroke generates a tone. If for example you enter a call number during a call, your call partner will hear the tone signals.

You can specify whether the DTMF mode should be generally activated or deactivated. DTMF is activated as the default dialling mode.

Press the navigation key to the right or the *Menu* softkey.

Settings

Scroll to *Settings* and press the *Select* softkey.

General

Scroll to *General* and press the *Select* softkey.

DTMF

Scroll to *DTMF* and activate or deactivate with the *Select* softkey.
➔The setting is stored.

Changing the User PIN

You want to change the PIN used to lock/unlock your phone (see Chapter "Locking your phone", page 66 and "Unlocking your phone", page 67).

The digit combination "0000" is set as default. You can select any 2 to 10-digit combination for your new PIN.

If you have forgotten your PIN, your system administrator can reset it to the default setting.

Notes:
- Your user PIN applies to all your phones.
- Do not confuse the User PIN with the Admin PIN (see chapter "Changing the Admin PIN", page 79).

Press the navigation key to the right or the *Menu* softkey.

Settings

Scroll to *Settings* and press the *Select* softkey.

General

Scroll to *General* and press the *Select* softkey.

New user PIN

Scroll *New user PIN* and press the *Select* softkey.
➔The display shows *User PIN*.

<Old PIN>

Enter the old PIN and confirm with the *Ok* softkey.
➔The display shows *New user PIN*.

<New PIN>

Enter the new PIN and confirm with the *Ok* softkey.
➔The display shows *Confirm user PIN*.

<New PIN>

Enter the new PIN a second time and confirm with the *Ok* softkey.
➔The new PIN is stored.

Notes:
- For each digit entered, the display shows an "*".
- You can also change the PIN with */# procedure *47 (see "User's Guide */# Procedures" on the Aastra document portal: *www.aastra.com/docfinder*).

Changing the Admin PIN

You want for example to protect the alarm settings against unauthorized or unintentional changes.

You can define and activate an Admin PIN. This means that, if the valid Admin PIN is not entered, you can only view the alarm settings and not modify them. As long as you have not defined the Admin PIN all alarm settings are freely accessible, without a PIN prompt.

If you have forgotten your Admin PIN, your system administrator can reset it.

Note:
Do not confuse the Admin PIN with the User PIN (see chapter "Changing the User PIN", page 78).

Press the navigation key to the right or the *Menu* softkey.

Settings

Scroll to *Settings* and press the *Select* softkey.

General

Scroll to *General* and press the *Select* softkey.

Administration

Scroll to *Administration* and press the *Select* softkey.

New admin PIN

1. Scroll to *New admin PIN* and press the *Select* softkey.
2. Enter the PIN you want and confirm with the *Ok* softkey.

➔The setting is stored.

Note:
Delete the current PIN if you prefer to enter your alarm settings without the Admin PIN.

Enter the display text for the idle state

You want to change the text displayed by your phone in the idle state.

In addition to the date and time you can enter a personal text for the text displayed in the idle state.

Press the navigation key to the right or the *Menu* softkey.

Settings

Scroll to *Settings* and press the *Select* softkey.

General

Scroll to *General* and press the *Select* softkey.

Idle text

Scroll to *Idle text* and press the *Modify* softkey.

<Text>

Enter the text and confirm with the *Save* softkey.
➔The text is stored.

Managing communication systems

This menu allows you to specify the active system for your phone and to manage registrations to different systems. Contact your system administrator for more information.

If your phone is registered with several systems, the name of the active system is shown on the display.

The DECT-specific information is retrievable in the *DECT identities* menu.

For more information on the *Download server* refer to Chapter "Software", page 92.

Press the navigation key to the right or the *Menu* softkey.

Settings

Scroll to *Settings* and press the *Select* softkey.

System

Scroll to *System* and press the *Select* softkey.

System registrations

Scroll to *System registrations* and press the *Select* softkey.

New

Registering to a new system:
Press the *New* softkey, enter AC code, and press the *Save* softkey.
➔The phone searches for the system.

Rename

Renaming a system:
Scroll to the system you want and press the *Rename* softkey.
Enter a new number and press the *Save* softkey.
➔The setting is stored.

Delete

Deleting a system:
Scroll to the system you want, press the *Delete* softkey and answer *Ok* to the safety prompt.
➔The system is deleted.

Select

Switching system:
Scroll to the system you want and confirm with the *Select* softkey.
Or:
Switching the phone manually to the next available system (with 2 systems): Press key 2 and hold it down for a moment.
Choice of available systems (with 3-4 systems): Press and hold down key 2 >*Select system*.

Retrieving information on your phone

Your phone's software-relevant data is stored in this menu.

Press the navigation key to the right or the *Menu* softkey.

Settings

Scroll to *Settings* and press the *Select* softkey.

General

Scroll to *General* and press the *Select* softkey.

Information

Scroll to *Information* and press the *Select* softkey.

<Information>

Select the setting you want.
➔The information can now be retrieved.

Or:
The software version is also available via service menu: Press and hold down key 5 >*SW version*.

Protection settings

This section explains how you can protect yourself against certain types of call.

Activating protection against call types

You want to protect yourself against certain types of calls.

You can set the settings so that these functions are not allowed on your phone: Ask your system administrator whether these functions are enabled on the system.

Ask your system administrator whether these functions are enabled on the system.

- *Do not disturb*: Incoming calls are automatically forwarded to a specific destination.
- *Call waiting*: You are already making/taking a call. You are notified by a waiting tone and phone number or name in the display that someone else is trying to reach you. You can either answer or reject this second call.
- *Intrusion*: A third participant can intrude into your active call and listen to your conversation.
- *Announcement*: You can address internal users directly via their loudspeaker – where available –, without waiting for a reply (similar principle to that of an intercom system).
- *Forwarding*: Incoming calls are forwarded directly to your phone.

Press the navigation key to the right or the *Menu* softkey.

Settings

Scroll to *Settings* and press the *Select* softkey.

Protection

Scroll to *Protection* and press the *Select* softkey.

<Setting value>

Select the setting you want and switch on or off with the *Select* softkey.
➔The setting is stored.

Note:
You can deactivate an activated protection using *Menu* > *Activated features* > *Reset*.

Managing your private contacts

This section explains how to manage your private contacts.

Creating a new contact entry

You want to store your own phone numbers. You can store your own phone numbers as private contacts.

For each contact you have the possibility of making several call number entries (Business, Mobile, Private). You can specify one of these numbers as the standard call number, the one which is used whenever you do not make a particular selection.

Press the navigation key down.
Or:
The phone book is also available via the menu: *Menu* > *Phone book*.

Private contacts

Scroll to *Private contacts* and press the *Select* softkey.

New

Press the *New* softkey.

<Contact>

Enter the user's contact data (Name, Business, Mobile, Private).
Use the navigation key to scroll between the entries.
Confirm with the *Save* softkey.
➔The contact is now stored.

Default

Specifying the default number:

1. Select the contact you want.
2. Use the right navigation key to open the contact and highlight the call number you want.
3. Specify the selected phone number as default number using the *Default* softkey.

Editing or deleting a contact

You want to edit a call number which you have stored in your private contacts.

Note:
You cannot modify entries in other phone books.

Press the navigation key down.
Or:
The phone book is also available via the menu: *Menu* > *Phone book*.

Private contacts

Scroll to *Private contacts* and press the *Select* softkey.

Edit

Changing an entry:
Select the entry you want and press the *Edit* softkey.
Modify the contact data and confirm with the *Save* softkey.

Delete

Deleting an entry:
Select the entry you want and press the *Delete* softkey.
➔The entry is now deleted.

Transferring a call number from the call list to the private contacts

You want to transfer a call number from one of the call lists to your private contacts.

You can add a phone number to an existing contact or create a new contact.

Press the navigation key to the right or the *Menu* softkey.

Call lists

Scroll to *Call lists* and press the *Select* softkey.

<Call list>

Select the call list and user you want and press the *Save* softkey.

Add to exist. contact

Adding to existing contact:
Press the *Add to existing contact* softkey, select the contact and number type you want, and confirm with the *Save* softkey.

New contact

Adding new contact:
Press the *Add new contact* softkey, select the number type you want, and confirm with the *Save* softkey.

Configuring voice mail

This section explains how to set your voice mail.

Managing personal greeting

You have the possiblity to record up to two different greetings (e.g. for absence or holiday). Give each greeting the relevant name.

Depending on the system configuration a caller may or may not be able to leave a message (for the symbols see Chapter "Display symbols", page 6).

If no personal greeting is activated or if none is available, the global greeting is activated automatically, provided it has been recorded. Contact your system administrator for more information.

Press the navigation key to the right or the *Menu* softkey.

Voice Mail>*Greeting*

Scroll to *Voice Mail* and press the *Greeting* softkey *Select*.

<Greeting>

Renaming greeting:
Select the greeting you want and press the *Edit* softkey.
➔Enter the appropriate name for your personal greeting.

<Greeting>

Recording a greeting:
Select the greeting you want and press the *Record* softkey.
➔Now record your personal greeting text.

<Greeting>

Listening to the greeting:
Select the greeting you want and press the *Listen* softkey.
➔You can monitor your personal greeting text and re-record it if necessary.

<Greeting>

Selecting the greeting:
Select the greeting you want and confirm with the *Ok* softkey.
➔ The announcement last recorded is automatically activated.

Notes:

- To find out how to configure call forwarding to your voice mail, refer to the Chapter "Forwarding to voice mail", page 48.
- For further information on voice mail efer to the Chapter "Listening to voice mail", page 52 or in the "User's Guide Voice Mail Systems" on the Aastra document portal: *www.aastra.com/docfinder*.

Configure presence

You can to control your current presence status (see Chapter "Presence state", page 43).

You have a choice of 5 presence profiles for controlling your presence status. For each of these presence profiles you can make the following settings:

- *Description*: Type in the text you want to be visible to other users as detailed information on your presence status (e.g. the name of your substitute).
- *Personal call routing*: Specify the phones on which a call is to be signalled (see Chapter "Activating personal call routing", page 57). To apply the existing call routing, select *Keep settings as is*.
- *Call Forwarding*: Specify where you want a call to be forwarded to (see Chapter "Forwarding calls (Call forwarding)", page 45). To apply the existing forwarding, select *Keep settings as is*.

Open presence:
Press the navigation key to the right or the *Menu* softkey.

Settings

Scroll to *Settings* and press the *Select* softkey.

Presence

Scroll to *Presence* and press the *Select* softkey.

Or:
Press the function key for <Presence> (storing function key see the Chapter "Storing a function on a key - function key", page 88).

Edit

To change the presence profile:
1. Scroll to the profile you want and press the *Modify* softkey.
2. Make the setting you want and confirm with the *Ok* softkey.

➔The profile has been changed.

Configuring keys

This section explains how to assign phone numbers and functions to a configurable key.

Available keys

You can store phone numbers and functions on 3 different types of keys:

- on a sidekey – retrievable in the idle position only;
- directly on the softkey – retrievable in the idle position only;
- on a hotkey – accessible any time.

You can assign each key with a specific type so you can trigger a particular action by simply pressing that key. Choice available:

- Number key: To store the phone number;
- Function key: Activate/deactivate function.

Store a phone number under a key – number key

You want to retrieve a frequently used phone number with a single keystroke rather than enter it digit by digit.

On each softkey/hotkey you can store one call number and name, and on each sidekey you can store two call numbers and the associated names. The key automatically becomes a number key.

The system administrator can disable any possibility of modifying the configuration of a key that has already been configured.

<long>

Keep the key you want pressed down for approx. 2 seconds.
Or:
The keys are also available via the menu: *Menu* > *Settings* > *Keys* > *Softkeys*.
Or:
The keys are also available via the menu: *Menu* > *Settings* > *Keys* > *Softkeys*/*Hotkeys*/*Sidekeys*.

New

Creating a new key assignment:
Press the *New* softkey or directly select the *Number key*, enter the name and number, and confirm with the *Save* softkey.
➔The allocated function is stored.

Modify

Modify a key assignment:
Select the key you want and press the *Modify* softkey. Make the changes and confirm with the *Save* softkey.
➔The allocated function is stored.

Delete

Deleting a key assignment:
Select the key you want and confirm with the *Delete* softkey.
➔The assignment is deleted.

Storing a function on a key - function key

You want to retrieve a frequently used function - for example "call forwarding on no reply" - using a single keystroke rather than having to enter it by hand. Usually the function is assigned so that you:

- activate the function with the first keystroke,
- and deactivate the command again with a second keystroke.

<long>

Keep the key you want pressed down for approx. 2 seconds.
Or:
The keys are also available via the menu: *Menu* > *Settings* > *Keys* > *Softkeys*.
Or:
The keys are also available via the menu: *Menu* > *Settings* > *Keys* > *Softkeys*/*Hotkeys*/*Sidekeys*.

New

Creating a new key assignment:
Press the *New* softkey or directly select the *Function key*, select the function and confirm with the *Save* softkey.
➔The allocated function is stored.

Modify

Modify a key assignment:
Select the key you want and press the *Modify* softkey. Make the changes and confirm with the *Save* softkey.
➔The allocated function is stored.

Delete

Deleting a key assignment:
Select the key you want and confirm with the *Delete* softkey.
➔The assignment is deleted.

Note:
Besides the predefined functions you can also specify your own function. For more information please refer to the Chapter "Function commands", page 89.

Formulating functions

This section explains how to activate an individual function, for example call forwarding, using function commands and how to assign it to a key.

Function commands

You can use function commands to define a function to suit your personal requirements. A function can consist of one or more function commands, function codes, and the phone number.

You can either carry out a function directly or store it on a function key (select *Configurable* function).

Tab. 1 The following function commands are available:

"I"	Seize line
"X"	Disconnect
"P"	1Pause 1 second before the next operation
"N"	Use the phone number entered in call preparation
"'"	Control key function (up-circuit system)
"Z"	Activate/deactivate DTMF mode
"R"	Use the phone number last dialled
"Y"	Disconnect and reseize the line

Tab. 2 Examples of how to define a function:

"IR"	Seize line ("I"), Dial phone number last dialled ("R")
"I201"	Seize line ("I") and dial phone number 201
"I*21201X"	Seize line ("I"), activate call forwarding unconditional ("*21") to phone number 201, disconnect ("X")
	Notes: • Text mode has to be activated before you can enter function commands. • Functions that are not available via the menu can be activated using */# procedures (see "User's Guide */# Procedures" on the Aastra document portal *www.aastra.com/docfinder*). • You can either type in a */# procedure directly or store it under a key. • You can only activate certain */# procedures if the same function cannot be obtained via the menu. • The availability of certain */# procedures may be restricted depending on the system and software version.

*/# Procedures

A list with all the function codes can be found in the "User's Guide */# Procedures" on the Aastra document portal: *www.aastra.com/docfinder*.

Installation and first-time operation

These sections explain the setup options available with your phone.

Equipment provided 91
Options 91
Connecting a cordless phone 92
Battery 93
Carry strap 94
USB and external charging socket 94
Logging your phone on 95

Equipment provided

Cordless phone	Battery	Charging bay and plug-in power supply unit with country-specific adapters
		

Quick User's Guide and safety information	Screwed-on belt

Options

Carry strap

Power battery
Power battery cover

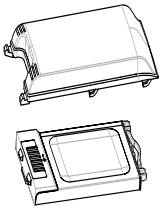

Connecting a cordless phone

Connecting the charging bay

Before connecting the charging bay, you must remove the two lateral guides in the charging bay. They are easy to lift on the inside edge using a fingernail or a paper clip. You can remove these plastic guides by pushing a suitable screwdriver into the slits on the bottom of the charger.

1. Plug the cable connector into the socket on the underside of the charging bay.
2. Feed the cable through the strain relief provided.
3. Plug the plug-in power adapter into an available socket outlet.

Note:
Plug designs vary from country to country.

Power supply / Plug-in power supply unit

The power supply unit is rated for 100 V to 240 V AC (50-60 Hz). It is supplied with four interchangeable adapters, which means it can be used more or less worldwide. Where necessary, fit the standard adapter head for your country to the power supply unit. As the plug-in power supply unit comes in two variants, the assembly differs slightly:

- Variant 1: Set the switch on the power supply unit to OPEN and slide the existing adapter head upwards and out. Next fit the new adapter head to the power supply unit and lock it into place using the switch (LOCK).
- Variant 2: First remove any adapter head that may already be fitted by pressing OPEN. Next fit the new adapter head onto the power supply unit at a slight angle with the end marked TOP at the top. Press it down until it clicks into place.

Software

New device software can simply be updated during operation using automatic firmware updates, reducing maintenance costs as a result.

Battery

Take also note of the safety information on handling the battery set out in Chapter "Dealing with batteries", page 10.

Inserting the battery

1. Undo the two screws on the back of the phone with a suitable tool (e.g. coin) and remove the cover.
2. Insert the battery with the contacts downwards, close the battery compartment with the cover and screw them together with an appropriate tool.
3. Do not damage the rubber seal during assembly.

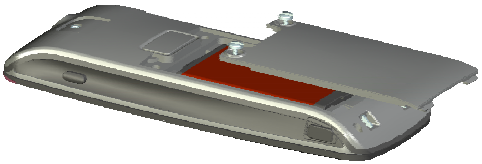

Charging the battery

The batteries are supplied uncharged. To charge the batteries, place the phone in the charging bay.

It is only after the battery has been charged for the first time that your phone is ready for use, that calls can be answered and that you can make calls from the phone.

Notes:
- It takes several charging cycles before a new battery reaches full capacity.
- The technical data can be found in the Chapter "Technical data", page 98.
- The descriptions of the display symbols can be found in the Chapter "Display symbols", page 6.

Carry strap

Securing the carry strap

A carry strap with attachment is optionally available. To attach the holder, replace the screwed-on belt clip by the carrying strap attachment. Carry straps are optionally available.

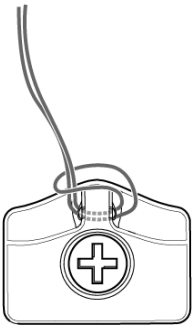

USB and external charging socket

Mini USB connection

There is a mini USB socket (2.0) in the bottom right-hand corner. You can use it as a connection socket for a USB charging bay, to recharge the phone for example. However the charging process is slower than when the phone is charged in the charging bay.

Use a screened USB cable only.

The opening of the USB connection is closed with a captive cover. If the USB cable is not in use, please close the opening so the device can be used in accordance with its protection class.

Remove the cover by pulling it at the top edge of the housing. Never pull it at the bottom edge!

Logging your phone on

Registering your phone on the system

Your system administrator has to prepare the system before you can log on your phone.

Your phone can be operated on a maximum of 4 different communication systems. To do so, it must be registered on each system. As a rule your phone is registered with the communication system by your system administrator. Contact your system administrator for more information.

Once the phone is registered with one or more communications systems, you can make and receive phone calls (see also Chapter "Managing communication systems", page 80).

Registration

A registration is stored on the phone for each communication system with which your phone is registered. A registration entry contains, among others, a system name (e. g. A, B, C).

If your phone is registered with several systems, the name of the active system is shown on the display.

Further information

The following sections contain more useful information about your phone.

Troubleshooting 97
Technical data 98

Troubleshooting

This section contains a few tips on how to operate your phone if you encounter any problems.

Malfunctions

Display reads: "System overload"
At the moment no connection can be set up via the current system base. The phone is trying to set up a better radio connection with the same or a different system base. This message appears in standby mode only.

Display reads: "No system"
You have moved out of the coverage area; the radio connection is interrupted. Move closer to a radio station.

Leaving the coverage area
You are outside the coverage range. You can set the phone so that you receive a warning signal if you leave the coverage area (see Chapter "Activating range alarm and system busy beep", page 68).

Display is working, but connection is not possible
Your phone may be locked. Unlock your phone (see Chapter "Locking/unlocking the keypad", page 66).

Freely configurable keys cannot be configured
The configuration may be locked. Unlock your phone (see Chapter "Unlocking your phone", page 67).
The key for a reconfiguration may be locked in the system. Contact your system administrator for more information.

Display brightness insufficient
The setting for the display's brightness is unsuitable. Change the setting (see Chapter "Setting the display", page 71).

Impaired sound quality during hands-free operation
The sound quality can be affected if the volume is too loud – turn down the volume. If the sound quality fluctuates, contact your system administrator.

Phone calls can be made, but no names are displayed; the key configuration is missing, and the phone does not respond to function commands
Restricted mode following a software update without update licence.

Note:
For all other messages, faults and questions you may have, contact your system administrator.

Technical data

Operation

Standards	DECT, GAP
DECT encryption	supported
Frequency range	1880 MHz up to 1900 MHz
Transmitted power	10 mW (average power per channel)
Range	• up to 300 m outdoors • up to 50 m in indoors

Interfaces

Headset	2,5 mm jack and Bluetooth
PC	USB - PC

Battery charge and usage times

Battery capacitance	850 mAh lithium-ion (Li-Ion)
Operating time, talk time	up to 12 hours
Operating time, standby	up to 100 hours
Charging time in the charging bay	2 hours for fully charged state
Battery compartment	screwed

Ambient conditions

Operating temperature	5° C to 40° C
Storage temperature	-5° C to +45° C
Class of protection	IP 65 (dust and water-jet proof)
Noise	Ambient noise filter for loud environments
Hands-free operation	Full-duplex hands-free operation

Dimensions, weight and surface finish

Cordless phone with battery	Length x Width x Depth: 135 x 53 x 22.5 mm 125 g
Charging bay without mains adapter	Length x Width x Depth: 76 x 75 x 24 mm 40 g
Surface finish (sides and front)	Silicone treated

Index

Symbols

*/# Procedures 89

A

Accessories (Safety information) 10
Activate profile 74
Activate/deactivate function. 26
Adjusting the volume 72
Alphasearch 30
Ambient conditions 99
Ambient conditions (Safety information) 9
Announcement
  Protection setting 82
Announcement:
  receiving 37
  starting 37
Answering a call 17
Answering calls 29
Asterisk key 4
Auto answer 73
Availability of telephone connections (Safety information) 9
Available keys 87

B

Baby surveillance 58
Backlight 71
Batteries:
  Dealing with 10
Battery charge and usage times 98
Battery:
  Charge state 6
Bluetooth®
  Activate Bluetooth mode 75
  activating Bluetooth devices 75
Brokering 40

C

Call duration 17
Call Forwarding on No Reply 46
Call Forwarding Unconditional 45, 48
Call key 4
Call list 31, 32
Call routing 57
Call waiting
  Protection setting 82
Call waiting:
  answering 36
  on an internal user 35
Callback:
  answering 35
  requesting 34
Changing the PIN (Admin PIN) 79
Changing the PIN (User PIN) 78
Charges 17
Charging socket, external 94
Charging the battery 93
CLIP 56
CLIR 56
Colour scheme 71
Conference call 40
Configure presence 86
Configuring cordless phone functions 65
Configuring keys 87
Configuring the DTMF mode 77
Configuring voice mail 85
Connect 41
Connecting a cordless phone 92
Connecting the charging bay 92
Contacts
  Creating a new contact entry 83
  deleting 84
  editing 84
  Managing your private contacts 83
Correcting your input 24
Correction key 3
Cost control (Safety information) 9

D

Data protection (Safety information) 9
Deflect 51
Deflect a call during the ringing phase 51
Dialling 16
Dialling by name 29, 30
Dialling:
  by name 29
  from call list of answered calls 32
  from call list of unanswered calls 31

from the phone book 30
with Hotkey 33
with phone number 18
with redial 18, 32
with softkey 33
Digit keys 23
Dimensions 99
Disclaimer 13
Display 71
Display:
Radio link quality 6
Symbols 6
Disposal (Safety information) 10
Do not disturb
Protection setting 82
Document information 13

E

End key 4
Ending a call 17
Enquiry call during a call 39
Enter the display text for the idle state 80
Enter the letters 23
Enters digits 23
Equipment provided 91

F

Firmware update 92
First-time operation 90
Font 71
Formulating functions 88
Forwarding
Protection setting 82
Forwarding:
Call Forwarding Unconditional 45
Forwarding calls 46
to a message 48
to voice mail 47
Foxkey 3
Free seating 61
Function commands 89
Function key 88
Function selection for configurable key 49

H

Hands-free mode and Ringing tone (Safety information) 9
Hands-free operation 19
Hash key 5
Headset
Activate mode 75
connect 75
Hotkey 5

I

Inserting the battery 93
Installation 90
Interfaces 98
Intrusion
Protection setting 82

K

Key block 4
Key legend 2
Keypad 66

L

LED
Indicator LED signals 27
LED indicator 2
Setting the LED indicator 72
Linking the charging contact to direct call answer 70
Listening in 13
Lock
Keypad 66
Phone 66
Logging a cordless phone on/off 70
Loudspeaker key 3

M

Mains power (Safety information) 9
Maintenance (Safety information) 9
Making a call on a third-party phone 55
Making a call:
in hands-free mode 19
with headset 20
with supplementary features 28
Making calls 29
Malfunctions 97
Managing communication systems 80
Managing personal greeting 85
MCID 56
Medical equipment (Safety information) 9
Menu-guided navigation 25
Mini USB connection 94
Moving the Cursor 24

Muting the microphone 19

N

Navigation key 4, 25
Number key 87

O

One number user concept 12
Operating elements 2
Operation 98
Options for equipment provided 91
Organizing absence 43

P

Parking a call partner 42
Personal call routing 57
Phone book 30
Phoning 16
Picking up a call 54
Plug-in power adapter 92
Power supply 92
Presence 43
Presence state 43
Private call with PIN 38
Protection settings 82
Purpose and function 12

Q

Quickdial 29

R

Range alarm 68
Recording 13
Redial 18, 32
Registering your phone on the system 95
Registration 95
Reject 51
Reject a call during the ringing phase 51
Remote control 62
Resetting activated features 26
Retrieving information on your phone 81
Ring alone 58
Risk of explosion (Safety information) 9
Room monitoring 58
Room monitoring:
- Active 58
- One-way connection 59
- Passive 59
- Two-way connection 59

S

Safety Information 9, 10
Securing the carry strap 94
Selecting the language 77
Set the ringing volume 72
Setting the display 71
Setting the server alarm 69
Setting up a profile 73
Side keys 3
Signals 27
Silent intrusion 60
Softkey 3
Software 92
SOS key 5
Store a function under a key 88
Store a phone number under a key 87
Suppressing your call number 56
Surface 99
Switching the cordless phone on/off 65
System busy beep 68

T

Technical data 98
Text message:
- reading 54
- sending 53

Text mode 23
Third-party phone 55
Tracking a malicious call 56
Trademarks 13
Transferring a call number from the call list to the private contacts 84
Transferring a call partner 41
Troubleshooting 97

U

Undoing actions 26
Unlocking
- Keypad 66
- Phone 67

Upper and lower case 24
User information 11
Using the display and operating elements 21
Using the hotkey 22
Using the softkey 22

V

Voice mail 47

W

Weight 99

Declaration of Conformity

Aastra Telecom Schweiz AG hereby declares that

- the Aastra 400 products conform to the basic requirements and other relevant stipulations of Directive 1999/5/EC.
- all our products are manufactured in conformity with RoHS and WEEE (2002/95/EC and 2002/96/EC).

The product-specific declarations of conformity can be found on the Aastra document portal: *www.aastra.com/docfinder*.

Exclusion of Liability

Aastra® is a registered trademark of Aastra Technologies Limited. Technical modifications and product availability subject to change without notice.

Copyright © 2011 Aastra Technologies Limited

CE

AASTRA